



Getting start

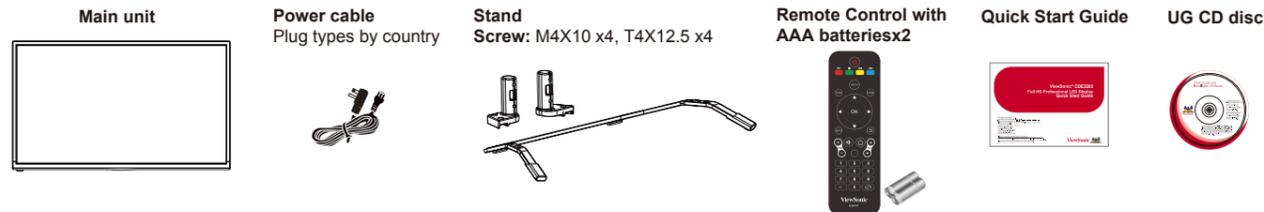


Connect to your Computer

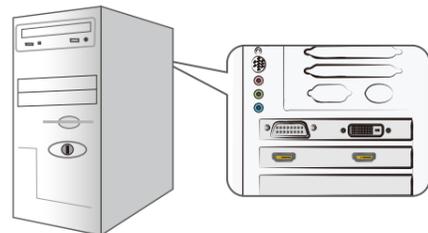


Please find video output port on your PC. You can choose HDMI, DVI or D-SUB.

HDMI

Step 1: Identify the connector on your PC.

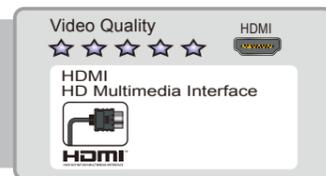

Step 2: Connect video signal with appropriate connector cable.

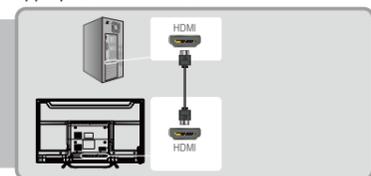


DVI


Step 1: Identify the connector on your PC.



Step 2: Connect video signal with appropriate connector cable.

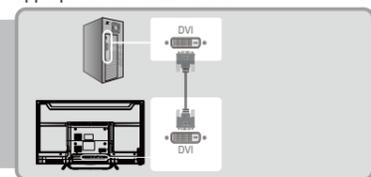


Step 3: Connect audio signal with appropriate connector cable.

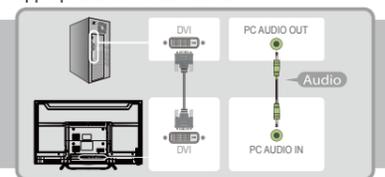


D-SUB


Step 1: Identify the connector on your PC.

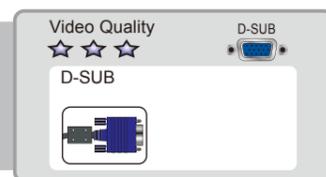

Step 2: Connect video signal with appropriate connector cable.

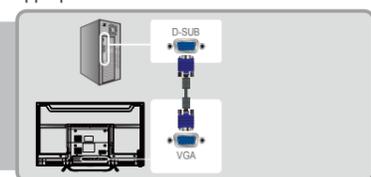

Step 3: Connect audio signal with appropriate connector cable.

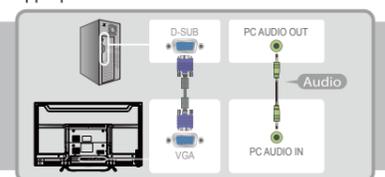

Required Cable Types for Connection



Notes on Connection

- To enjoy an HD experience, please connect an HD source to this LCD display.
- When using a DVI-to-HDMI cable, please make sure to connect the DVI side first.
- Please contact ViewSonic Service team directly, if you have any questions on the Connection.
- Or call our service team: United States 1-800-688-6688 / Canada 1-866-463-4775

ViewSonic® CDE3203 Full HD Professional LED Display Quick Start Guide

For Your Convenience

Write down your product serial number. _____
 If you need any assistance, it will help you.
 Please contact ViewSonic service team directly if you have questions on the use of your LCD display.
 Contact ViewSonic Service Team at:
<http://www.ViewSonic.com>
 Or call our service team:
 United States 1-800-688-6688
 Canada 1-866-463-4775

Please Do Not Return this Product to the Store


For further information, please refer to the User Manual supplied with the LCD display.
 Please keep this Quick Start Guide for your future reference.



1 ViewSonic® LCD Display. The Door to High Definition

- Step 1:** Register online at: <http://www.ViewSonic.com/support>
Step 2: Check your accessory contents in packaging.
Step 3: Install 2 AAA batteries (included in package) in your remote control.

Step 4: Install your LCD display. If you want to hang the LCD display on the wall, please refer the User Guide for detailed instructions.

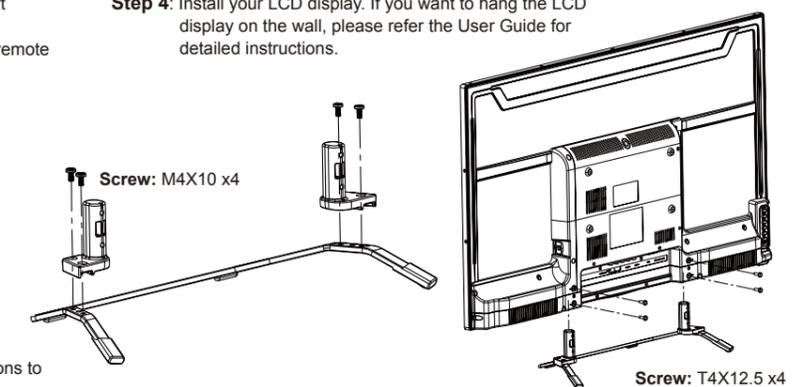

Enjoy FHD Experience:

Set up your ViewSonic LCD display by using proper connections to an HD content source such as your HD cable or satellite box.

2 Connect your LCD display with other external devices

Power off your LCD display until you complete all the connections


	Input	Video Connector	Audio Connector	Supported Resolutions
BEST	HDMI	HD	No need for this input	1080p, 1080i, 720p, 480p, 480i, PC timing (Both HD and SD content)
	DVI	HD		1080p, 720p, 480p, PC timing (Both HD and SD content)
BETTER	Component	HD		1080p, 1080i, 720p, 480p, 480i (Both HD and SD content)
	AV			480i (SD content only)
GOOD				

Connect your PC to your ViewSonic LCD Display


- For the D-Sub connection, you need to apply D-Sub cable and mini 3.5mm audio cable.
- For the DVI connection, you must apply DVI or DVI-to-HDMI cable and additional audio cable.
- Change the PC setting to display on LCD display.
- For detailed information, please refer to your User Manual.
- Please contact ViewSonic Service Team if you had any problem on connection.

3 Initial Setup

- 1 Step 1: Power on the display**
- Plug the power cord
 - Press **POWER** to turn on the display

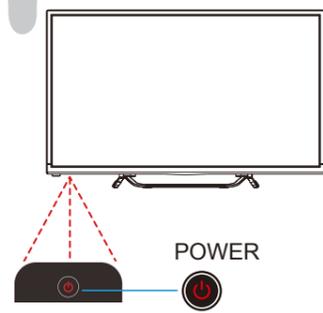


- 2 Step 2: Language setting**

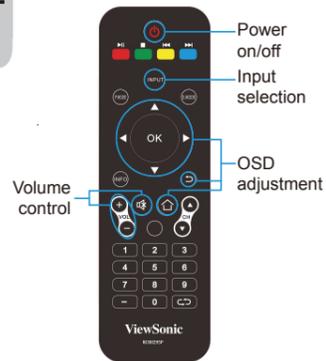


Insert the batteries into the remote control.

- Press **HOME** to enter OSD
- Press **LEFT/RIGHT**, then OK to select **Setup** menu
- Enter **Language** and choose the desired one

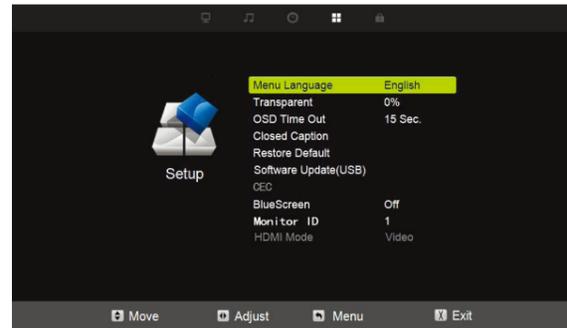


- 3 Step 3: Select video source**

- Press **INPUT** to display the Source Select menu.
- Press **UP/DOWN** to select the correct input source and press **OK** to confirm the selection.

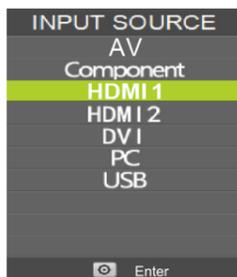

- 4 Step 4: Adjust the volume.**

1. **Change the volume**
Using **+VOL** - on the remote control or display.
2. **Mute the current sound output**
• Press **MUTE** to turn off the sound. To restore the sound, press this button again, or press the **VOL +/-** button.

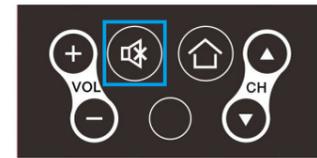

- Press **EXIT** to exit the OSD menu after you have completed the setting.
- For other detail setting, please refer the User Manual.
- If you watch LCD display with STB or Satellite box, please switch to appropriate input source, and refer the user manual from your service provider for the correct display setting.
- If you have questions on the setting for your ViewSonic LCD display, please contact ViewSonic Service Team.

4 Watching Your LCD display

Adjust Display Mode

Your ViewSonic LCD display supports several aspect ratios. For best viewing, select the appropriate **Zoom Mode** to suit the viewing display. The **16:9** aspect ratio looks perfect on your ViewSonic LCD display. For different aspect ratio, press **HOME** on your remote control and select **Picture > Zoom Mode** to change.

Customize Picture Mode


ViewSonic LCD display includes several preset view options optimized for different viewing conditions. Press **P.MODE** on your remote control, or press **HOME** on your remote control and select **PICTURE > Picture Mode**. Choose the appropriate mode to suit your content.

Programming your Cable or Satellite Box remote

Refer to the user manual from your service provider to determine the setting.

5 Using USB Flash Drive

1. Plug the USB device into the USB jack.
2. Press **INPUT** to select **USB**.
3. Select **Music**, **Photo**, **Movie** or **Text**.
4. Choose the file to playback.

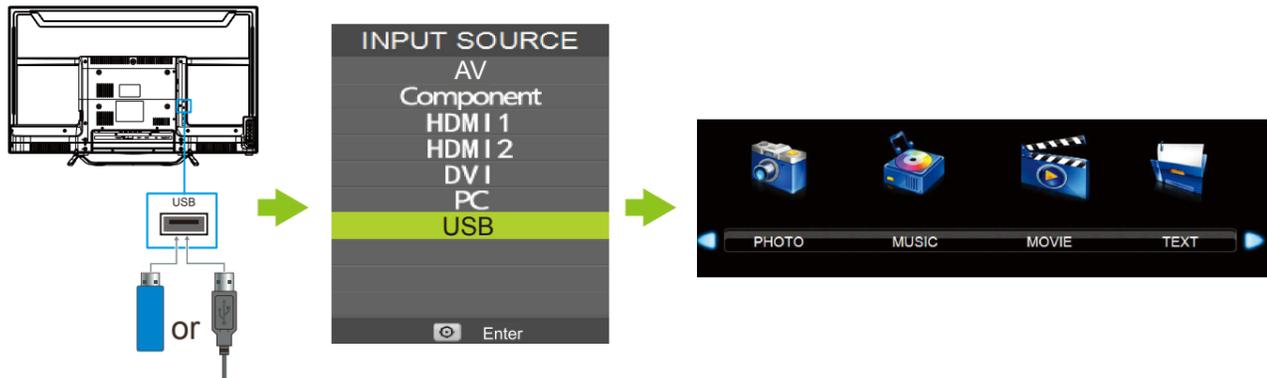


• For more details on USB operations, please refer to the User Manual.

Connect to your Home Entertainment Devices



Caution:


- To protect equipment, always turn off the display before connecting any external equipment.
- Please read the relevant operation manual (Blu-ray disc player, etc.) carefully before making connections.

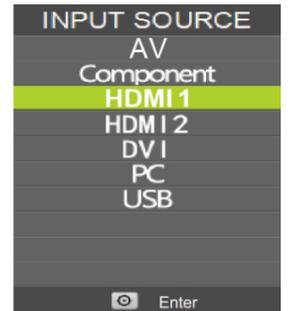

HD Connection for your HD Devices, such as HD/Blu-ray DVD player




- Step 1:** Identify the connector on your player.

- Step 2:** Connect video/audio signal with appropriate connector cable.

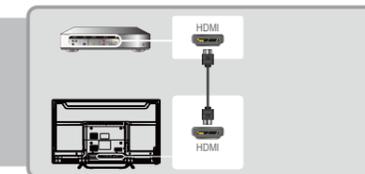

- Step 1:** Identify the connector on your player.

- Step 2:** Connect video/audio signal with appropriate connector cable.

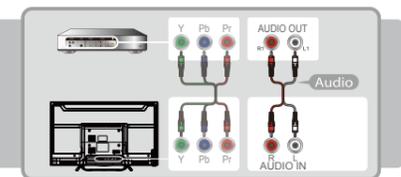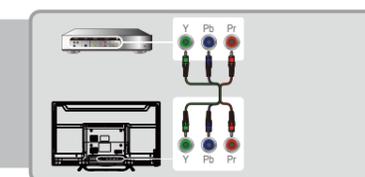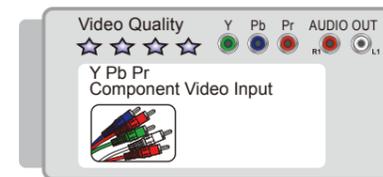


- If your connecting equipment has only DVI output instead of the HDMI output, you must use DVI-to-HDMI cable for the video and also connect the audio cable for sound.

Basic Connection for your SD Devices, such as VCD/DVD player


- Step 1:** Identify the connector on your player.

- Step 2:** Connect video/audio signal with appropriate connector cable.

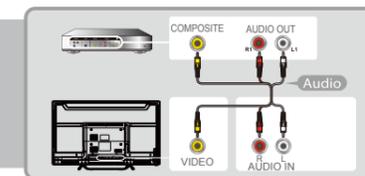

- Please contact ViewSonic Service team directly if you have any questions on the SD connection.

Required Cable types for Connection

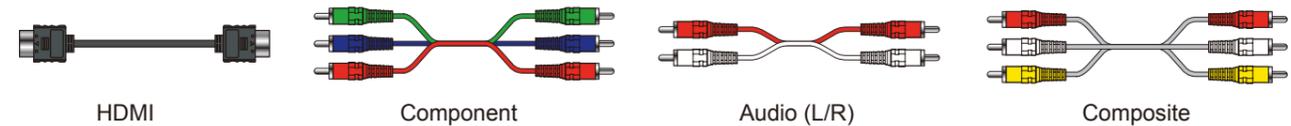

Back Panel Connections

