



TURTLE BEACH™

Title/Topic: Support Guide

Product: Recon 70

Date Issued: February 11, 2026

 
By Turtle Beach Technical Support

Find the most up-to-date articles, downloads, and troubleshooting online, accessible 24/7, at <https://support.turtlebeach.com/>

Need further assistance? Get in touch with our Tech Support team: <https://www.turtlebeach.com/contactsupport>

PACKAGE CONTENTS

1. Recon 70 Headset

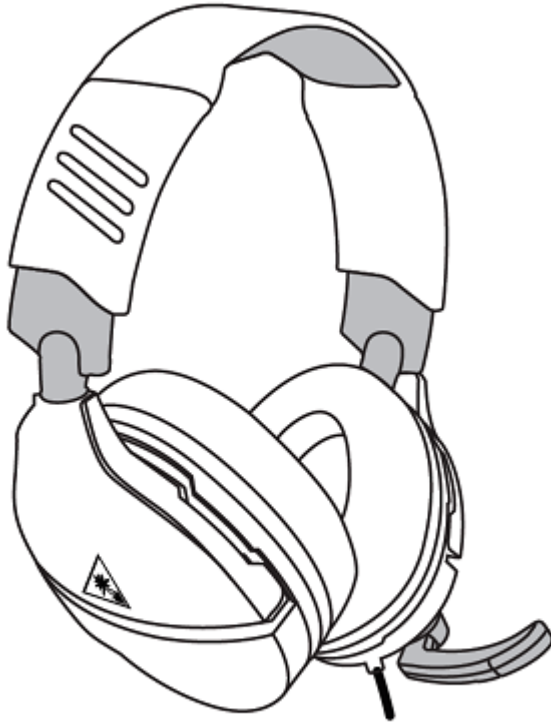

Recon 70 Headset
Casque Recon 70

 
CONTROLS

NOTE: Over Rotating Mic

Turning the mic past positions 1 & 3 may cause damage to the mic.

REMARQUE : Positionnement du microphone

Orienter le microphone au-delà des positions 1 et 3 risque de l'endommager.

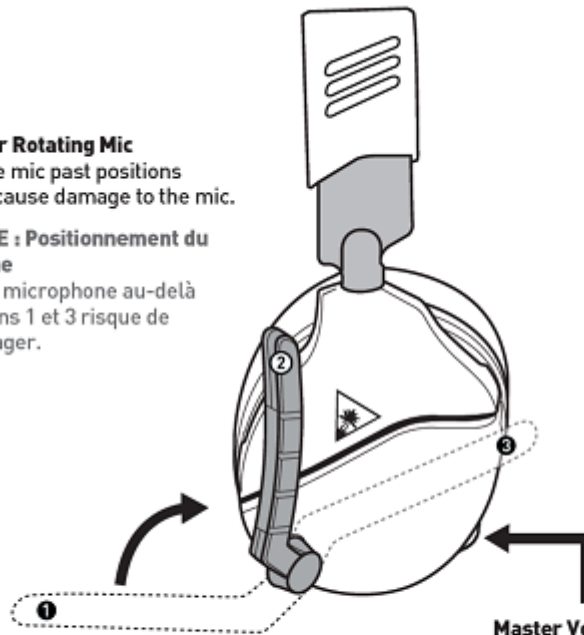

Mic Mute

Flip up mic to mute (see position 2).

Microphone muet

Relevez le microphone pour le couper (voir position 2).

Master Volume

Adjusts the master volume of the incoming game and chat audio.

 
Volume principal

Règle le volume principal du jeu et du chat vocal entrant.


Note: Over-Rotating Mic

Turning the mic past positions 1 and 3 may cause damage to the mic.

- Mic Mute
 - Flip up mic to mute (see position 2, in the image to the right).
- Master Volume Wheel
 - Adjust the master/overall volume of the incoming game and chat audio.

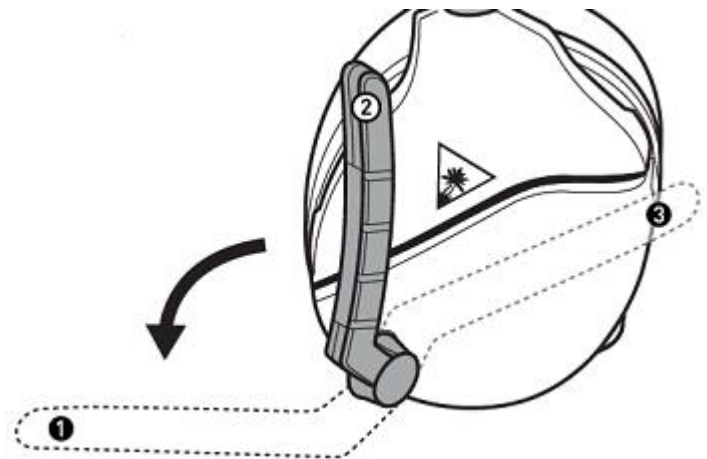

XBOX SETUP

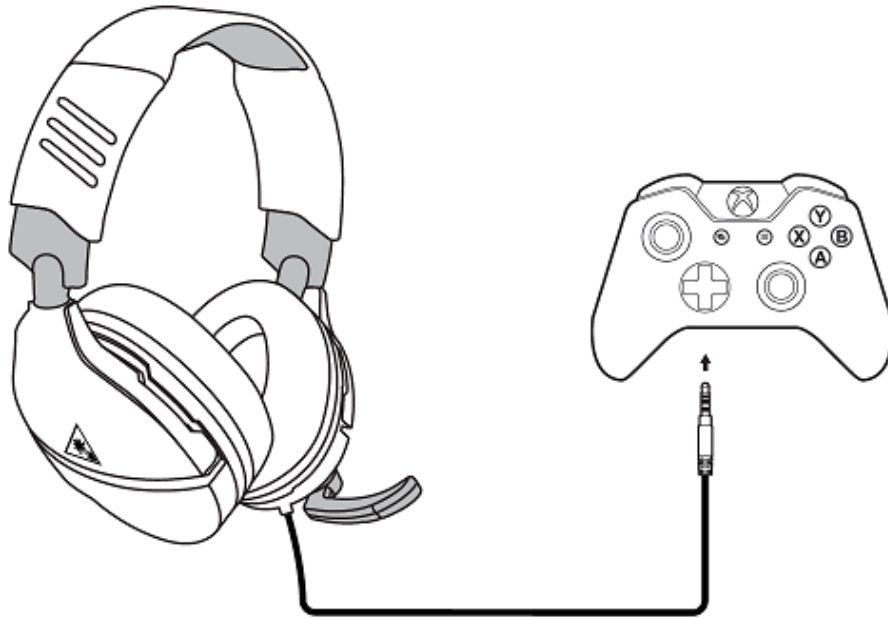 

VOLUME SETUP

1. Plug the headset into the Xbox controller.
2. While in the Home screen, press the Xbox button on the controller. Scroll down to the buttons on the bottom of the left sidebar, and then select the **Speaker** icon (Audio).
3. Set **Headset Volume** to **maximum**.
4. Set **Headset Chat Mixer** to the **middle setting**.
5. Set **Mic Monitoring** to your **preferred level**.

SURROUND SOUND SETUP (AVAILABLE ONLY ON XBOX)

1. Press the Xbox Button on your controller.
2. Go to the **System** tab (gear icon).
3. Select **Settings >> Display & Sound >> Audio Output**.
4. Set **Headset Format** to **Windows Sonic for Headphones**.

PLAYSTATION SETUP



1. Go to **Settings >> Devices >> Audio Devices**.
2. Set **Input & Output Device** to **Controller Headset**.
3. Set **Output to Headphones** to **All Audio**.
4. Set **Volume Control (Headphones)** level to **maximum**.
5. Select **Adjust Microphone Level** and follow the on-screen instructions to calibrate your microphone.

PC/MAC & MOBILE SETUP



Note: If your PC uses separate Green/Pink connectors for audio, you will need a PC Splitter Cable.

