

Dell Pro Keyboard and Mouse KM5221W User's Guide

Keyboard model: KB3121W

Mouse model: MS3121W

Regulatory model: KB3121Wt/MS3121Wt/SD-8160
KB3121Wp/MS3121Wp/DGRFEO



Notes, Cautions, and Warnings

-  **NOTE:** A NOTE indicates important information that helps you make better use of your computer.
-  **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.
-  **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2021-2024 Dell Inc. or its subsidiaries. All rights reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2024-11

Rev. A03

Contents

What's in the box	5
Features	6
Keyboard	6
Mouse	8
Dell Display and Peripheral Manager	9
Installing Dell Display and Peripheral Manager	9
Setting up your wireless keyboard	10
Setting up your wireless mouse	12
Pairing your wireless keyboard and mouse	15
Pairing with a USB receiver	15
Keyboard Specifications	17
General	17
Electrical	17
Physical characteristics	17
Environmental	18
Wireless	18
Mouse Specifications	19
General	19
Electrical	19
Physical characteristics	19
Environmental	20
Wireless	20

Troubleshooting 21

Oman regulatory information 24

Statutory Information 25

 Warranty 25


 Limited warranty and return policies 25

 For U.S. customers: 25

 For European, Middle Eastern and African customers: 25

 For non-U.S. customers: 25

What's in the box

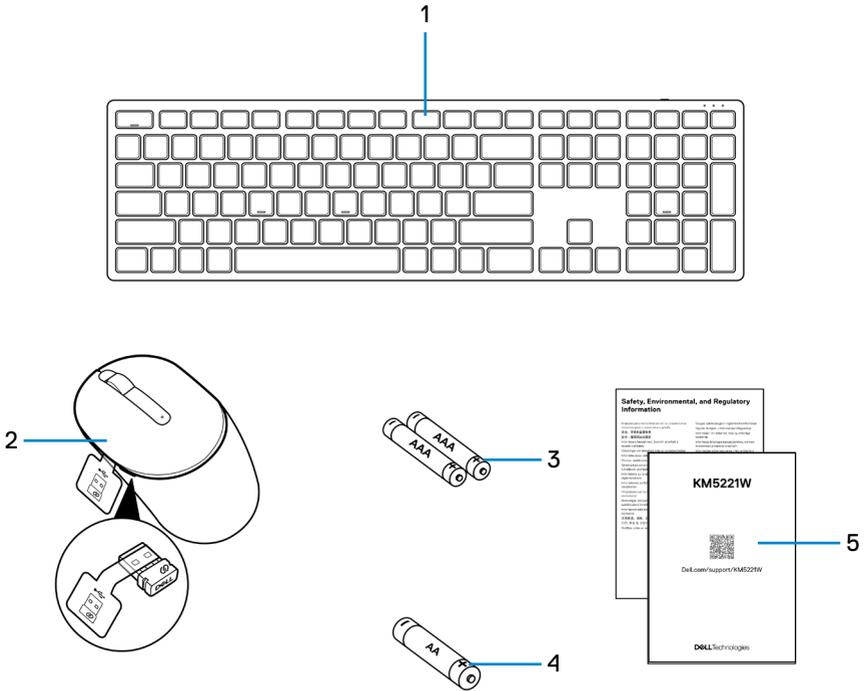

1. Keyboard

2. Mouse with USB receiver

3. AAA-type Batteries (for keyboard)


4. AA-type Battery (for mouse)

5. Documents


Features

Keyboard

Top view

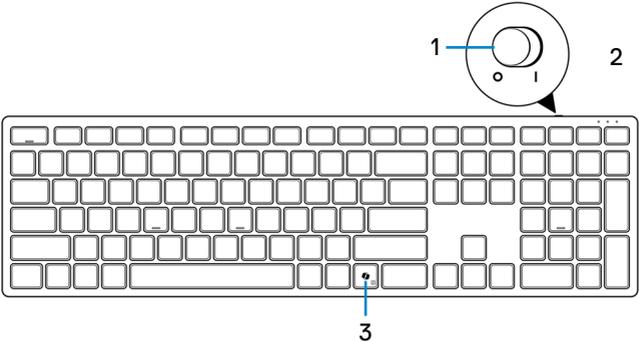

Bottom view

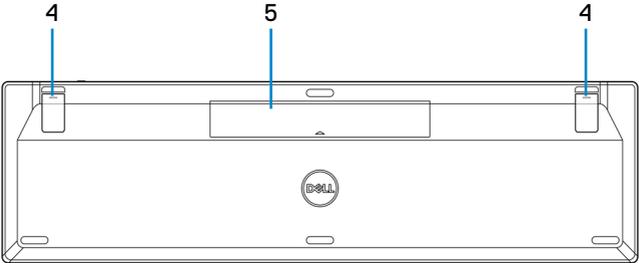


- 1. Power switch
- 2. Battery-status light
- 3. Copilot key
- 4. Keyboard feet
- 5. Battery cover

Launch Copilot in Windows

 **NOTE:** Use  key with supported Windows 11 devices; feature availability varies by device and market, see aka.ms/KeySupport.

 **NOTE:** Copilot in Windows is available only in approved markets.



 **NOTE: Open the battery cover to access the PPID/Regulatory label location.**

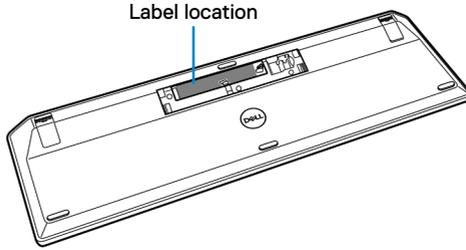

Mouse


Top view

Bottom view

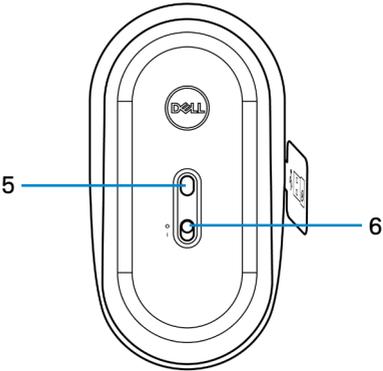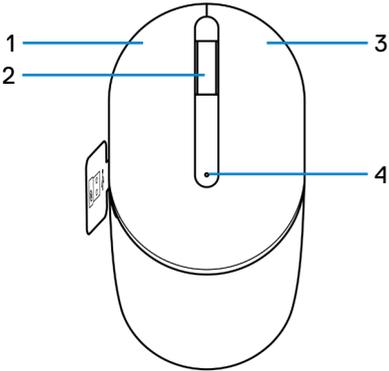

- 1. Left button
- 2. Scroll wheel
- 3. Right button
- 4. Battery-status light
- 5. Optical sensor
- 6. Power switch

NOTE: Open the mouse cover to access the PPID/Regulatory label location.

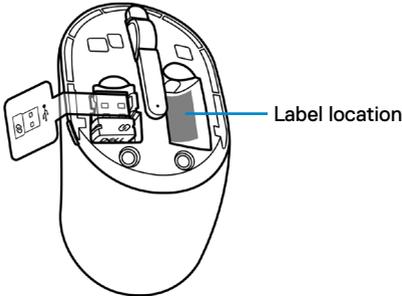

Dell Display and Peripheral Manager

Dell Display and Peripheral Manager is an app that helps you set up and configure your Dell monitors and peripherals. With this app you can:

- Assign shortcuts to programmable keys of your keyboard through the **Key Customization** tab.
- View device information such as firmware version and battery status for wireless devices.
- Upgrade to the latest firmware for your device.
- Configure DPI setting and set primary mouse button.
- Pair or unpair to the RF dongle.

Installing Dell Display and Peripheral Manager


When you connect the device to your computer for the first time, you may be prompted to download and install the app.

 **NOTE:** If the download prompt does not appear within a few minutes, you can manually install the software from the **Drivers & Downloads** tab at Dell.com/support/KM5221W.


For more information, see *Dell Display and Peripheral Manager User's Guide* in the **Documentation** tab.

Setting up your wireless keyboard


1. Using your fingertip, pry open the battery cover.

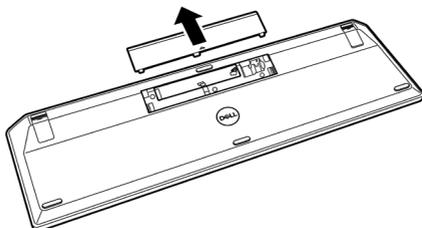

2. Install the AAA batteries into the battery compartment. Then replace the battery cover.

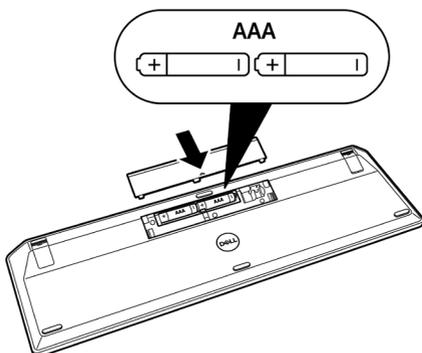


3. Slide the power switch to the right to turn on the keyboard.

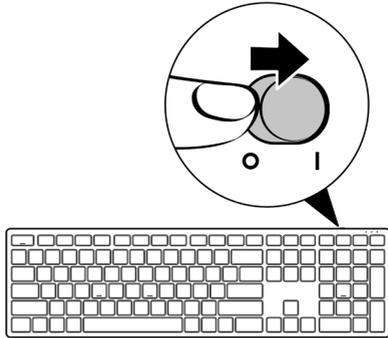

Setting up your wireless mouse


1. Locate the slot on the side of the mouse cover. Using your fingertip, pry open the cover.

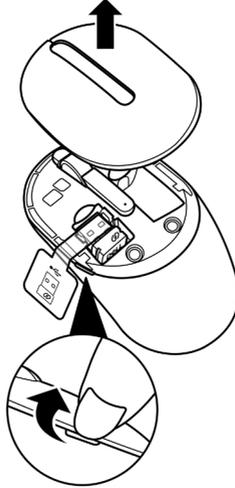


2. Remove the USB receiver from its compartment.




3. Install the AA battery into the battery compartment.

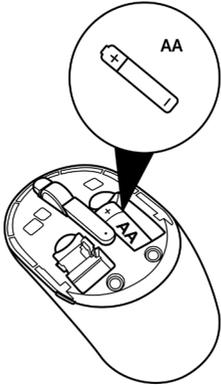

4. Replace the mouse cover.

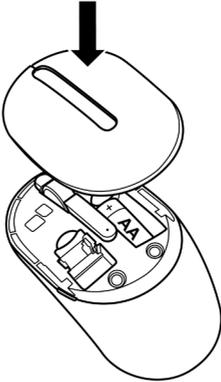

5. Slide the power switch down to turn on the mouse.

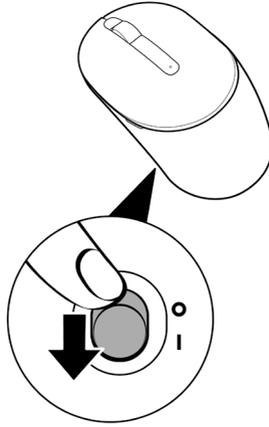


Pairing your wireless keyboard and mouse

Your Dell wireless keyboard and mouse can be paired with devices using USB receiver. You can pair and switch between a laptop, desktop, and a compatible mobile device.


Pairing with a USB receiver

 **NOTE:** You can connect a device to your wireless keyboard and mouse using the Dell Universal pairing.


1. Detach the receiver tag from the USB receiver.

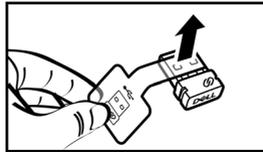


2. Install the Dell Universal USB receiver to the USB port on your computer.

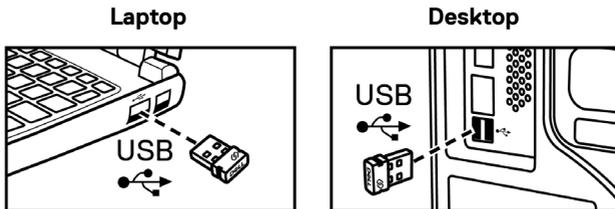

3. Slide the power switch to the right to turn on the keyboard. Then slide the power switch down to turn on the mouse.

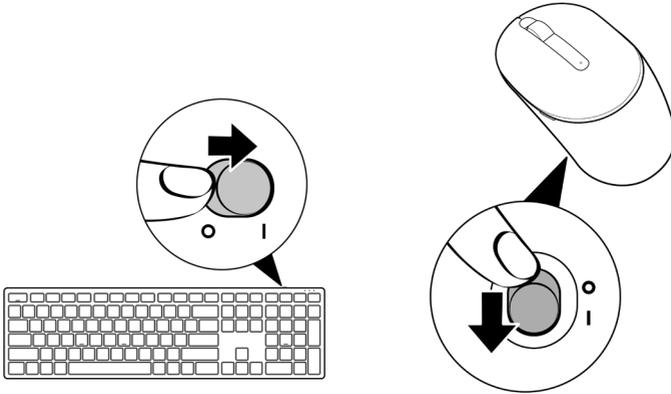

The keyboard and mouse are paired with your USB device.

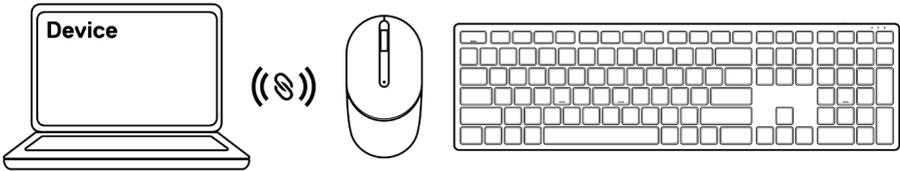

Keyboard Specifications

General

Model number	KB3121W
Connection type	Wireless (2.4 GHz with nano receiver)
System requirement	<ul style="list-style-type: none">• Windows Server 2012; 2012 R2, 2016 (RF receiver only)• Windows 8, 32/64-bit• Windows 10, 32/64-bit• Windows 11• Android• Chrome• MAC OS• Linux 6.x, Ubuntu 18 and Red Hat 8 Enterprise• Free-DOS (RF receiver only)

Electrical

Operating voltage	2 V - 3.2 V
Battery type	Two AAA batteries

Physical characteristics

Weight (without batteries)	400 g (0.88 lb)
Dimensions:	
Length	432.71 mm (17.04 in.)
Width	122.11 mm (4.81 in.)
Height	26.11 mm (1.03 in.)

Environmental

Temperature:

Operating -10°C to 50°C (14°F to 122°F)

Storage -40°C to 65°C (-40°F to 149°F)

Storage humidity 95% maximum relative humidity;
non-condensing

Wireless

RF resolution 2.4 GHz RF

Operating channel 5 channels for GFSK modulation with 1 Mbps

Operation distance > 10 m (outdoor without any interference)

Mouse Specifications

General

Model number	MS3121W
Connection type	Wireless (2.4 GHz with nano receiver)
System requirement	<ul style="list-style-type: none">• Windows Server 2012; 2012 R2, 2016 (RF receiver only)• Windows 8, 32/64-bit• Windows 10, 32/64-bit• Windows 11• Android• Chrome• Linux 6.x, Ubuntu• Free-DOS (RF receiver only)

Electrical

Operating voltage	1 V - 1.5 V
Battery type	One AA battery

Physical characteristics

Weight (without battery)	68.51 g (0.15 lb)
Dimensions:	
Length	115.51 mm (4.55 in.)
Width	61.96 mm (2.44 in.)
Height	38.14 mm (1.50 in.)

Environmental

Temperature:

Operating -10°C to 50°C (14°F to 122°F)

Storage -40°C to 65°C (-40°F to 149°F)

Storage humidity 95% maximum relative humidity;
non-condensing

Wireless

RF resolution 2.4 GHz RF

Operating channel 5 channels for GFSK modulation with 1 Mbps

Operation distance > 10 m (outdoor without any interference)

Troubleshooting

Problems

Possible solutions

Keyboard/mouse is not functioning

1. Check if the batteries are inserted in the correct orientation. The batteries “+” and “-” ends should be placed as indicated on the battery compartment.
 2. Check the battery level.
 - If the device uses the rechargeable batteries, ensure that the batteries are fully charged.
 - If the batteries are exhausted, replace them with new ones.
 3. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on.
 4. Restart your computer.
 5. Ensure that the USB receiver is directly connected to your computer.
 - Avoid using the port replicators, USB hubs, and so on.
 - Change the USB port.
-

Problems	Possible solutions
Unable to pair the keyboard/mouse with your computer	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with new ones. 2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on. 3. Restart your computer. 4. Ensure that the USB receiver is directly connected to your computer. Avoid using the port replicators, USB hubs, and so on. 5. Change the USB port or insert the USB receiver into another USB port on your computer. 6. Ensure that the distance between your computer and keyboard/mouse is within 10 meters.
Mouse pointer does not move	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with new ones.
Mouse left/right button does not work	<ol style="list-style-type: none"> 1. Check the battery level. <ul style="list-style-type: none"> • If the device uses the rechargeable batteries, ensure that the batteries are fully charged. • If the batteries are exhausted, replace them with new ones.
Keyboard buttons do not work	<ol style="list-style-type: none"> 2. Turn off the device, and then turn it on. Check if the battery-status light is flashing amber 10 times, indicating that the battery power is low. If the batteries are fully depleted, the battery-status light will not turn on.
Wireless connection is lost	<ol style="list-style-type: none"> 3. Restart your computer. 4. Ensure that the distance between your computer and keyboard/mouse is within 10 meters.

Problems

Possible solutions

Troubleshooting a slow moving cursor

1. Ensure that the sensor is not obstructed or dirty.
2. Glass or very smooth glossy surfaces are not suitable for the mouse sensor to capture the mouse movement. Using a dark colored fabric mouse pad can improve the tracking.
3. Change the mouse settings to adjust the pointer speed.
Click or tap the tab that matches the Operating System (OS) installed on your laptop/desktop and perform the steps within that section to change the settings.
 - In the **Search** box, type `main.cpl`. The **Mouse Properties** dialog box appears.
 - Click or tap `main.cpl` in the list of programs.
 - Click or tap the **Pointer Options** tab. In the **Motion** section, move the slider to adjust the pointer speed to the desired level.
 - Click or tap **OK**.

Features on Dell Display and Peripheral Manager software may not be supported

The features supported by Dell Display and Peripheral Manager are dependent on the operating system and the processor of your computer.

For more information, see the documentation for Dell Display and Peripheral Manager at **Dell Support Site**.

Oman regulatory information

Regulatory Model: KB3121Wp, MS3121Wp & DGRFEO

OMAN-TRA
D172338
R/19143/24
R/19144/24
R/19142/24

Regulatory Model: KB3121Wt, MS3121Wt & SD-8160

R/10018/20	R/10019/20	R/19190/2024	OMAN-TRA D172338
			

Statutory Information

Warranty

Limited warranty and return policies

Dell-branded products carry a three-year limited hardware warranty. If purchased together with Dell system, it will follow the system warranty.

For U.S. customers:

This purchase and your use of this product are subject to Dell's end user agreement, which you can find at [Dell.com/terms](https://www.dell.com/terms). This document contains a binding arbitration clause.

For European, Middle Eastern and African customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's end user contract terms.

Dell may also provide an additional hardware warranty – full details of the Dell end user contract and warranty terms can be found by going to [Dell.com/terms](https://www.dell.com/terms), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link for the end user terms or the “support” link for the warranty terms.

For non-U.S. customers:

Dell-branded products that are sold and used are subject to applicable national consumer legal rights, the terms of any retailer sale agreement that you have entered into (which will apply between you and the retailer) and Dell's warranty terms. Dell may also provide an additional hardware warranty – full details of Dell's warranty terms can be found by going to [Dell.com](https://www.dell.com), selecting your country from the list at the bottom of the “home” page and then clicking the “terms and conditions” link or the “support” link for the warranty terms.