	User manual	
œ	用戶手冊	

SCB1431NB SCB1436NB SCB1440NB

Important Safety Instructions:

Save these instructions - this manual contains important safety and operating instructions for this charger. Before using your charger read all instructions and cautionary markings on the charger, the batteries to be charged and the products that use the batteries.

Warning:

- Use to charge AA and AAA rechargeable batteries only. Do not charge Alkaline, Zinc Carbon, Lithium or any other type of battery not specified on the charger. Other types of batteries might burst or leak causing personal injury.
- · For proper battery insertion, please observe pole indications (+/-). See fig.A.
- · Do not dispose of in fire, short circuit or open.
- · Charge new batteries before using.
- Never alter the plug.
- · Do not operate the charger if it has been subjected to shock or if it is damaged.
- · Do not disassemble the charger.
- To avoid risk of electric shock, unplug the charger from the electrical outlet before cleaning or when not in use,
- This battery charger is for indoor use only. Do not expose the charger to rain or
 excessive moisture. Keep the charger away from dust and dirt, which can cause
 premature wear of parts or harm its normal operation.
- · Never use the charger as a power source for any electrical equipment.
- Do not incinerate, disassemble or short circuit batteries since they may burst or release toxic materials.
- This charger is not intended for use by young children or infirm persons without supervision.
- · Do not operate the charger if the plug is damaged.
- · Do not charge AAA and AA batteries in the same slot.
- · Do not charge damaged or leaking batteries.
- · Charge Ni-Cd and Ni-MH batteries separately.
- · Do not mix batteries with different capacity.
- Remove the batteries from the charger before it is scrapped. Dispose of the batteries safely.

Care:

- Wipe the charger with a damp cloth occasionally without harsh chemicals, cleaning solvents or strong detergents.
- Charger and batteries must be disposed of separately. Inform yourself about the separate collection system for electrical and electronic products.

Operating instructions

General charging guidelines

- At the same time you can charge two or four AA or AAA batteries or two AA and two AAA batteries.
- · For long battery life, only charge empty batteries.
- When charging, ambient temperature should be between 0°C and 40°C (32°F and 104°F).
- Make sure batteries in each pair of slots (1/2 and/or 3/4) are identical (same capacity, and size).

Note: it is normal for the unit and the batteries to become warm while charging.

Charging batteries

- Insert batteries into the charger. See fig.A. When charging only two batteries, insert them into the same pair of battery slots (1/2 or 3/4).
- 2 Plug the charger into a wall outlet. See fig. B.
- >The red charge LED(s) will illuminate, indicating that charging is in progress. The LED(s) will remain lit until charging is stopped manually.
- 3 When finished, unplug the charger from the power source and remove the batteries. See fig. C.Always unplug between charges!

Battery charging times: See fig. D.

Charging times are for reference only as they may differ per brand and performance of batteries as well as environmental conditions at the time of charging.

Input voltage 輸入電壓	AC 220-240V, 50/60Hz, 10W AC 220-240V, 50/60Hz, 10W	
Output voltage	AA	2.8V × 2
	AAA	2.8V x 2
輸出電壓	5 號	2.8V x 2
	7 號	2.8V x 2
Charging current	AA	170 - 200mA
0.0	AAA	80 - 100mA
充電電流	5 號	170 - 200mA
	7號	80 - 100mA

<€ 0682 Φ

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. of their respective owners 2005 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com