



# How to Configure ErP Lot 9 in BIOS Setup

Follow the instructions to enable the ErP Lot 9 function.

1. Access the BIOS Setup program by pressing the <DEL> key during the POST when the power is turned on.
2. Go to **Advanced Page**.
3. Select **ErP Mode** and select **Lot 9**.
4. Go to **Save & Exit Page** to save the configuration.

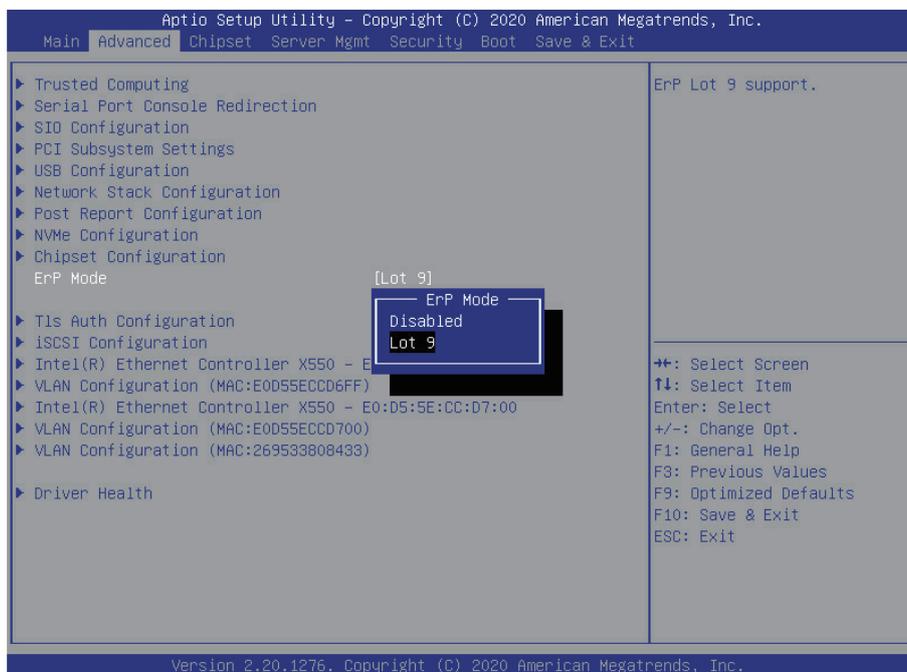

5. When **ErP Mode** is enabled, fan speed will be adjusted and any redundant PSU will be placed into a standby state ("Cold Redundancy") in order to decrease power consumption when the server is in idle mode.

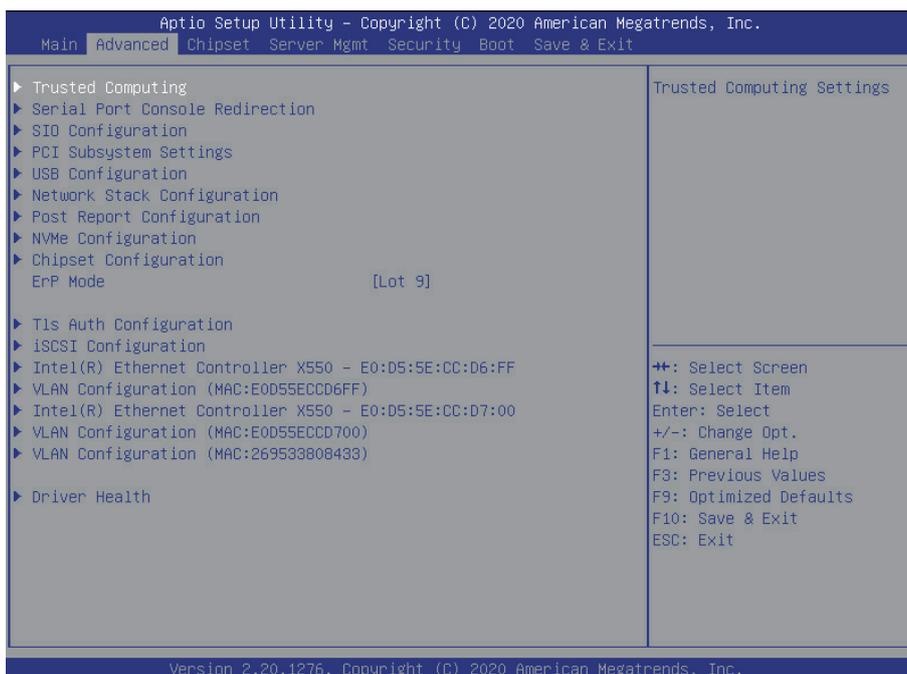

## NOTE!

ErP mode will be enabled only when no add-on cards are installed in the server or motherboard, and BMC firmware has also been updated to the latest version with ErP mode support.