

# **Latitude 7220 Rugged Extreme Tablet**

## Service Manual

## Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

**© 2019 Dell Inc. or its subsidiaries. All rights reserved.** Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

# Contents

<b>1 Working on your tablet.....</b>	<b>6</b>
Safety instructions.....	6
Before working inside your tablet.....	6
Safety precautions.....	7
Electrostatic discharge—ESD protection.....	7
ESD field service kit .....	8
Transporting sensitive components.....	8
After working inside your tablet.....	9
<b>2 Major components of your system.....</b>	<b>10</b>
<b>3 Removing and installing components.....</b>	<b>13</b>
Recommended tools.....	13
Screw list.....	13
Batteries.....	14
Lithium-ion battery precautions.....	14
Removing the batteries.....	14
Installing the batteries.....	15
Subscriber Identification Module (SIM) card.....	16
Removing the uSIM.....	16
Inserting the uSIM.....	17
Stylus.....	18
Removing the stylus.....	18
Installing the stylus.....	19
Display assembly.....	20
Removing the display assembly.....	20
Installing the display assembly.....	23
Function keys.....	26
Removing the function keys.....	27
Installing the function keys.....	28
Heat sink.....	29
Removing the heat-sink.....	29
Installing the heat-sink.....	30
System fan.....	31
Removing the system fan.....	31
Installing the system fan.....	32
Solid-state drive.....	33
Removing the M.2 2230 solid-state drive.....	33
Removing the M.2 2280 solid-state drive.....	33
Installing M.2 2230 solid-state drive.....	34
Installing the M.2 2280 solid-state drive.....	34
WLAN card.....	35
Removing the WLAN card.....	35
Installing the WLAN card.....	36

WWAN card.....	38
Removing the WWAN card.....	38
Installing the WWAN card.....	39
Microphone.....	40
Removing the microphone.....	40
Installing the microphone.....	40
Front camera.....	41
Removing the front camera.....	41
Installing the front camera.....	43
Coin-cell battery.....	45
Removing the coin-cell battery.....	45
Installing the coin-cell battery.....	46
System board.....	47
Removing the system board.....	47
Installing the system board.....	52
Rear Camera.....	55
Removing the rear camera.....	55
Installing the rear camera.....	56
Micro serial port and power connector port.....	57
Removing micro serial port and power connector port.....	57
Installing micro serial port and power connector port.....	58
Docking Board.....	60
Removing the docking board.....	60
Installing the docking board.....	61
Smart card reader and wireless passthrough daughterboard.....	62
Removing the smart card reader and wireless passthrough daughterboard.....	62
Installing the smart card reader and wireless passthrough daughterboard.....	64
<b>4 System setup.....</b>	<b>67</b>
Boot menu.....	67
Navigation keys.....	67
Boot Sequence.....	68
System setup options.....	68
General options.....	68
System information.....	69
Video.....	71
Security.....	71
Secure boot.....	72
Intel Software Guard Extensions.....	73
Performance.....	73
Power management.....	74
POST behavior.....	75
Manageability.....	76
Virtualization support.....	76
Wireless.....	77
Maintenance screen.....	77
System logs.....	77
SupportAssist System Resolution.....	77
About.....	78
Updating the BIOS in Windows .....	78

Updating BIOS on systems with BitLocker enabled.....	78
Updating your system BIOS using a USB flash drive.....	79
Updating the Dell BIOS in Linux and Ubuntu environments.....	79
Flashing the BIOS from the F12 One-Time boot menu.....	79
System and setup password.....	82
Assigning a system setup password.....	83
Deleting or changing an existing system setup password.....	83
<b>5 Troubleshooting.....</b>	<b>84</b>
Enhanced Pre-Boot System Assessment (ePSA) diagnostics.....	84
Running the ePSA diagnostics.....	84
System diagnostic lights.....	84
Recovering the operating system.....	85
WiFi power cycle.....	86
<b>6 Getting help.....</b>	<b>87</b>
Contacting Dell.....	87

# Working on your tablet

## Safety instructions

### Prerequisites

Use the following safety guidelines to protect your tablet from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that the following conditions exist:

- You have read the safety information that shipped with your tablet.
- A component can be replaced or, if purchased separately, installed by performing the removal procedure in reverse order.

### About this task

 **NOTE:** Disconnect all power sources before opening the tablet. After you finish working inside your tablet, replace all the components and screws before connection the power source.

 **WARNING:** Before working inside your tablet, read the safety information that shipped with your tablet. For more safety practices information, see the [Regulatory Compliance Homepage](#)

 **CAUTION:** Many repairs may only be done by a certified service technician. You should only perform troubleshooting and simple repairs as authorized in your product documentation, or as directed by the online or telephone service and support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. Read and follow the safety instructions that came with the product.

 **CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface simultaneously as touching a connector on the back of the tablet.

 **CAUTION:** Handle components and cards with care. Do not touch the components or contacts on a card. Hold a card by its edges or by its metal mounting bracket. Hold a component such as a processor by its edges, not by its pins.

 **CAUTION:** When you disconnect a cable, pull on its connector or on its pull-tab, not on the cable itself. Some cables have connectors with locking tabs; if you are disconnecting this type of cable, press in on the locking tabs before you disconnect the cable. As you pull connectors apart, keep them evenly aligned to avoid bending any connector pins. Also, before you connect a cable, ensure that both connectors are correctly oriented and aligned.

 **NOTE:** The color of your tablet and certain components may appear differently than shown in this document.

## Before working inside your tablet

### About this task

To avoid damaging your tablet, perform the following steps before you begin working inside the tablet:

### Steps

1. Ensure that you follow the [Safety Instruction](#).
2. Ensure that your work surface is flat and clean to prevent the tablet cover from being scratched.
3. Turn off your tablet.
4. If the tablet is connected to a docking device (docked) such as the mobile keyboard or a docking station, undock it.
5. Disconnect your tablet and all attached devices from their electrical outlets.
6. Press and hold the power button while the tablet is unplugged to ground the system board.

**(i) NOTE:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface simultaneously as touching a connector on the back of the tablet.

7. Remove any installed ExpressCards or Smart Cards from the appropriate slots.

## Safety precautions

The safety precautions chapter details the primary steps to be taken before performing any disassembly instructions.

Observe the following safety precautions before you perform any installation or break/fix procedures involving disassembly or reassembly:

- Turn off the tablet and all attached peripherals.
- Disconnect the tablet and all attached peripherals from AC power.
- Disconnect all network cables, telephone, and telecommunications lines from the system.
- Use an ESD field service kit when working inside any tablet to avoid electrostatic discharge (ESD) damage.
- After removing any system component, carefully place the removed component on an antistatic mat.
- Wear shoes with nonconductive rubber soles to reduce the chance of getting electrocuted.

## Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. The wrist strap should be secure and in full contact with your skin, and ensure that you remove all jewelry such as watches, bracelets, or rings prior to bonding yourself and the equipment.

## Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory DIMMs, and system boards. Very slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, etc.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. The use of wireless anti-static straps is no longer allowed; they do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

# ESD field service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

## Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the system being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the system, or inside a bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside of an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. If you do not have your own wrist strap tester, check with your regional office to find out if they have one. To perform the test, plug the wrist-strap's bonding-wire into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.
- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or portable environment. Servers are typically installed in a rack within a data center; desktops or portables are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of system that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components
- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the system, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

## ESD protection summary

It is recommended that all field service technicians use the traditional wired ESD grounding wrist strap and protective anti-static mat at all times when servicing Dell products. In addition, it is critical that technicians keep sensitive parts separate from all insulator parts while performing service and that they use anti-static bags for transporting sensitive components.

## Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

## Lifting equipment

Adhere to the following guidelines when lifting heavy weight equipment:

 **CAUTION: Do not lift greater than 50 pounds. Always obtain additional resources or use a mechanical lifting device.**

1. Get a firm balanced footing. Keep your feet apart for a stable base, and point your toes out.
2. Tighten stomach muscles. Abdominal muscles support your spine when you lift, offsetting the force of the load.
3. Lift with your legs, not your back.

4. Keep the load close. The closer it is to your spine, the less force it exerts on your back.
5. Keep your back upright, whether lifting or setting down the load. Do not add the weight of your body to the load. Avoid twisting your body and back.
6. Follow the same techniques in reverse to set the load down.

## After working inside your tablet

### About this task

After you complete any replacement procedure, ensure that you connect external devices, cards, and cables before turning on your tablet.


 **CAUTION:** To avoid damage to the tablet, use only the battery that is designed for this particular Dell tablet. Do not use batteries that are designed for other Dell tablets.

### Steps

1. Connect any external devices, such as a mobile keyboard or a docking station, and replace any cards, such as an ExpressCard.
2. Connect your tablet and all attached devices to their electrical outlets.
3. Turn on your tablet.



# Major components of your system

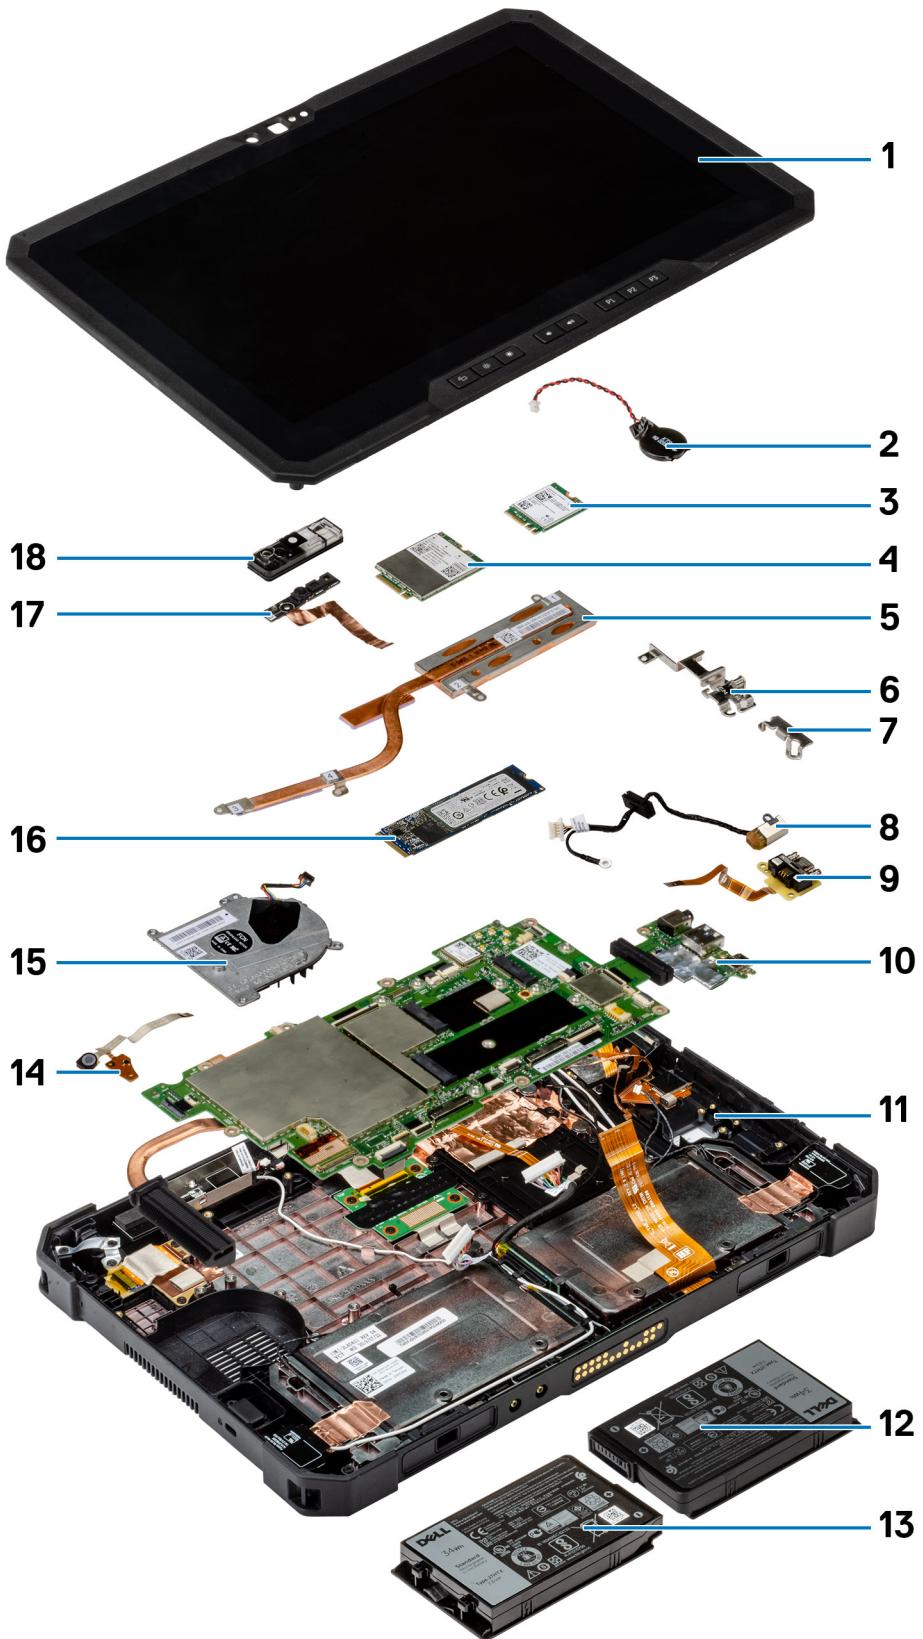

1. Display assembly
2. Coin-cell battery
3. WLAN card
4. WWAN card
5. Heat-sink
6. USB Type-C bracket
7. Mini-serial bracket
8. Power adapter port
9. Mini-serial port
10. System board
11. NFC antenna
12. Left battery (as viewed from the back)
13. Right battery (as viewed from the back)
14. Microphone assembly circuit board
15. System fan
16. Solid-state drive
17. Front camera cable
18. Front camera cover

**(i) NOTE:** Dell provides a list of components and their part numbers for the original system configuration purchased. These parts are available according to warranty coverages purchased by the customer. Contact your Dell sales representative for purchase options.

# Removing and installing components

## Recommended tools

The procedures in this document require the following tools:

- Phillips #0 screwdriver
- Phillips #1 screwdriver
- Phillips #2 screwdriver
- Plastic scribe

**(i) NOTE:** The #0 screw driver is for screws 0-1 and the #1 screw driver is for screws 2-4.

## Screw list

**(i) NOTE:** When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

**(i) NOTE:** Screw color may vary with the configuration ordered.

**Table 1. Screw list**

Component	Screw type	Quantity	Screw image
LCD	M2.5x5	19	
Heat sink	M2x5	1	
	M2x3	3	
System fan	M2x5	4	
Solid-state drive (SSD)	M2x3	1	
M.2 WLAN	M2x3	1	
M.2 WWAN	M2x3	1	
Microphone	M2x5	1	
Front camera	M2x3	1	

Component	Screw type	Quantity	Screw image
System board	M2x5	11	
	M2x3	2	
	M1.6x5	2	
Rear camera	M2x5	3	

## Batteries

### Lithium-ion battery precautions

 **CAUTION:**

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery as much as possible before removing it from the system. This can be done by disconnecting the AC adapter from the system to allow the battery to drain.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other system components.
- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a lithium-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See [www.dell.com/contactdell](http://www.dell.com/contactdell).
- Always purchase genuine batteries from [www.dell.com](http://www.dell.com) or authorized Dell partners and resellers.

## Removing the batteries


### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).

 **NOTE:** This tablet can accommodate two hot-swap capable batteries (Primary and optional). The removal procedure of the primary and optional battery are identical.

### About this task

The figure indicates the location of the batteries and provides a visual representation of the removal procedure.

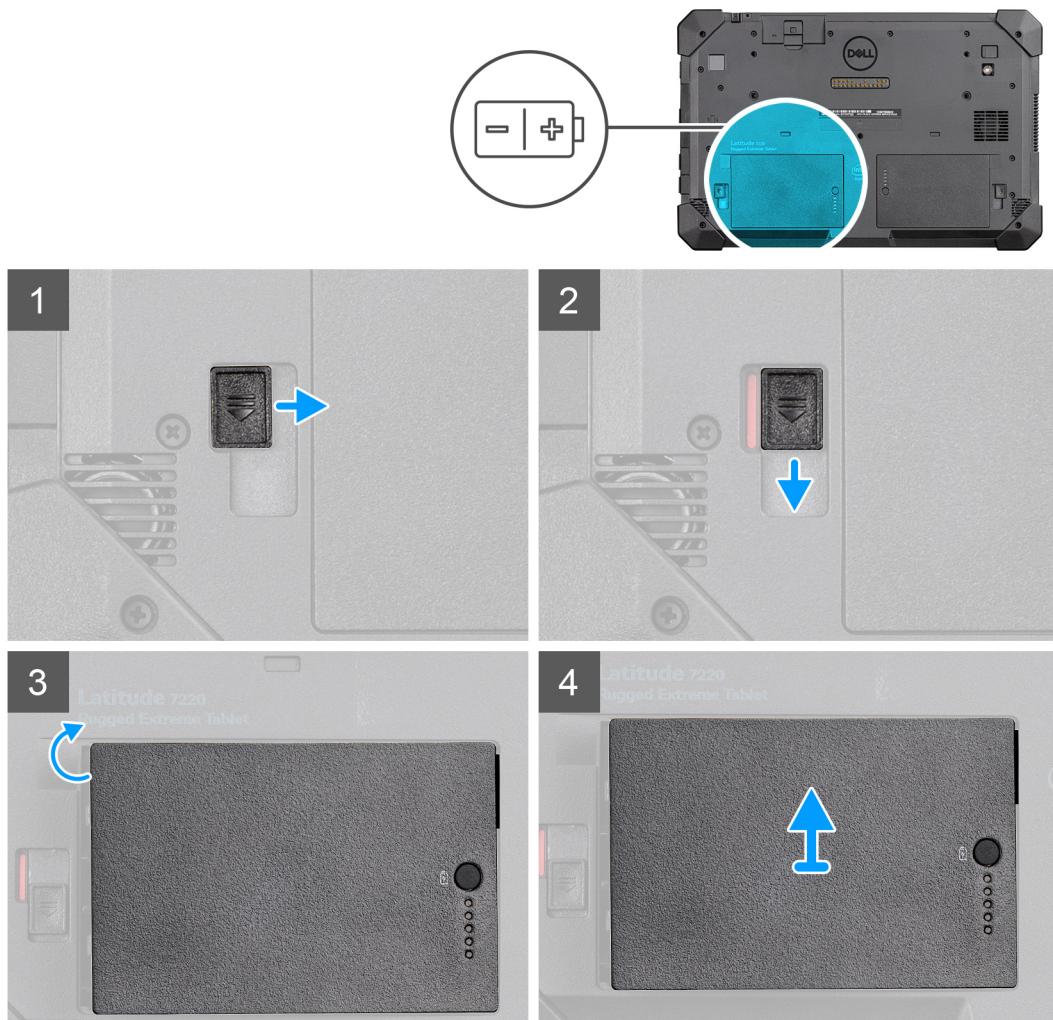

## Steps

1. Slide the battery release latch to the unlock position.
2. Slide the latch down to unlock the battery.
3. Lift the battery out of the battery bay.
4. Remove the battery from the tablet.

## Installing the batteries



### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

***(i) NOTE: This tablet can accommodate two hot-swap capable batteries (Primary and optional). The installation procedure of the primary and optional battery are identical.***

The figure indicates the location of the battery and provides a visual representation of the installation procedure.

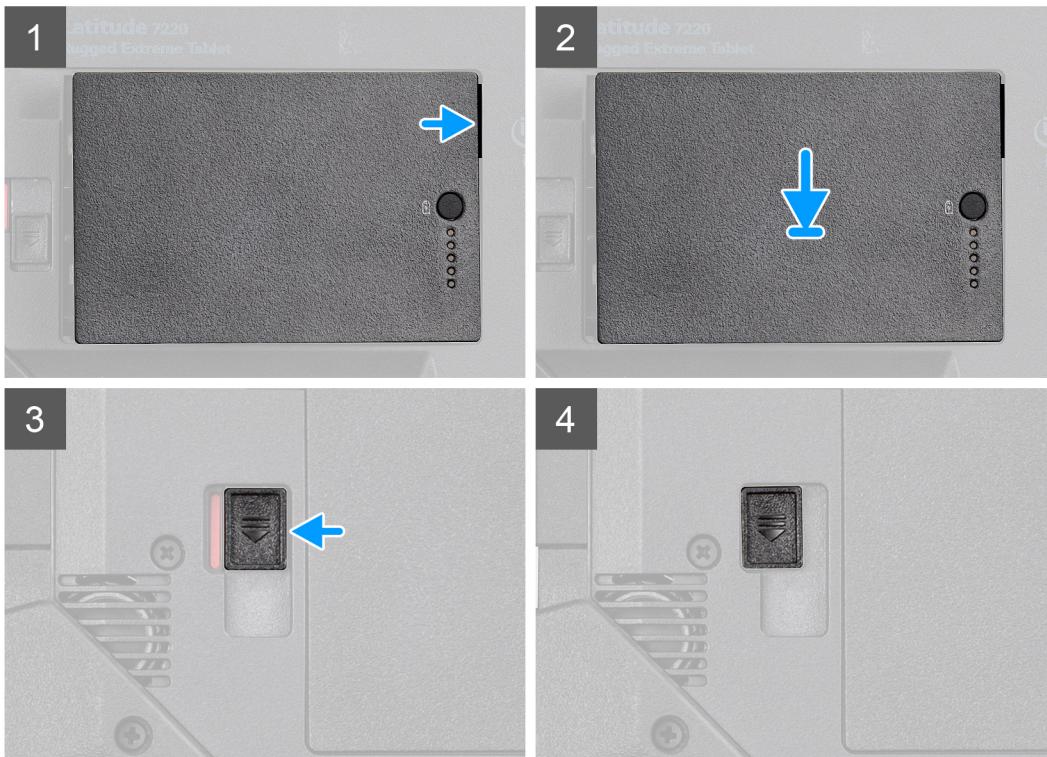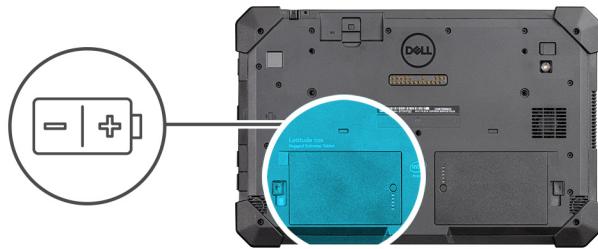

### Steps

1. Align the pins on the battery with the connector on the tablet.
2. Place the battery into the battery bay until it clicks into place.
3. Slide the battery latch to the locked state.
4. Ensure that the battery release latch is in the locked state.

### Next steps

1. Follow the procedure in [after working inside your tablet](#).

## Subscriber Identification Module (SIM) card

### Removing the uSIM

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).

## About this task

The figure indicates the location of the uSIM and provides a visual representation of the removal procedure.



## Steps

1. Open the uSIM slot cap.
2. Press the uSIM card and slide it out of the slot.

**(i) NOTE:** Use a flat pointed scribe to ease removing the SIM.


## Inserting the uSIM

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the uSIM and provides a visual representation of the installation procedure.

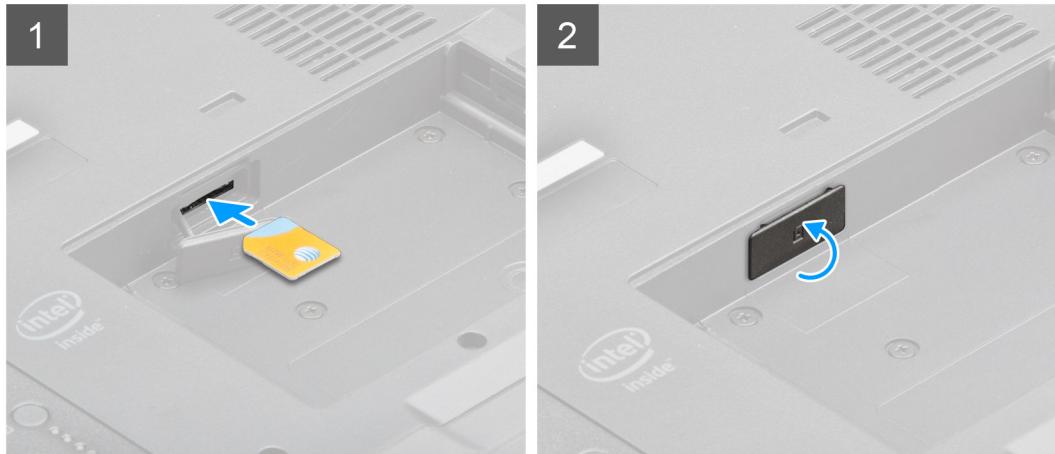

### Steps

1. Insert the uSIM card in the slot until it is locked.
2. Close the uSIM slot cap to initial state.

### Next steps

1. Install the [batteries](#).
2. Follow the procedure in [after working inside your tablet](#).

## Stylus


### Removing the stylus

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).

#### About this task

The figure indicates the location of the stylus and provides a visual representation of the removal procedure.

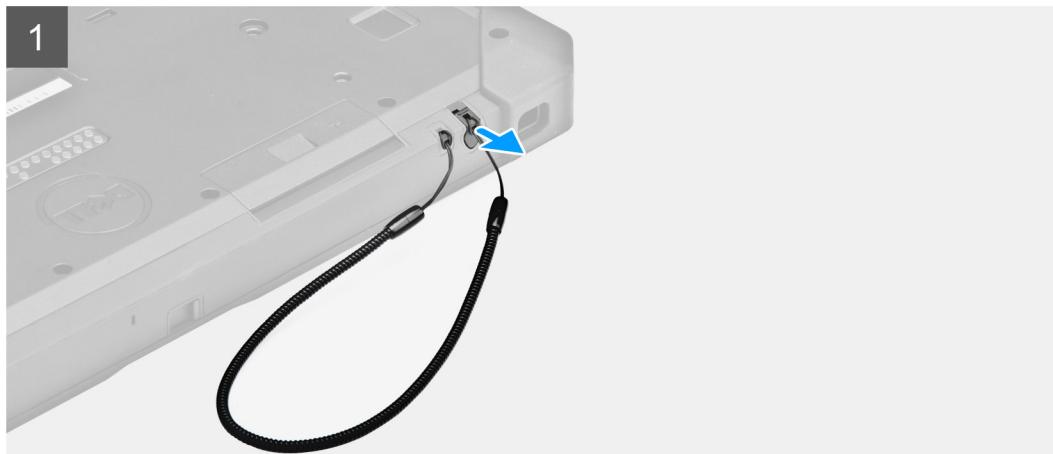

## Steps

Slide the stylus upward using the groove on the stylus pen.

***(i) NOTE: Avoid pulling the stylus with the stretchable thread.***

The stylus is ready to assist you in using the rugged tablet.


## Installing the stylus

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the stylus and provides a visual representation of the installation procedure.

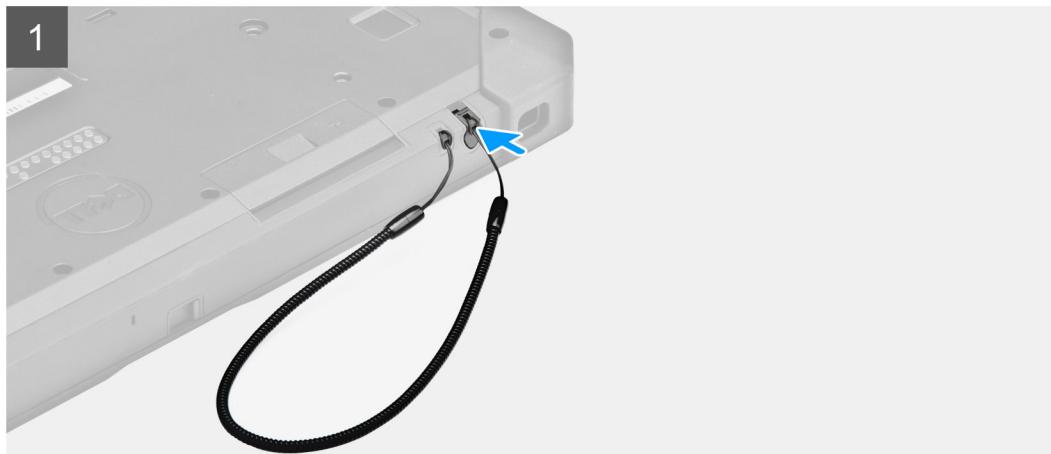

## Steps

Insert the stylus into the slot on the tablet.

***(i) NOTE: When not in use, avoid hanging the stylus that is detached from its groove.***

## Next steps

1. Follow the procedure in [after working inside your tablet](#).

# Display assembly

## Removing the display assembly

### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).

### About this task

The figure indicates the location of the display assembly and provides a visual representation of the removal procedure.



**19x**  
M2.5x5




1




2




3

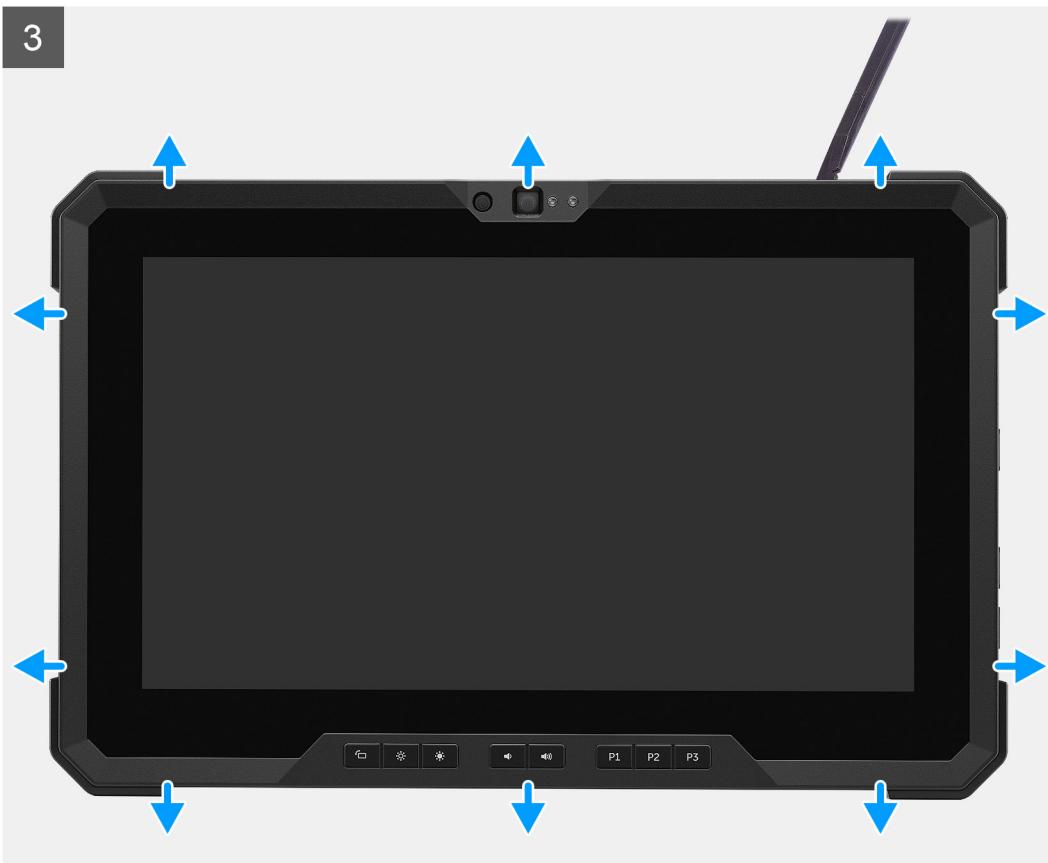

4

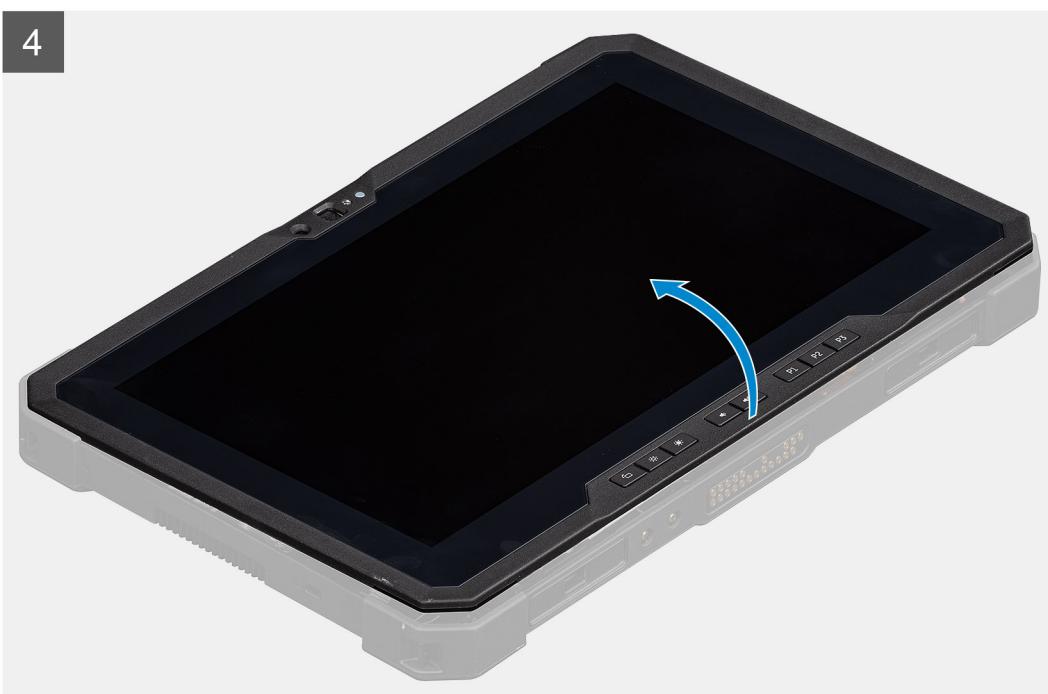

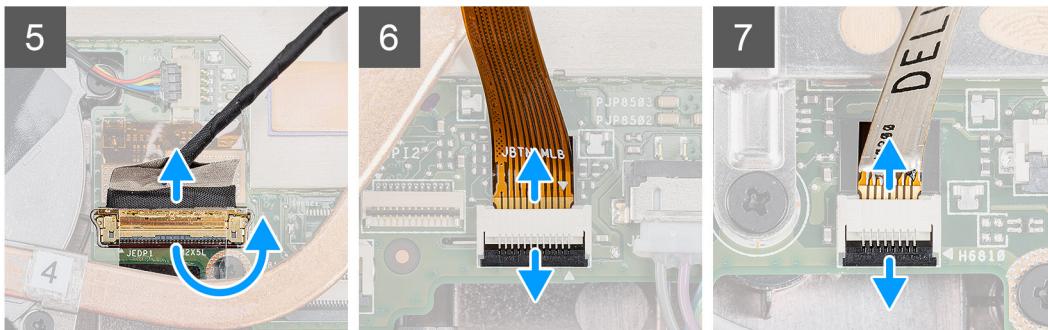

### Steps

1. Place the tablet on a flat and clean surface and remove the 19 (M2.5x5) screws that secure the display assembly to the chassis.
2. Flip the tablet.
3. Using a plastic scribe, gently pry the edges evenly to unlock the plastic clips that secure the display assembly to the chassis.
 

***(i) NOTE: Tip of the plastic scribe should be inserted to avoid damage to the seal on the display assembly and to the clips that secure the display assembly to the chassis.***
4. Flip the LCD panel by an angle less than 90°.
 

***(i) NOTE: Ensure not to flip more than 90° angle, as the LCD panel ports and cables are connected to the system board and may damage the LCD cables.***
5. Remove the adhesive tape and disconnect the eDP cable from the connector on the system board.
6. Remove the adhesive tape and disconnect the function key cable from the connector on the system board.
7. Using a plastic scribe, lift the latch and release the touch cable that is connected to the system board.




## Installing the display assembly

### Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The figure indicates the location of the component and provides a visual representation of the installation procedure.

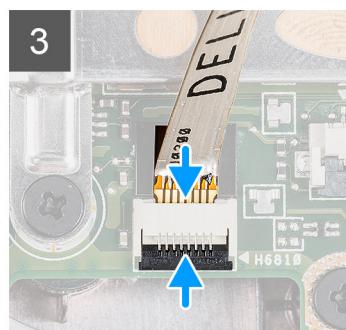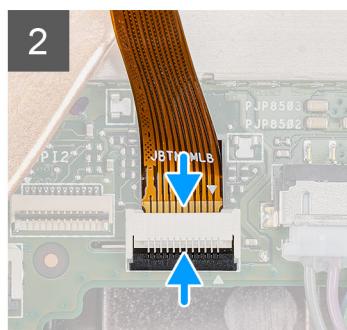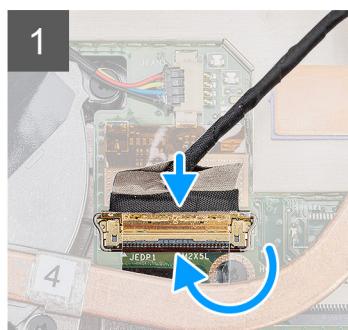

5

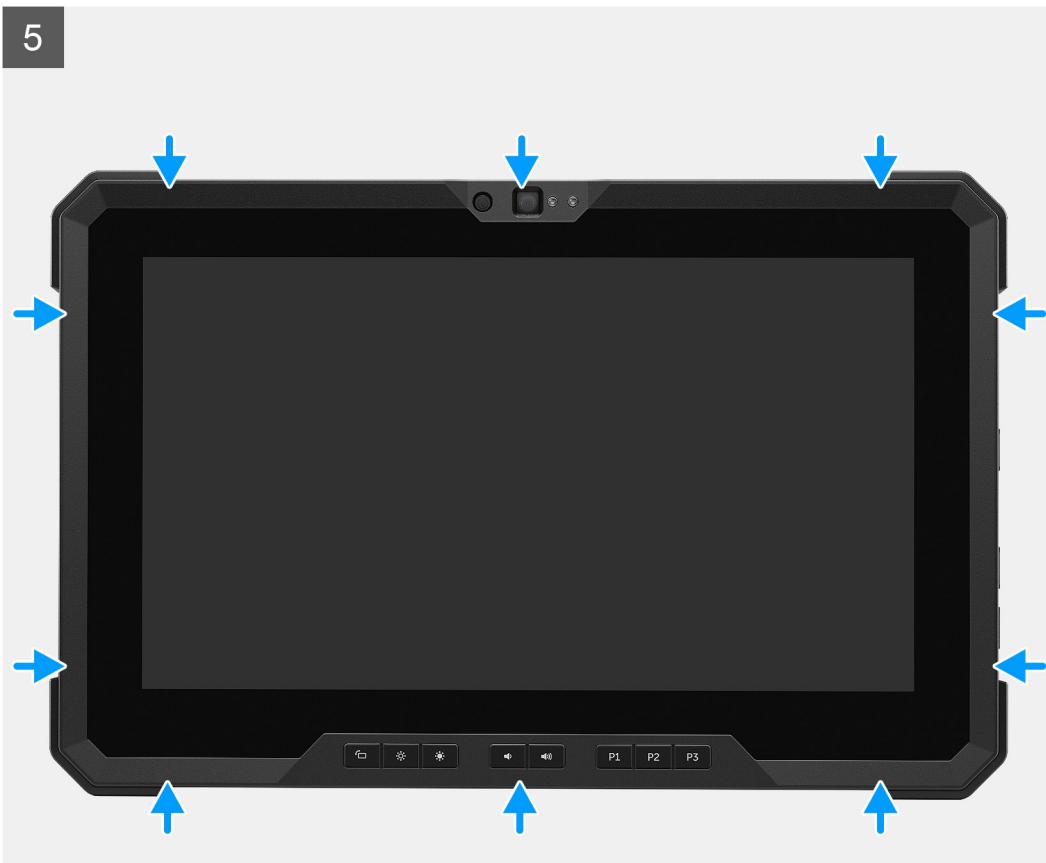

6






**19x**  
M2.5x5



7

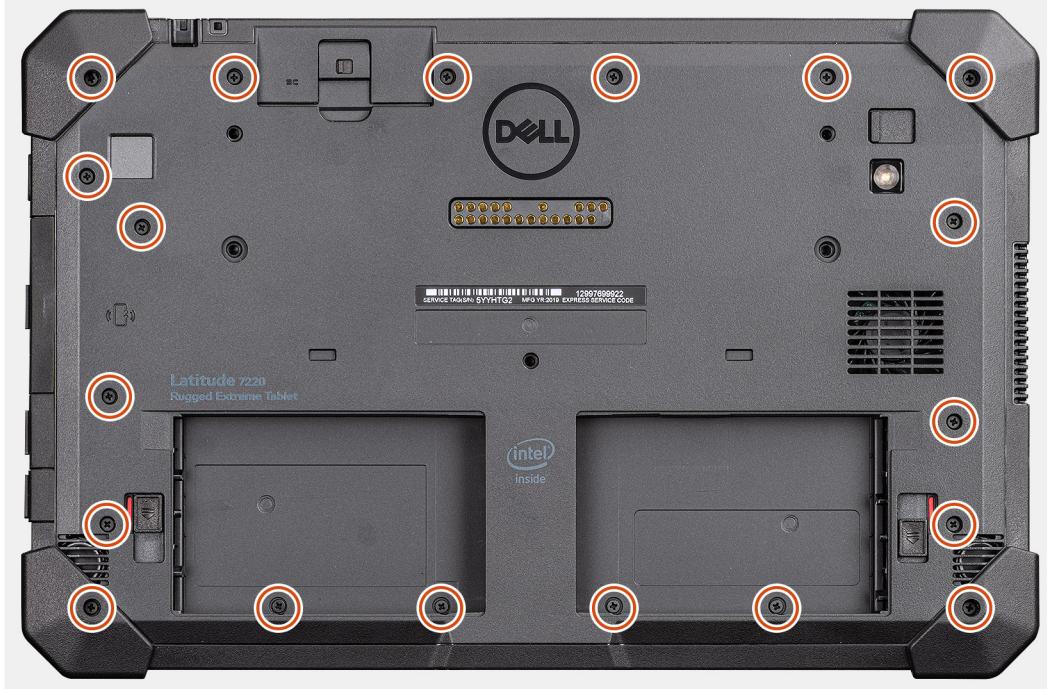

### Steps

1. Place the LCD panel by less than 90° and use a plastic scribe to connect the eDP cable to the connector on the system board.
2. Connect the function key cable to the connector on the system board.
3. Connect the touch cable to the connector on the system board.
4. Align the LCD panel on the chassis.
5. Press the edges of the display assembly to secure it to the chassis.
6. Flip the tablet.

**i NOTE: Ensure to place the tablet on a flat surface.**

7. Replace the 19 (M2.5x5) screws that secure the display assembly to the chassis.

**i NOTE: DO NOT force tighten the screws, to avoid damage to the screws thread.**

### Next steps

1. Install the [batteries](#).
2. Follow the procedure in [after working inside your computer](#).

## Function keys

**i NOTE: The function key buttons are NOT keyed for correct installation. These keys can be installed with several incorrect combinations which leads to RDs. During a service incident, technicians must note the function keys button layout to ensure that the function keys are installed at their correct location.**


# Removing the function keys

## Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

## About this task

The figure indicates the location of the function keys and provides a visual representation of the removal procedure.

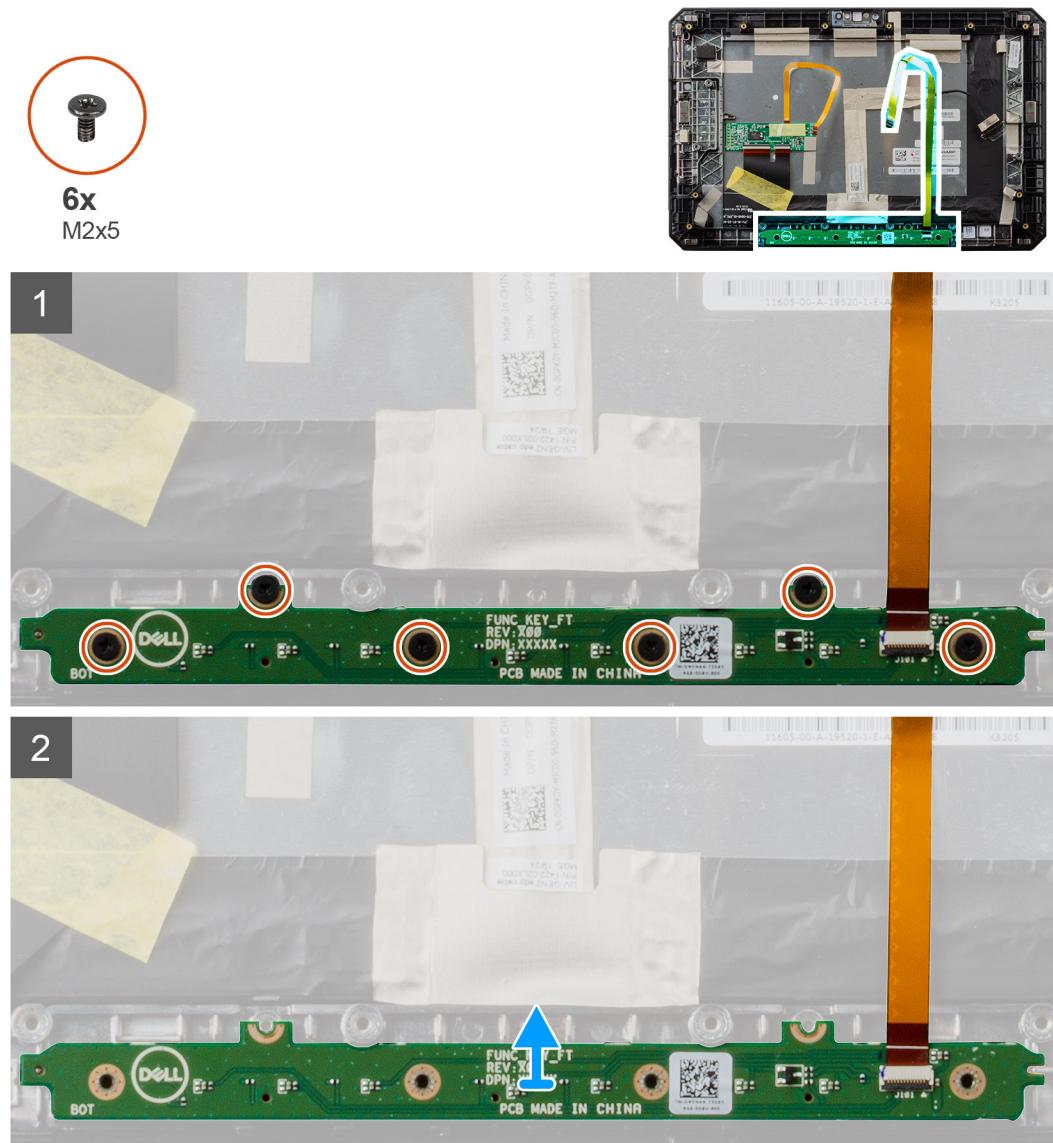

## Steps

1. Flip the display assembly.
2. Remove the six (M2x5) screws that secure the function keys board to the display assembly.
3. Lift the function keys board away from the display assembly along with the function keys cable.


# Installing the function keys

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The figure indicates the location of the function keys and provides a visual representation of the installation procedure.

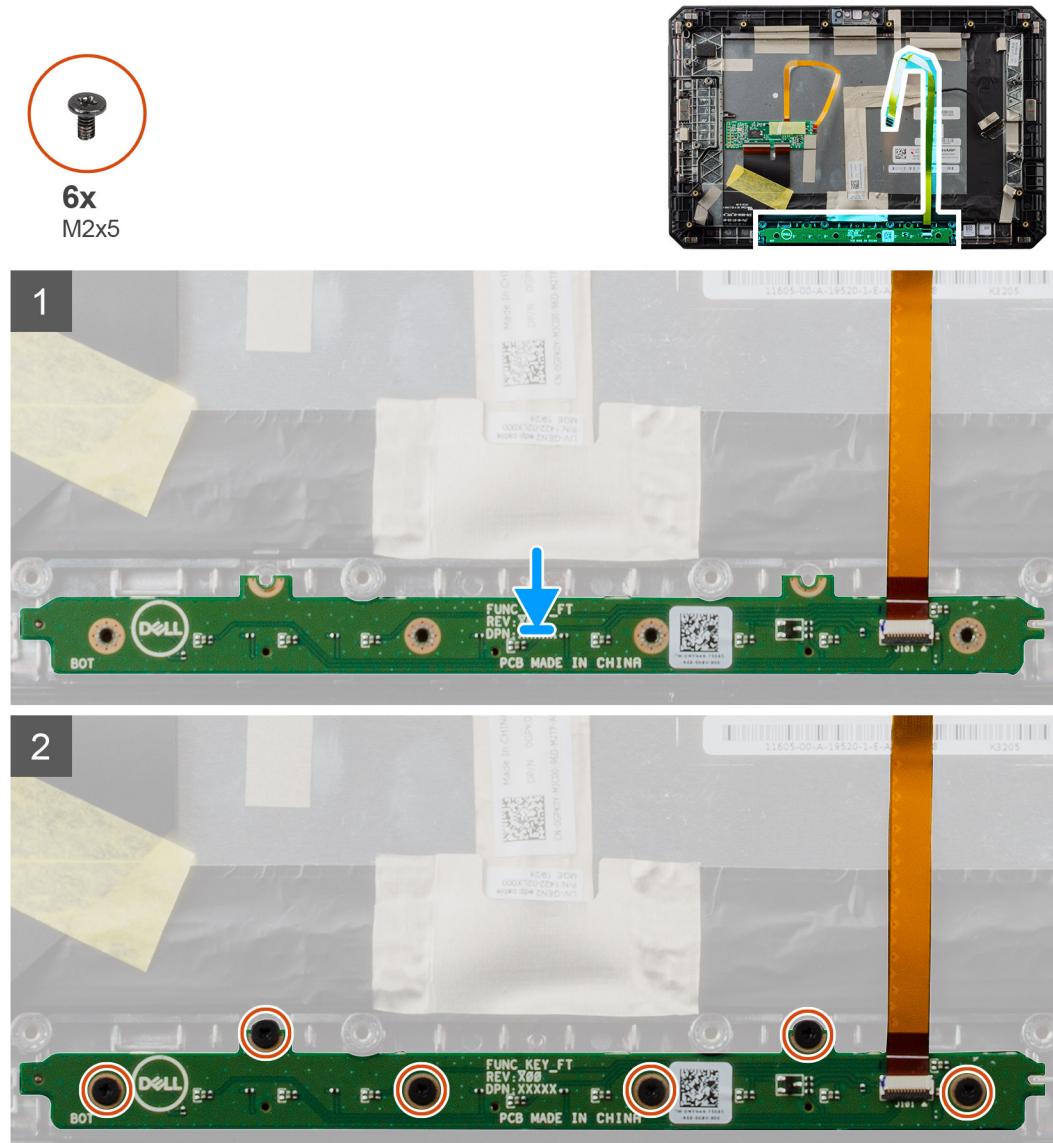

## Steps

1. Align and place the function keys board on the display assembly.
2. Replace the six (M2x5) screws that secure the function keys board to the display assembly.

## Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your computer](#).

# Heat sink


## Removing the heat-sink

### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

### About this task

The figure indicates the location of the heat sink and provides a visual representation of the removal procedure.

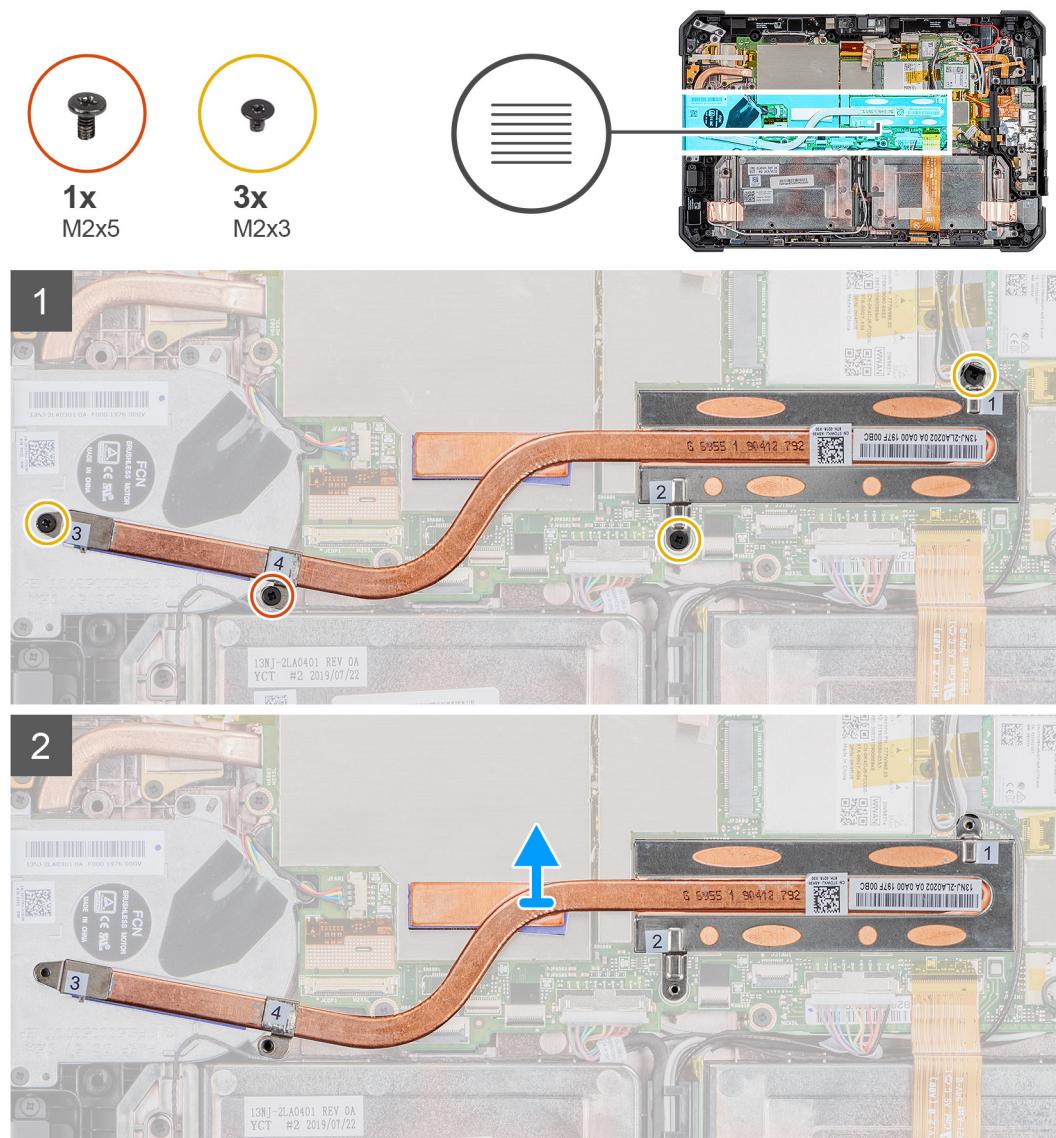

### Steps

1. Remove the three (M2X3) screws and M2X5 screw that secure the heat-sink to the system board.

***(i) NOTE: Remove the screws in the order of the callout numbers [1,2,3,4] as indicated on the heat sink.***

***(i) NOTE:*** Ensure not to bend the heatsink pipe while removing the heatsink from the SSD. Do not remove the heatsink by pulling on the pipe. Carefully pry the cover from the SSD using a plastic scribe.

2. Lift the heat-sink away from the system board.


## Installing the heat-sink

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the heat sink and provides a visual representation of the installation procedure.

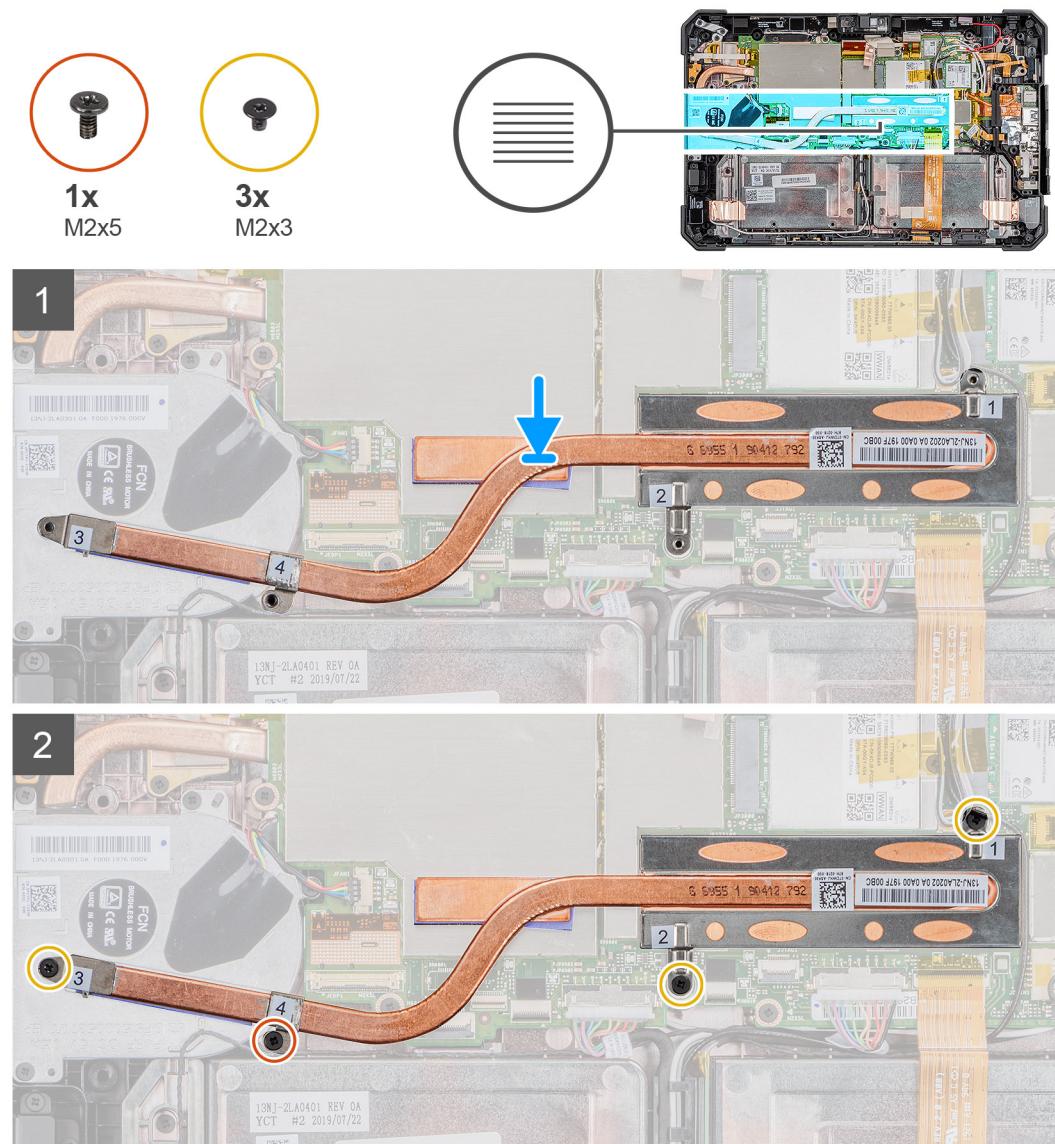

### Steps

1. Align the screws on the heat-sink with the screw holes on the system board.
2. Tighten the four captive screws to secure the heat-sink to the system board.

***(i) NOTE:*** Replace the screws in the order indicated on the heat-sink.

## Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

# System fan

## Removing the system fan

### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).
4. Remove the [heat-sink](#).

### About this task

The figure indicates the location of the system fan and provides a visual representation of the removal procedure.



### Steps

1. Unroute the cable from the routing guide on the system fan.
2. Disconnect the system fan cable from the connector on the system board.

3. Remove the four (M2x5) screws that secure the system fan to the system board.
4. Lift the system fan off the system board.


## Installing the system fan

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the system fan and provides a visual representation of the installation procedure.

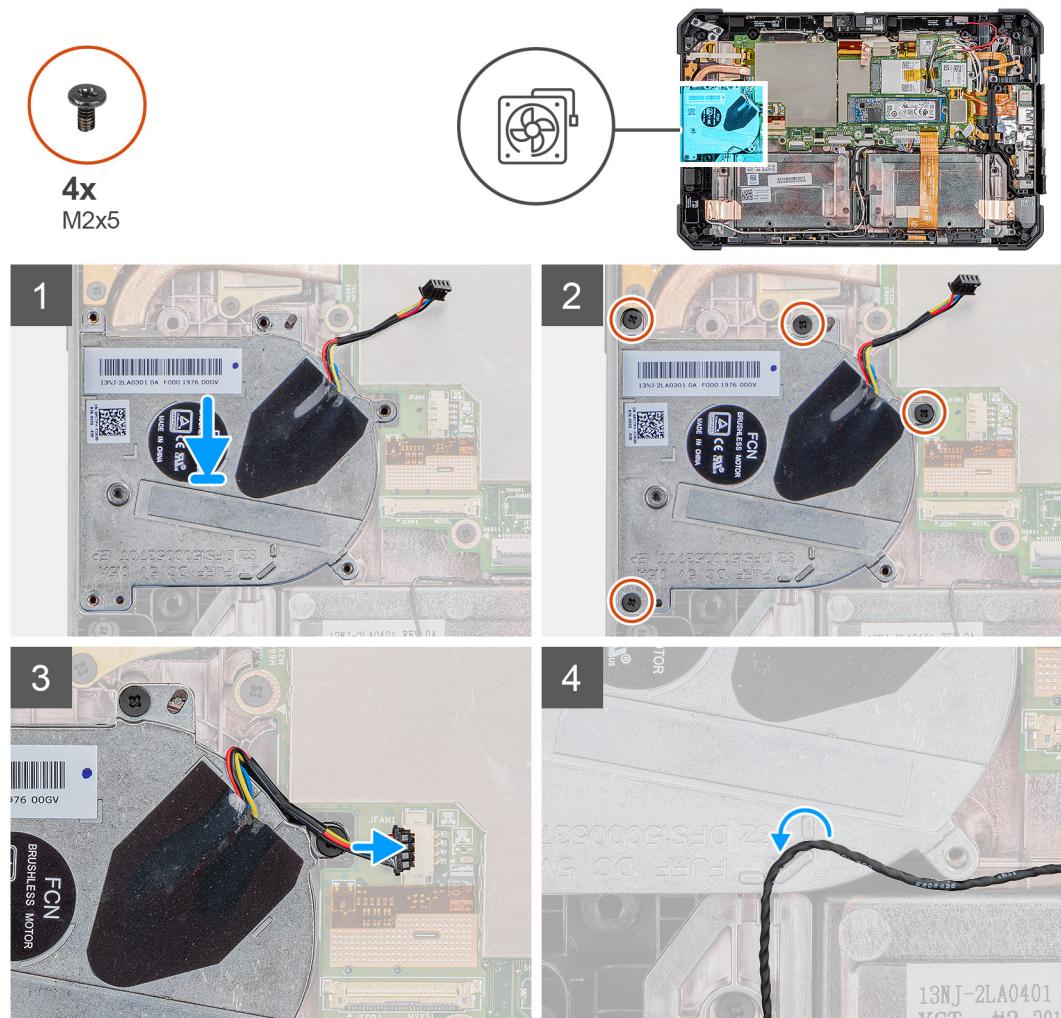

### Steps

1. Align the screws on the system fan with the screw holes on the system board.
2. Replace the four (M2x5) screws to secure the system fan to the chassis.
3. Connect the system fan cable to the connector on the system board.
4. Route the system fan cable through the routing guide on the system fan.

### Next steps

1. Install the [heat-sink](#).
2. Install the [display assembly](#).
3. Install the [batteries](#).

4. Follow the procedure in [after working inside your tablet](#).

## Solid-state drive

### Removing the M.2 2230 solid-state drive

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).
4. Remove the [heat-sink](#).

#### About this task

The figure indicates the location of the M.2 2230 solid-state drive and provides a visual representation of the removal procedure.

#### Steps

1. Remove the (M2x3) screw that secures the solid-state drive to the system board.
2. Slide and remove the solid-state drive from the solid-state drive slot on the system board.


### Removing the M.2 2280 solid-state drive

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).
4. Remove the [heat-sink](#).

#### About this task

The figure indicates the location of the solid-state drive and provides a visual representation of the removal procedure.

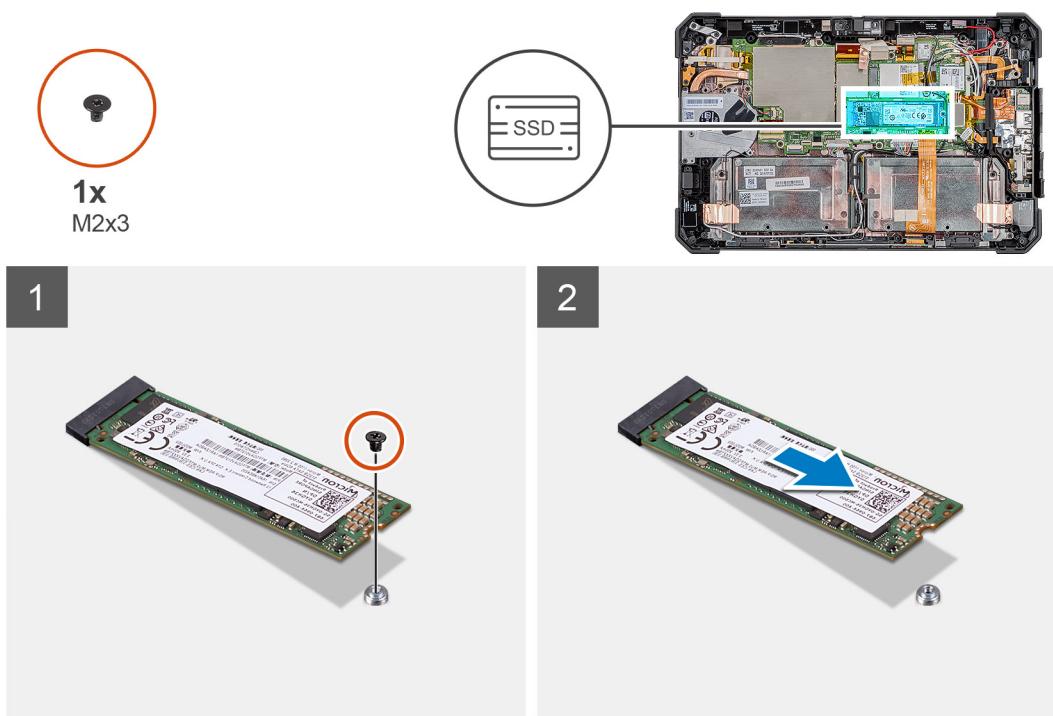

### Steps

1. Remove the (M2x3) screw that secures the solid-state drive to the system board.
2. Slide and remove the solid-state drive from the solid-state drive slot on the system board.

## Installing M.2 2230 solid-state drive

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The following image indicates the location of the M.2 2230 solid-state drive and provides a visual representation of the installation procedure:

### Steps

1. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
2. Replace the screw (M2x3) that secures the solid-state drive module to the system board.

### Next steps

1. Install the [heat-sink](#).
2. Install the [display assembly](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your tablet](#).


## Installing the M.2 2280 solid-state drive

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The following image indicates the location of the M.2 2280 solid-state drive and provides a visual representation of the installation procedure:

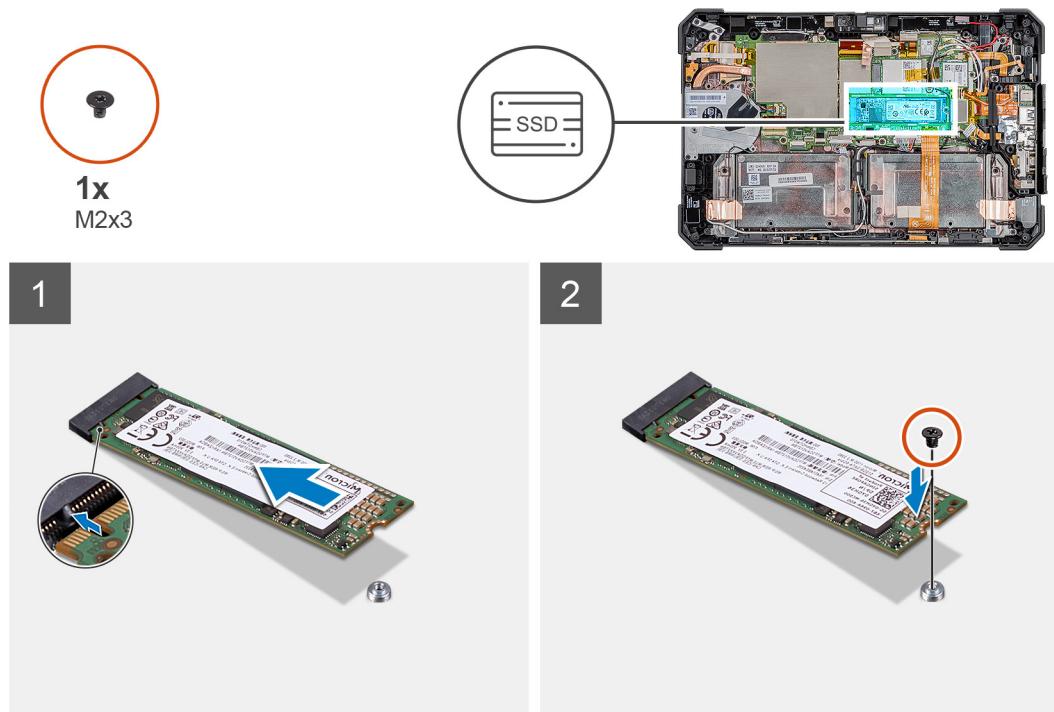

## Steps

1. Align the notch on the solid-state drive with the tab on the solid-state drive slot.
2. Replace the screw (M2x3) that secures the solid-state drive module to the system board.

## Next steps

1. Install the [heat-sink](#).
2. Install the [display assembly](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your tablet](#).

## WLAN card


### Removing the WLAN card

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

#### About this task

The figure indicates the location of the WLAN card and provides a visual representation of the removal procedure.

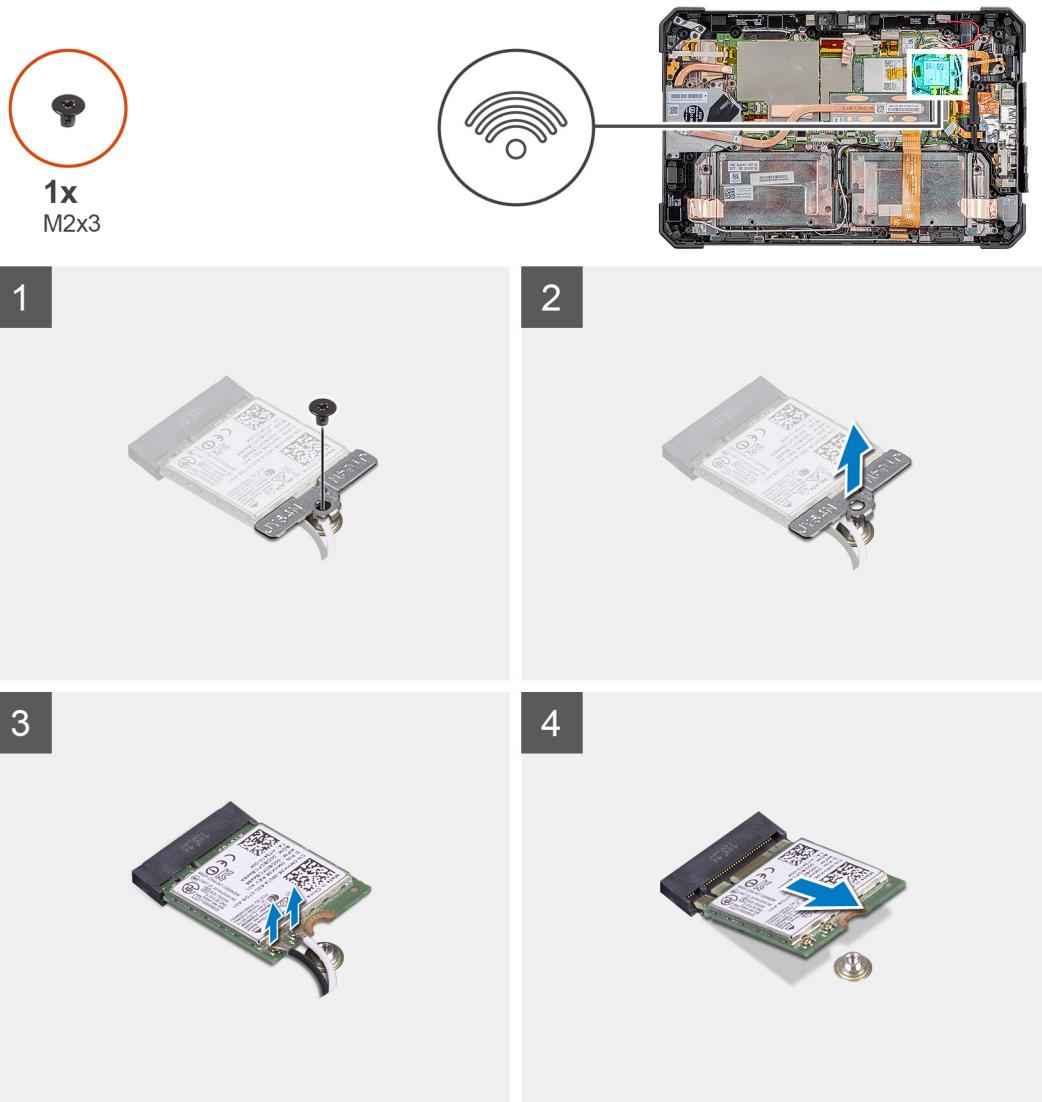

### Steps

1. Remove the screw (M2x3) that secures the WLAN card bracket to the WLAN card.
2. Remove the WLAN card bracket from the WLAN card.
3. Disconnect the antenna cables from the WLAN card.
4. Slide and remove the WLAN card from the WLAN card slot.


## Installing the WLAN card

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the WLAN card and provides a visual representation of the installation procedure.

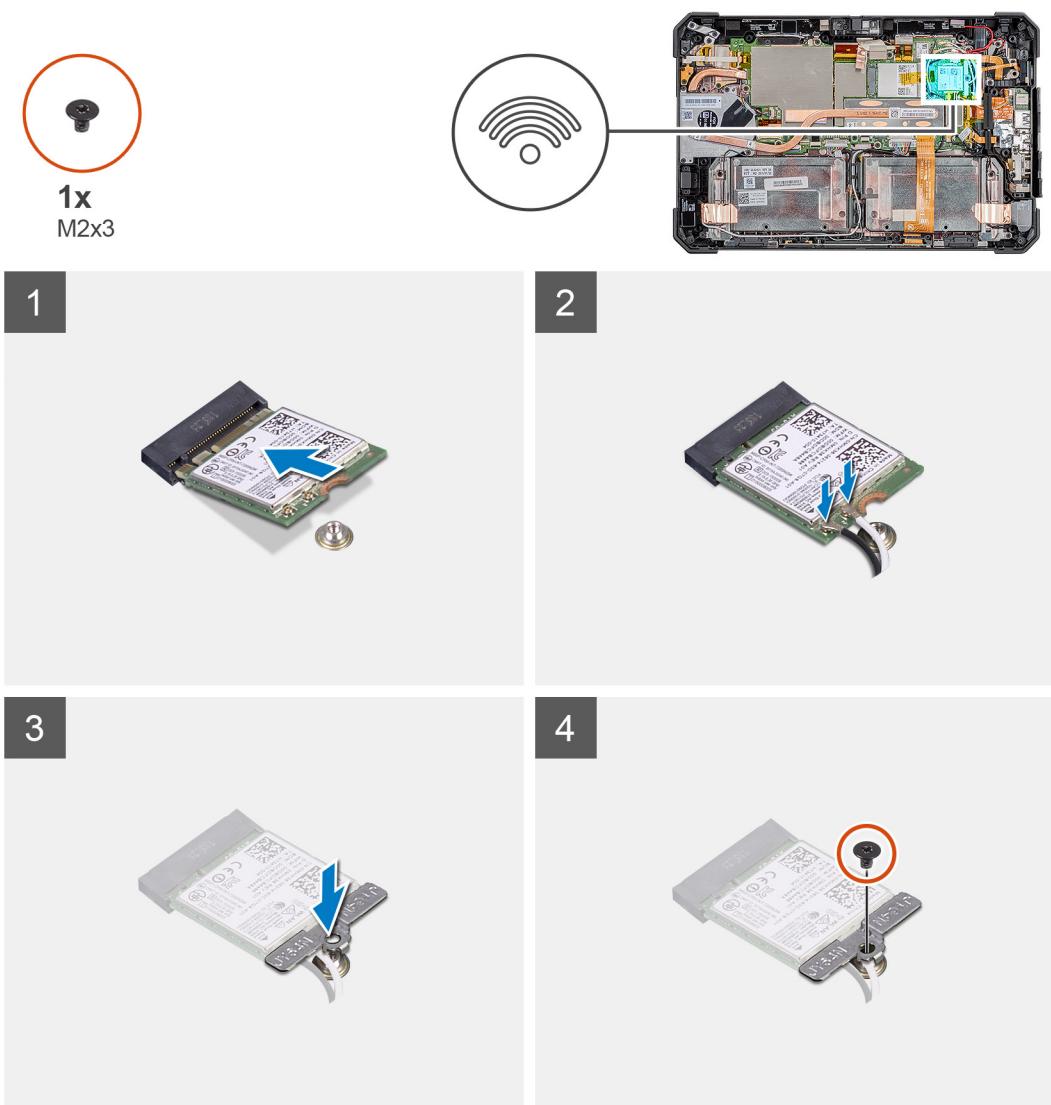

## Steps

1. Slide the wireless card at an angle into the wireless-card slot.
2. Connect the antenna cables to the WLAN card. The following table provides the antenna-cable color scheme for the WLAN card that is supported by your tablet.

**Table 2. Connectors on the wireless card**

Antenna	Cable Color
Main (white triangle)	White
Auxiliary (black triangle)	Black

3. Place the WLAN card bracket on the WLAN card.
4. Replace the screw (M2x3) to secure the WLAN card bracket to the WLAN card.

## Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

# WWAN card


## Removing the WWAN card

### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

### About this task

The figure indicates the location of the WWAN card and provides a visual representation of the removal procedure.

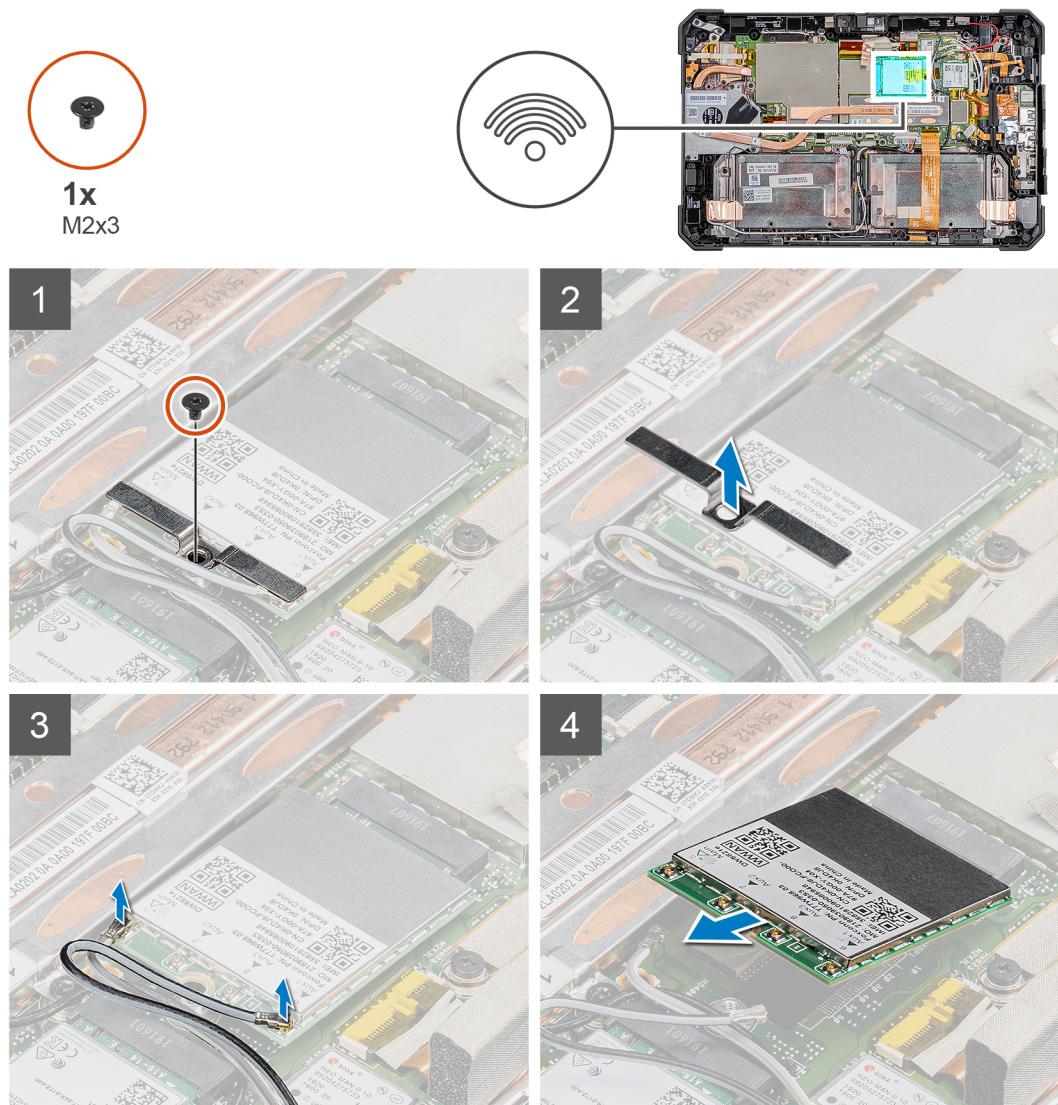

### Steps

1. Remove the screw (M2x3) that secures the WWAN card bracket to the WWAN card.
2. Remove the WWAN card bracket from the WWAN card.
3. Disconnect the antenna cables from the WWAN card.
4. Slide and remove the WWAN card from the WWAN card slot.


# Installing the WWAN card

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The figure indicates the location of the WWAN card and provides a visual representation of the installation procedure.

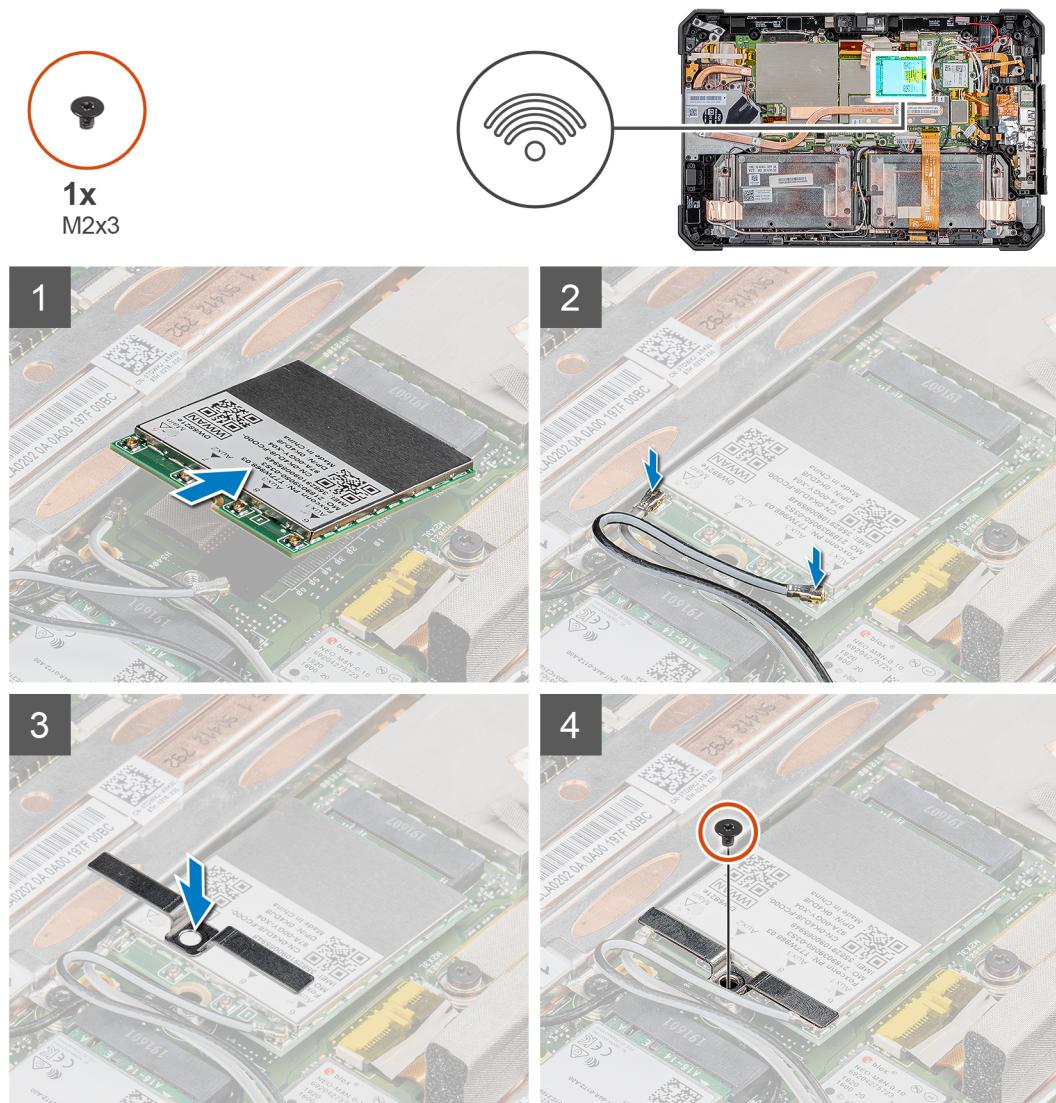

## Steps

1. Slide the WWAN card at an angle into the WWAN card slot.
2. Connect the antenna cables to the WWAN card. The following table provides the antenna-cable color scheme for the WWAN card that is supported by your tablet.

**Table 3. Connectors on the wireless card**

Antenna	Cable Color
Main (white triangle)	White
Auxiliary (black triangle)	Black

3. Place the WWAN card bracket on the WWAN card.
4. Replace the screw (M2x3) to secure the WWAN card bracket to the WWAN card.

## Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

# Microphone


## Removing the microphone

### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

### About this task

The figure indicates the location of the microphone and provides a visual representation of the removal procedure.

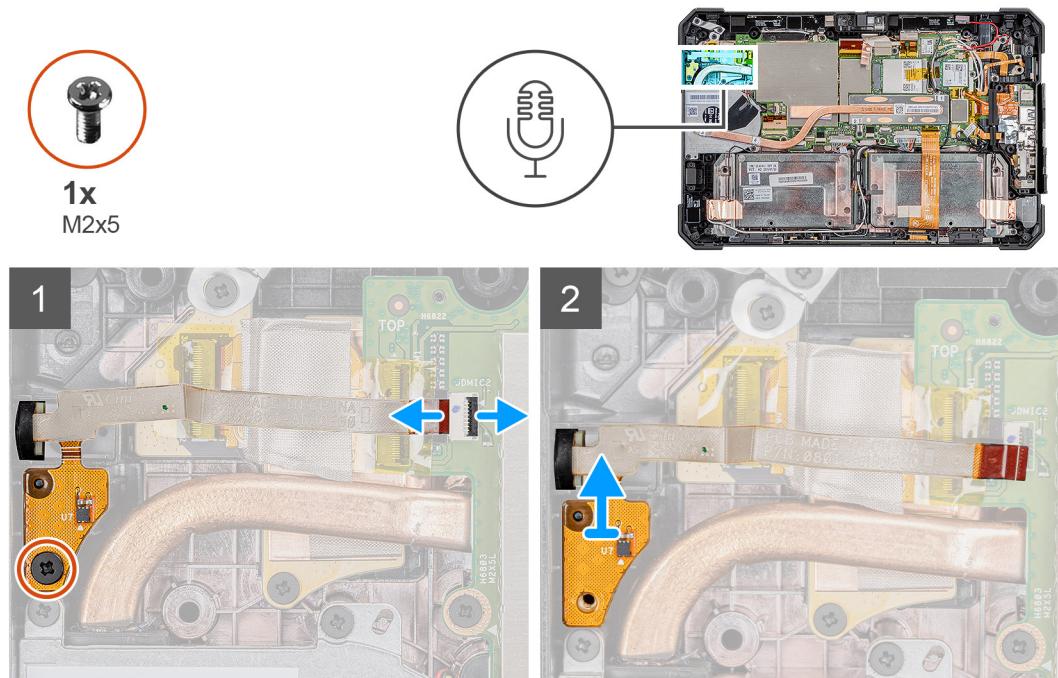

### Steps

1. Open the latch and disconnect the microphone cable from the connector on the system board and remove the screw (M2x5) that secures the integrated microphone assembly circuit board to the system board.
2. Release the microphone assembly and, lift the microphone from the tablet chassis.

***(i) NOTE: NEVER pull the microphone by the cable. In case the circuit board is not released smoothly, push from below the microphone circuit board by a plastic scribe.***


## Installing the microphone

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The figure indicates the location of the microphone and provides a visual representation of the installation procedure.

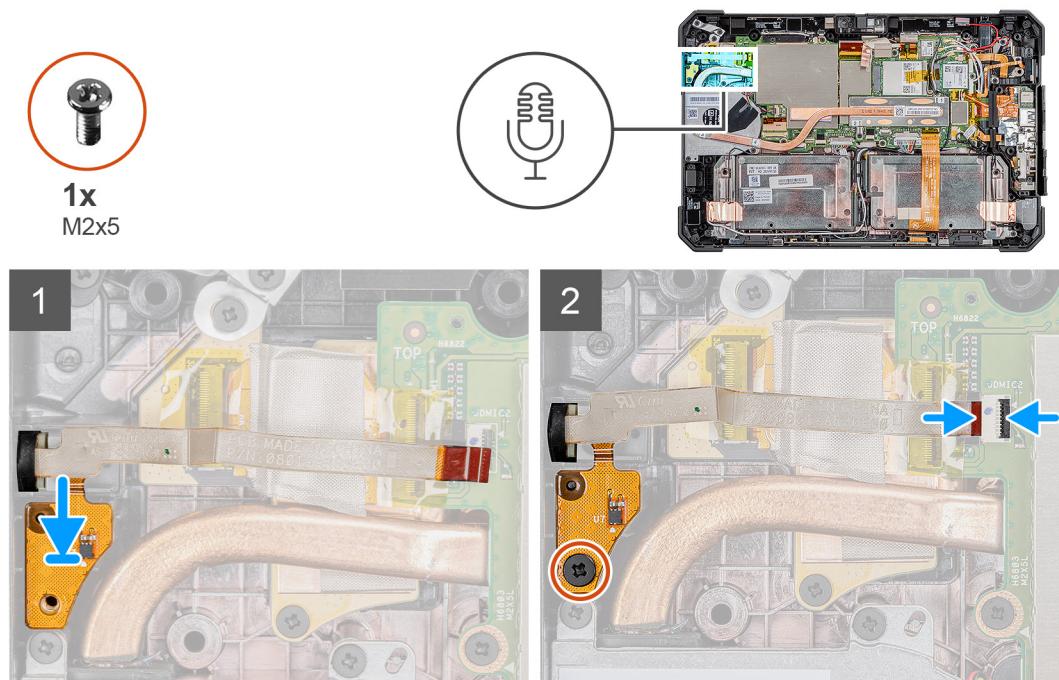

## Steps

1. Align the screw hole on the integrated microphone assembly circuit board with the screw hole on the chassis.
2. Replace the screw (M2x5) that secures the integrated microphone assembly circuit board to the chassis and connect the microphone cable to the connector on the system board. Close the latch to secure the cable.

## Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

# Front camera

## Removing the front camera

### Prerequisites




1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).




### About this task

The figure indicates the location of the microphone and provides a visual representation of the removal procedure.



**1x**  
M2x3

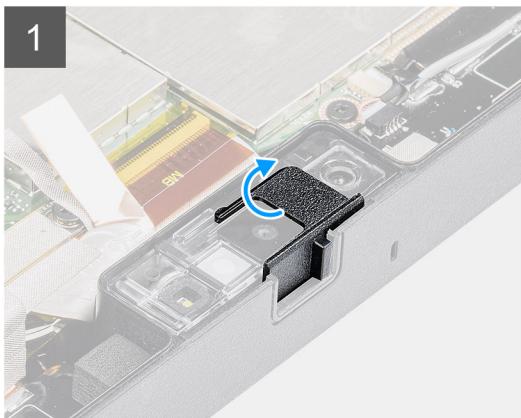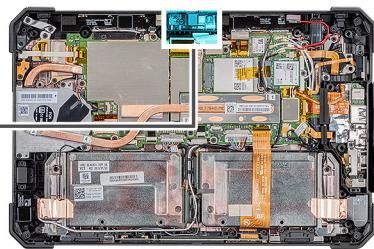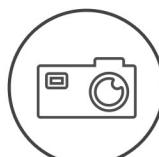

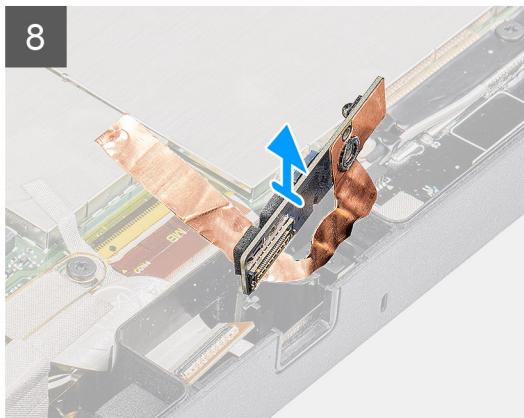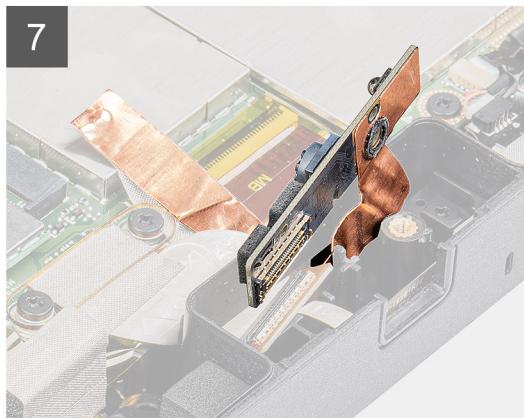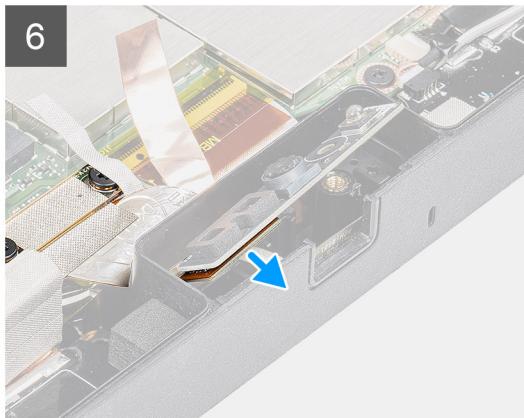

### Steps

1. Open the lens cover by sliding the camera shutter towards right.
2. Using a plastic scribe, lift the camera lens shutter.
3. Remove the (M2x3) screw that secures the camera cover on the tablet chassis.
4. Using a plastic scribe, lift the front camera from the tablet chassis.
5. Lift the lens case at the edge to insert the plastic scribe in the gap.
6. Disconnect the camera cable that secures the cable to the system board.
7. Lift the lens case by an angle not more than 35° and push upward to release the camera lens case.
8. Remove the camera circuit board away from the tablet chassis.

## Installing the front camera

### Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.



### About this task

The figure indicates the location of the front camera and provides a visual representation of the installation procedure.



**1x**  
M2x3

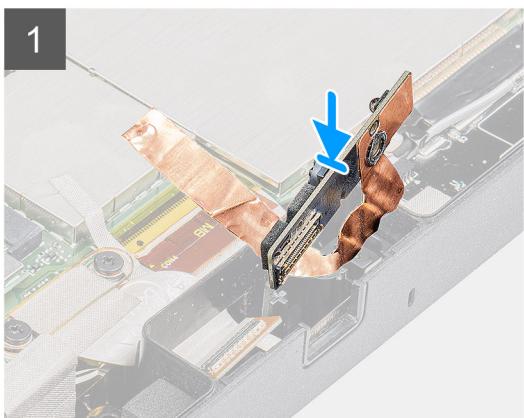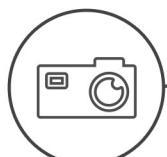

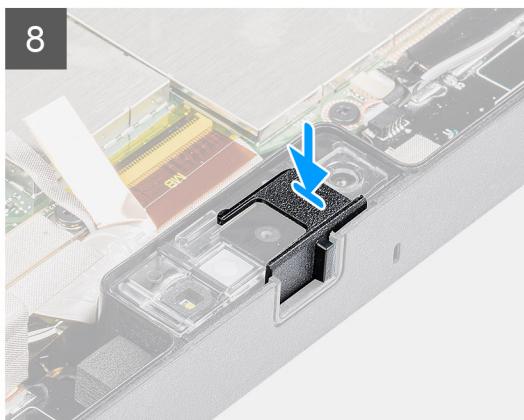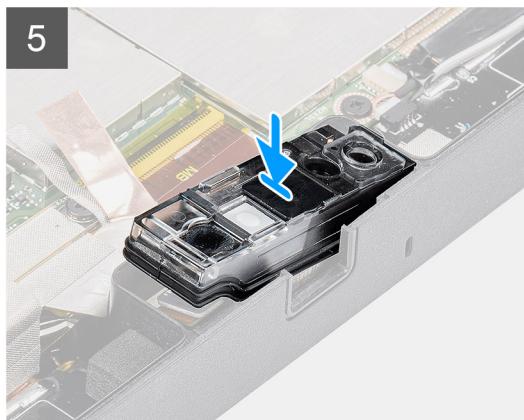

### Steps

1. Align the front camera circuit board over the camera slot.
2. Connect the front camera cable and plug in the cable to the connector.
3. Flip the front camera circuit board.
4. Align front camera circuit board with screw hole.
5. Place the camera lens case to the camera placeholder.
6. Replace the screw (M2x3) to secure the front camera circuit board on the tablet chassis.
7. Slide the lens shutter in the lens channel and push towards left.

### Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

## Coin-cell battery

### Removing the coin-cell battery


#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

**NOTE:** Removing the coin-cell battery resets the BIOS setup programs settings to default. It is recommended that you note the BIOS setup programs settings before removing the coin-cell battery.

#### About this task

The figure indicates the location of the coin-cell battery and provides a visual representation of the removal procedure.

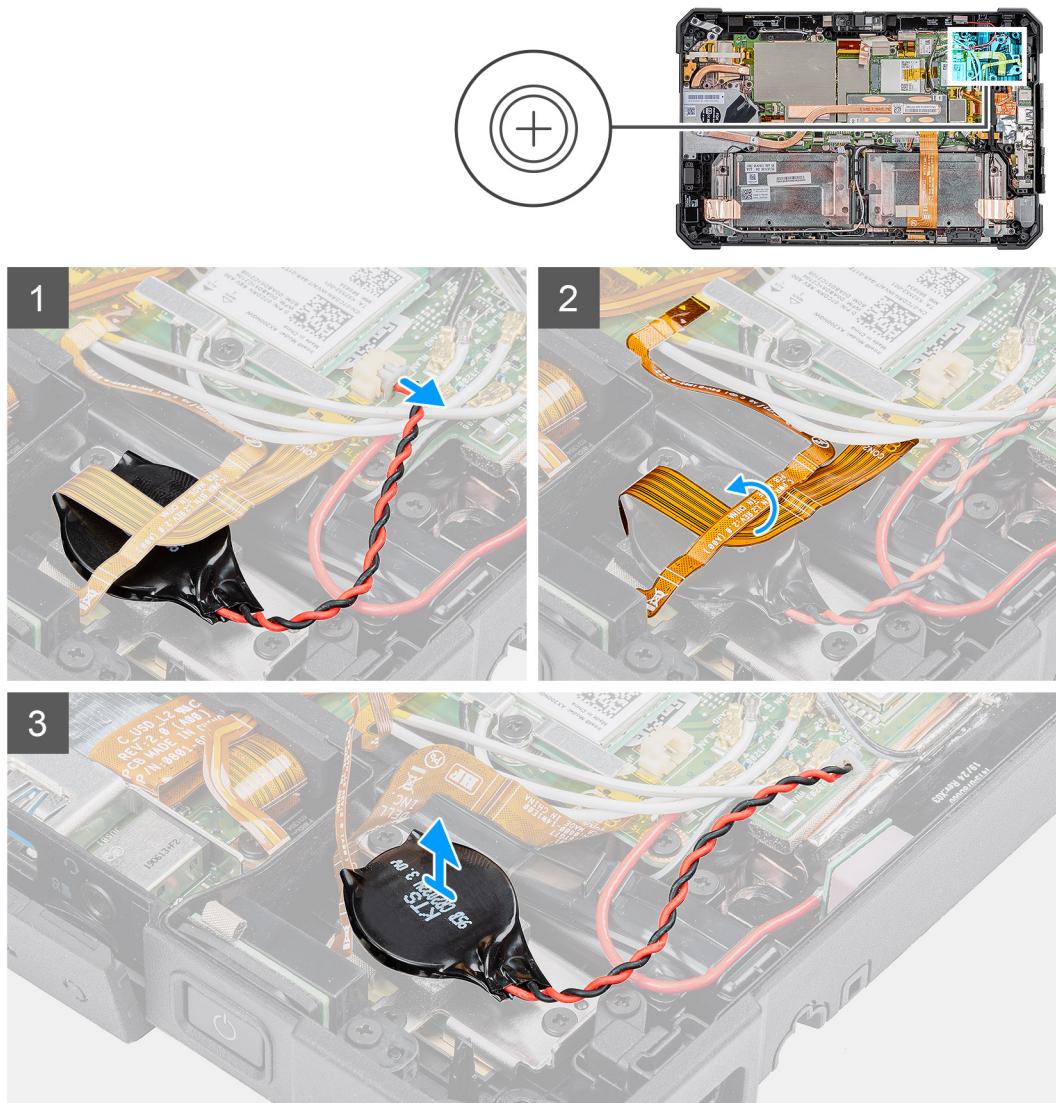

#### Steps

1. Disconnect the coin-cell battery cable from the system board.
2. Move the fingerprint reader cable and microSD card cable over the coin-cell battery.
3. Peel the coin-cell battery off the system board.


## Installing the coin-cell battery

#### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

#### About this task

The figure indicates the location of the coin-cell battery and provides a visual representation of the installation procedure.

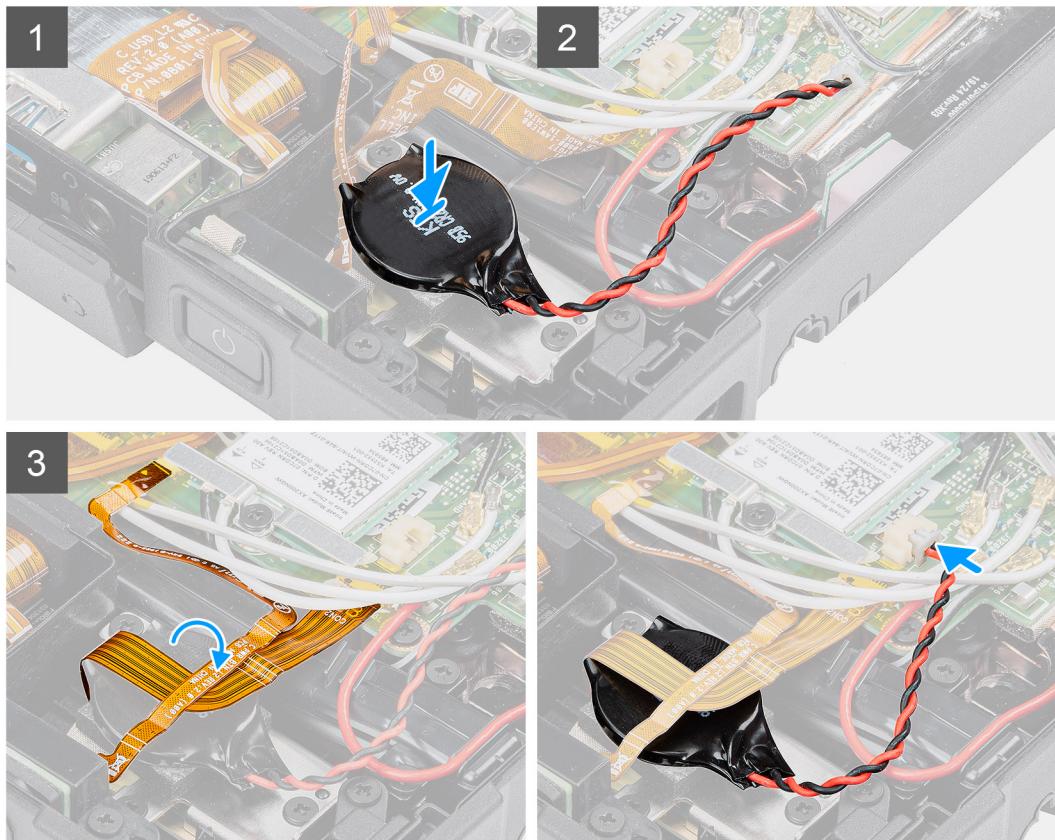

### Steps

1. Adhere the coin-cell battery to the slot on the system board.
2. Place the fingerprint cable and microSD card cable on the coin-cell battery.
3. Connect the coin-cell battery cable to the connector on the system board.

### Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

## System board

### Removing the system board


#### Prerequisites



1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).






4. Remove the [heat-sink](#).
5. Remove the [system fan](#).
6. Remove the [solid-state drive](#).
7. Remove the [WLAN](#).
8. Remove the [WWAN](#).



#### About this task

The figure indicates the location of the system board and provides a visual representation of the removal procedure.

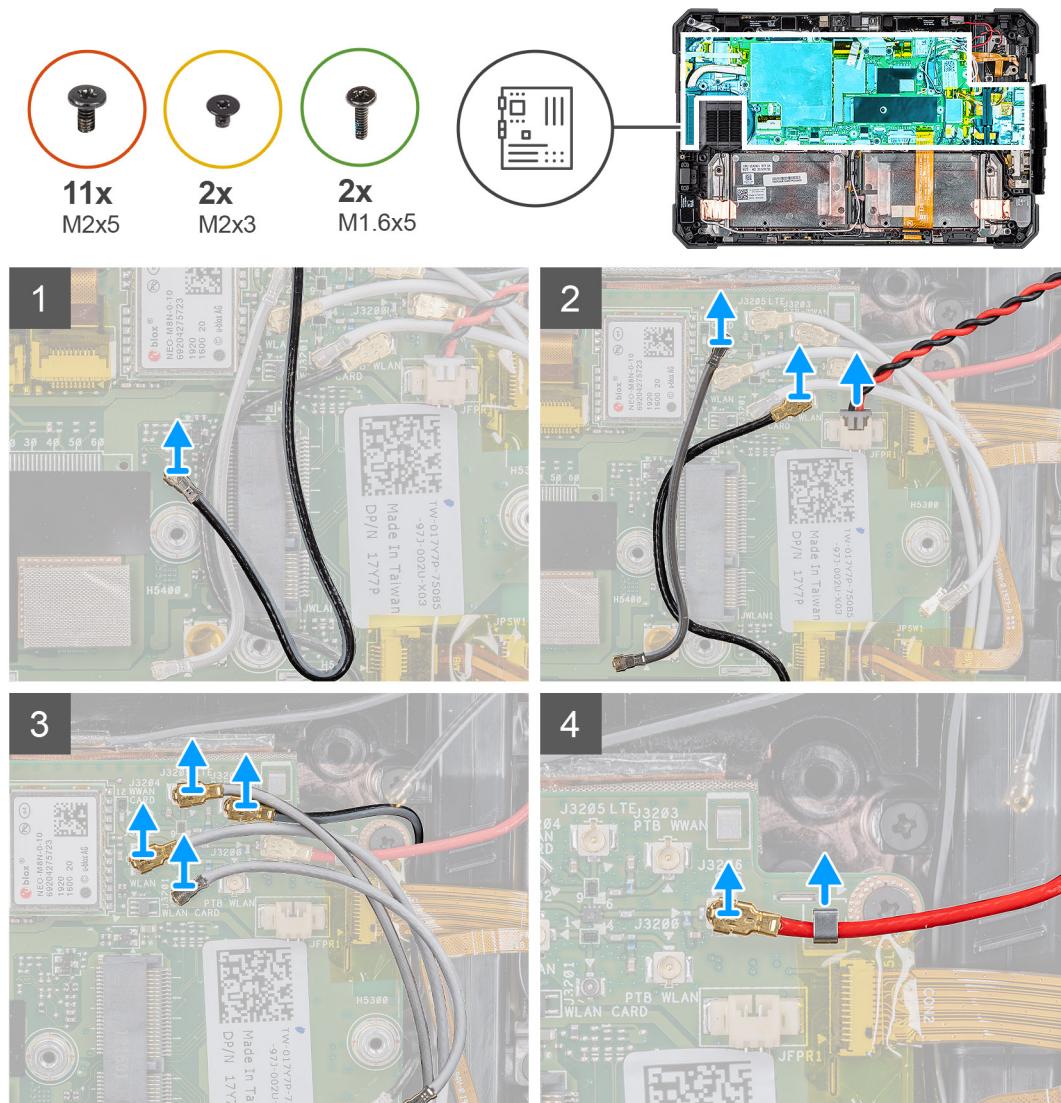

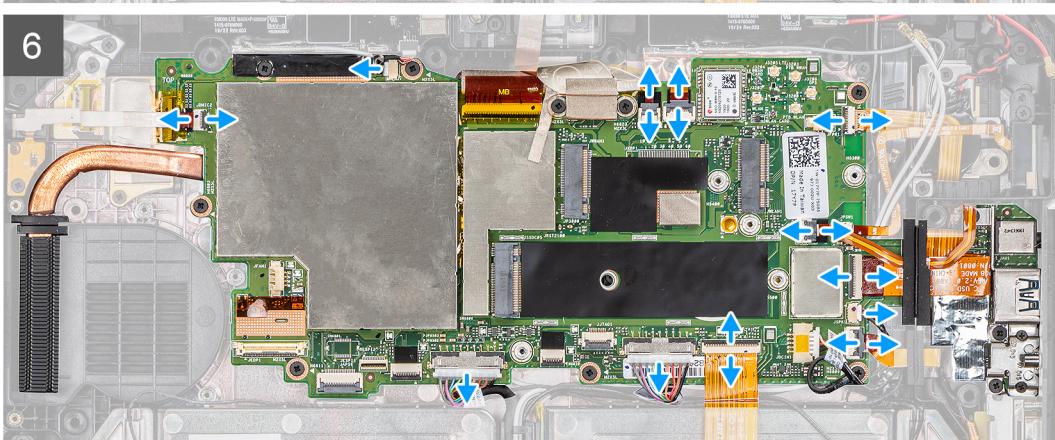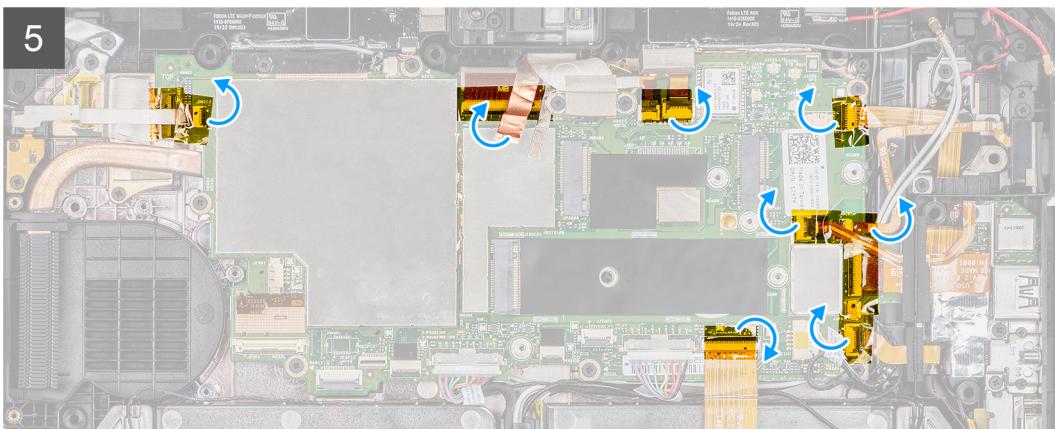

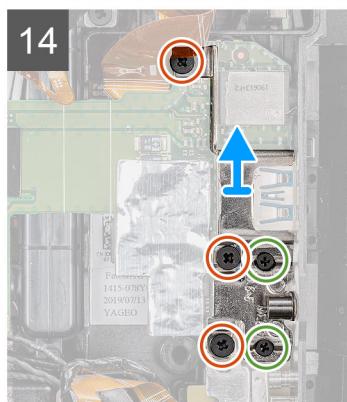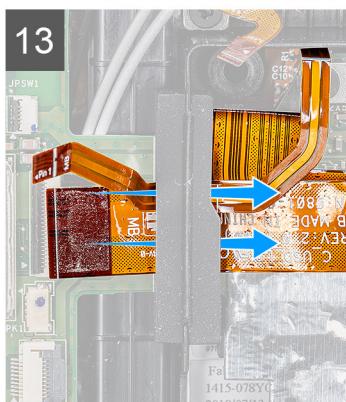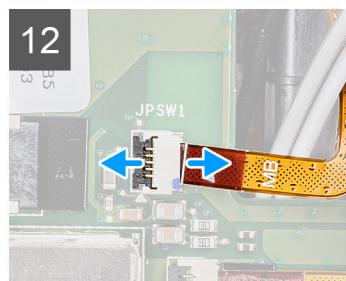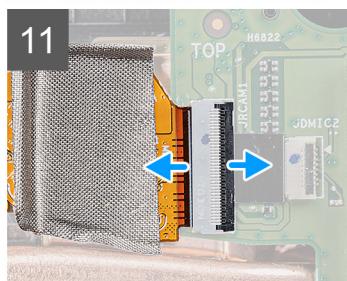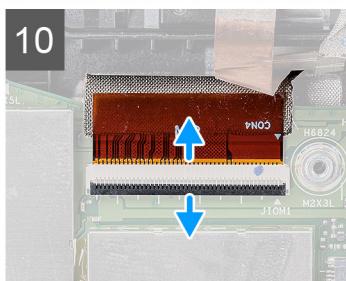

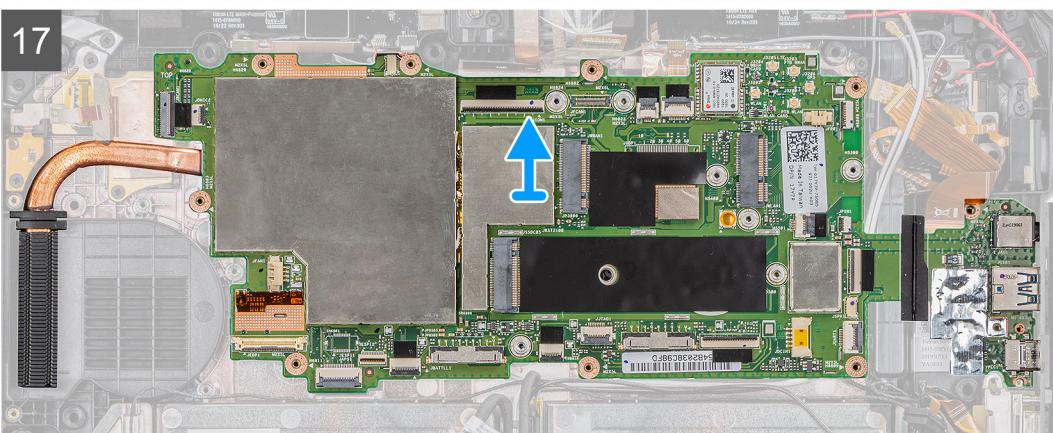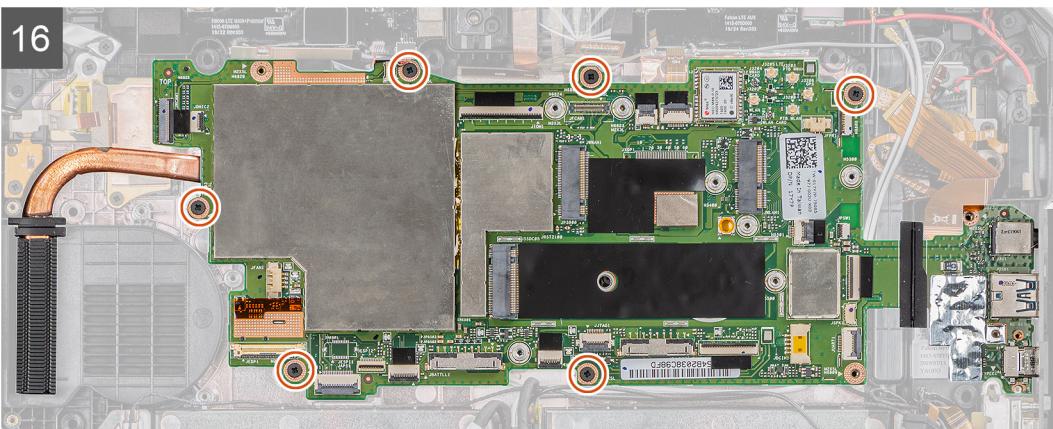

## Steps

1. Disconnect the antenna cable from the system board.
2. Disconnect the radio antenna cables and coin-cell battery cable from the system board.
3. Disconnect the antenna cables from the system board.
4. Disconnect the GPS cable from the system board.
5. Peel the adhesive tapes off the connectors from the system board.
6. Disconnect the following cables from their connector on the system board (L-R): microphone board, LTE main+ p-sensor, mic, smartcard, Fingerprint reader, microSD card, NFC, Mini serial, speaker, pogo connector, right battery, and left battery from the system board.

***(i) NOTE: Carefully slide the microSD cable and NFC cable out from the rubber grommet. Ensure that the pull tab of the FPC cables are not stuck under the rubber grommet. The FPC cables may get damaged, when they are forcefully slid out when their pull tabs are still stuck under the rubber grommet.***

7. Remove the screw (M2x5) that secures the adhesive tape, and peel the adhesive tape off the system board.
8. Remove the two (M2x3) screws that secure the camera MIPI plate to the system board.
9. Peel the conductive cloth that secures the camera MIPI plate on the system board.
10. Lift the latch, and disconnect the OpExpansion module pogo connector cable from the system board.
11. Lift the latch, and disconnect the rear camera flexible flat cable (FFC) from the system board.
12. Lift the latch, and disconnect the power button cable from the system board.
13. Slide and remove the microSD cable and NFC cable under the grommet.
14. Remove the three (M2x5) screws and two (M1.6x5) screws to remove the bracket that secures the system board to the tablet chassis.
15. Disconnect the power adapter cable and remove the (M2x5) screw that secures the system board to the tablet chassis.
16. Remove the six (M2x5) screws that secure the system board to the tablet chassis.
17. Lift the system board away from the tablet chassis.




# Installing the system board









## Prerequisites







If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The figure indicates the location of the system board and provides a visual representation of the installation procedure.

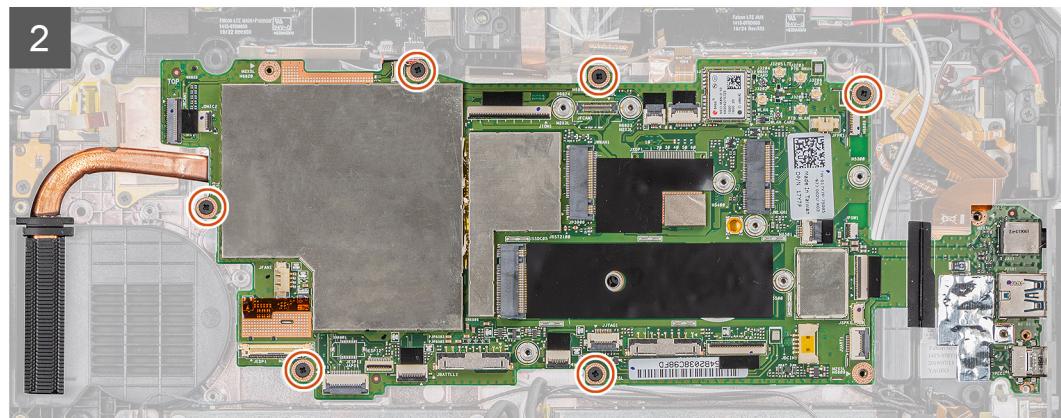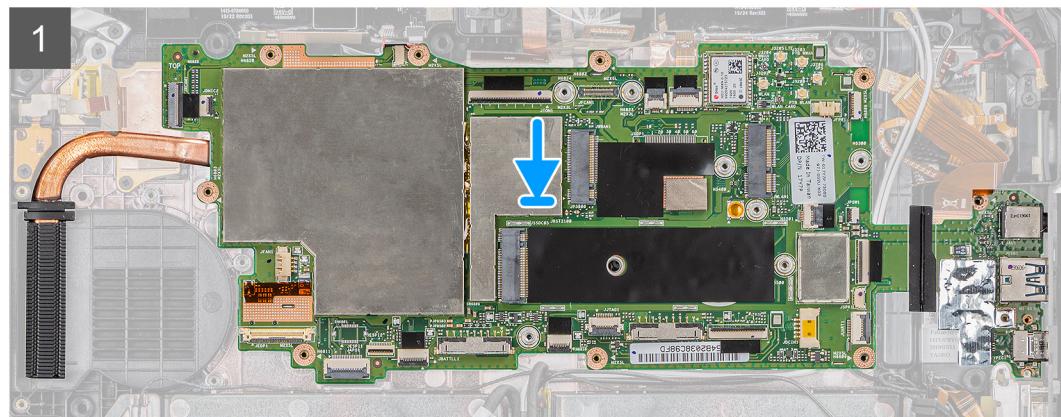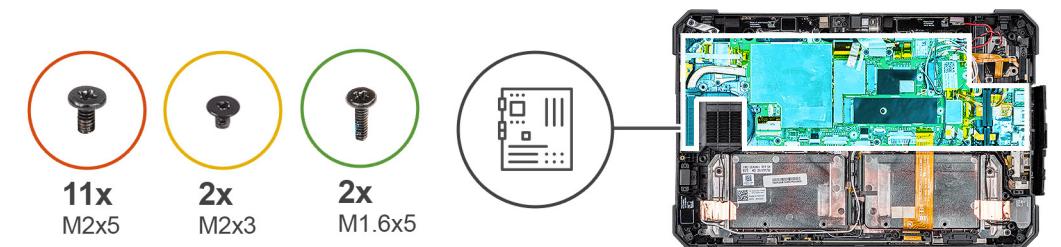

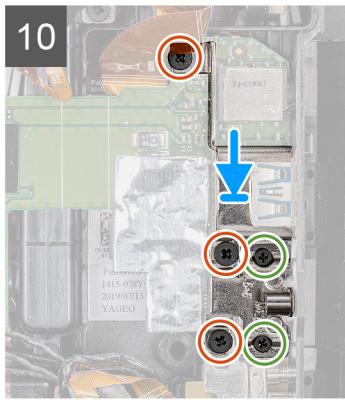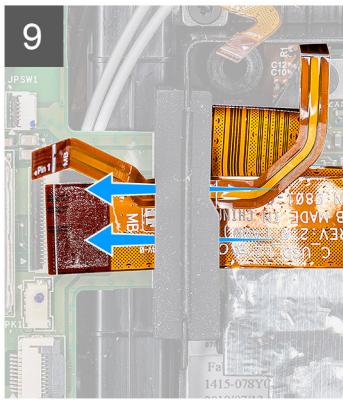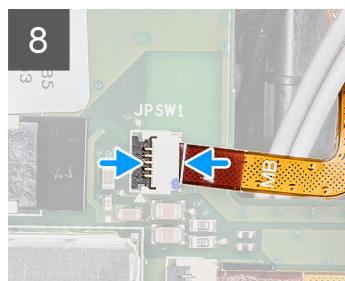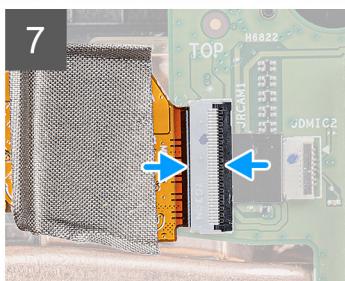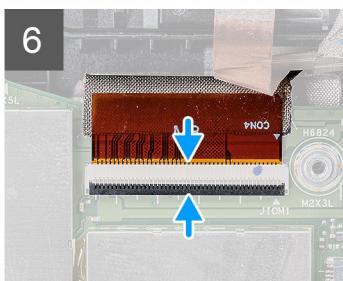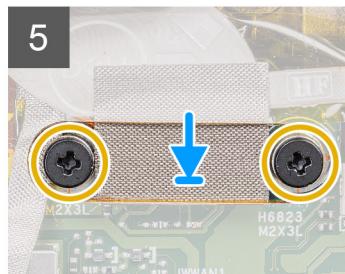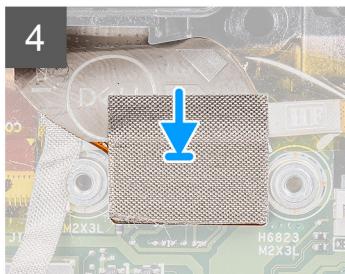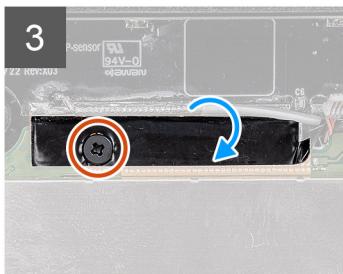

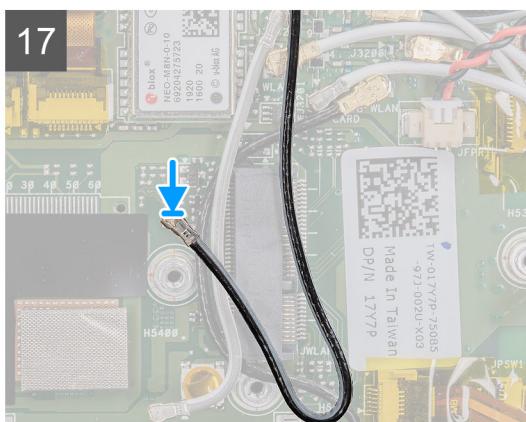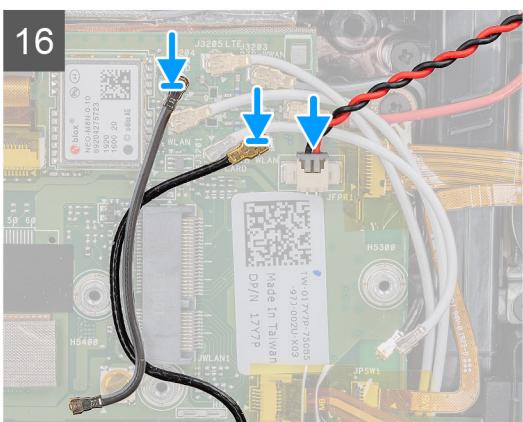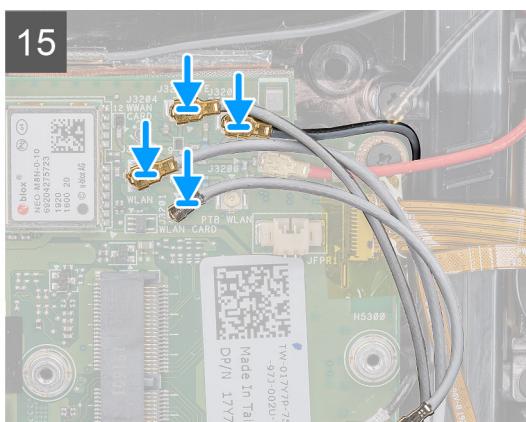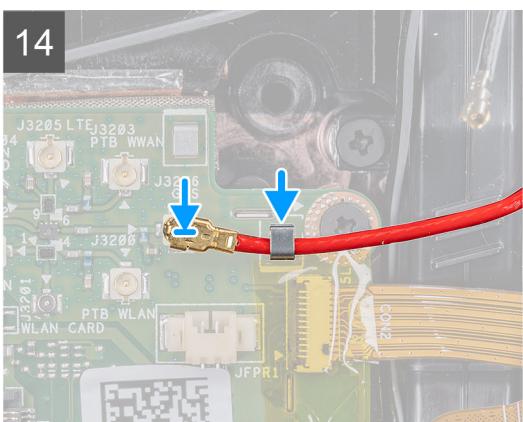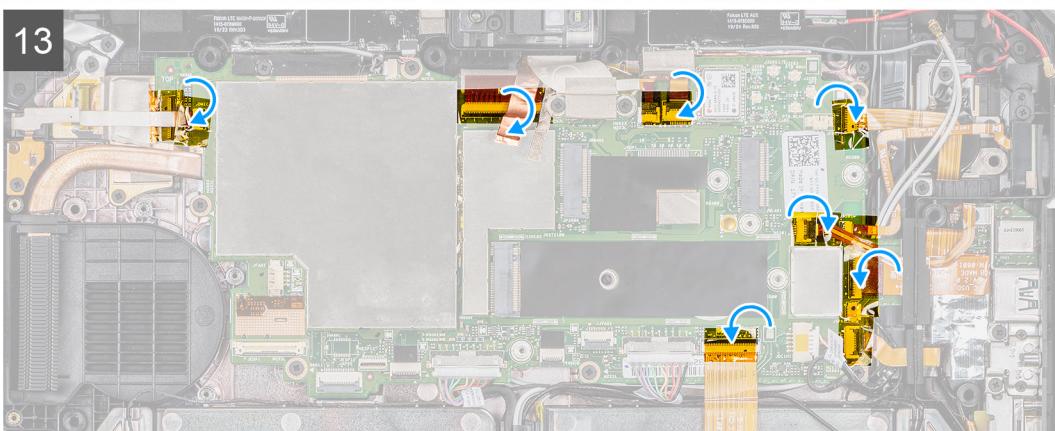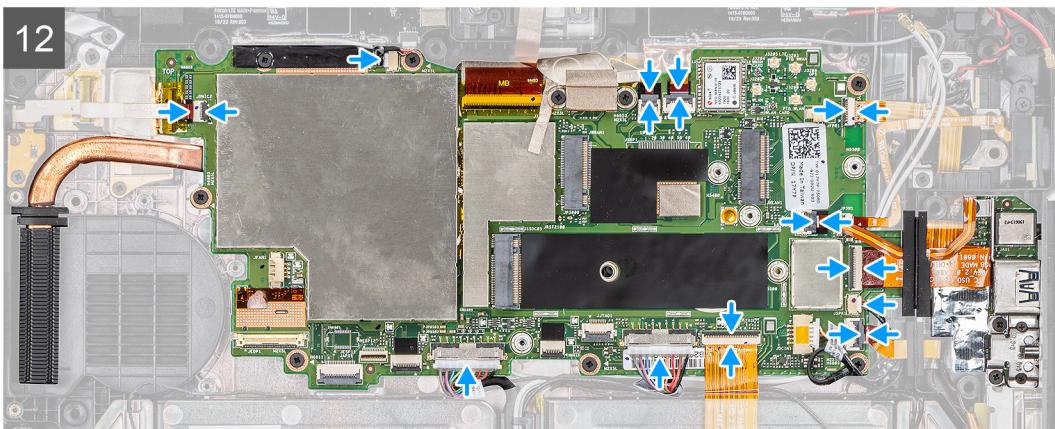

## Steps

1. Place the system board on the tablet chassis.

2. Replace the six (M2x5) screws that secure the system board to the tablet chassis.
3. Affix the adhesive tape and replace the (M2x5) screw that secures it to the system board.
4. Affix the conductive cloth that secures the camera MIPI plate on the system board.
5. Replace the two (M2x3) screws that secure the camera MIPI plate on the system board.
6. Connect the OpExpansion module pogo connector cable to the connector on the system board.
7. Connect the rear camera flexible flat cable (FFC) to the connector on the system board.
8. Connect the power button cable to the connector on the system board.
9. Insert and slide the microSD cable and NFC cable under the grommet.
10. Place the bracket and replace the three (M2x5) screws and two (M1.6x5) screws that secure the system board to the tablet chassis.
11. Connect the power adapter cable and replace the (M2x5) screw that secures the system board to the tablet chassis.
12. Connect the following cables to their connector on the system board (L-R): microphone board, LTE main + p-sensor, mic, smartcard, fingerprint reader, microSD card, NFC, mini serial, speaker, pogo connector, right battery, and left battery from the system board.
13. As illustrated, affix the adhesive tapes to the connectors on the system board.
14. Connect the GPS cable to the system board.
15. Connect the antenna cables to the system board.
16. Connect the radio antenna cables and coin-cell battery cable to the system board.
17. Connect the antenna cable to the system board.

#### Next steps

1. Install the [WWAN](#).
2. Install the [WLAN](#).
3. Install the [solid-state drive](#).
4. Install the [system fan](#).
5. Install the [heat-sink](#).
6. Install the [display assembly](#).
7. Install the [batteries](#).
8. Follow the procedure in [after working inside your tablet](#).

## Rear Camera


### Removing the rear camera

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).
4. Remove the [heat-sink](#).
5. Remove the [system fan](#).
6. Remove the [solid-state drive](#).
7. Remove the [WLAN](#).
8. Remove the [WWAN](#).
9. Remove the [microphone](#).
10. Remove the [front camera](#).
11. Remove the [coin-cell battery](#).
12. Remove the [system board](#).

#### About this task

The figure indicates the location of the rear camera and provides a visual representation of the removal procedure.

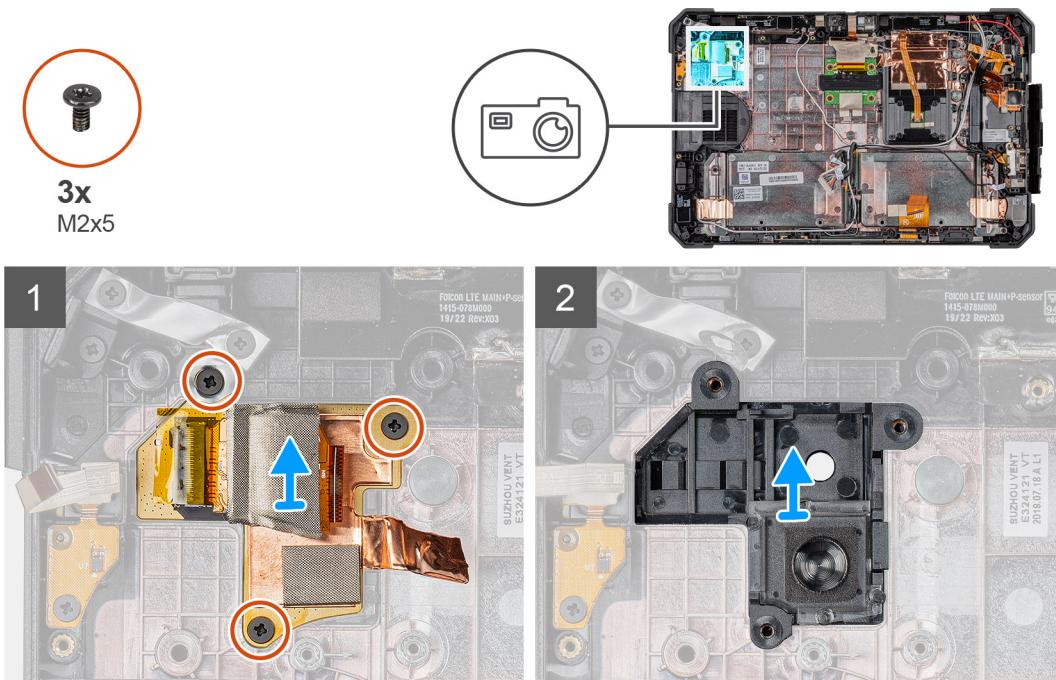

### Steps

1. Peel the copper adhesive tape and remove the three (M2x5) screws that secure the rear camera circuit board on the tablet chassis.
2. Remove the back camera board cable from the chassis.


## Installing the rear camera

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the rear camera and provides a visual representation of the installation procedure.

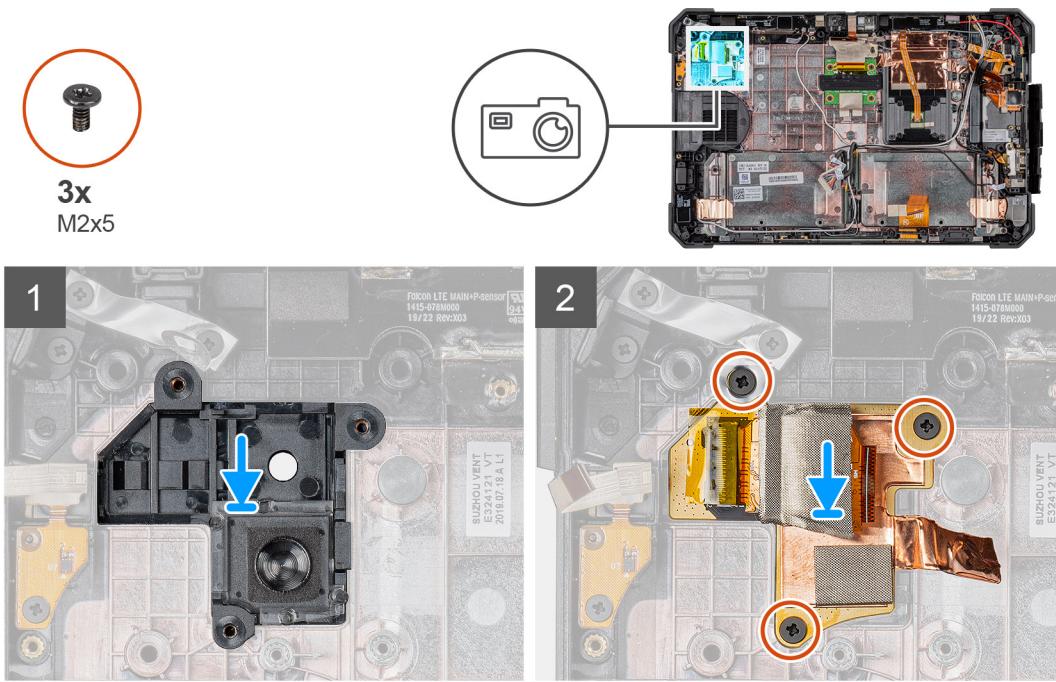

### Steps

1. Align the screw holes on the rear camera circuit board with the screw holes on the tablet chassis.
2. Replace the three (M2x5) screws to secure the rear camera circuit board to the chassis.

### Next steps

1. Install the [system board](#).
2. Install the [coin-cell battery](#).
3. Install the [front camera](#).
4. Install the [microphone](#).
5. Install the [WWAN](#).
6. Install the [WLAN](#).
7. Install the [solid-state drive](#).
8. Install the [system fan](#).
9. Install the [heat-sink](#).
10. Install the [display assembly](#).
11. Install the [batteries](#).
12. Follow the procedure in [after working inside your tablet](#).

## Micro serial port and power connector port


### Removing micro serial port and power connector port

#### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).

#### About this task

The figure indicates the location of the micro serial port and power connector (DC-in) port and provides a visual representation of the removal procedure.

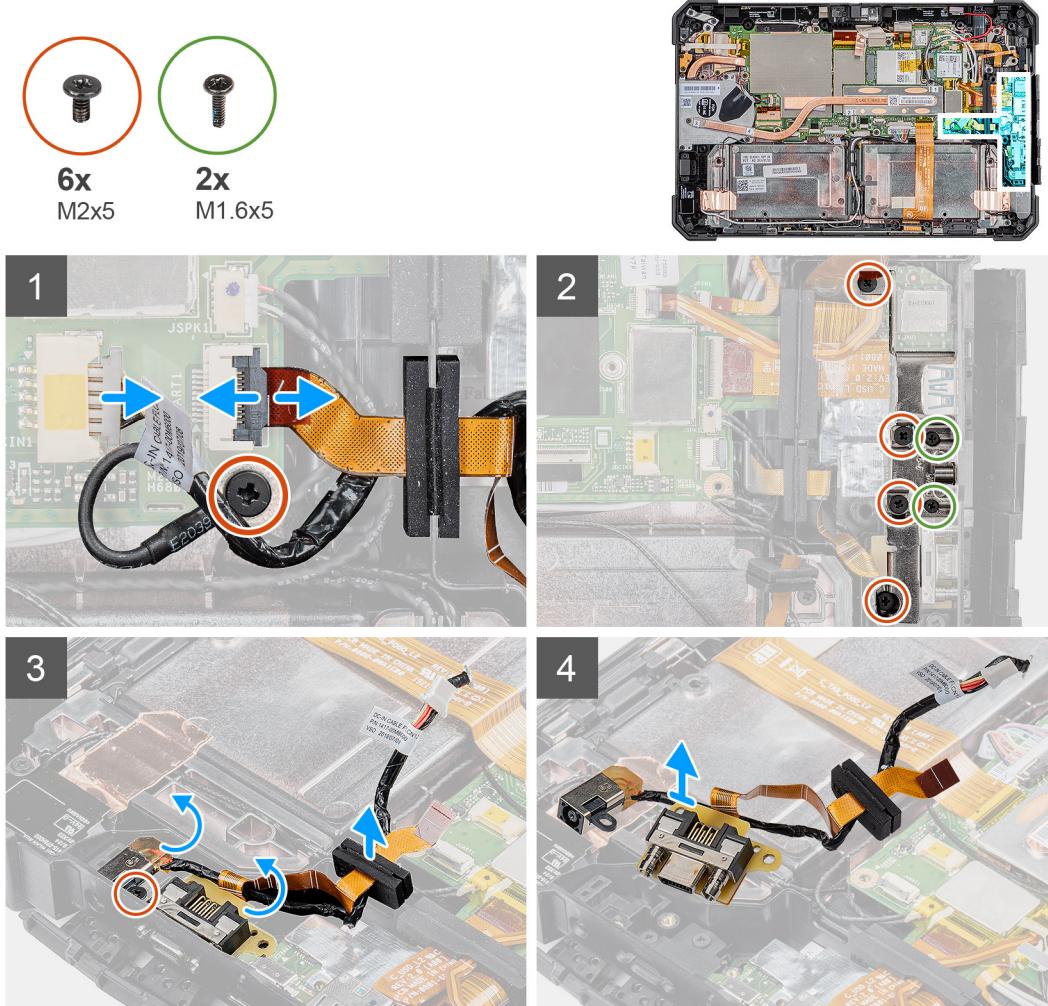

### Steps

1. Disconnect the DC-in cable from the connector and remove the (M2x5) screw that secures the system board to the system chassis.
2. Lift the latch, and disconnect the micro serial port cable from the connector.
3. Remove the four (M2x5) screws and two (M1.6x5) screws that secure the metal bracket to the system chassis.
4. Lift and remove the metal bracket from system.
5. Remove the (M2x5) screw that secures the DC-in port and serial port to the system chassis.
6. Flip the cables and lift the rubber grommet to release the DC-in and serial port from the system chassis.

***(i) NOTE: Rubber grommet ensures to secure the micro serial port cable from damage.***



## Installing micro serial port and power connector port

### Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

### About this task

The figure indicates the location of the micro serial port and power connector (DC-in) port and provides a visual representation of the installation procedure.

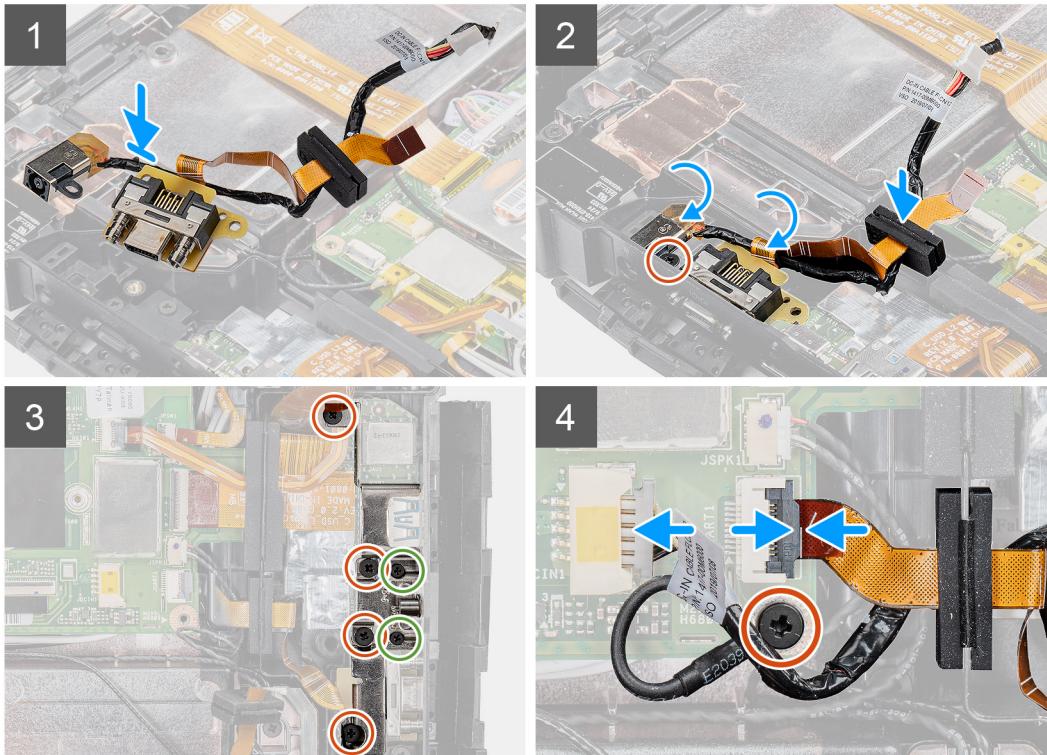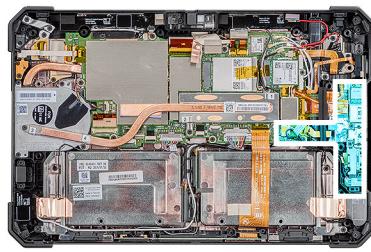

## Steps

1. Insert the DC-in port and micro serial port into the slot on the chassis.
2. Replace the (M2x5) screw that secures the DC-in port and serial port to the system chassis and align the rubber grommet to slide in the channel .
3. Align the metal brackets that secure the ports on the system chassis.
4. Replace the four (M2x5) screws and two (M1.6x5) screws that secure the metal bracket to the system chassis.
5. Connect the serial port cable into the connector.
6. Close the latch to secure the serial port cable to the system board.
7. Connect the DC-in port cable to the system board and replace the (M2x5) screw that secures the system board to the system chassis.

## Next steps

1. Install the [display assembly](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your tablet](#).

# Docking Board


## Removing the docking board

### Prerequisites

1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).
4. Remove the [heat-sink](#).
5. Remove the [system fan](#).
6. Remove the [solid-state drive](#).
7. Remove the [WLAN](#).
8. Remove the [WWAN](#).
9. Remove the [microphone](#).
10. Remove the [front camera](#).
11. Remove the [coin-cell battery](#).
12. Remove the [system board](#).

### About this task

The figure indicates the location of the docking board and provides a visual representation of the removal procedure.

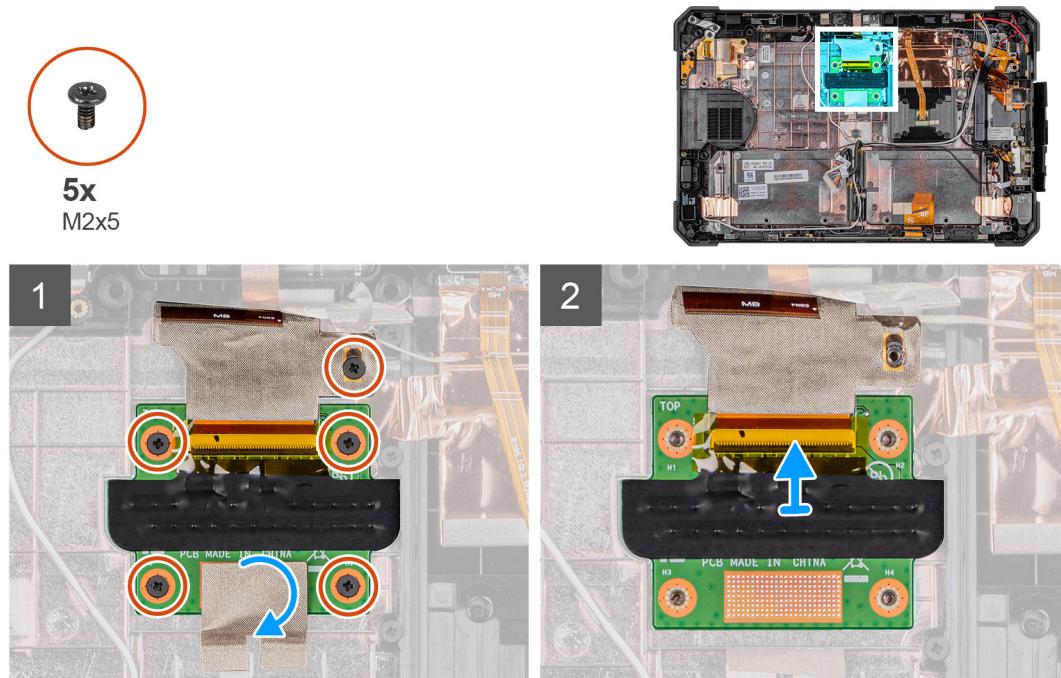

### Steps

1. Remove the adhesive tape that secures the docking circuit board on the system chassis.
2. Remove the five (M2x5) screws that secure the docking circuit board on the system board chassis.  
***(i) NOTE: As the docking board is positioned beneath the system board, ensure to remove the system board, to replace a faulty docking board.***
3. Lift the latch, and slide to remove the docking board cable on the system board.


# Installing the docking board

## Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

## About this task

The figure indicates the location of the docking board and provides a visual representation of the installation procedure.

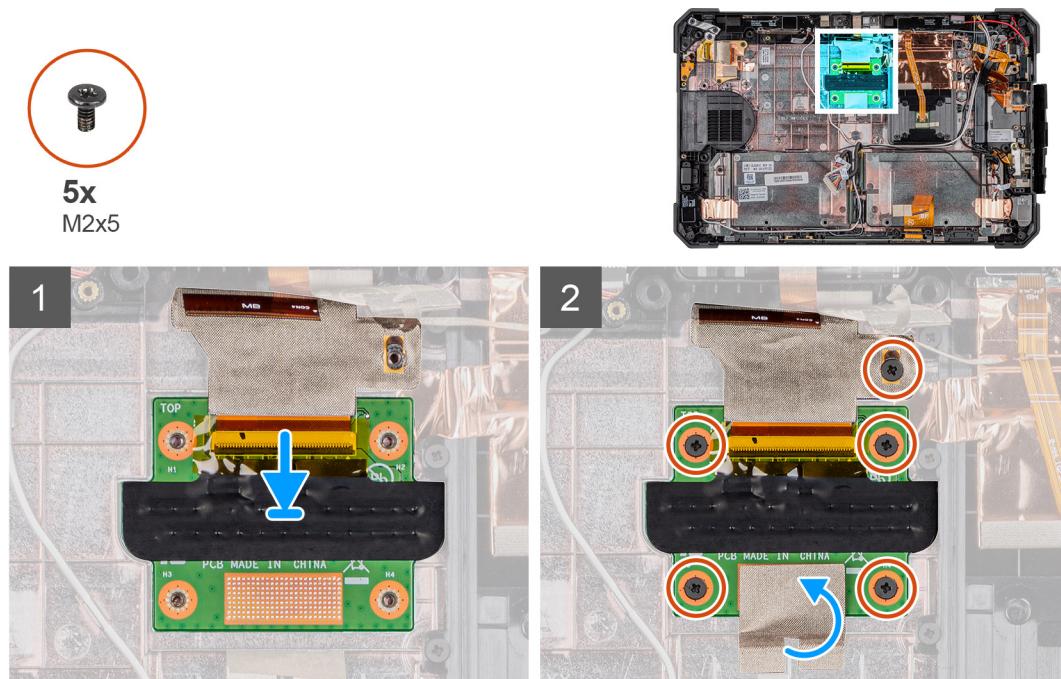

## Steps

1. Connect the docking board cable to the connector.
2. ***(i) NOTE: Slide the cable through the connector clips, and release the latch.***
3. Align the docking board and replace the five (M2x5) screws that secure the docking board to the system chassis.
4. Replace the adhesive tape to secure the docking board to the system chassis.

## Next steps

1. Install the [system board](#).
2. Install the [coin-cell battery](#).
3. Install the [front camera](#).
4. Install the [microphone](#).
5. Install the [WWAN](#).
6. Install the [WLAN](#).
7. Install the [solid-state drive](#).
8. Install the [system fan](#).
9. Install the [heat-sink](#).
10. Install the [display assembly](#).
11. Install the [batteries](#).
12. Follow the procedure in [after working inside your tablet](#).

# Smart card reader and wireless passthrough daughterboard

## Removing the smart card reader and wireless passthrough daughterboard

### Prerequisites






1. Follow the procedure in [before working inside your tablet](#).
2. Remove the [batteries](#).
3. Remove the [display assembly](#).
4. Remove the [heat-sink](#).
5. Remove the [system fan](#).
6. Remove the [solid-state drive](#).
7. Remove the [WLAN](#).
8. Remove the [WWAN](#).
9. Remove the [microphone](#).
10. Remove the [front camera](#).
11. Remove the [coin-cell battery](#).
12. Remove the [system board](#).
13. Remove the [docking board](#).


### About this task

The figure indicates the location of the smart card reader and wireless passthrough daughterboard and provides a visual representation of the removal procedure.



10x  
M2x5

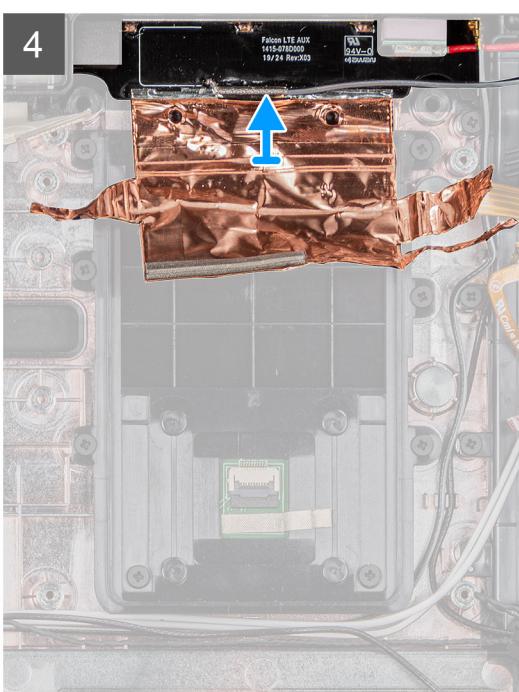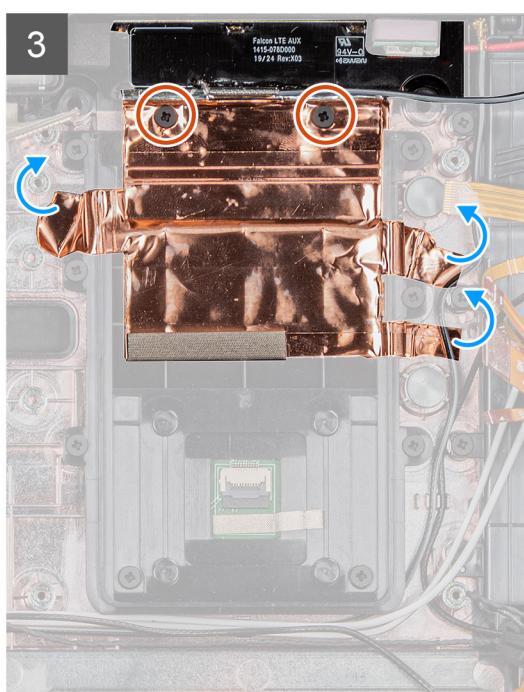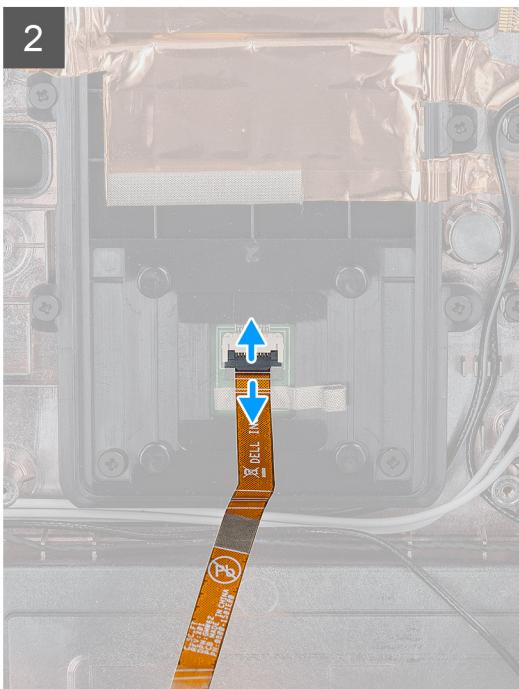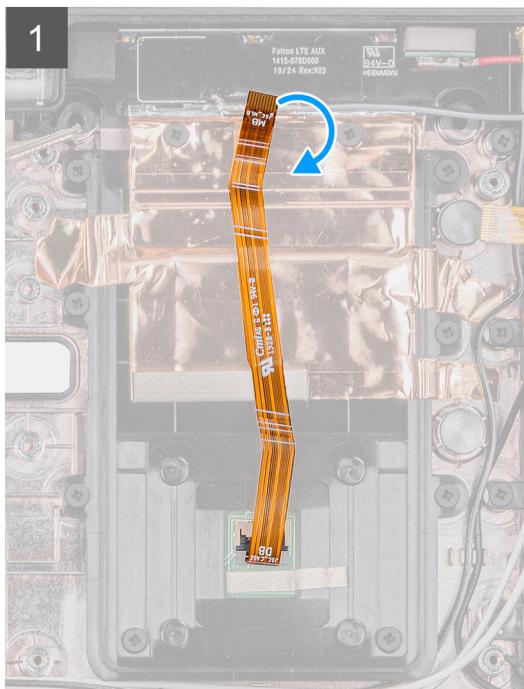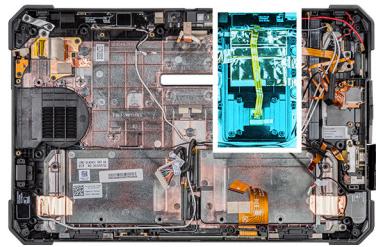

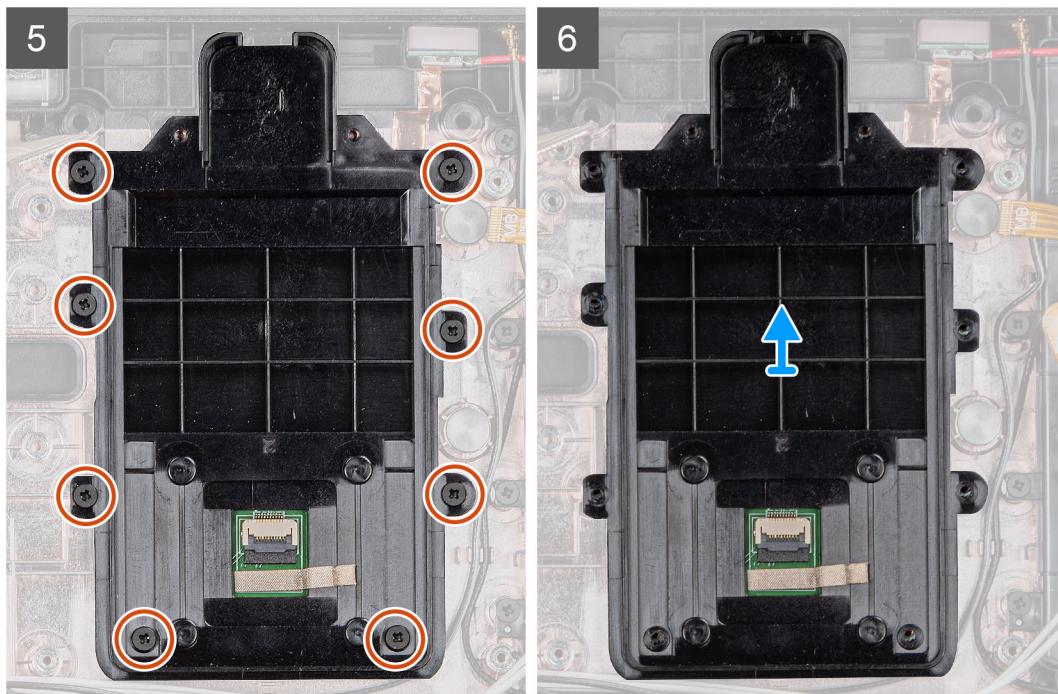

### Steps

1. Flip and disconnect the smart card reader cable from the connector.
2. Remove the two (M2x5) screws that secure the wireless passthrough daughterboard to the system chassis.
3. Remove the copper adhesive shield, and lift the wireless passthrough daughterboard away from the system.
4. Remove the eight (M2x5) screws that secure the smart card reader to the system chassis.

## Installing the smart card reader and wireless passthrough daughterboard

### Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.



### About this task

The figure indicates the location of the smart card reader and wireless passthrough daughterboard and provides a visual representation of the installation procedure.



10x  
M2x5

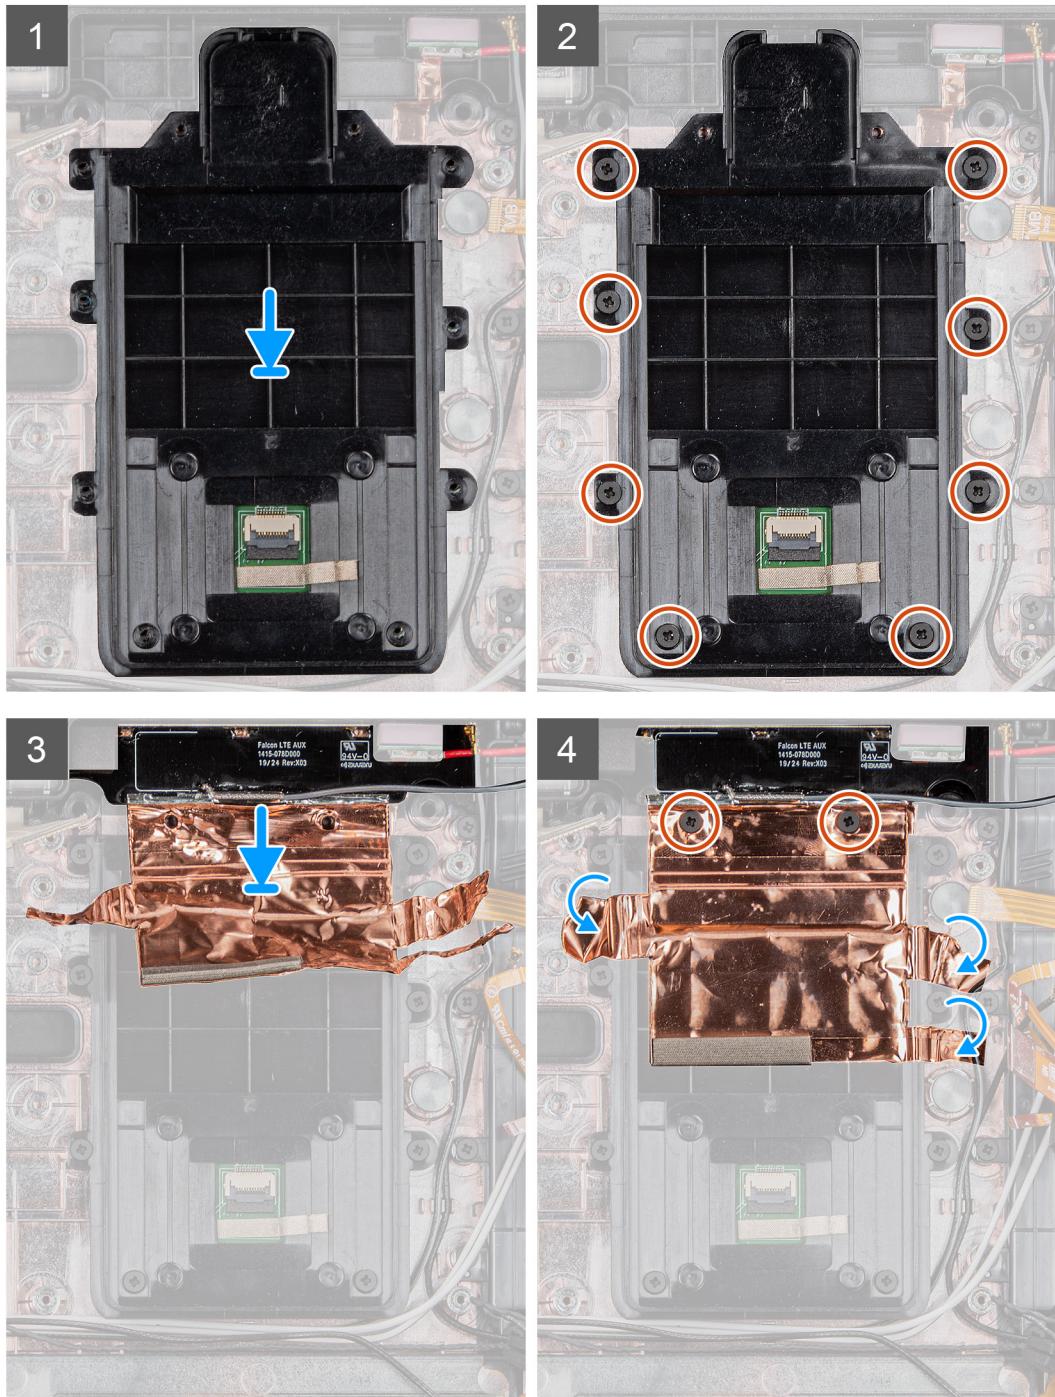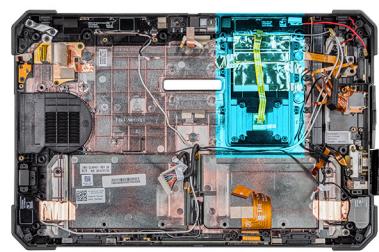

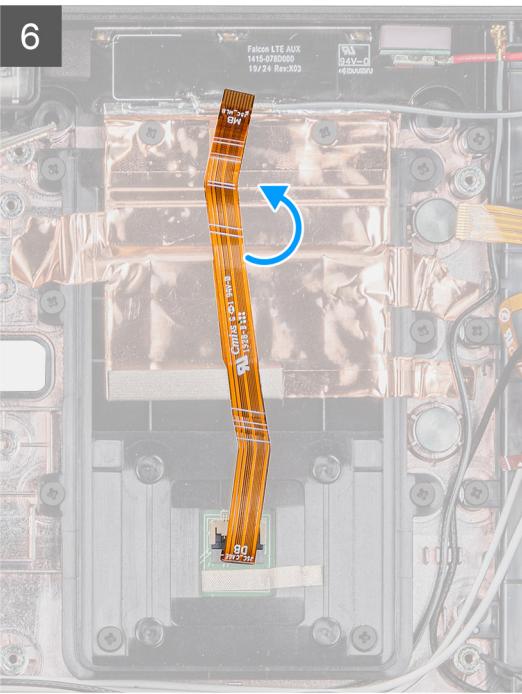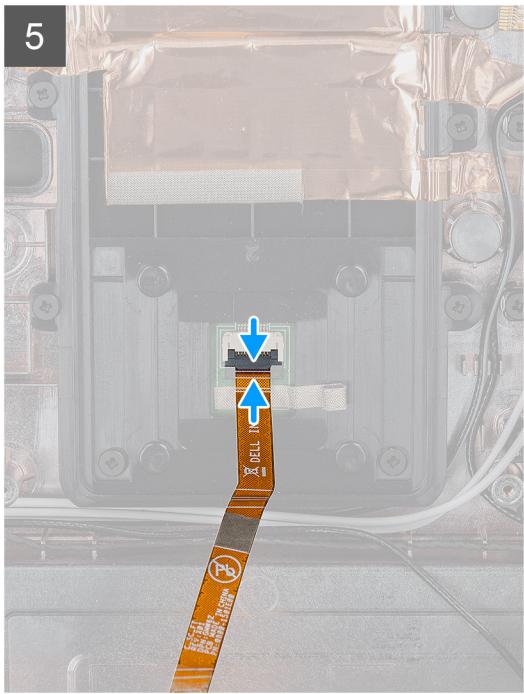

## Steps

1. Align the smart card reader, and replace the eight (M2x5) screws that secure smart card reader to the system chassis.
2. Align and replace the wireless passthrough daughterboard on the system chassis.
3. Replace the copper adhesive shield to secure the wireless passthrough daughterboard to the smart card reader holder.
4. Replace the two (M2x5) screws that secure the wireless passthrough daughterboard to the system chassis.
5. Connect the smart card reader cable to the connector.
6. Flip the smart card reader cable.

## Next steps

1. Install the [docking board](#).
2. Install the [system board](#).
3. Install the [coin-cell battery](#).
4. Install the [front camera](#).
5. Install the [microphone](#).
6. Install the [WWAN](#).
7. Install the [WLAN](#).
8. Install the [solid-state drive](#).
9. Install the [system fan](#).
10. Install the [heat-sink](#).
11. Install the [display assembly](#).
12. Install the [batteries](#).
13. Follow the procedure in [after working inside your tablet](#).

# System setup

 **CAUTION:** Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

 **NOTE:** Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

## Topics:

- Boot menu
- Navigation keys
- Boot Sequence
- System setup options
- Updating the BIOS in Windows
- System and setup password

## Boot menu

Press and hold the Volume down key to access the BIOS. Press and hold the Volume up key to access the one time boot menu with a list of the valid boot devices for the system. Diagnostics and BIOS Setup options are also in this menu. The devices that are listed on the boot menu depend on the bootable devices in the system. This menu is useful when you are attempting to boot to a particular device or to bring up the diagnostics for the system. Using the boot menu does not make any changes to the boot order stored in the BIOS.

The options are:

- UEFI Boot:**
  - Windows Boot Manager
- Other Options:**
  - BIOS Setup
  - Device Configuration
  - BIOS Flash Update
  - Diagnostics
  - SupportAssist OS Recovery
  - Exit Boot Menu and Continue

## Navigation keys

 **NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
<b>Up arrow</b>	Moves to the previous field.
<b>Down arrow</b>	Moves to the next field.
<b>Enter</b>	Selects a value in the selected field (if applicable) or follow the link in the field.
<b>Spacebar</b>	Expands or collapses a drop-down list, if applicable.

Keys	Navigation
<b>Tab</b>	Moves to the next focus area.
<b>Esc</b>	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

## Boot Sequence

Boot sequence enables you to bypass the System Setup-defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self-Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive
- NOTE: XXXX denotes the SATA drive number.**
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics
- NOTE: Choosing Diagnostics, displays the ePSA diagnostics screen.**

The boot sequence screen also displays the option to access the System Setup screen.

## System setup options

**NOTE: Depending on the tabletcomputerlaptop and its installed devices, the items listed in this section may or may not appear.**

### General options

**Table 4. General**

Option	Description
System Information	Displays the following information: <ul style="list-style-type: none"> <li>System Information: Displays <b>BIOS Version</b>, <b>Service Tag</b>, <b>Asset Tag</b>, <b>Ownership Tag</b>, <b>Manufacture Date</b>, <b>Ownership Date</b>, and the <b>Express Service Code</b>.</li> <li>Memory Information: Displays <b>Memory Installed</b>, <b>Memory Available</b>, <b>Memory Speed</b>, <b>Memory Channel Mode</b>, <b>Memory Technology</b>, <b>DIMM A size</b>, and <b>DIMM B size</b></li> <li>Processor Information: Displays <b>Processor Type</b>, <b>Core Count</b>, <b>Processor ID</b>, <b>Current Clock Speed</b>, <b>Minimum Clock Speed</b>, <b>Maximum Clock Speed</b>, <b>Processor L2 Cache</b>, <b>Processor L3 Cache</b>, <b>HT Capable</b>, and <b>64-Bit Technology</b>.</li> <li>Device Information: Displays <b>M.2 SATA-0</b>, <b>M.2 SATA-1</b>, <b>M.2 PCIe SSD-0</b>, <b>M.2 PCIe SSD-1</b>, <b>Passthrough MAC Address</b>, <b>Video Controller</b>, <b>Video BIOS Version</b>, <b>Video Memory</b>, <b>Panel type</b>, <b>Native Resolution</b>, <b>Audio Controller</b>, <b>Wi-Fi Device</b>, <b>Cellular Device</b>, and <b>Bluetooth Device</b>.</li> </ul>
Battery Information	Displays the battery status health and whether the AC adapter is installed.
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system from the devices specified in this list.
Advanced Boot Options	Allows you to select the UEFI Network Stack option, when in UEFI boot mode. By default, no option is selected.
UEFI Boot Path Security	This option controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu.

Option	Description
	<ul style="list-style-type: none"> <li>Always, Except Internal HDD—Default</li> <li>Always, Except Internal HDD&amp;PXE</li> <li>Always</li> <li>Never</li> </ul>
Date/Time	Allows you to set the date and time settings. Changes to the system date and time take effect immediately.

## System information

**Table 5. System Configuration**

Option	Description
SATA Operation	<p>Allows you to configure the operating mode of the integrated hard drive controller.</p> <ul style="list-style-type: none"> <li>Disabled = The SATA controllers are hidden</li> <li>AHCI = SATA is configured for AHCI mode</li> <li>RAID ON = SATA is configured to support RAID mode (selected by default)</li> </ul>
Smart Reporting	This field controls whether hard drive errors for integrated drives are reported during system startup. The <b>Enable Smart Reporting option</b> is disabled by default.
USB Configuration	<p>Allows you to enable or disable the integrated USB controller for:</p> <ul style="list-style-type: none"> <li>Enable USB Boot Support</li> <li>Enable External USB Port</li> </ul> <p>All the options are enabled by default.</p> <ul style="list-style-type: none"> <li>Optimize USB (selected by default)</li> <li>Optimize GPS</li> </ul>
USB PowerShare	<p>This option configures the USB PowerShare feature behavior.</p> <ul style="list-style-type: none"> <li>Enable USB PowerShare - disabled by default</li> </ul> <p>This feature is intended to allow users to power or charge external devices, such as phones and portable music players, using the stored system battery power through the USN PowerShare port on the notebook, while the notebook is in a sleep state.</p>
Audio	<p>Allows you to enable or disable the integrated audio controller. The option <b>Enable Audio</b> is selected by default.</p> <ul style="list-style-type: none"> <li>Enable Microphone</li> <li>Enable Internal Speaker</li> </ul> <p>Both the options are selected by default.</p>
Keyboard Illumination	<p>This field lets you choose the operating mode of the keyboard illumination feature. The keyboard brightness level can be set from 25% to 100%. The options are:</p> <ul style="list-style-type: none"> <li>Disabled</li> <li>Level is 25%</li> <li>Level is 50%</li> <li>Level is 75%</li> <li>Level is 100%-enabled by default</li> </ul>
Tablet Buttons Illumination	<p>This controls the LED brightness for the following tablet buttons: Power, Rotation Lock, LCD Brightness Down, LCD Brightness Up, Volume Down, Volume Up, P1, P2, and P3. The options are:</p> <ul style="list-style-type: none"> <li>Off</li> <li>Level is 25%</li> </ul>

Option	Description
	<ul style="list-style-type: none"> <li>• Level is 50%</li> <li>• Level is 75%</li> <li>• Level is 100%-enabled by default</li> </ul>
Keyboard Backlight Timeout on AC	<p>The Keyboard Backlight Timeout dims out with AC option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled. The options are:</p>
	<ul style="list-style-type: none"> <li>• 5 sec</li> <li>• 10 sec-enabled by default</li> <li>• 15 sec</li> <li>• 30 sec</li> <li>• 1 min</li> <li>• 5 min</li> <li>• 15 min</li> <li>• Never</li> </ul>
Keyboard Backlight Timeout on Battery	<p>The Keyboard Backlight Timeout dims out with the Battery option. The main keyboard illumination feature is not affected. Keyboard Illumination will continue to support the various illumination levels. This field has an effect when the backlight is enabled. The options are:</p>
	<ul style="list-style-type: none"> <li>• 5 sec</li> <li>• 10 sec-enabled by default</li> <li>• 15 sec</li> <li>• 30 sec</li> <li>• 1 min</li> <li>• 5 min</li> <li>• 15 min</li> <li>• Never</li> </ul>
RGB Keyboard Backlight	<p>The RGB keyboard backlight feature: There are six available colors: four preset colors (white, red, green, and blue) and two user configurable colors.</p>
	<ul style="list-style-type: none"> <li>• White: Enabled and Active</li> <li>• Red: Enabled</li> <li>• Green: Enabled</li> <li>• Blue: Enabled</li> <li>• Custom1: Disabled by default</li> <li>• Custom2: Disabled by default</li> </ul>
Touchscreen	<p>This field controls whether the touchscreen is enabled or disabled</p>
	<ul style="list-style-type: none"> <li>• Touchscreen (selected by default)</li> </ul>
Stealth Mode Control	<p>This option configures the Dell Stealth Mode feature:</p>
	<p>Checking 'Enable Stealth Mode' enables this feature. Default is enabled:</p> <ul style="list-style-type: none"> <li>• Disable onboard LEDs</li> <li>• Disable onboard LCD screen</li> <li>• Disable onboard speaker*</li> <li>• Disable onboard fans*</li> <li>• Disable Bluetooth radio*</li> <li>• Disable GPS receiver*</li> <li>• Disable WLAN radio*</li> <li>• Disable WWAN radio*</li> </ul> <p>* - when present</p>
Fingerprint Reader	<ul style="list-style-type: none"> <li>• Enable Fingerprint Reader Device (enabled by default)</li> </ul>
	<p>Enable or disable the Fingerprint Reader Device</p>

Option	Description
Miscellaneous Devices	<p>Allows you to enable or disable the following devices:</p> <ul style="list-style-type: none"> <li>Enable User-Facing Camera (enabled by default)</li> <li>Enable World-Facing Camera (enabled by default)</li> <li>Enable Dedicated GPS Radio (enabled by default)</li> <li>Enable Secure Digital (SD) Card (enabled by default)</li> <li>Secure Digital (SD) Card Boot</li> <li>Secure Digital (SD) Card Read-Only Mode</li> </ul>

## Video

Option	Description
LCD Brightness	Allows you to set the display brightness depending up on the power source—On Battery and On AC. The LCD brightness is independent for battery and AC adapter. It can be set using the slider.

**i** **NOTE:** The video setting is visible only when a video card is installed into the system.

## Security

**Table 6. Security**

Option	Description
Admin Password	Allows you to set, change, and delete the admin password.
System Password	Allows you to set, change, and delete the system password.
Strong Password	This option lets you enable or disable strong passwords for the system.
Password Configuration	Allows you to control the minimum and maximum number of characters allowed for a administrative password and the system password. The range of characters is between 4 and 32.
Password Bypass	<p>This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart.</p> <ul style="list-style-type: none"> <li>Disabled — Always prompt for the system and internal HDD password when they are set. This option is enabled by default.</li> <li>Reboot Bypass — Bypass the password prompts on Restarts (warm boots).</li> </ul>
<b>i</b> <b>NOTE:</b> The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.	
Password Change	<p>This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set.</p> <p><b>Allow Non-Admin Password Changes</b> - This option is enabled by default.</p>
Non-Admin Setup Changes	<p>This option lets you determine whether changes to the setup option are permitted when an administrator password is set.</p> <ul style="list-style-type: none"> <li>Allow Wireless Switch Changes (disabled by default)</li> </ul>
UEFI Capsule Firmware Updates	This option controls whether this system allows BIOS updates via UEFI capsule update packages. This option is selected by default. Disabling this option will block BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS)
TPM 2.0 Security	Allows you to control whether the Trusted Platform Module (TPM) is visible to the operating system.
	<ul style="list-style-type: none"> <li>TPM On (default)</li> <li>Clear</li> </ul>

Option	Description
Absolute	<ul style="list-style-type: none"> <li>PPI Bypass for Enable Commands (default)</li> <li>PPI Bypass for Disable Commands</li> <li>PPI Bypass for Clear Commands</li> <li>Attestation Enable (default)</li> <li>Key Storage Enable (default)</li> <li>SHA-256 (default)</li> </ul> <p>Choose any one option:</p> <ul style="list-style-type: none"> <li>Disabled</li> <li>Enabled (default)</li> </ul> <p>This field lets you Enable, Disable or Permanently Disable the BIOS module interface of the optional Absolute Persistence Module service from Absolute Software.</p> <ul style="list-style-type: none"> <li>Enabled - This option is selected by default.</li> <li>Disabled</li> <li>Permanently Disabled</li> </ul>
OROM Keyboard Access	<p>This option determines whether users are able to enter Option ROM configuration screen via hotkeys during boot.</p> <ul style="list-style-type: none"> <li>Enabled (default)</li> <li>Disabled</li> <li>One Time Enable</li> </ul>
Admin Setup Lockout	<p>Allows you to prevent users from entering Setup when Admin password is set. This option is not set by default.</p>
Master Password Lockout	<p>Allows you to disable master password support Hard Disk passwords need to be cleared before the settings can be changed. This option is not set by default.</p>
SMM Security Mitigation	<p>Allows you to enable or disable additional UEFI SMM Security Mitigation protections. This option is selected by default.</p>

## Secure boot

**Table 7. Secure Boot**

Option	Description
Secure Boot Enable	<p>Allows you to enable or disable Secure Boot feature</p> <ul style="list-style-type: none"> <li>Secure Boot Enable</li> </ul> <p>Option is selected by default.</p>
Secure Boot Mode	<p>Allows you to modify the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures.</p> <ul style="list-style-type: none"> <li>Deployed Mode (default)</li> <li>Audit Mode</li> </ul>
Expert key Management	<p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The <b>Enable Custom Mode</b> option is disabled by default. The options are:</p> <ul style="list-style-type: none"> <li>PK (default)</li> <li>KEK</li> <li>db</li> <li>dbx</li> </ul> <p>If you enable the <b>Custom Mode</b>, the relevant options for <b>PK, KEK, db, and dbx</b> appear. The options are:</p> <ul style="list-style-type: none"> <li><b>Save to File</b>- Saves the key to a user-selected file</li> <li><b>Replace from File</b>- Replaces the current key with a key from a user-selected file</li> </ul>

Option	Description
	<ul style="list-style-type: none"> <li>• <b>Append from File</b>- Adds a key to the current database from a user-selected file</li> <li>• <b>Delete</b>- Deletes the selected key</li> <li>• <b>Reset All Keys</b>- Resets to default setting</li> <li>• <b>Delete All Keys</b>- Deletes all the keys</li> </ul> <p><b>(i) NOTE:</b> If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.</p>

## Intel Software Guard Extensions

Table 8. Intel Software Guard Extensions

Option	Description
<b>Intel SGX Enable</b>	<p>This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS.</p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>Disabled</b></li> <li>• <b>Enabled</b></li> <li>• <b>Software controlled—Default</b></li> </ul>
<b>Enclave Memory Size</b>	<p>This option sets <b>SGX Enclave Reserve Memory Size</b></p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>32 MB</b></li> <li>• <b>64 MB</b></li> <li>• <b>128 MB</b>—Default</li> </ul>

## Performance

Table 9. Performance

Option	Description
<b>Multi Core Support</b>	<p>This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores.</p> <ul style="list-style-type: none"> <li>• <b>All</b>—Default</li> <li>• <b>1</b></li> <li>• <b>2</b></li> <li>• <b>3</b></li> </ul>
<b>Intel SpeedStep</b>	<p>Allows you to enable or disable the Intel SpeedStep mode of processor.</p> <ul style="list-style-type: none"> <li>• <b>Enable Intel SpeedStep</b></li> </ul> <p>This option is set by default.</p>
<b>C-States Control</b>	<p>Allows you to enable or disable the additional processor sleep states.</p> <ul style="list-style-type: none"> <li>• <b>C states</b></li> </ul> <p>This option is set by default.</p>
<b>Intel TurboBoost</b>	<p>Allows you to enable or disable the Intel TurboBoost mode of the processor.</p>

Option	Description
<b>Hyper-Thread Control</b>	<ul style="list-style-type: none"> <li><b>Enable Intel TurboBoost</b> This option is set by default.</li> </ul>
<b>AC Behavior</b>	<ul style="list-style-type: none"> <li><b>Disabled</b></li> <li><b>Enabled</b>—Default</li> </ul>

## Power management

Option	Description
<b>Lid Switch</b>	<ul style="list-style-type: none"> <li>Allows you to disable the lid switch so the screen does not shut off when lid is closed.</li> </ul> <p>Default setting: Enable Lid Switch is selected.</p>
<b>AC Behavior</b>	<ul style="list-style-type: none"> <li>Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected.</li> </ul> <p>Default setting: Wake on AC is not selected.</p>
<b>Enable Intel Speed Shift Technology</b>	<ul style="list-style-type: none"> <li>Enable Intel Speed Shift Technology</li> </ul> <p>Default setting: Enabled</p>
<b>Auto On Time</b>	<ul style="list-style-type: none"> <li>Allows you to set the time at which the computer must turn on automatically. The options are:           <ul style="list-style-type: none"> <li>Disabled</li> <li>Every Day</li> <li>Weekdays</li> <li>Select Days</li> </ul> </li> </ul> <p>Default setting: Disabled</p>
<b>USB Wake Support</b>	<ul style="list-style-type: none"> <li>Allows you to enable USB devices to wake the system from Standby.</li> </ul> <p><b>NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power.</b></p> <ul style="list-style-type: none"> <li>Enable Wake on Dell USB-C Dock</li> </ul>
<b>Wake on LAN</b>	<ul style="list-style-type: none"> <li>Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal.</li> </ul> <p>Default setting: Disabled</p>
<b>Peak Shift</b>	<ul style="list-style-type: none"> <li>This option enables you to minimize the AC power consumption during the peak power times of day. After you enable this option, your system runs only in battery even if the AC is attached.</li> </ul>
<b>Advanced Battery Charge Configuration</b>	<ul style="list-style-type: none"> <li>Enable peak shift—is disabled</li> <li>Set battery threshold (15% to 100%) - 15 % (enabled by default)</li> </ul>
<b>Battery#1 Charge Configuration</b>	<ul style="list-style-type: none"> <li>This option enables you to maximize the battery health. By enabling this option, your system uses the standard charging algorithm and other techniques, during the non work hours to improve the battery health.</li> </ul> <p>Enable Advanced Battery Charge Mode- is disabled</p>
<b>Battery#1 Charge Configuration</b>	<ul style="list-style-type: none"> <li>Allows you to select the charging mode for the battery. The options are:           <ul style="list-style-type: none"> <li>Adaptive—enabled by default</li> <li>Standard—Fully charges your battery at a standard rate.</li> <li>ExpressCharge—The battery charges over a shorter time using Dell's fast charging technology.</li> </ul> </li> </ul>

Option	Description
	<ul style="list-style-type: none"> <li>Primarily AC use</li> <li>Custom</li> </ul>
	If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.
	<p><b>NOTE:</b> All charging mode may not be available for all the batteries. To enable this option, disable the Advanced Battery Charge Configuration option.</p>
<b>Battery#2 Charge Configuration</b>	Allows you to select the charging mode for the battery. The options are:
	<ul style="list-style-type: none"> <li>Adaptive—enabled by default</li> <li>Standard—Fully charges your battery at a standard rate.</li> <li>ExpressCharge—The battery charges over a shorter time using Dell's fast charging technology.</li> <li>Primarily AC use</li> <li>Custom</li> </ul>
	If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.
	<p><b>NOTE:</b> All charging mode may not be available for all the batteries. To enable this option, disable the Advanced Battery Charge Configuration option.</p>
<b>Dock Battery Charger Mode</b>	Allows you to select the charging mode for the battery. The options are:
	<ul style="list-style-type: none"> <li>Standard—enabled by default</li> <li>ExpressCharge—The battery charges over a shorter time using Dell's fast charging technology.</li> </ul>
<b>Type-C Connector Power</b>	This allows you to set the maximum power that can be drawn from the Type-C connector. The options are:
	<ul style="list-style-type: none"> <li>7.5 Watts—enabled by default</li> <li>15 Watts</li> </ul>
	<p><b>NOTE:</b> Setting a higher power value for the Type-C connector may cause the system to throttle sooner, if the total system power budget is exceeded.</p>
<b>Power Usage Mode</b>	Allows you to choose the system power usage mode. The options are:
	<ul style="list-style-type: none"> <li>Power Saver</li> <li>Balanced</li> <li>Performance—enabled by default</li> <li>High Performance</li> </ul>

## POST behavior

Option	Description
<b>Adapter Warnings</b>	Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters.
	Default setting: Enable Adapter Warnings
<b>USB-C Warnings</b>	Allows you to enable the system displays warning messages for USB-C devices.
	Enable Dock Warning Messages. This option is enabled by default.
<b>Keypad (Embedded)</b>	Allows you to select one of the two methods to enable the keypad that is embedded in the internal keyboard.
	<ul style="list-style-type: none"> <li>Fn Key Only—enabled by default</li> <li>By Numlock</li> </ul>
<b>Fn Lock Options</b>	Allows you to let hot key combinations Fn + Esc toggle the primary behavior of F1–F12, between their standard and secondary functions. If you disable this option, you cannot toggle dynamically the primary behavior of these keys. The available options are:
	<ul style="list-style-type: none"> <li>Fn Lock—enabled by default</li> <li>Lock Mode Disable/Standard—enabled by default</li> <li>Lock Mode Enable/Secondary</li> </ul>

Option	Description
<b>Fastboot</b>	Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are: <ul style="list-style-type: none"> <li>Minimal—enabled by default</li> <li>Thorough</li> <li>Auto</li> </ul>
<b>Extended BIOS POST Time</b>	Allows you to create an extra preboot delay. The options are: <ul style="list-style-type: none"> <li>0 seconds—enabled by default.</li> <li>5 seconds</li> <li>10 seconds</li> </ul>
<b>Full Screen Log</b>	<ul style="list-style-type: none"> <li>Enable Full Screen Logo—not enabled</li> </ul>
<b>Sign of Life Indication</b>	<ul style="list-style-type: none"> <li>Enable Tablet Button LED Sign of Life—enabled by default</li> </ul>
<b>Warnings and errors</b>	<ul style="list-style-type: none"> <li>Prompt on warnings and errors—enabled by default</li> <li>Continue on warnings</li> <li>Continue on warnings and errors</li> </ul>
<b>MAC Address Pass-Through</b>	<ul style="list-style-type: none"> <li>Passthrough MAC Address—enabled by default</li> <li>Disabled</li> </ul>

## Manageability

Option	Description
<b>Intel AMT Capability</b>	Allows you to provision AMT and MEBx Hotkey function is enabled, during the system boot. <ul style="list-style-type: none"> <li>Disabled</li> <li>Enabled - by default</li> <li>Restrict MEBx Access</li> </ul>
<b>MEBx Hotkey</b>	When enabled Intel AMT can be provisioned using the local provisioning file via a USB storage device. <ul style="list-style-type: none"> <li>Enable USB Provision - disabled by default</li> </ul>
<b>MEBx Hotkey</b>	Allows you to specify whether the MEBx Hotkey function should enable, during the system boot. <ul style="list-style-type: none"> <li>Enable MEBx hotkey—enabled by default</li> </ul>

## Virtualization support

Option	Description
<b>Virtualization</b>	This field specifies whether a virtual Machine Monitor (VMM) can utilize the conditional hardware capabilities provided by Intel Virtualization Technology. <ul style="list-style-type: none"> <li>Enable Intel Virtualization Technology—enabled by default.</li> </ul>
<b>VT for Direct I/O</b>	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. <ul style="list-style-type: none"> <li>Enable VT for Direct I/O - enabled by default.</li> </ul>
<b>Trusted Execution</b>	This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology, and the Virtualization technology for direct I/O must be enabled to use this feature. <ul style="list-style-type: none"> <li>Trusted Execution - disabled by default.</li> </ul>

## Wireless

Allows you to enable or disable the internal wireless devices. All the options are enabled by default.

**Table 10. Wireless**

Options	Descriptions
WWAN/GPS	Allows enabling/disabling of internal WWAN/GPS device
Bluetooth	Allows enabling/disabling of internal Bluetooth device
WLAN	Allows enabling/disabling of internal WLAN device
Contactless Smartcard/NFC	Allows enabling/disabling of internal Contactless Smartcard/NFC device

## Maintenance screen

Option	Description
<b>Service Tag</b>	Displays the Service Tag of your computer.
<b>Asset Tag</b>	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
<b>BIOS Downgrade</b>	This controls flashing of the system firmware to previous revisions. Option 'Allow BIOS downgrade' is enabled by default.
<b>Data Wipe</b>	This field allows users to erase the data securely from all internal storage devices. Option 'Wipe on Next boot' is not enabled by default. The following is list of devices affected: <ul style="list-style-type: none"><li>Internal SATA HDD/SSD</li><li>Internal M.2 SATA SSD</li><li>Internal M.2 PCIe SSD</li><li>Internal eMMC</li></ul>
<b>BIOS Recovery</b>	This field allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive or an external USB key. <ul style="list-style-type: none"><li>BIOS Recovery from Hard Drive—enabled by default</li><li>BIOS Auto-Recovery—enabled by default</li></ul>

## System logs

Option	Description
<b>BIOS Events</b>	Allows you to view and clear the System Setup (BIOS) POST events.
<b>Thermal Events</b>	Allows you to view and clear the System Setup (Thermal) events.
<b>Power Events</b>	Allows you to view and clear the System Setup (Power) events.

## SupportAssist System Resolution

**Table 11. SupportAssist System Resolution**

Option	Description
<b>Auto OS Recovery Threshold</b>	The Auto OS recovery threshold setup option controls the automatic boot flow for SupportAssist System Resolution Console and for Dell OS recovery tool. <ul style="list-style-type: none"><li>OFF</li><li>1</li></ul>

Option	Description
	<ul style="list-style-type: none"> <li>• <b>2</b>—Default</li> <li>• <b>3</b></li> </ul>
<b>SupportAssist OS Recovery</b>	<p>The SupportAssist OS Recovery option will enable or disable the boot flow for SupportAssist OS Recovery tool in the event of certain system errors.</p> <ul style="list-style-type: none"> <li>• <b>SupportAssist OS Recovery</b></li> </ul> <p>This option is set by default.</p>

## About

License Information: It contains the Copyright information.

# Updating the BIOS in Windows

### Prerequisites

It is recommended to update your BIOS (System Setup), when you replace the system board or if an update is available. For laptops, ensure that your computer battery is fully charged and connected to a power outlet.

### About this task

 **NOTE:** If BitLocker is enabled, it must be suspended prior to updating the system BIOS, and then re-enabled after the BIOS update is completed.

### Steps

1. Restart the computer.
2. Go to [Dell.com/support](http://Dell.com/support).
  - Enter the **Service Tag** or **Express Service Code** and click **Submit**.
  - Click **Detect Product** and follow the instructions on screen.
3. If you are unable to detect or find the Service Tag, click **Choose from all products**.
4. Choose the **Products** category from the list.

 **NOTE:** Choose the appropriate category to reach the product page

5. Select your computer model and the **Product Support** page of your computer appears.
6. Click **Get drivers** and click **Drivers and Downloads**.  
The Drivers and Downloads section opens.
7. Click **Find it myself**.
8. Click **BIOS** to view the BIOS versions.
9. Identify the latest BIOS file and click **Download**.
10. Select your preferred download method in the **Please select your download method below** window, click **Download File**.  
The **File Download** window appears.
11. Click **Save** to save the file on your computer.
12. Click **Run** to install the updated BIOS settings on your computer.

Follow the instructions on the screen.

## Updating BIOS on systems with BitLocker enabled

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system

reinstall. For more information about this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

## Updating your system BIOS using a USB flash drive

### About this task

If the system cannot load into Windows but there is still a need to update the BIOS, download the BIOS file using another system and save it to a bootable USB Flash Drive.

**NOTE: You will need to use a bootable USB Flash drive. Please refer to the following article for further details: <https://www.dell.com/support/article/sln143196/>**

### Steps

1. Download the BIOS update .EXE file to another system.
2. Copy the file e.g. O9010A12.EXE onto the bootable USB Flash drive.
3. Insert the USB Flash drive into the system that requires the BIOS update.
4. Restart the system and press F12 when the Dell Splash logo appears to display the One Time Boot Menu.
5. Using arrow keys, select **USB Storage Device** and click Return.
6. The system will boot to a Diag C:\> prompt.
7. Run the file by typing the full filename e.g. O9010A12.exe and press Return.
8. The BIOS Update Utility will load, follow the instructions on screen.

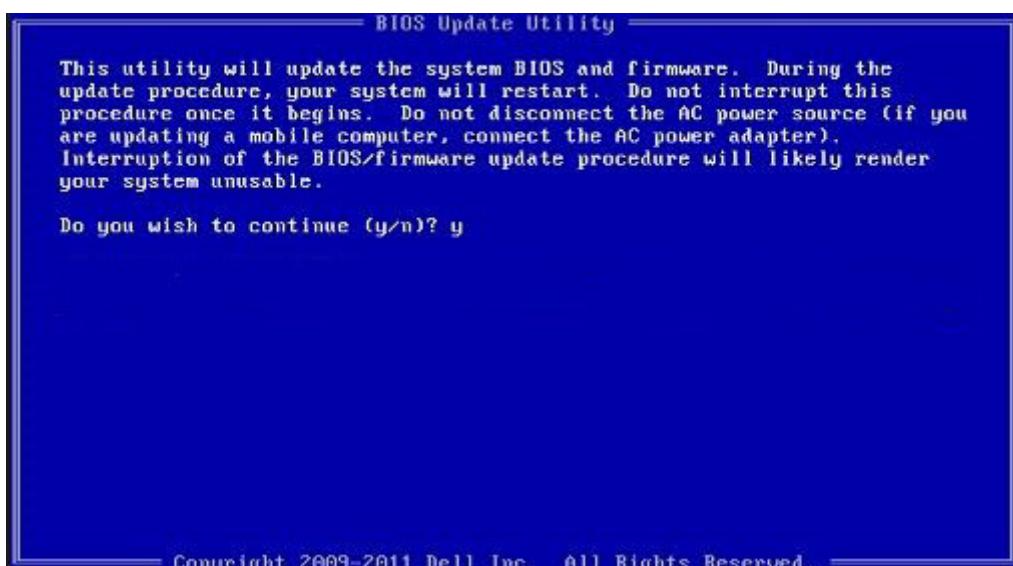


Figure 1. DOS BIOS Update Screen

## Updating the Dell BIOS in Linux and Ubuntu environments

If you want to update the system BIOS in a Linux environment such as Ubuntu, see <https://www.dell.com/support/article/sln171755/>.

## Flashing the BIOS from the F12 One-Time boot menu

Updating your system BIOS using a BIOS update .exe file copied to a FAT32 USB key and booting from the F12 one time boot menu.

### About this task

#### BIOS Update

You can run the BIOS update file from Windows using a bootable USB key or you can also update the BIOS from the F12 One-Time boot menu on the system.

Most Dell systems built after 2012 have this capability and you can confirm by booting your system to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your system. If the option is listed, then the BIOS supports this BIOS update option.

***(i) NOTE: Only systems with BIOS Flash Update option in the F12 One-Time Boot Menu can use this function.***

### **Updating from the One-Time Boot Menu**

To update your BIOS from the F12 One-Time boot menu, you will need:


- USB key formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB key
- AC power adapter connected to the system
- Functional system battery to flash the BIOS

Perform the following steps to execute the BIOS update flash process from the F12 menu:


***⚠ CAUTION: Do not power off the system during the BIOS update process. Powering off the system could make the system fail to boot.***

### **Steps**


1. From a power off state, insert the USB key where you copied the flash into a USB port of the system .
2. Power on the system and press the F12 key to access the One-Time Boot Menu, Highlight BIOS Update using the mouse or arrow keys then press **Enter**.

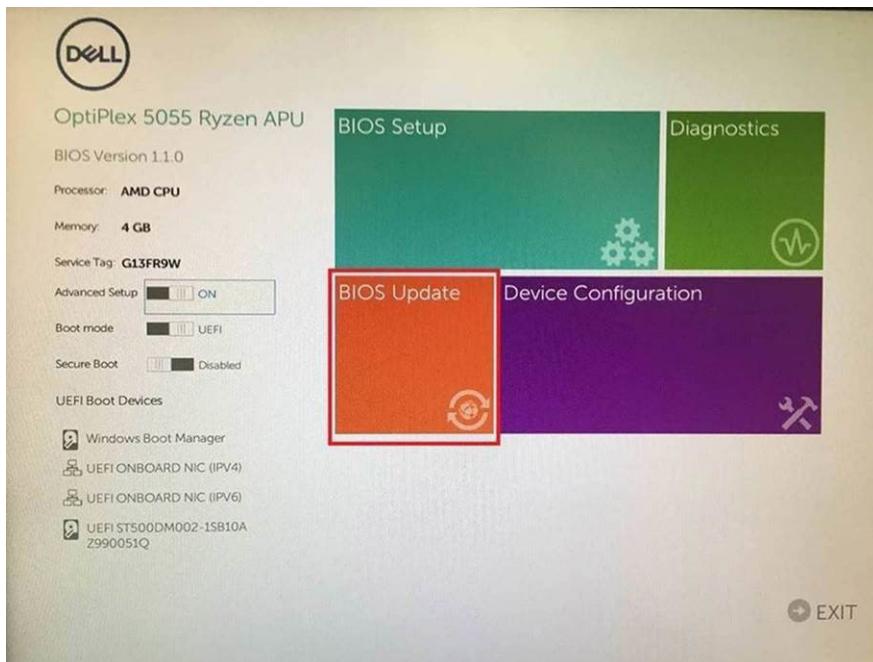


3. The Bios flash menu will open then click the **Flash from file**.

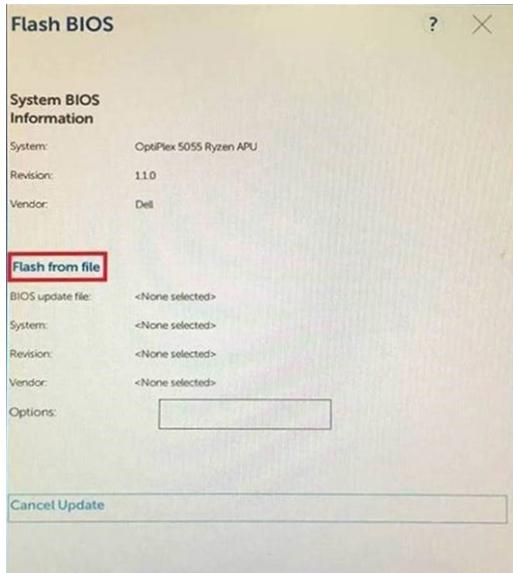


#### 4. Select external USB device

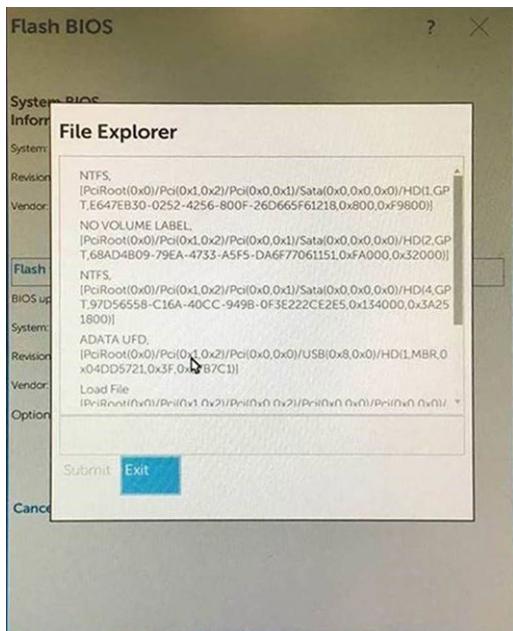

5. Once the file is selected, Double click the flash target file, then press submit .

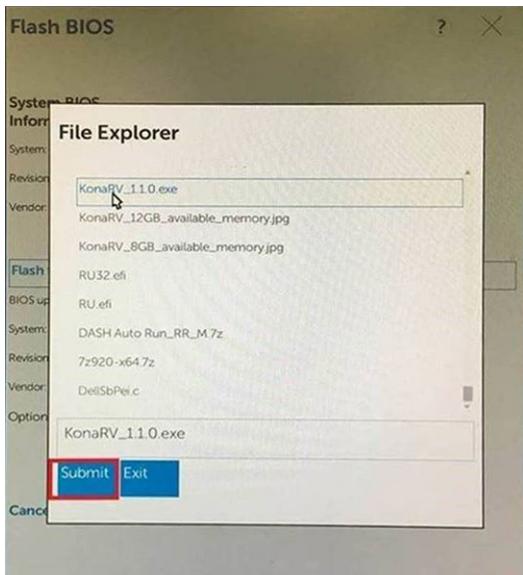

6. Click the **Update BIOS** then system will reboot to flash the BIOS.

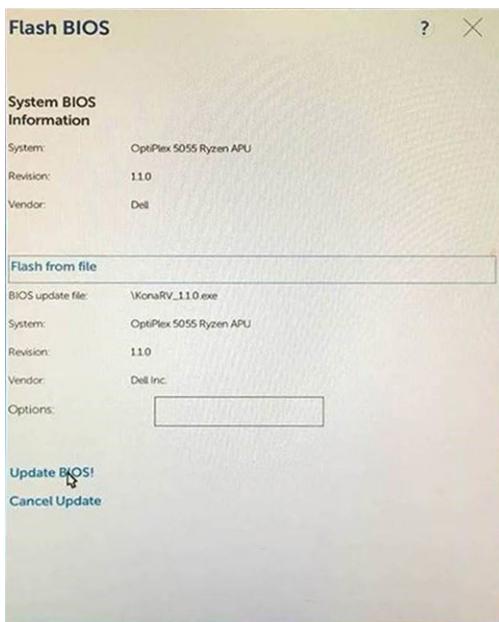

7. Once complete, the system will reboot and the BIOS update process is completed.

## System and setup password

**Table 12. System and setup password**

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

## Assigning a system setup password

### Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

### About this task

To enter the system setup, press F2 immediately after a power-on or re-boot.

### Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.  
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.

Use the following guidelines to assign the system password:

- A password can have up to 32 characters.
- The password can contain the numbers 0 through 9.
- Only lower case letters are valid, upper case letters are not allowed.
- Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (,), ([), (\]), (]), (`).

3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Esc and a message prompts you to save the changes.
5. Press Y to save the changes.

The computer reboots.

## Deleting or changing an existing system setup password

### Prerequisites

Ensure that the **Password Status** is **Unlocked** (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is **Locked**.

### About this task

To enter the System Setup, press F2 immediately after a power-on or reboot.

### Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.  
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, alter or delete the existing system password and press Enter or Tab.
4. Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.

 **NOTE:** If you change the System and/or Setup password, re-enter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.

5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.

The computer reboot.

## Troubleshooting

# Enhanced Pre-Boot System Assessment (ePSA) diagnostics

### About this task

The ePSA diagnostics (also known as system diagnostics) performs a complete check of your hardware. The ePSA is embedded with the BIOS and is launched by the BIOS internally. The embedded system diagnostics provides a set of options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- View status messages that inform you if tests are completed successfully
- View error messages that inform you of problems encountered during testing

** NOTE: Some tests for specific devices require user interaction. Always ensure that you are present at the computer terminal when the diagnostic tests are performed.**

For more information, see [Dell EPSA Diagnostic 3.0](#).

## Running the ePSA diagnostics

### Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key as the Dell logo appears.
3. If no keyboard attached, Press and hold the volume up key to access the one time boot menu.
4. On the boot menu screen, select the **Diagnostics** option.
5. Click the arrow at the bottom left corner.  
Diagnostics front page is displayed.
6. Click the arrow in the lower-right corner to go to the page listing.  
The items detected are listed.
7. To run a diagnostic test on a specific device, press Esc and click **Yes** to stop the diagnostic test.
8. Select the device from the left pane and click **Run Tests**.
9. If there are any issues, error codes are displayed.  
Note the error code and validation number and contact Dell.

## System diagnostic lights

### Battery-status light

Indicates the power and battery-charge status.

**Solid green** — Power adapter is connected and the battery has more than 5 percent charge.

**Amber** — Computer is running on battery and the battery has less than 5 percent charge.

### Off

- Power adapter is connected and the battery is fully charged.

- Computer is running on battery and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.

**Table 13. LED codes**

Diagnostic light codes	Problem description
<b>2,1</b>	Processor failure
<b>2,2</b>	System board: BIOS or ROM (Read-Only Memory) failure
<b>2,3</b>	No memory or RAM (Random-Access Memory) detected
<b>2,4</b>	Memory or RAM (Random-Access Memory) failure
<b>2,5</b>	Invalid memory installed
<b>2,6</b>	System-board or chipset error
<b>2,7</b>	Display failure
<b>2,8</b>	LCD power rail failure. Replace system board
<b>3,1</b>	Coin-cell battery failure
<b>3,2</b>	PCI, video card/chip failure
<b>3,3</b>	Recovery image not found
<b>3,4</b>	Recovery image found but invalid
<b>3,5</b>	Power-rail failure
<b>3,6</b>	System BIOS Flash incomplete
<b>3,7</b>	Management Engine (ME) error

**Camera status light:** Indicates whether the camera is in use.

- Solid white — Camera is in use.
- Off — Camera is not in use.

**Caps Lock status light:** Indicates whether Caps Lock is enabled or disabled.

- Solid white — Caps Lock enabled.
- Off — Caps Lock disabled.

## Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled in all Dell computers installed with Windows 10 operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [www.dell.com/support](http://www.dell.com/support).

# WiFi power cycle

## About this task

If your computer is unable to access the internet due to WiFi connectivity issues a WiFi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a WiFi power cycle:

 **NOTE: Some ISPs (Internet Service Providers) provide a modem/router combo device.**

## Steps

1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on your computer.

# Getting help

## Topics:

- Contacting Dell

## Contacting Dell

### Prerequisites

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

### About this task

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

### Steps

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.