

Dell G15 5510

Service Manual



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.


Chapter 1: Working inside your computer	6
Before working inside your computer	6
Before you begin	6
Safety instructions	6
Electrostatic discharge—ESD protection	7
ESD field service kit	7
Transporting sensitive components	8
After working inside your computer	8
Chapter 2: Removing and installing components	9
Recommended tools	9
Screw list	9
Base cover	10
Removing the base cover	10
Installing the base cover	13
Solid-state drives	15
Removing the 2230 solid-state drive in SSD slot one	15
Installing the 2230 solid-state drive in SSD slot one	16
Removing the 2280 solid-state drive in SSD slot two	17
Installing the 2280 solid-state drive in SSD slot two	17
Procedure to move the screw mount	18
Wireless card	19
Removing the wireless card	19
Installing the wireless card	20
Memory module	22
Removing the memory module	22
Installing the memory module	22
Battery	23
Removing the battery	23
Installing the battery	24
Touchpad	26
Removing the touchpad	26
Installing the touchpad	26
I/O board	27
Removing the I/O board	27
Installing the I/O board	28
Speakers	29
Removing the speakers	29
Installing the speakers	30
Rear cover	31
Removing the rear cover	31
Installing the rear cover	32
Display assembly	33
Installing the display assembly	33

Removing the display assembly.....	35
Power-adapter port.....	37
Removing the power-adapter port.....	37
Installing the power-adapter port.....	38
Fans	39
Removing the right fan.....	39
Installing the right fan.....	40
Removing the left fan.....	41
Installing the left fan.....	42
System board.....	43
Removing the system board.....	43
Installing the system board.....	46
Heat sink.....	49
Removing the heat sink.....	49
Installing the heat sink.....	50
USB board.....	52
Removing the USB board.....	52
Installing the USB board.....	53
I/O board.....	54
Removing the I/O board.....	54
Installing the I/O board.....	55
Power button.....	56
Removing the power button.....	56
Installing the power button.....	57
Palm-rest and keyboard assembly.....	58
Removing the palm-rest and keyboard assembly.....	58
Installing the palm-rest and keyboard assembly.....	59
Chapter 3: Drivers and downloads.....	60
Chapter 4: System setup.....	61
Entering BIOS setup program.....	61
Navigation keys.....	61
One time boot menu.....	62
System setup options.....	62
Updating the BIOS in Windows	70
Updating BIOS on systems with BitLocker enabled.....	70
Updating your system BIOS using a USB flash drive.....	70
Updating the Dell BIOS in Linux and Ubuntu environments.....	71
Flashing the BIOS from the F12 One-Time boot menu.....	71
System and setup password.....	72
Assigning a system setup password.....	72
Deleting or changing an existing system setup password.....	73
Clearing CMOS settings.....	73
Clearing BIOS (System Setup) and System passwords.....	73
Chapter 5: Troubleshooting.....	74
SupportAssist diagnostics.....	74
System diagnostic lights.....	74

Recovering the operating system.....	75
Flashing the BIOS.....	75
Flashing BIOS (USB key).....	76
Backup media and recovery options.....	76
Drain residual flea power (perform hard reset).....	76
WiFi power cycle.....	77
Chapter 6: Getting help and contacting Dell.....	78



Working inside your computer

Before working inside your computer

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.


Before you begin


Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. Click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Disconnect your computer and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
5. Remove any media card and optical disc from your computer, if applicable.

Safety instructions


Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your computer.


 **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


 **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.

 **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.

 **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.


 **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at www.dell.com/regulatory_compliance.

 **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.

 **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable.

When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the ports and the connectors are correctly oriented and aligned.

 **CAUTION:** Press and eject any installed card from the media-card reader.

 **NOTE:** The color of your computer and certain components may appear differently than shown in this document.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory DIMMs, and system boards. Very slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, etc.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. The use of wireless anti-static straps is no longer allowed; they do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD field service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the system being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the system, or inside a bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear

and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.

- **ESD Wrist Strap Tester** – The wires inside of an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. If you do not have your own wrist strap tester, check with your regional office to find out if they have one. To perform the test, plug the wrist-strap's bonding-wire into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.
- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or portable environment. Servers are typically installed in a rack within a data center; desktops or portables are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of system that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components
- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the system, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

ESD protection summary


It is recommended that all field service technicians use the traditional wired ESD grounding wrist strap and protective anti-static mat at all times when servicing Dell products. In addition, it is critical that technicians keep sensitive parts separate from all insulator parts while performing service and that they use anti-static bags for transporting sensitive components.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

After working inside your computer

About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.

Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other parts that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

Removing and installing components

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Flat-head screwdriver
- Plastic scribe

Screw list

NOTE: When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.

NOTE: Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.

NOTE: Screw color may vary with the configuration ordered.

Table 1. Screw list

















Component	Secured to	Screw type	Quantity	Screw image
Base cover	Palm-rest and keyboard assembly	M2x6	4	 <p>NOTE: Screw color may vary depending on the configuration ordered.</p>
4-cell Battery	Palm-rest and keyboard assembly	M2x4	4	
Touchpad bracket	Palm-rest and keyboard assembly	M2x2	7	
Rear cover	Palm-rest and keyboard assembly	M2x2	2	
Rear cover	Palm-rest and keyboard assembly	M2.5x5	2	
Display-hinge brackets	Palm-rest and keyboard assembly	M2.5x4	4	
SSD1	Solid-state drive bracket	M2x4	2	

Table 1. Screw list (continued)

Component	Secured to	Screw type	Quantity	Screw image
SSD2	Solid-state drive bracket	M2x4	2	
Wireless-card bracket	System board	M2x4	1	
Power-adaptor port	Palm-rest and keyboard assembly	M2x4	2	
Left fan	Palm-rest and keyboard assembly	M2x6	2	
Right fan	Palm-rest and keyboard assembly	M2x6	2	
Power button	Palm-rest and keyboard assembly	M2x2	2	
System board	Palm-rest and keyboard assembly	M2x4	4	
USB board	System board	M2x4	2	
I/O board	System board	M2x4	2	
Power-button shield	Palm-rest and keyboard assembly	M2x2	2	

Base cover

Removing the base cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

About this task

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.



4x
M2x6





4x

1



2

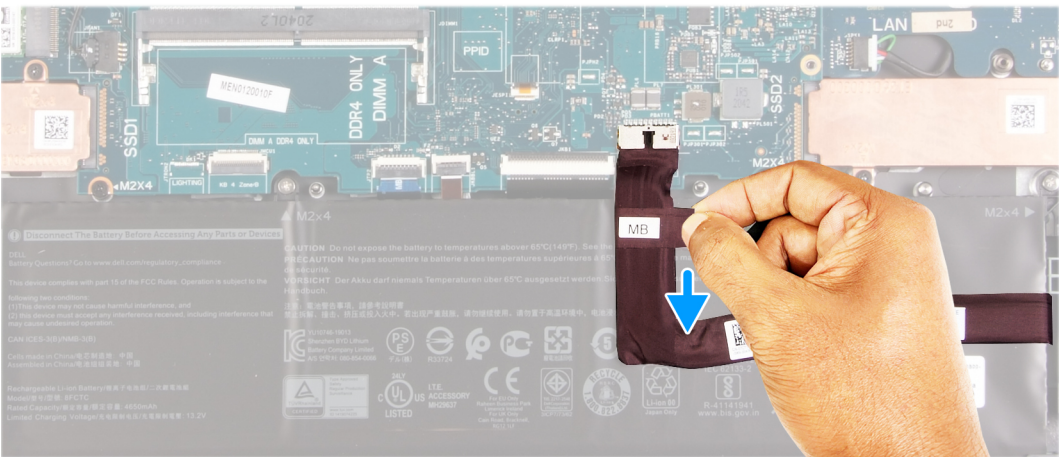



Steps

1. Loosen the four captive screws that secure the base cover to the palm-rest and keyboard assembly.
2. Remove the four screws (M2x6) that secure the base cover to the palm-rest and keyboard assembly.
 - NOTE:** Loosening the two captive screws located in the front of the computer creates a gap which can be used to pry and lift the base cover off the palm-rest and keyboard assembly.
3. Starting from the left corner, use a plastic scribe to pry the base cover and to release the base cover from the tabs. Lift the base cover off the palm-rest and keyboard assembly.
 - NOTE:** The following steps are applicable only if you want to further remove any other component from your computer.
4. Using the pull tab, disconnect the battery cable from the system board.
5. Turn your computer over and press the power button for 15 seconds to drain the flea power.


Installing the base cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.

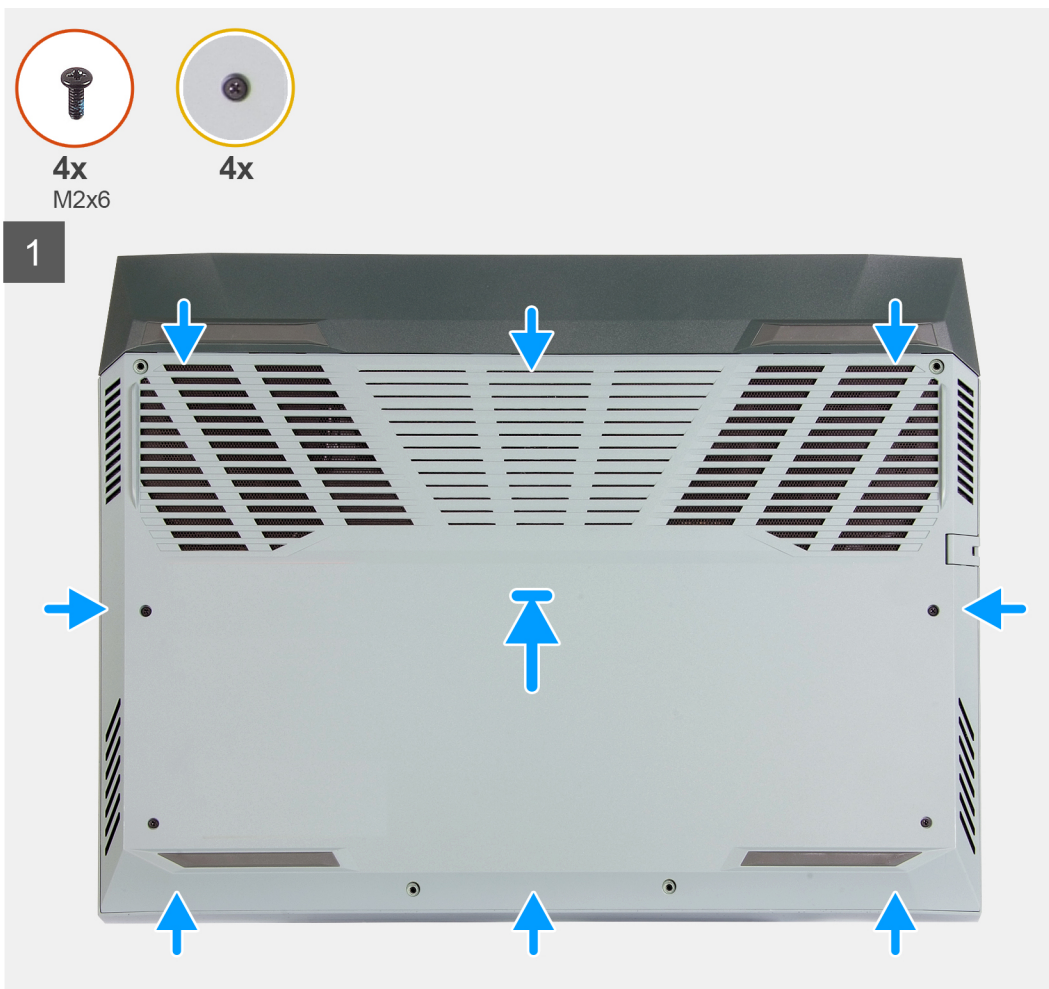

Steps

1. Connect the battery cable to the system board, if the battery cable had been previously disconnected.
2. Align the screw holes on the base cover with the screw holes on the palm-rest and keyboard assembly, and then snap the base cover into place.
3. Replace the four screws (M2x6) that secure the base cover to the palm-rest and keyboard assembly.
4. Tighten the four captive screws that secure the base cover to the palm-rest and keyboard assembly.

Next steps

1. Follow the procedure in [After working inside your computer](#).

Solid-state drives

Removing the 2230 solid-state drive in SSD slot one

Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

NOTE: This procedure applies only to computers shipped with a 2230 solid-state drive installed in SSD slot one.

NOTE: Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot one.

The following image indicates the location of the 2230 solid-state drive that is installed in SSD slot one and provides a visual representation of the removal procedure.

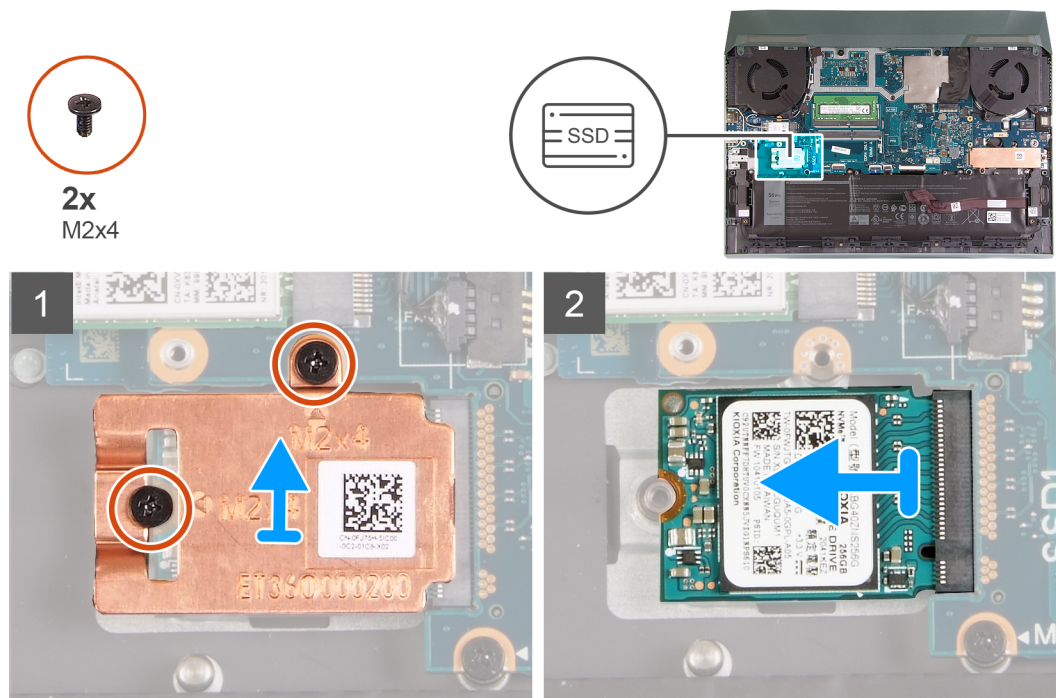

Steps

1. Remove the two screws (M2x4) that secure the thermal shield to the solid-state drive and the system board.
2. Lift the thermal shield off the palm-rest and keyboard assembly.

3. Slide and lift the solid-state drive off the slot on the system board.

Installing the 2230 solid-state drive in SSD slot one

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.


About this task

NOTE: This procedure applies only to computers shipped with a 2230 solid-state drive installed in SSD slot one.

NOTE: Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot one.

If you want to replace your 2230 card with a 2280 card, see [procedure to move the screw mount](#) and [installing 2280 solid-state drive](#).

The following image indicates the location of the 2230 solid-state drive that is installed in SSD slot one and provides a visual representation of the installation procedure.

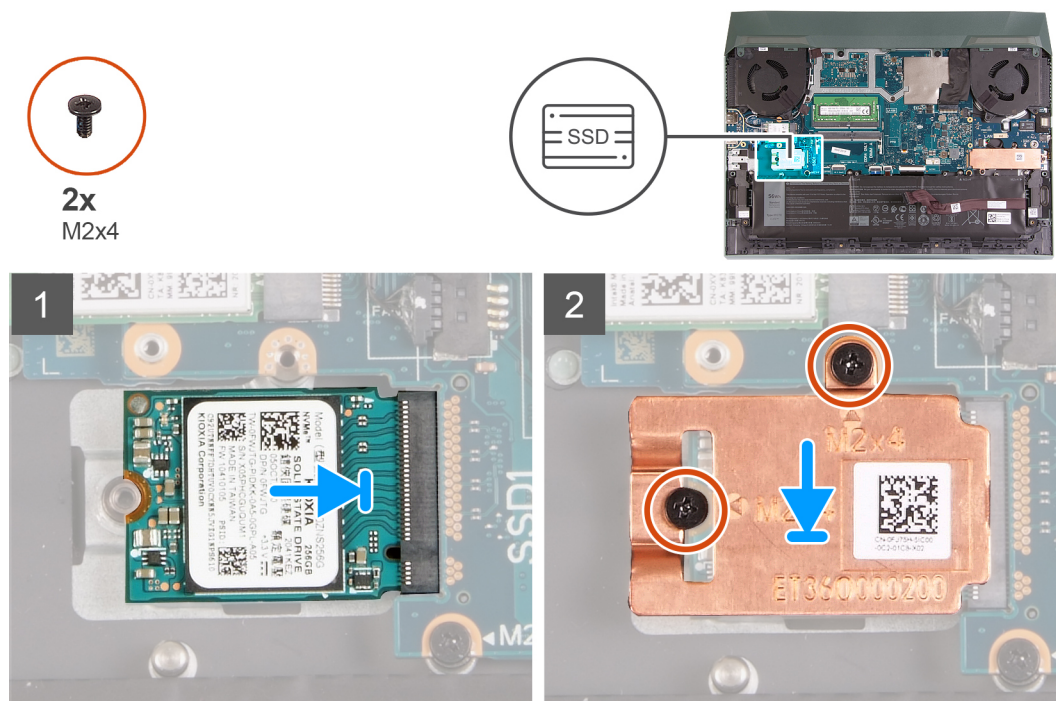

Steps

1. Align the notches on the solid-state drive with the tab on the solid-state drive slot.
2. Slide the solid-state drive into the solid-state drive slot.
3. Place the thermal shield on the solid-state drive.
4. Align the screw holes on the thermal shield with the screw holes on the solid-state drive and system board.
5. Replace the two screws (M2x4) that secure the thermal shield to the solid-state drive and the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Removing the 2280 solid-state drive in SSD slot two

Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

NOTE: This procedure applies only to computers shipped with a 2280 solid-state drive installed in SSD slot two.

NOTE: Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in M.2 slot two.

The following image indicates the location of the 2280 solid-state drive installed in M.2 slot two and provides a visual representation of the removal procedure.

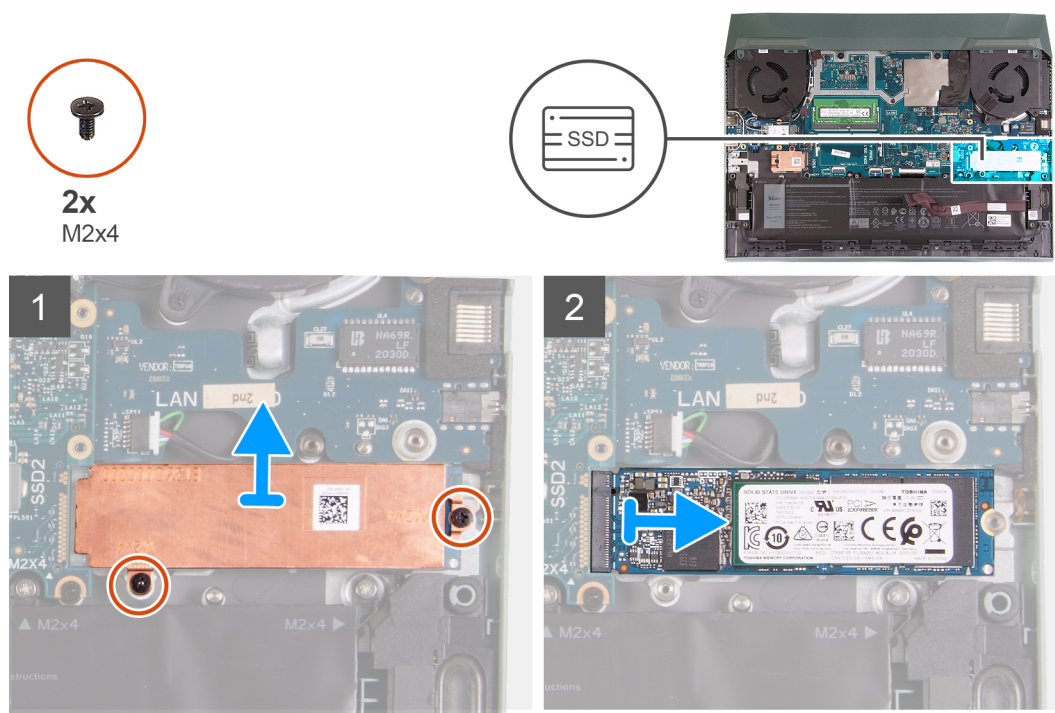

Steps

1. Remove the two screws (M2x4) that secure the thermal shield to the system board and the palm-rest and keyboard assembly.
2. Lift the thermal shield off the palm-rest and keyboard assembly.
3. Slide and lift the solid-state drive off the solid-state drive slot on the system board.

Installing the 2280 solid-state drive in SSD slot two

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.


About this task

NOTE: This procedure applies only to computers shipped with a 2280 solid-state drive installed in SSD slot two.

NOTE: Depending on the configuration ordered, your computer may support either 2230 solid-state drive or 2280 solid-state drive in SSD slot two.

If you want to replace your 2280 card with a 2230 card, see [procedure to change the screw mount](#) and [installing 2230 solid-state drive](#).

The following image indicates the location of the 2280 solid-state drive installed in SSD slot two and provides a visual representation of the installation procedure.

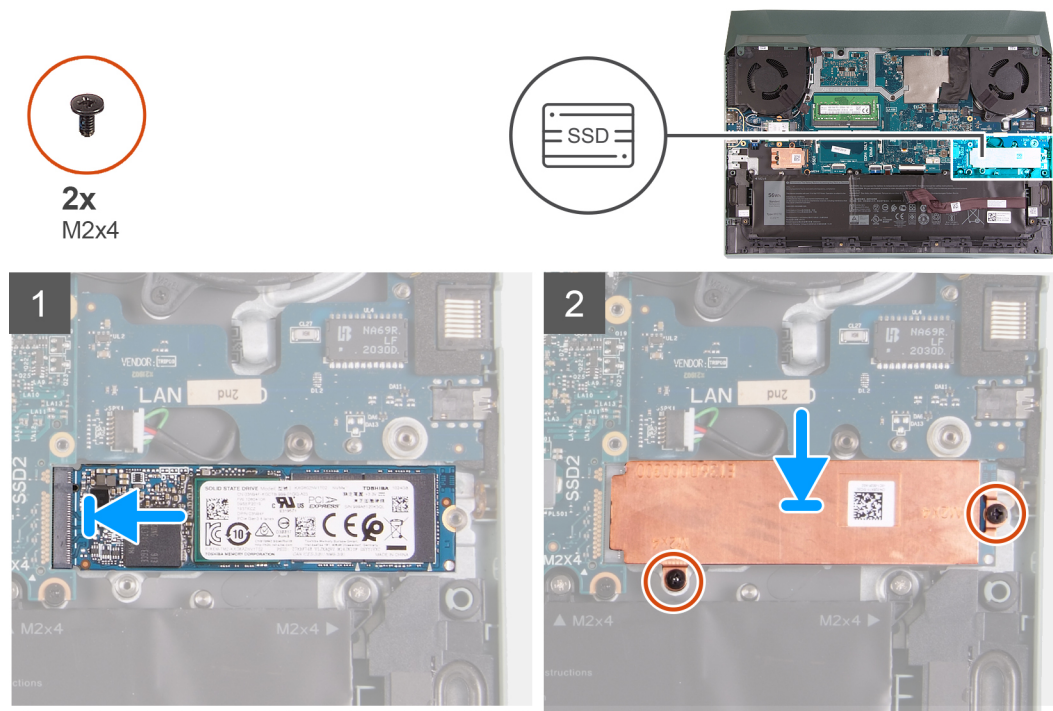

Steps

1. Align the notches on the solid-state drive with the tab on the solid-state drive slot.
2. Slide the solid-state drive into the solid-state drive slot.
3. Place the solid-state drive bracket on the solid-state drive
4. Align the screw holes on the thermal shield with the screw holes on the solid-state drive and system board.
5. Replace the two screws (M2x34) that secure the solid-state drive to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Procedure to move the screw mount

About this task

This computer supports two solid-state drive form factors:


- M.2 2230
- M.2 2280

If you are replacing the solid-state drive of a different form factor other than the one removed, see the following procedure to move the location of the screw mount.


Steps

1. Remove the screw mount from the palm-rest and keyboard assembly.
2. Turn the screw mount to 180 degrees.
3. Insert the screw mount into the other screw mount slot on the palm-rest and keyboard assembly.

M.2 2230 → M.2 2280

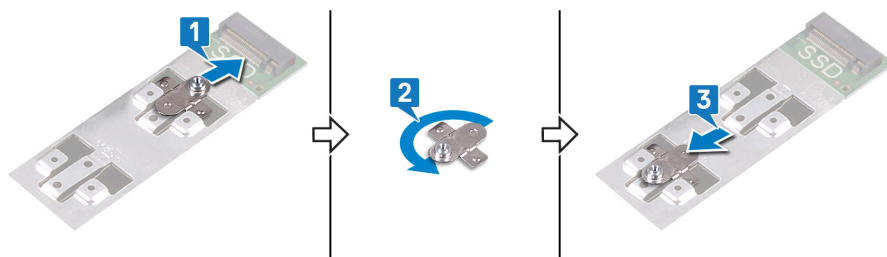

M.2 2280 → M.2 2230

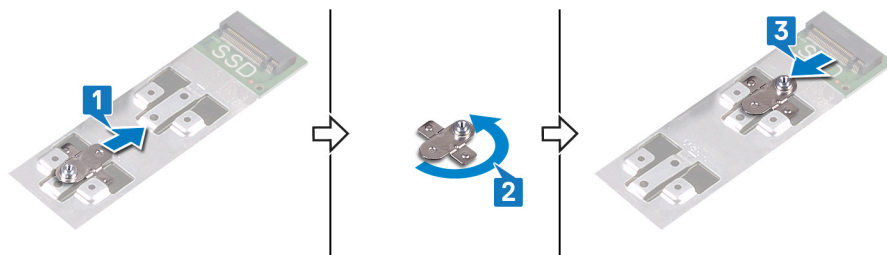

4. To install 2230 solid-state drive, see [installing 2230 solid-state drive](#).
5. To install 2280 solid-state drive, see [installing 2280 solid-state drive](#).

Wireless card

Removing the wireless card

Prerequisites


1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the wireless card and provides a visual representation of the removal procedure.



1x
M2x4

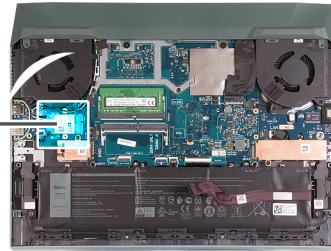

Steps

1. Remove the screw (M2x4) that secures the wireless card to the system board.
2. Lift the bracket that secures the wireless card to the system board.
3. Disconnect the antenna cables from the wireless card.
4. Slide and remove the wireless card from the wireless-card slot.

Installing the wireless card

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the wireless card and provides a visual representation of the installation procedure.



1x
M2x4

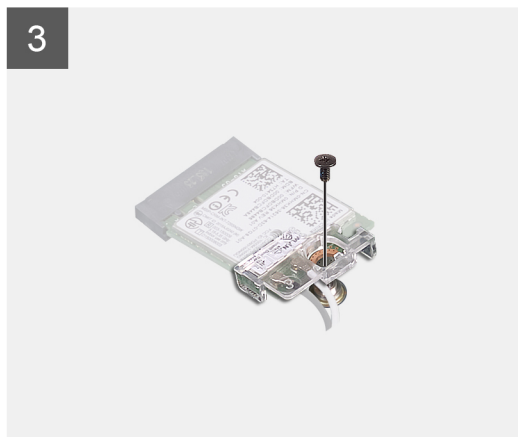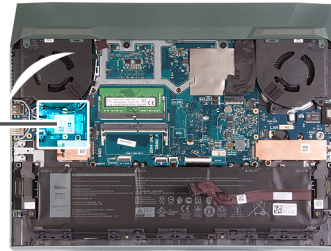

Steps

1. Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Table 2. Antenna-cable color scheme

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	White
Auxiliary (black triangle)	Black

2. Align the notch on the wireless card with the tab on the wireless-card slot and insert the wireless card at an angle into the wireless-card slot.
3. Align and place the wireless-card bracket on the wireless card.
4. Replace the screw (M2x4) to secure the wireless card to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Memory module


Removing the memory module

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).


About this task

The following image indicates the location of the memory modules and provides a visual representation of the removal procedure.

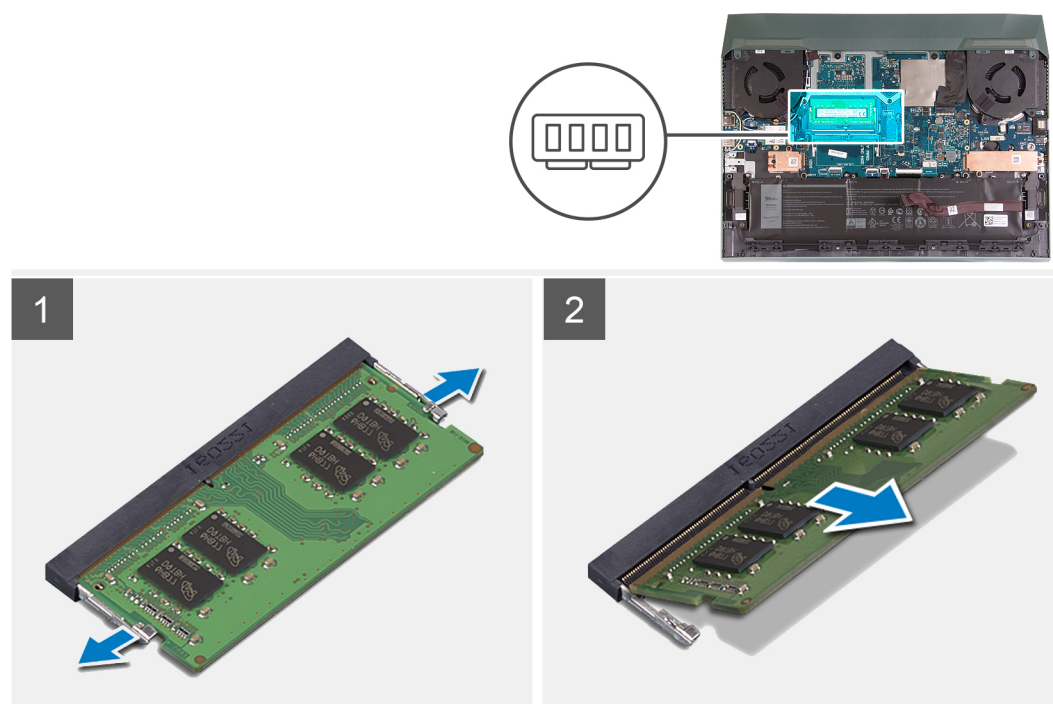

Steps

1. Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops-up.
2. Remove the memory module from the memory-module slot.

 **NOTE:** Repeat step 1 and step 2 to remove the other memory module, if installed on your computer.




Installing the memory module

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the memory module and provides a visual representation of the installation procedure.

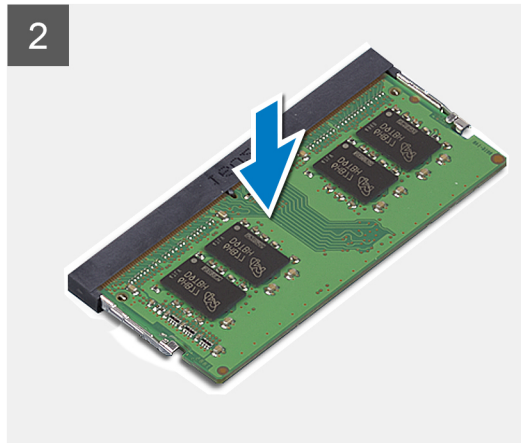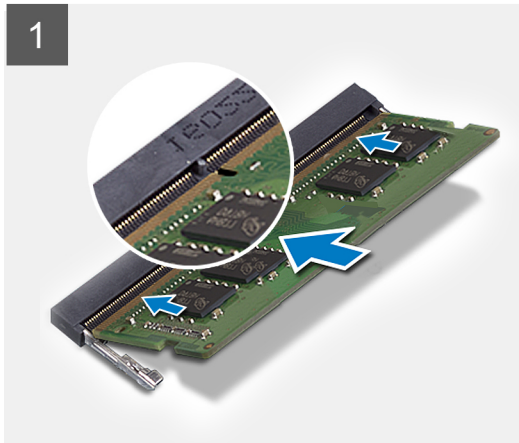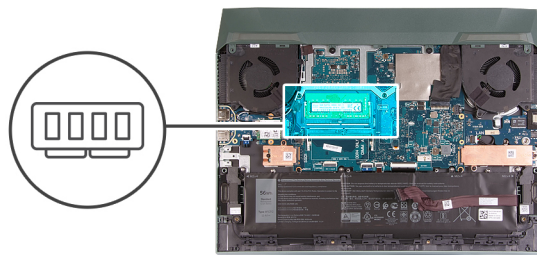

Steps

1. Align the notch on the memory module with the tab on the memory-module slot.
2. Slide the memory module firmly into the slot at an angle.
3. Press the memory module down until it clicks into place.

NOTE: If you do not hear the click, remove the memory module and reinstall it.

NOTE: Repeat step 1 to step 3 to install the other memory module, if available on your computer.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Battery


Removing the battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task

The following image indicates the location of the battery and provides a visual representation of the removal procedure.

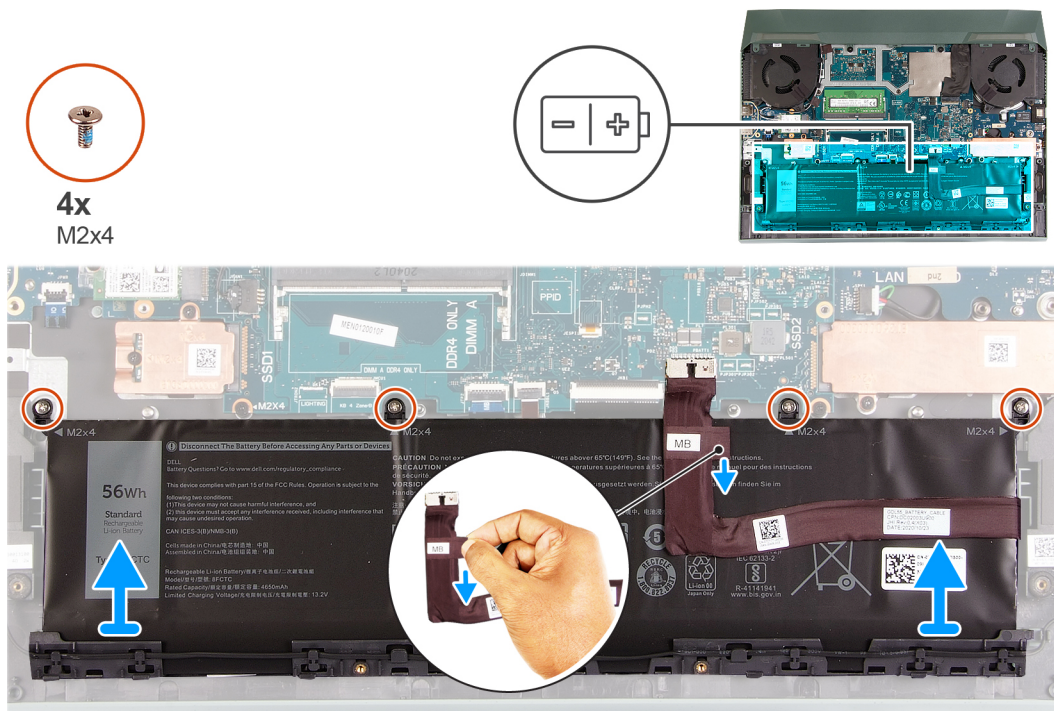

Steps

1. Disconnect the battery cable from the system board, if it is not previously disconnected.
NOTE: After removing the battery, store the battery cable safely. The replacement battery will not be shipped with the battery cable. If you want to replace the battery cable, it has to be purchase separately.
2. Remove the four screws (M2x4) that secure the battery to the palm-rest and keyboard assembly.
3. Lift the battery off the palm-rest and keyboard assembly.

Installing the battery

Prerequisites





If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the battery and provides a visual representation of the installation procedure.



4x
M2x4

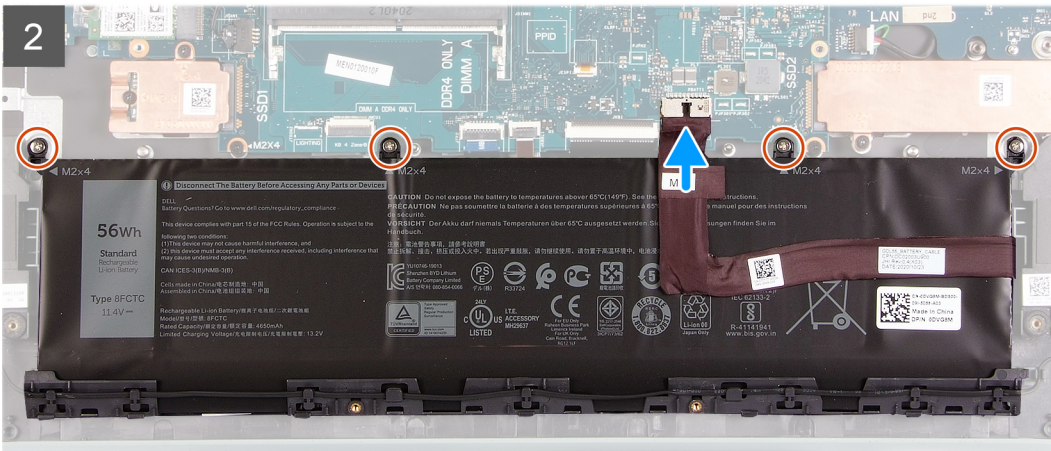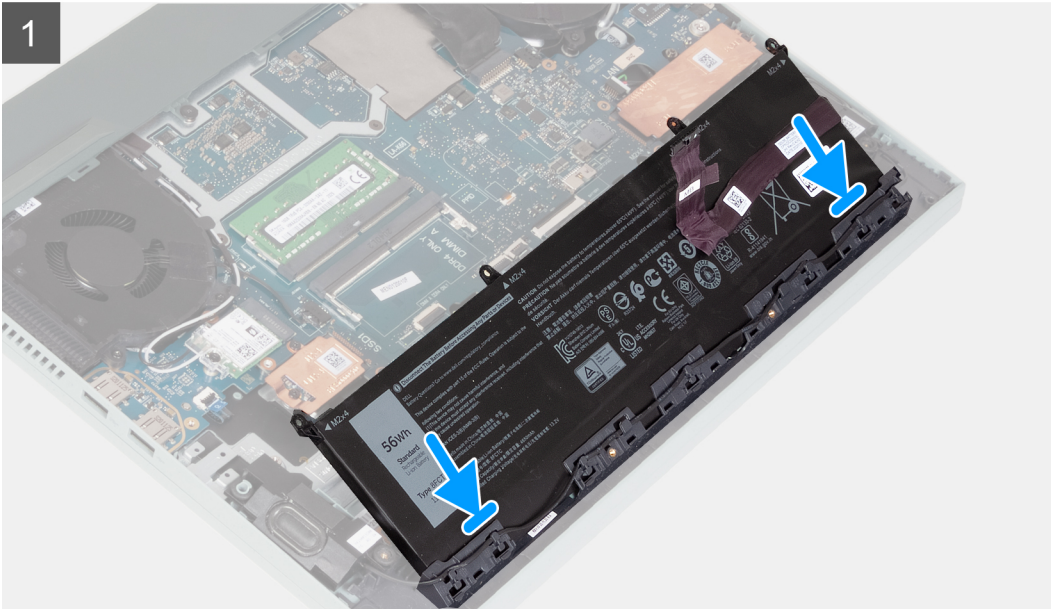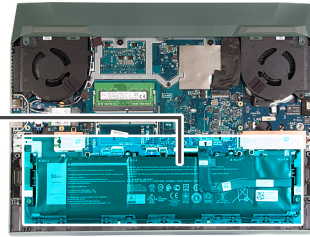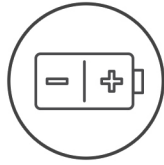

Steps

1. At an angle, slide the battery into the slot on the palm-rest and keyboard assembly.
2. Align the screw holes on the battery with the screw holes on the palm-rest and keyboard assembly.
3. Replace the four screws (M2x4) that secure the battery to the palm-rest and keyboard assembly.

NOTE: If you are replacing your old battery with the new battery, use the battery cable that came with the old battery.
If you want to replace the battery cable, it has to be purchase separately.

4. Connect the battery cable to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Touchpad


Removing the touchpad

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).

About this task

The following image indicates the location of the touchpad and provides a visual representation of the removal procedure.

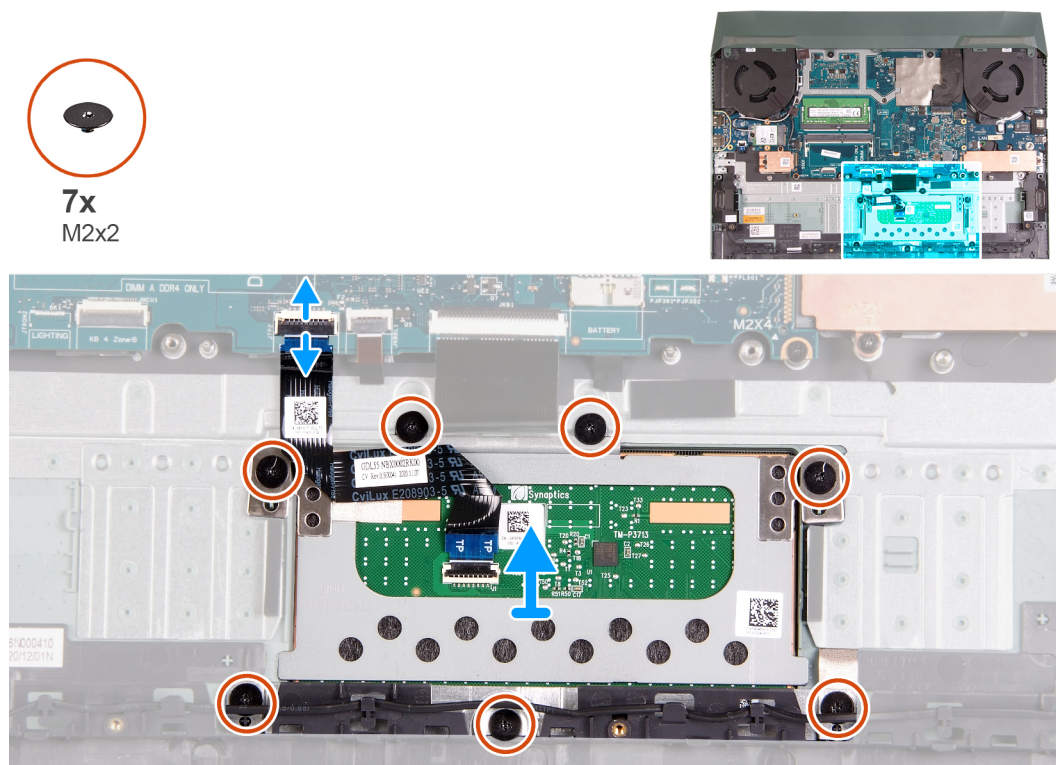

Steps

1. Remove the seven (M2x2) screws that secure the touchpad bracket and touchpad to the palm-rest and keyboard assembly.
2. Open the latch and disconnect the touchpad cable from the system board.
3. Lift the touchpad off the palm-rest and keyboard assembly.

Installing the touchpad

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the touchpad and provides a visual representation of the installation procedure.



7x
M2x2

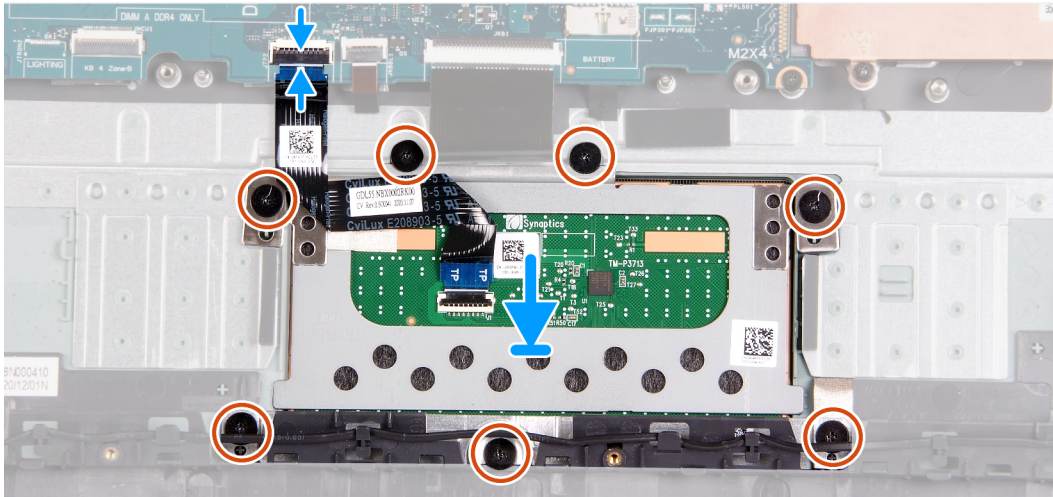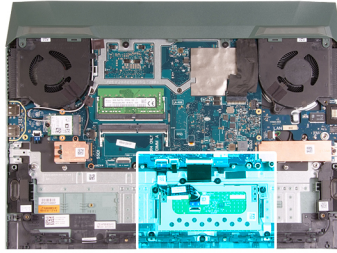

Steps

1. Align and place the touchpad into the slot on the palm-rest and keyboard assembly.
2. Replace the seven (M2x2) screws that secure the touchpad and touchpad bracket to the palm-rest and keyboard assembly.
3. Connect the touchpad cable to the system board and close the securing latch.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

I/O board

Removing the I/O board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [rear cover](#).
5. Remove the [solid-state drive 1](#).
6. Remove the [solid-state drive 2](#).
7. Remove the [wireless card](#).
8. Remove the [memory module](#).
9. Remove the [right fan](#).
10. Remove the [left fan](#).
11. Remove the [system board](#).



NOTE: System board can be removed with the heat sink, I/O board, and USB board attached.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the removal procedure.



2x
M2x4

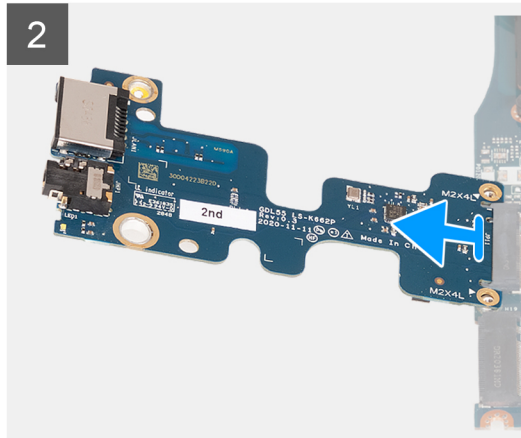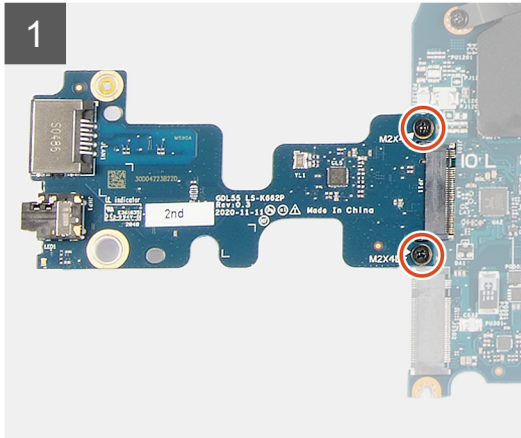

Steps

1. Turn the system board over.
2. Remove the two screws (M2x4) that secure the I/O board to the system board.
3. Remove the I/O board from the system board.

Installing the I/O board

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the installation procedure.



2x
M2x4

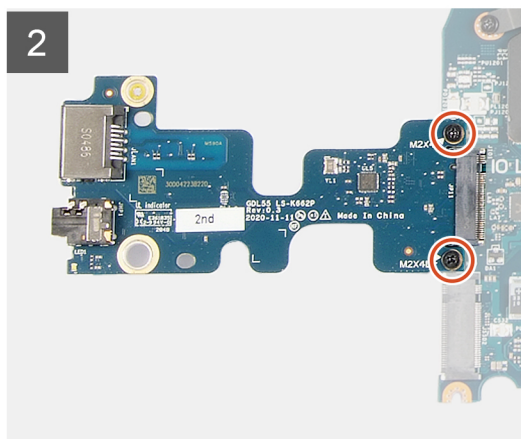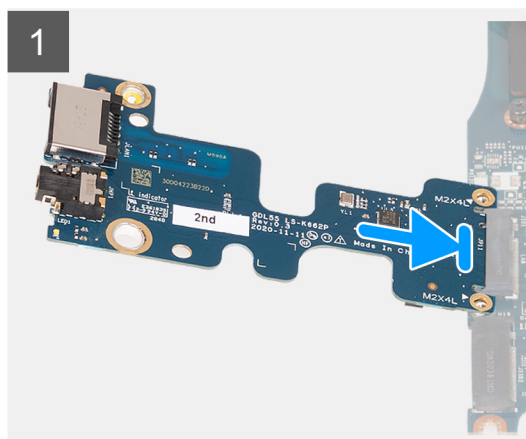

Steps

1. Insert the I/O board at a 45 degree angle into the slot on the system board.
2. Align the screw holes on the I/O board with the screw holes on the system board.
3. Install the two screws (M2x4) that secure the I/O board to the system board.
4. Turn the system board to the front and align the screw holes on the system board with the screw holes on the palm-rest and keyboard assembly.

Next steps

1. Install the [system board](#).
2. Install the [left fan](#).
3. Install the [right fan](#).
4. Install the [memory module](#).
5. Install the [wireless card](#).
6. Install the [solid-state drive 2](#).
7. Install the [solid-state drive 1](#).
8. Install the [rear cover](#).
9. Install the [battery](#).
10. Install the [base cover](#).
11. Follow the procedure in [After working inside your computer](#).

Speakers


Removing the speakers

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [solid-state drive 2](#).

About this task

The following image indicates the location of the speakers and provides a visual representation of the removal procedure.

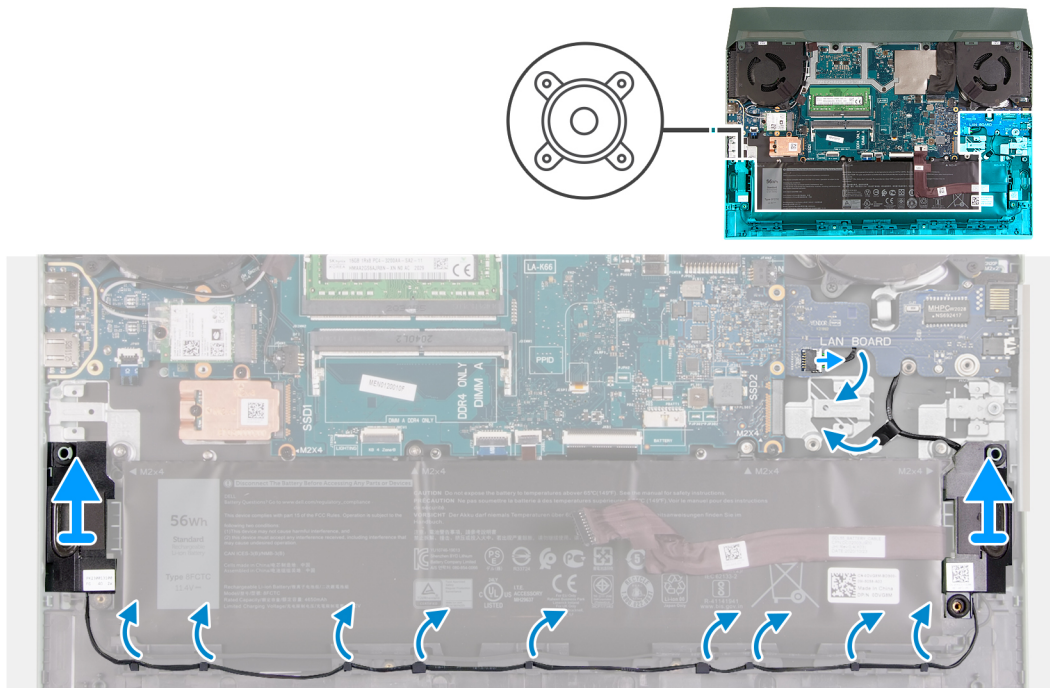

Steps

1. Note the routing of the cable that connects the left speaker to the right speaker and remove it from the routing guides on the palm-rest and keyboard assembly.
NOTE: Note the position of the rubber grommets before lifting the speakers.
2. Peel the tape that adheres the speaker cable to the palm-rest and keyboard assembly.
NOTE: Note the routing of the speaker of cable and remove it from under the USB board before disconnecting the cable from the system board.
3. Disconnect the speaker cable from the system board and release the cable from below the USB board .
4. Lift the speakers, along with the cable, off the palm-rest and keyboard assembly.



Installing the speakers

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the speakers and provides a visual representation of the installation procedure.

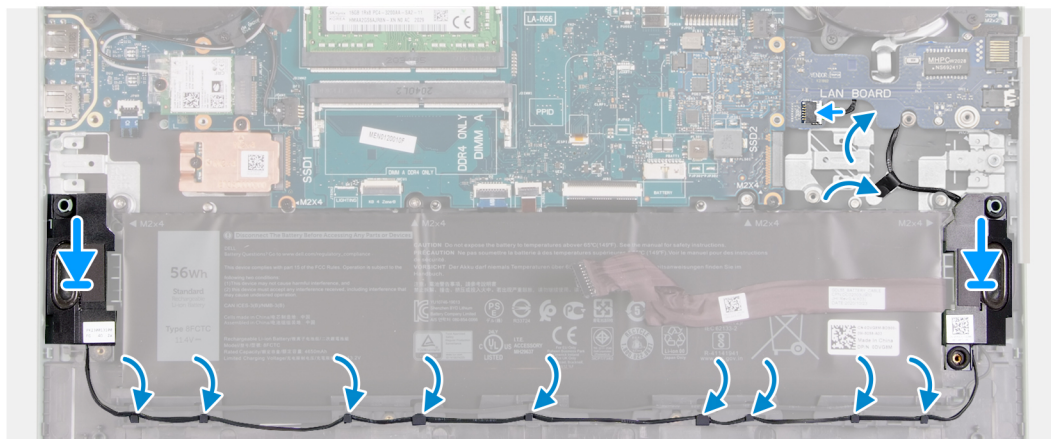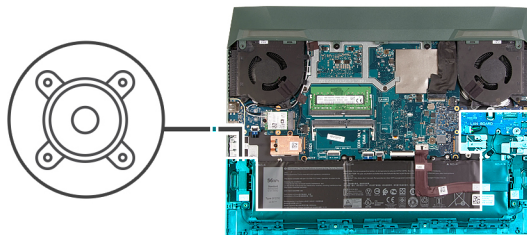

Steps

1. Using the alignment posts and rubber grommets, place the speakers in the slots on the palm-rest and keyboard assembly
NOTE: If the rubber grommets are pushed out of the speakers when removing the speakers, push them back in place before replacing the speakers.
2. Connect the speaker cable to the system board and route the cable below the USB board .
3. Adhere the speaker cable to the palm-rest and keyboard assembly.
4. Route the speaker cable through the routing guides on the palm-rest and keyboard assembly.

Next steps

1. Install the [solid-state drive 2](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Rear cover

Removing the rear cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).

About this task


The following image indicates the location of the rear cover and provides a visual representation of the removal procedure.



2x
M2x2




2x
M2.5x5

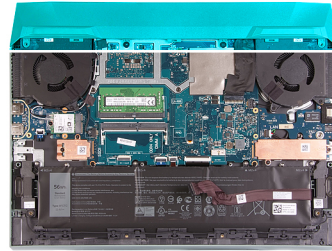

1



2

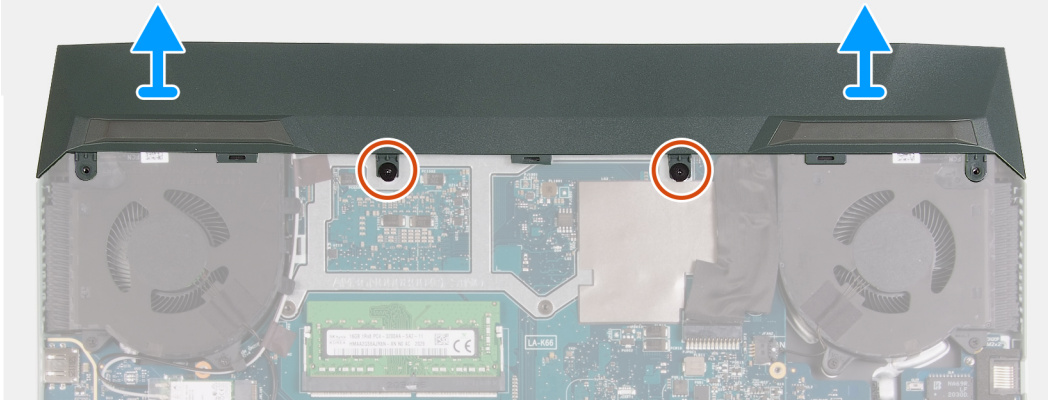

Steps

1. Remove the two screws (M2x2) that secure the rear cover to the palm-rest and keyboard assembly.
2. Remove the two screws (M2.5x5) that secure the rear cover to the system board.
3. Push the rear cover away from the system board and lift it off the palm-rest and keyboard assembly.

Installing the rear cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task



The following image indicates the location of the rear cover and provides a visual representation of the installation procedure.



2x
M2x2



2x
M2.5x5

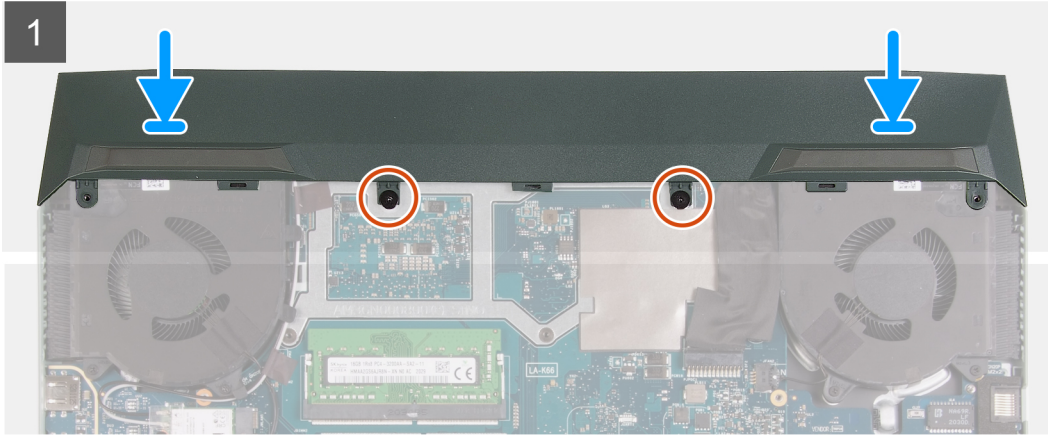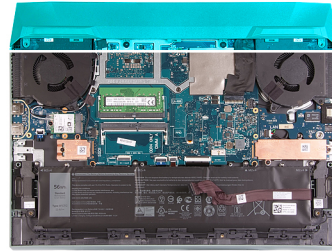

Steps

1. Slide the rear cover towards the system board till it snaps into place.
2. Align the screw holes on the rear cover with the screw holes on the palm-rest and keyboard assembly.
3. Replace the two screws (M2.5x5) that secure the rear cover to the palm-rest and keyboard assembly.
4. Replace the two screws (M2x2) that secure the rear cover to the system board.

Next steps

1. Install the [base cover](#).
2. Follow the procedure in [After working inside your computer](#).

Display assembly

Installing the display assembly

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the display assembly and provides a visual representation of the installation procedure.



8x
M2.5x4

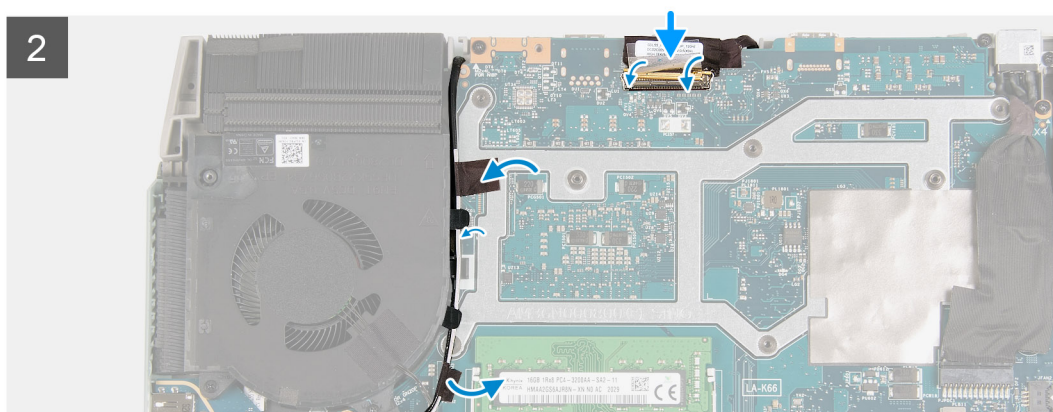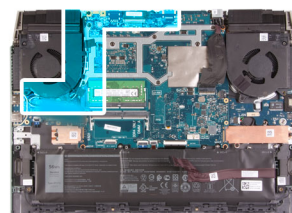

Steps

1. Align the screw holes on the display hinges with screw holes on the palm-rest and keyboard assembly and place the display assembly on the palm-rest and keyboard assembly.
2. Route the wireless-card cable through the routing guides on the palm-rest and keyboard assembly and to the top side of the computer and along the left of the power adapter port.
3. Replace eight screws (M2.5x4) that secure the display-assembly hinges to the palm-rest and keyboard assembly.

4. Turn the display assembly over.
5. Connect the display cable to the connector on the system board and close the latch to secure the cable.
6. Adhere the tape that secures the display cable to the system board.
7. Route the wireless-card cable through the routing guides on the fan and adhere the tape that secures the wireless-card cable to the system board .

Next steps

1. Install the [wireless card](#).
2. Install the [rear cover](#)
3. Install the [base cover](#).
4. Follow the procedure in [After working inside your computer](#).



Removing the display assembly


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [rear cover](#).
4. Remove the [wireless card](#).

About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.

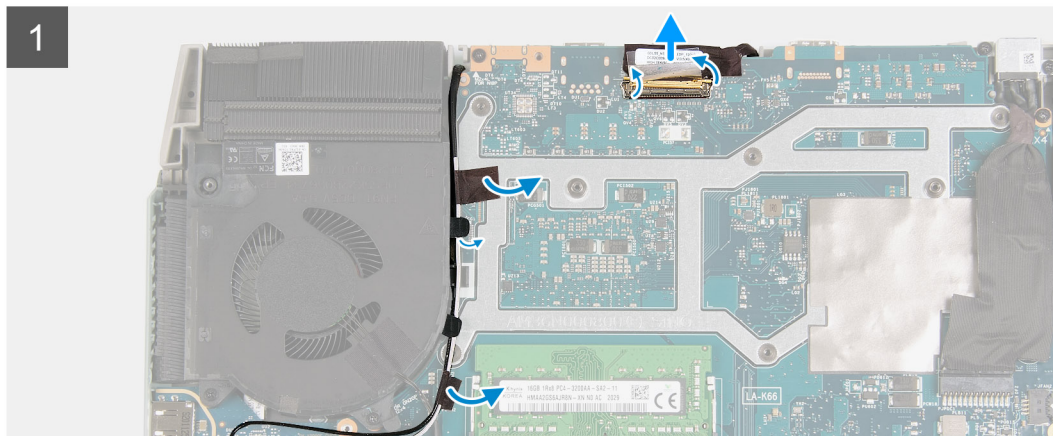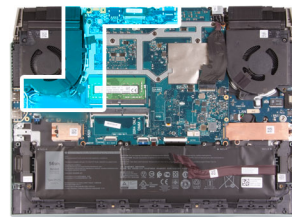

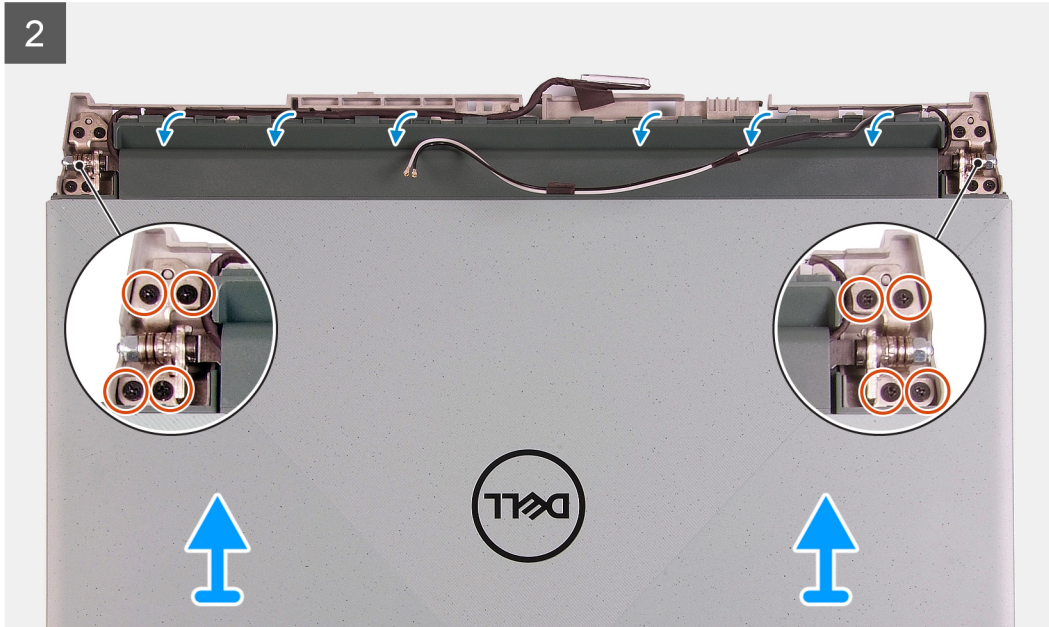

Steps

1. Peel the tapes that secures the wireless-card cable to the system board.
2. Note the routing of the wireless-card cable and remove the wireless-card cable from the left fan.
3. Peel the tape and open the latch, and disconnect the display cable from the system board.
4. Flip the computer over and place the computer on a clean and flat surface.
5. Remove the wireless-card cable from the routing guides on the palm-rest and keyboard assembly.
6. Remove the eight screws (M2.5x4) that secure the display-assembly hinges to the palm-rest and keyboard assembly.
7. Lift the hinges from the palm-rest and keyboard assembly.
8. Slide and lift the display assembly off the palmrest and keyboard assembly.
9. After performing all the above steps, you are left with the display assembly.



Power-adapter port

Removing the power-adapter port

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [rear cover](#).

About this task

The following image indicates the location of the power-adapter port and provides a visual representation of the removal procedure.



2x
M2x4

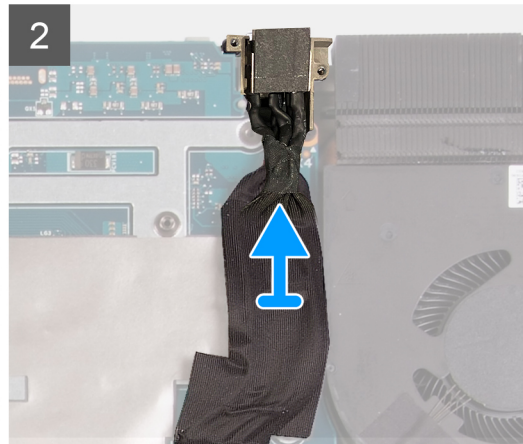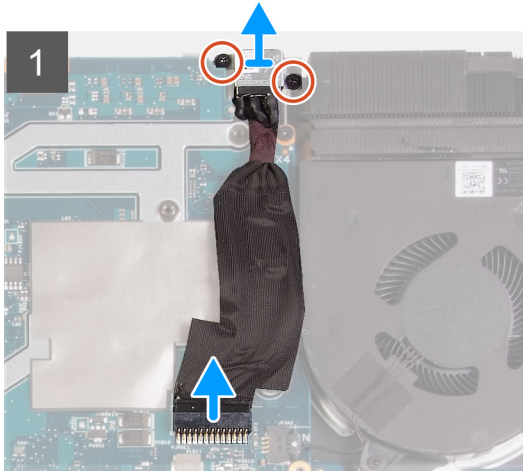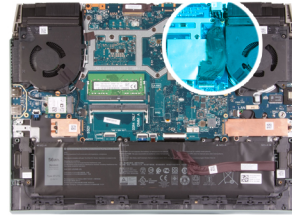

Steps

1. Remove the two screw (M2x4) on the power-adapter port-bracket that secures the power-adapter port to the system board.
2. Remove the power-adapter port-bracket from the system board.
3. Disconnect the power-adapter port-cable from the system board.
4. Lift the power-adapter port, along with its cable, off the palm-rest and keyboard assembly.

Installing the power-adapter port

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the power-adapter port and provides a visual representation of the installation procedure.



2x
M2x4

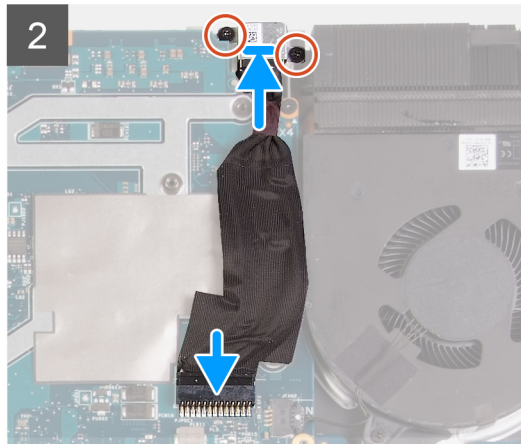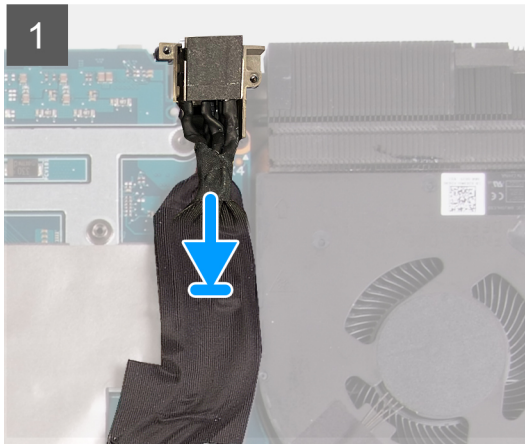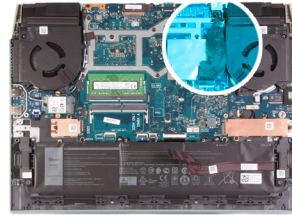

Steps

1. Place the power-adaptor port into the slot and adhere the power-adaptor port cable on the palm rest and keyboard assembly.
2. Connect the power-adaptor port cable to the system board.
3. Align and place the power-adaptor port bracket over the power-adaptor port.
4. Replace the two screws (M2x4) to secure the power-adaptor port bracket to the system board.

Next steps

1. Install the [rear cover](#)
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Fans

The following procedure of removing and installing fans are applicable only on computers that are shipped with NVIDIA GeForce GTX 1650.

Removing the right fan

Prerequisites




1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [rear cover](#).

About this task

The following image indicates the location of the right fan and provides a visual representation of the installation procedure. The orientation is based on the position of the fan when you are working on your computer.



2x
M2x6

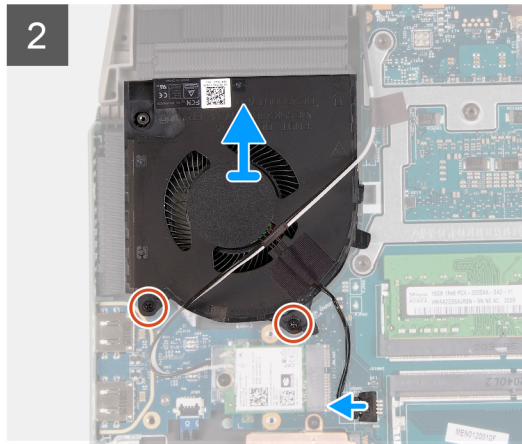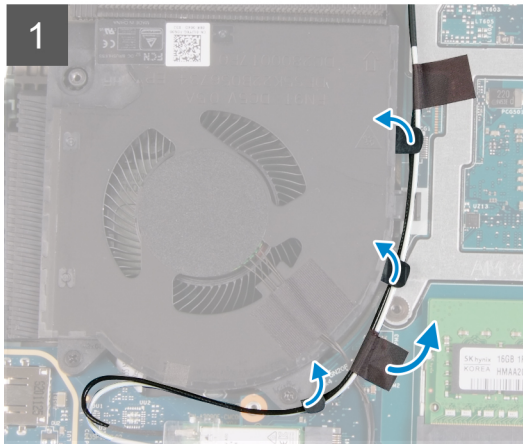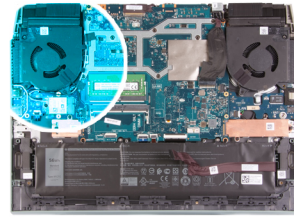

Steps

1. Peel the tapes that secure the wireless-card cable to the system board.
2. Note the routing of the wireless-card cable and remove the wireless-card cable from the right fan.
3. Disconnect the fan cable from the system board.
4. Remove the two (M2x6) screws that secure the right fan to the system board.
5. Lift the right fan off the palm-rest and keyboard assembly.

Installing the right fan

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the right fan and provides a visual representation of the installation procedure. The orientation is based on the position of the fan when you are working on your computer.



2x
M2x6

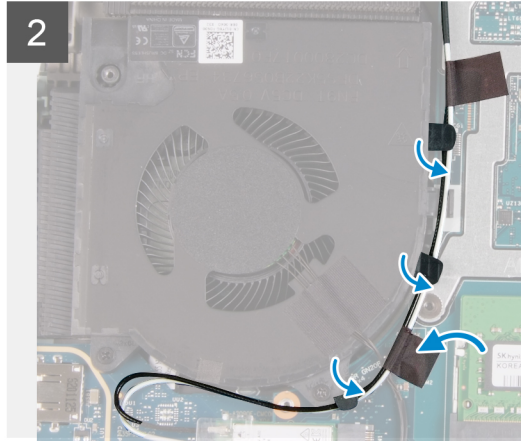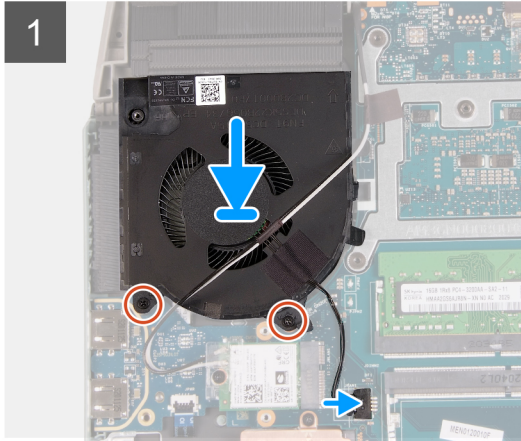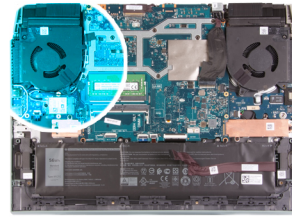

Steps

1. Align and place the right fan on the palm-rest and keyboard assembly.
2. Replace the two (M2x6) screws to secure the right fan to the palm-rest and keyboard assembly.
3. Connect the left-fan cable to the system board.
4. Route the wireless-card cable through the routing guides on the fan.
5. Adhere the tapes that secures the wireless-card cable to the system board.

Next steps

1. Install the [rear cover](#)
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

Removing the left fan

Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [rear cover](#).

About this task

The following image indicates the location of the left fan and provides a visual representation of the removal procedure. The orientation is based on the position of the fan when you are working on your computer.



2x
M2x6

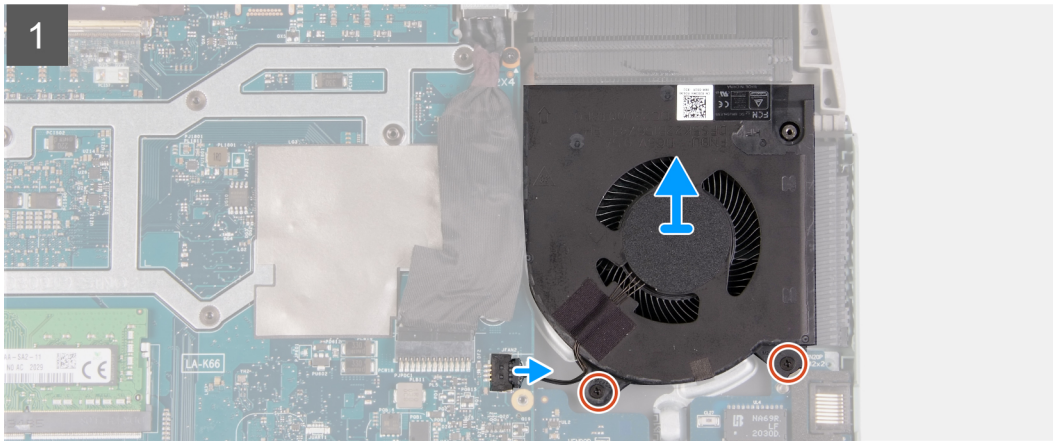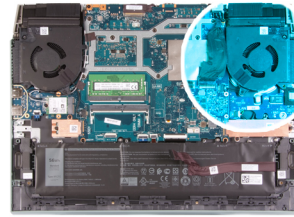

Steps

1. Disconnect the left-fan cable from the system board.
2. Remove the two (M2x6) screws that secure the left fan to the system board.
3. Lift the left fan off the palm-rest and keyboard assembly.

Installing the left fan

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the left fan and provides a visual representation of the installation procedure. The orientation is based on the position of the fan when you are working on your computer.



2x
M2x6

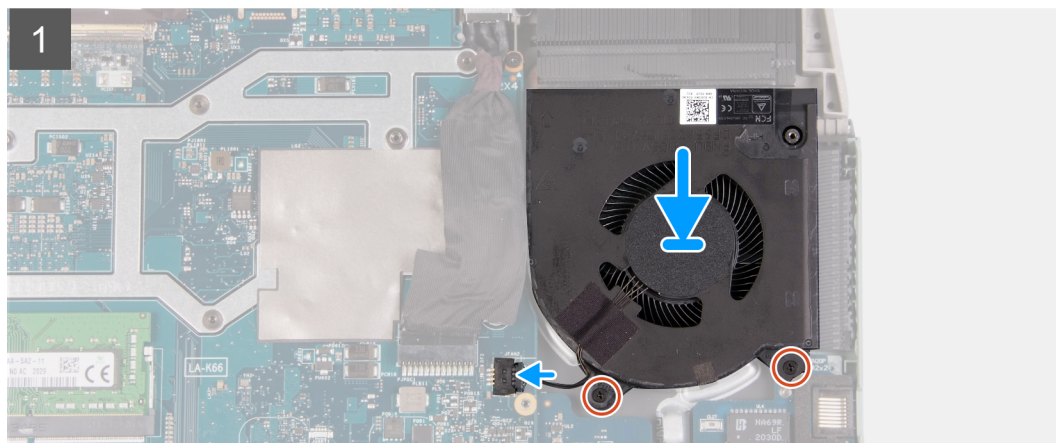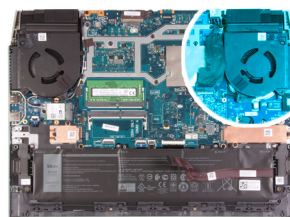

Steps

1. Align and place the left fan on the palm-rest and keyboard assembly.
2. Replace the two (M2x6) screws to secure the left fan to the palm-rest and keyboard assembly.
3. Connect the left-fan cable to the system board.

Next steps

1. Install the [rear cover](#).
2. Install the [base cover](#).
3. Follow the procedure in [After working inside your computer](#).

System board

Removing the system board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).


i NOTE: Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. Make the appropriate changes again after you replace the system board.

i NOTE: Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.

2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [rear cover](#).
5. Remove the [solid-state drive 1](#).
6. Remove the [solid-state drive 2](#).
7. Remove the [wireless card](#).
8. Remove the [memory module](#).
9. Remove the [right fan](#).
10. Remove the [left fan](#).

About this task

The following image indicates the connectors on your system board.


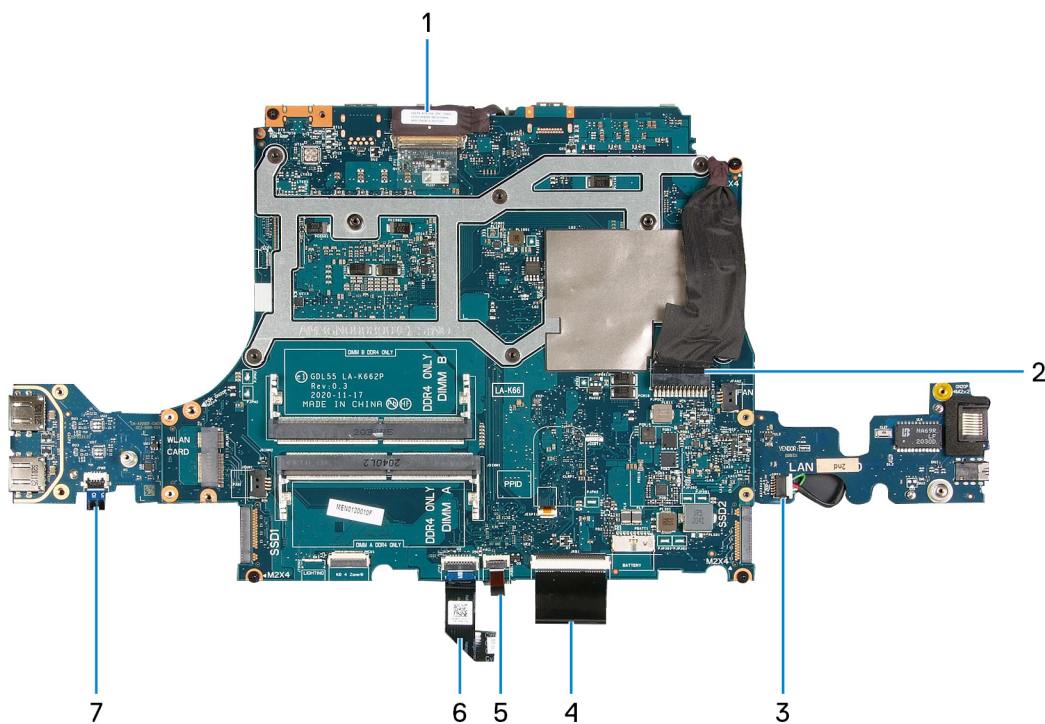


- | | |
|---------------------------|-----------------------------|
| 1. Display cable | 2. Power-adaptor port cable |
| 3. Speaker cable | 4. Keyboard cable |
| 5. Keyboard backlit cable | 6. Touchpad cable |
| 7. Power-button cable | |

The following image indicates the location of the system board and provides a visual representation of the removal procedure.




4x
M2x4

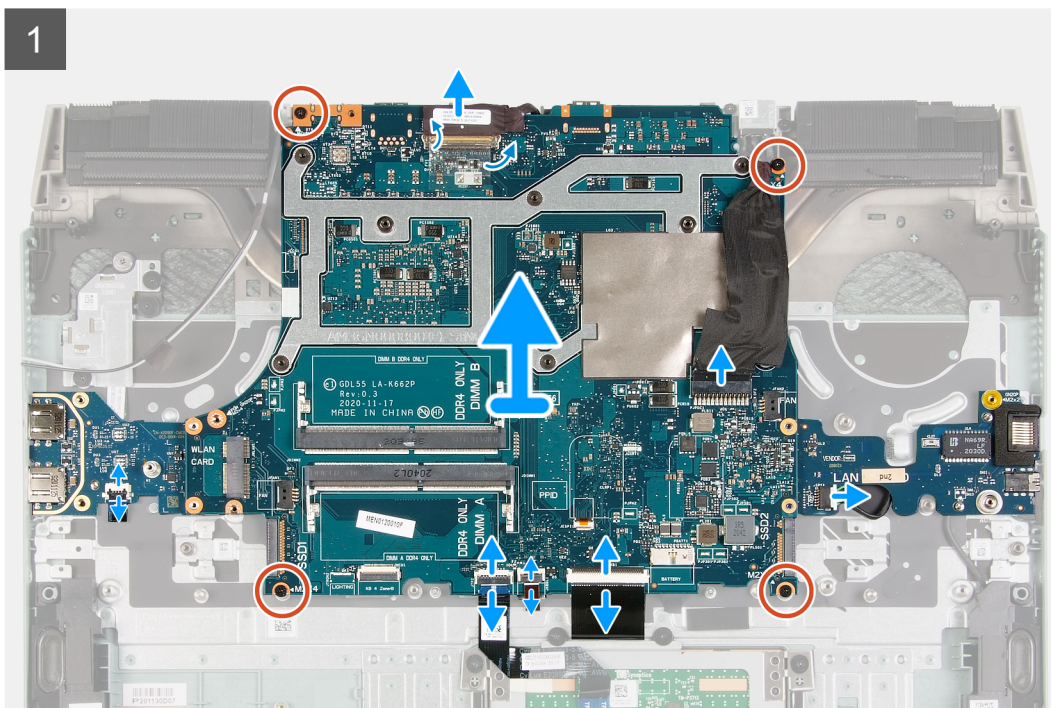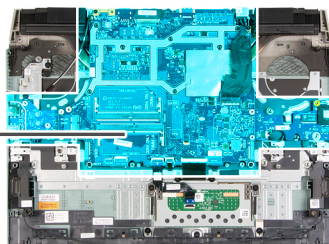


Steps

1. **NOTE:** Move in clock-wise direction to disconnect the cables from the system board.
Peel the tape that secures the display cable to the system board.
2. Open the latch and disconnect the display cable from the system board and place it on a flat and clean surface.
3. Open the latch and disconnect the power-adaptor port cable from the system board.
4. Disconnect the speaker cable from the system board.
5. Open the latch and disconnect the keyboard cable from the system board.
6. Open the latch and disconnect the keyboard-backlight cable from the system board.
7. Open the latch and disconnect the touchpad cable from the system board.
8. Open the latch and disconnect the power-button cable from the USB board.
9. Remove the four (M2x4) screws that secure the system board to the palm-rest and keyboard assembly.
 NOTE: I/O board, USB board, and heat sink are attached to the system board.
 NOTE: After removing the screws, lift the system board from the top left and right sides of the heat sink. Ensure the connectors are released from the ports and pins on the left and right sides of your computer.
 NOTE: Place the system board on a clean and flat surface.

10. After performing all the above steps, lift the system board off the palm-rest and keyboard assembly along with the I/O board, USB board, and heat sink.

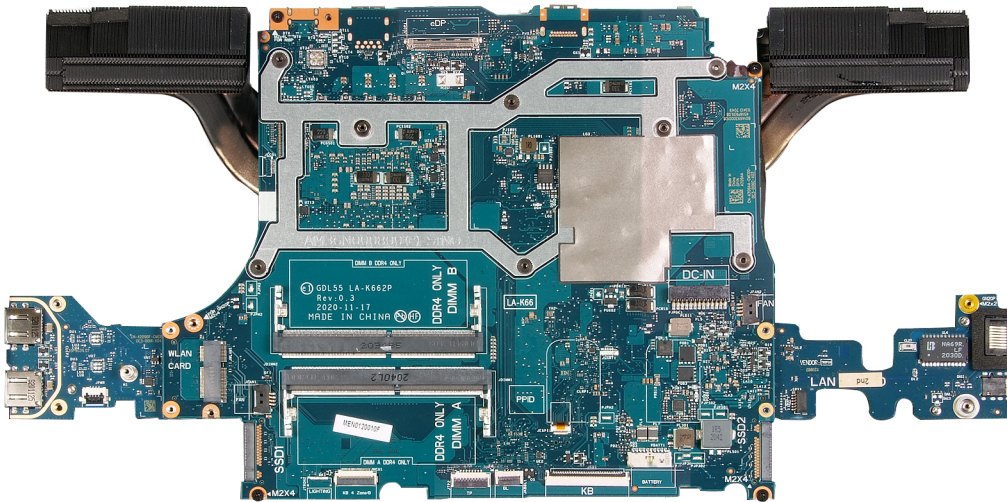

11. Turn the system board over and remove I/O board, USB board, and heat sink.
12. After performing all the above steps, you are left with system board.

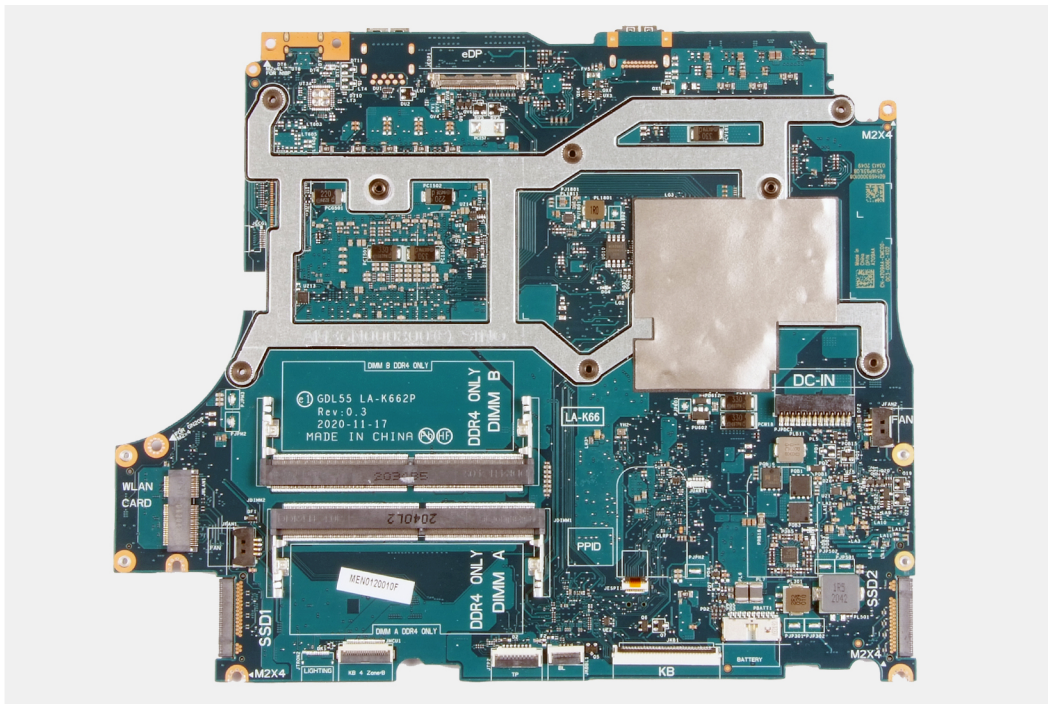

Installing the system board


Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

NOTE: Replacing the system board removes any changes that you have made to the BIOS using the BIOS setup program. Make the appropriate changes again after you replace the system board.

About this task

The following image indicates the connectors on your system board.


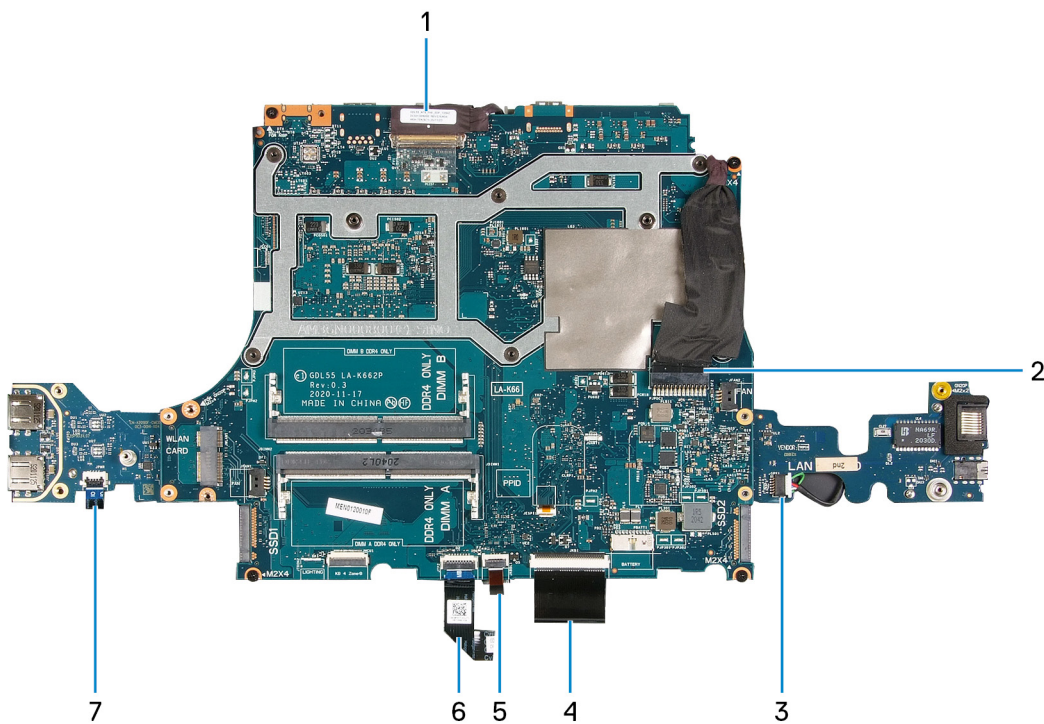


- | | |
|---------------------------|-----------------------------|
| 1. Display cable | 2. Power-adaptor port cable |
| 3. Speaker cable | 4. Keyboard cable |
| 5. Keyboard backlit cable | 6. Touchpad cable |
| 7. Power-button cable | |

The following image indicates the location of the system board and provides a visual representation of the installation procedure.



4x
M2x4

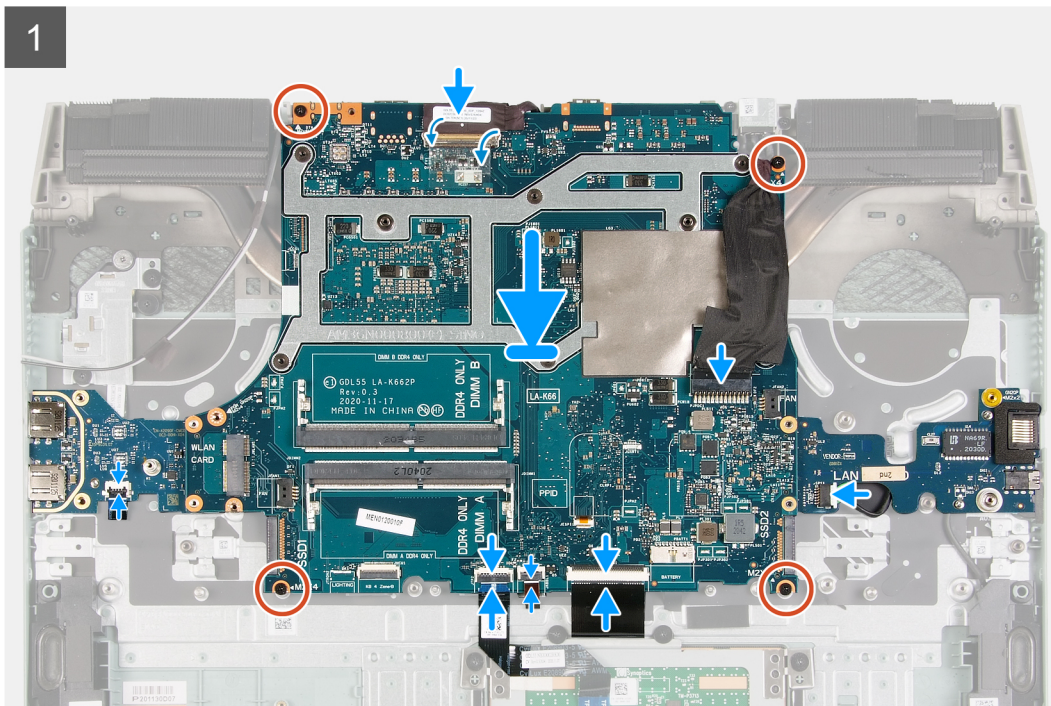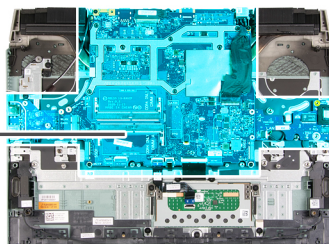

Steps

1. **NOTE:** Place the system board on a clean and flat surface.

Replace the I/O board, USB board, and heat sink.

2. Turn the system board over.

CAUTION: Before replacing the system board, ensure that the power button cable is routed below the USB board. If the power button cable is not routed and connected properly, the computer will not power on.

3. Align the screw holes on the system board with the screw holes on the palm-rest and keyboard assembly.

NOTE: Align the system board with the positioning pins on the palm-rest and keyboard assembly.

NOTE: Align the heat sink to the top edge of the palm-rest and keyboard assembly.

4. Replace the four (M2x4) screws that secure the system board to the palm-rest and keyboard assembly.

NOTE: Move in clock-wise direction to connect the cables to the system board.

5. Replace the three (M2x4) screws that secure the system board to the palm-rest and keyboard assembly.

NOTE: Move in clock-wise direction to connect the cables to the system board.

6. Open the latch and connect the display cable to the system board.

7. Adhere the tape that secures the display cable to the system board.

8. Open the latch and connect the power-adaptor port cable to the system board.

9. Connect the speaker cable to the system board.

10. Open the latch and connect the keyboard cable to the system board.
11. Open the latch and connect the keyboard-backlight cable to the system board.
12. Open the latch and connect the touchpad cable to the system board.
13. Open the latch and connect the power-button cable to the USB board.

Next steps

1. Install the [left fan](#).
2. Install the [right fan](#).
3. Install the [memory module](#).
4. Install the [wireless card](#).
5. Install the [solid-state drive 2](#).
6. Install the [solid-state drive 1](#).
7. Install the [rear cover](#).
8. Install the [battery](#).
9. Install the [base cover](#).
10. Follow the procedure in [After working inside your computer](#).

Heat sink

Removing the heat sink

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).



CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.



NOTE: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.

2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [rear cover](#).
5. Remove the [solid-state drive 1](#).
6. Remove the [solid-state drive 2](#).
7. Remove the [wireless card](#).
8. Remove the [memory module](#).
9. Remove the [right fan](#).
10. Remove the [left fan](#).
11. Remove the [system board](#).





NOTE: System board can be removed with the heat sink, I/O board, and USB board attached.

About this task

The following image indicates the location of the heat sink and provides a visual representation of the removal procedure.



6x
M2x4

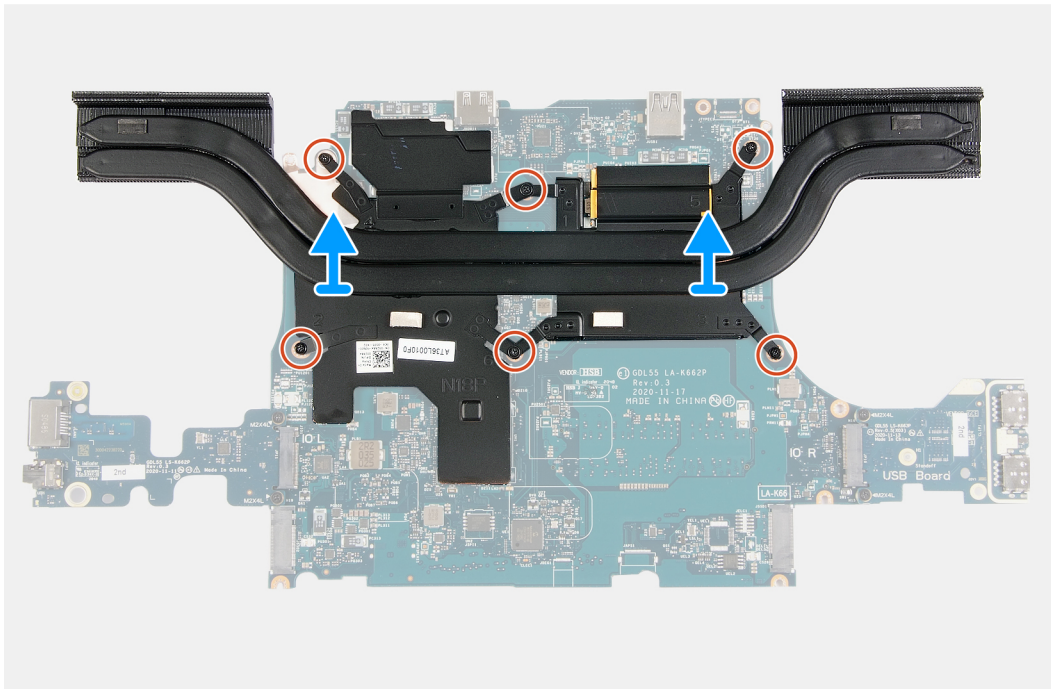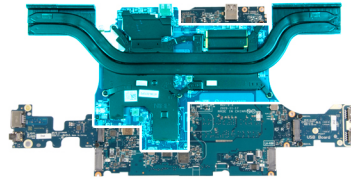

Steps

1. Turn the system board over.
2. Remove the six screws (M2x4) that secure the heat sink to the system board.
3. Lift the heat sink off the system board.

Installing the heat sink

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task



The following image indicates the location of the heat sink and provides a visual representation of the installation procedure.

CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.

NOTE: If either the system board or the heat sink is replaced, use the thermal pad/paste provided in the kit to ensure that thermal conductivity is achieved.



6x
M2x4

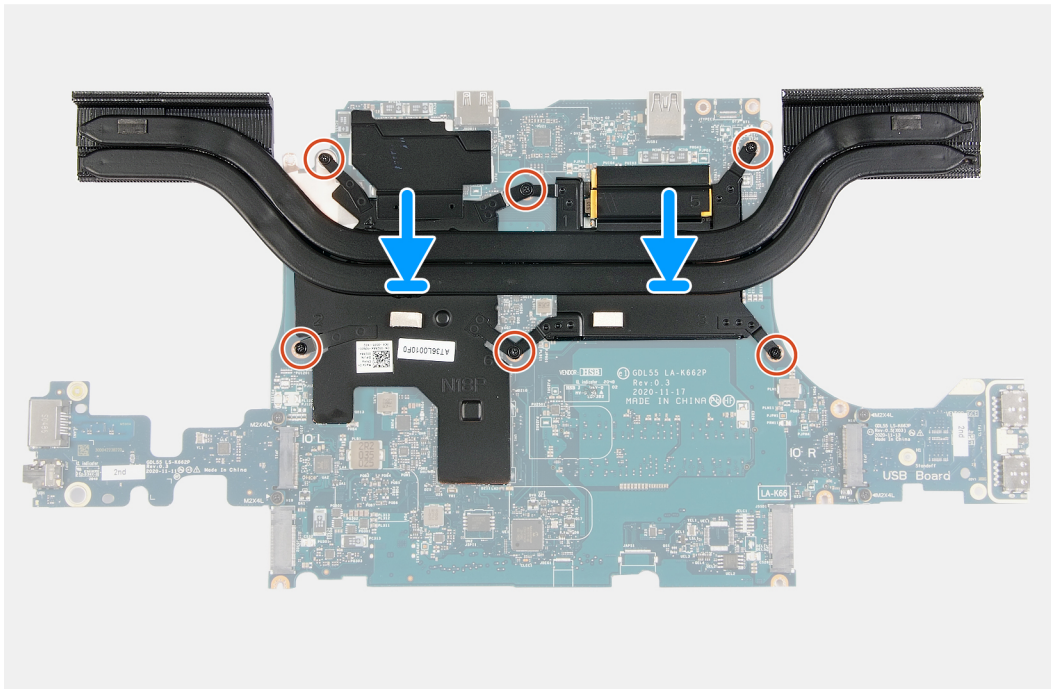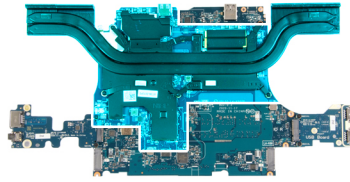

Steps

1. Place the heat sink on the system board and align the screw holes on the heat sink with the screw holes on the system board.
2. Replace the six screws (M2x4) that secure the heat sink to the system board.
3. Turn the system board over and align the screw holes on the system board with the screw holes on the palm-rest and keyboard assembly.

Next steps


1. Install the [system board](#).
2. Install the [left fan](#).
3. Install the [right fan](#).
4. Install the [memory module](#).
5. Install the [wireless card](#).
6. Install the [solid-state drive 2](#).
7. Install the [solid-state drive 1](#).
8. Install the [rear cover](#).
9. Install the [battery](#).
10. Install the [base cover](#).
11. Follow the procedure in [After working inside your computer](#).

USB board

Removing the USB board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [rear cover](#).
5. Remove the [solid-state drive 1](#).
6. Remove the [solid-state drive 2](#).
7. Remove the [wireless card](#).
8. Remove the [memory module](#).
9. Remove the [right fan](#).
10. Remove the [left fan](#).
11. Remove the [system board](#).


 **NOTE:** System board can be removed with the heat sink, I/O board and USB board attached.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the removal procedure.



2x
M2x4

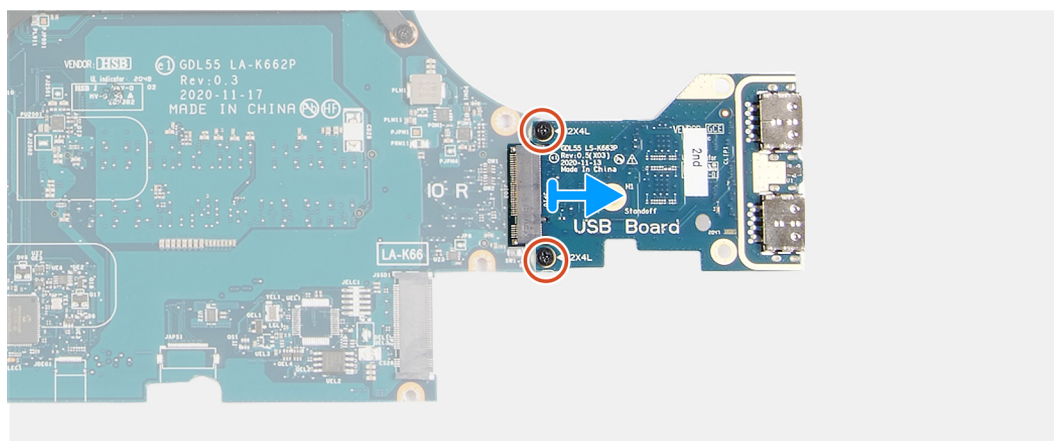

Steps

1. Turn the system board over.
2. Remove the two screws (M2x4) that secure the USB board to the system board.
3. Remove the USB board from the system board.

Installing the USB board

Prerequisites


If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the installation procedure.



2x
M2x4

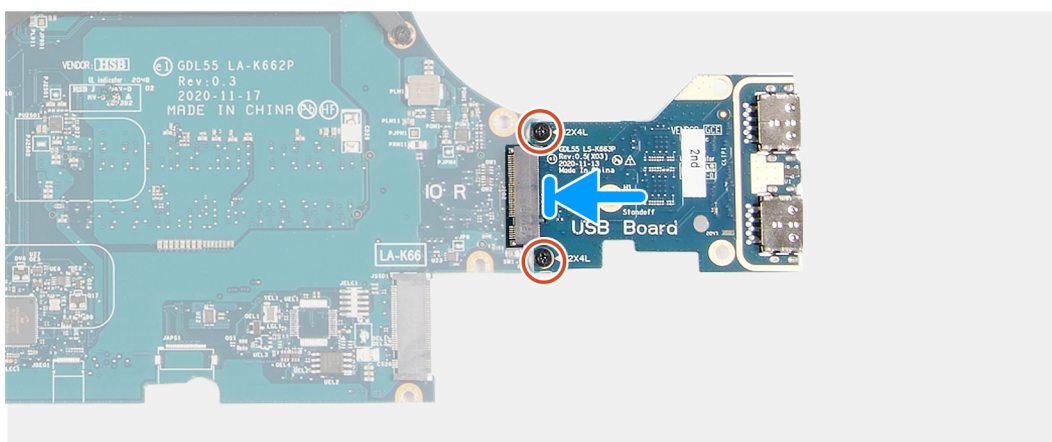

Steps

1. Align the screw holes on the USB board with the screw holes on the system board and insert the USB board in to the system board.
2. Install the two screws (M2x4) that secure the USB board to the system board.

Next steps


1. Install the [system board](#).
2. Install the [left fan](#).
3. Install the [right fan](#).
4. Install the [memory module](#).
5. Install the [wireless card](#).
6. Install the [solid-state drive 2](#).
7. Install the [solid-state drive 1](#).
8. Install the [rear cover](#).
9. Install the [battery](#).
10. Install the [base cover](#).
11. Follow the procedure in [After working inside your computer](#).

I/O board

Removing the I/O board

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [rear cover](#).
5. Remove the [solid-state drive 1](#).
6. Remove the [solid-state drive 2](#).
7. Remove the [wireless card](#).
8. Remove the [memory module](#).
9. Remove the [right fan](#).
10. Remove the [left fan](#).
11. Remove the [system board](#).



 **NOTE:** System board can be removed with the heat sink, I/O board, and USB board attached.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the removal procedure.



2x
M2x4

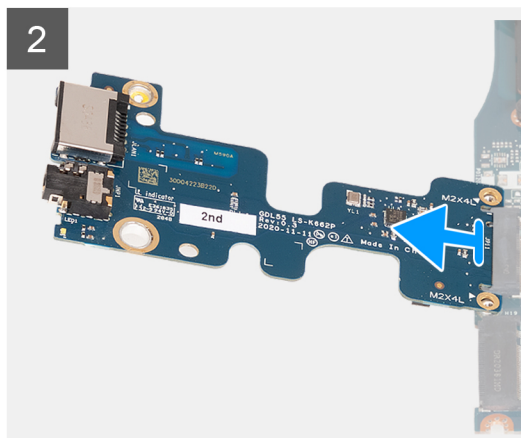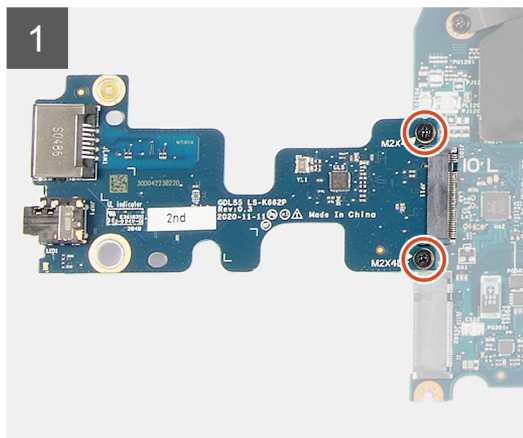

Steps

1. Turn the system board over.
2. Remove the two screws (M2x4) that secure the I/O board to the system board.
3. Remove the I/O board from the system board.

Installing the I/O board

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the I/O board and provides a visual representation of the installation procedure.



2x
M2x4

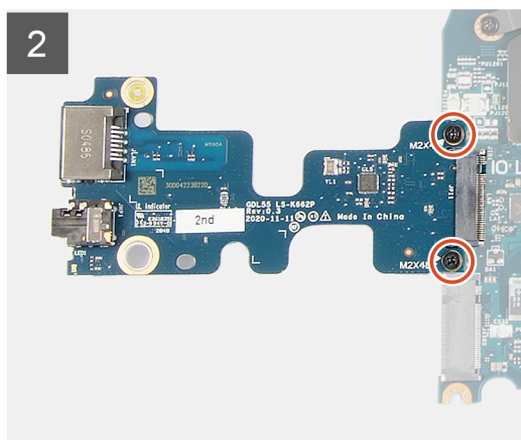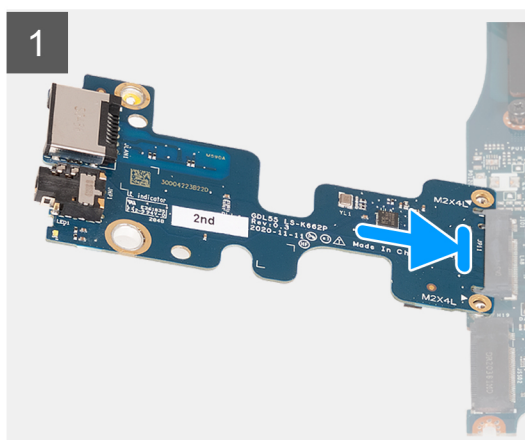

Steps

1. Insert the I/O board at a 45 degree angle into the slot on the system board.
2. Align the screw holes on the I/O board with the screw holes on the system board.
3. Install the two screws (M2x4) that secure the I/O board to the system board.
4. Turn the system board to the front and align the screw holes on the system board with the screw holes on the palm-rest and keyboard assembly.

Next steps


1. Install the [system board](#).
2. Install the [left fan](#).
3. Install the [right fan](#).
4. Install the [memory module](#).
5. Install the [wireless card](#).
6. Install the [solid-state drive 2](#).
7. Install the [solid-state drive 1](#).
8. Install the [rear cover](#).
9. Install the [battery](#).
10. Install the [base cover](#).
11. Follow the procedure in [After working inside your computer](#).

Power button

Removing the power button

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [rear cover](#).
5. Remove the [solid-state drive](#).
6. Remove the [solid-state drive 2](#).
7. Remove the [wireless card](#).
8. Remove the [memory module](#).
9. Remove the [right fan](#).
10. Remove the [left fan](#).
11. Remove the [system board](#).




 **NOTE:** System board can be removed with the heat sink, I/O board, and USB board attached.

About this task

The following images indicate the location of the power button and provide a visual representation of the removal procedure.



4x
M2x2

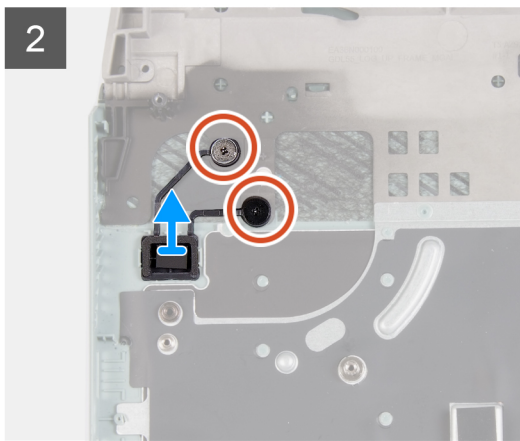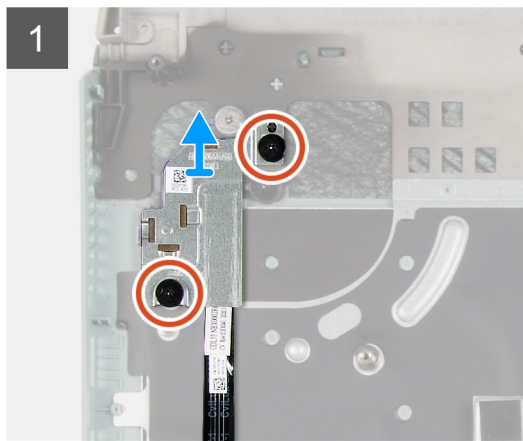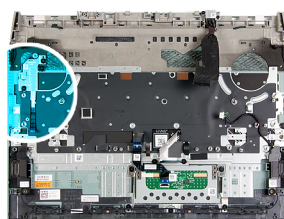

Steps

1. Remove the two screws (M2x2) that secure the power-button shield to the palm-rest and keyboard assembly.
2. Lift the power-button shield off the palm-rest and keyboard assembly.
3. Remove the two screws (M2x2) that secure the power button to the palm-rest and keyboard assembly.
4. Lift the power button off the palm-rest and keyboard assembly.

Installing the power button

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the power button and provides a visual representation of the installation procedure.



4x
M2x2

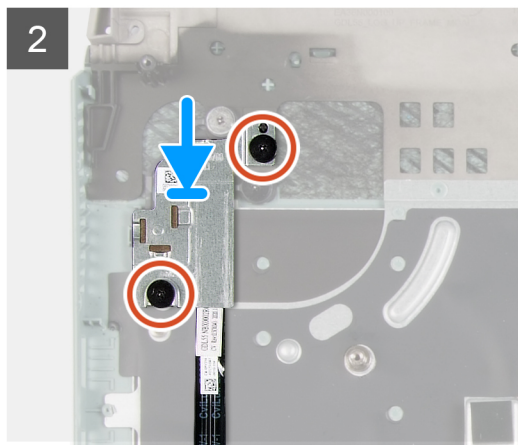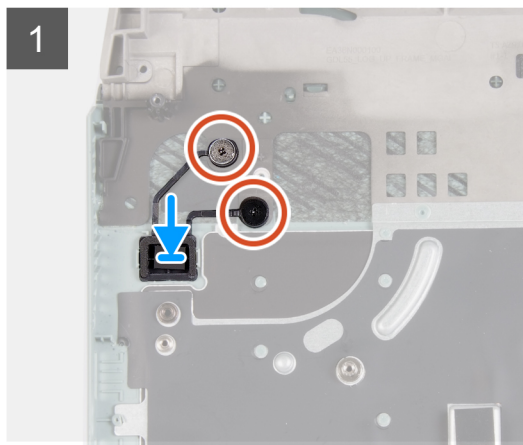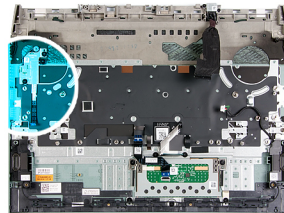

Steps

1. Place the power button on the slot on the palm-rest and keyboard assembly.
2. Replace the two screws (M2x2) that secure the power button to the palm-rest and keyboard assembly.
3. Align the screw holes on the power-button shield with the screw holes on the palm-rest and keyboard assembly.
4. Replace the two screws (M2x2) that secure the power-button shield to the palm-rest and keyboard assembly.


Next steps

1. Install the [system board](#).
2. Install the [left fan](#).
3. Install the [right fan](#).
4. Install the [memory module](#).
5. Install the [wireless card](#).
6. Install the [solid-state drive 2](#).
7. Install the [solid-state drive 1](#).
8. Install the [rear cover](#).
9. Install the [battery](#).
10. Install the [base cover](#).
11. Follow the procedure in [After working inside your computer](#).

Palm-rest and keyboard assembly


Removing the palm-rest and keyboard assembly


Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [base cover](#).
3. Remove the [battery](#).
4. Remove the [touchpad](#).
5. Remove the [rear cover](#).
6. Remove the [display assembly](#).
7. Remove the [solid-state drive](#).
8. Remove the [solid-state drive 2](#).
9. Remove the [wireless card](#).
10. Remove the [memory module](#).
11. Remove the [power-adapter port](#).
12. Remove the [right fan](#).
13. Remove the [left fan](#).
14. Remove the [speakers](#).
15. Remove the [system board](#).
-  **NOTE:** System board can be removed with the heat sink, I/O board and USB board attached.
16. Remove the [power button](#).

About this task

After performing the steps in the pre-requisites, we are left with the palm-rest and keyboard assembly.

-  **NOTE:** When replacing the palm rest, the solid-state drive mounting brackets has to be removed from the existing palm rest and transferred to the replacement palm rest.

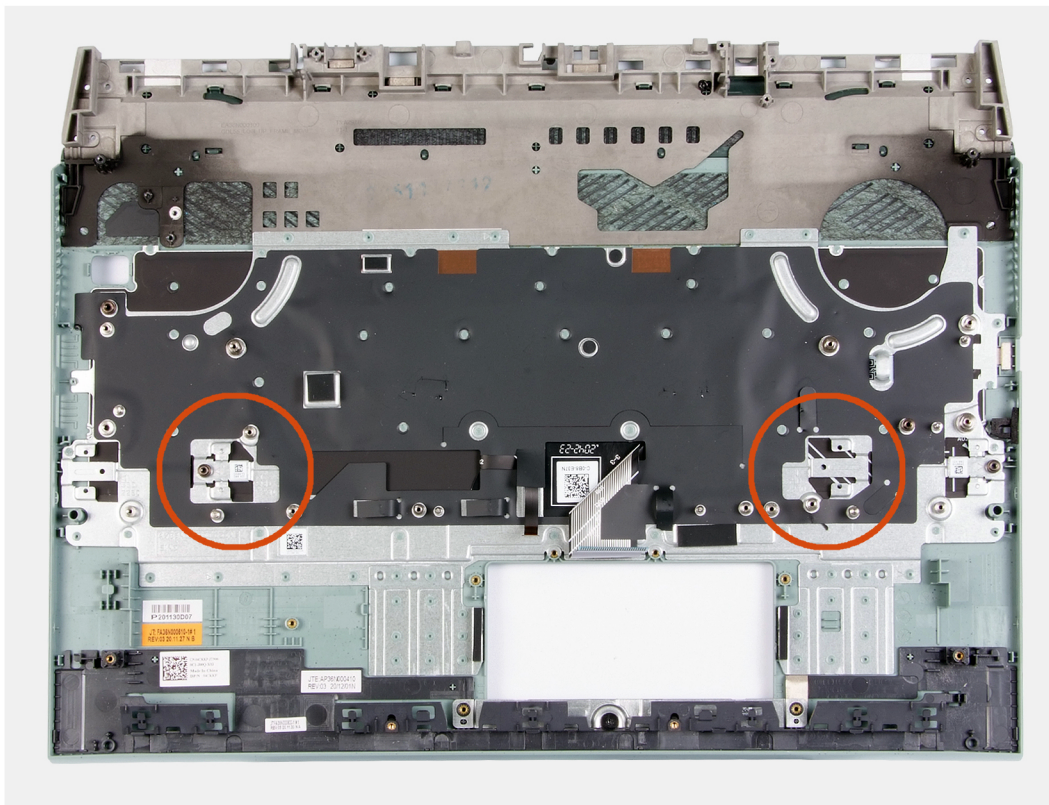

Installing the palm-rest and keyboard assembly


Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

Place the palm-rest and keyboard assembly on a flat surface.

NOTE: When replacing the palm rest, the solid-state drive mounting brackets has to be transferred from the old palm rest to the replacement palm rest.

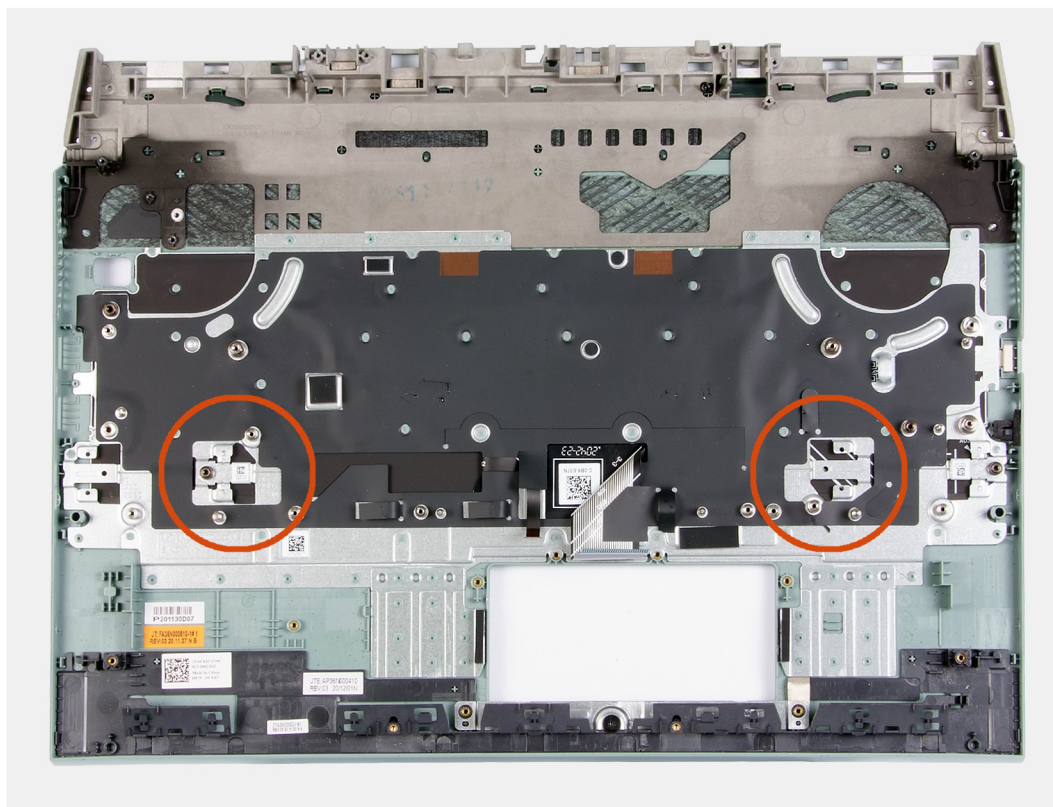

Next steps

1. Install the [power button](#).
2. Install the [system board](#).
NOTE: System board can be removed along with the heat sink, I/O board and USB board.
3. Install the [speakers](#).
4. Install the [left fan](#).
5. Install the [right fan](#).
6. Install the [power-adapter port](#).
7. Install the [memory module](#).
8. Install the [wireless card](#).
9. Install the [solid-state drive 2](#).
10. Install the [solid-state drive 1](#).
11. Install the [display assembly](#).
12. Install the [rear cover](#).
13. Install the [touchpad](#).
14. Install the [battery](#).
15. Install the [base cover](#).
16. Follow the procedure in [After working inside your computer](#).

Drivers and downloads

When troubleshooting, downloading or installing drivers it is recommended that you read the Dell Knowledge Based article, Drivers and Downloads FAQ [SLN128938](#).

System setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Entering BIOS setup program

Steps

1. Turn on your computer.
2. Press F2 immediately to enter the BIOS setup program.

NOTE: If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

Navigation keys


NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Table 3. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area. NOTE: For the standard graphics browser only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.


One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F2 immediately.


 **NOTE:** It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

 **NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

 **NOTE:** Choosing **Diagnostics**, will display the **ePSA diagnostics** screen.

The boot sequence screen also displays the option to access the System Setup screen.

System setup options


 **NOTE:** Depending on this computer and its installed devices, the items that are listed in this section may or may not be displayed.

Table 4. System setup options—System information menu

Overview	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the express service code of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Signed Firmware Update	Displays whether the signed firmware update is enabled.
Battery	Displays the battery health information.
Primary	Displays the primary battery.
Battery Level	Displays the battery level.
Battery State	Displays the battery state.
Health	Displays the battery health.
AC Adapter	Displays whether an AC adapter is installed.
Processor Information	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.
Core Count	Displays the number of cores on the processor.
Processor L2 Cache	Displays the processor L2 Cache size.
Processor ID	Displays the processor identification code.

Table 4. System setup options—System information menu (continued)

Overview		
Processor L3 Cache		Displays the processor L3 Cache size.
Current Clock Speed		Displays the current processor clock speed.
Minimum Clock Speed		Displays the minimum processor clock speed.
Microcode Version		Displays the microcode version.
Intel Hyper-Threading Capable		Displays whether the processor is Hyper-Threading (HT) capable.
64-Bit Technology		Displays whether 64-bit technology is used.
Memory Information		
Memory Installed		Displays the total computer memory installed.
Memory Available		Displays the total computer memory available.
Memory Speed		Displays the memory speed.
Memory Channel Mode		Displays single or dual channel mode.
Memory Technology		Displays the technology that is used for the memory.
Device Information		
Video Controller		Displays the integrate graphics information of the computer.
dGPU Video Controller		Displays the discrete graphics information of the computer.
Video BIOS Version		Displays the video BIOS version of the computer.
Video Memory		Displays the video memory information of the computer.
Panel Type		Displays the Panel Type of the computer.
Native Resolution		Displays the native resolution of the computer.
Audio Controller		Displays the audio controller information of the computer.
Wi-Fi Device		Displays the wireless device information of the computer.
Bluetooth Device		Displays the Bluetooth device information of the computer.

Table 5. System setup options—Boot options menu

Boot options		
Advanced Boot Options		
Enable UEFI Network Stack		Enables or disables UEFI Network Stack. Default: OFF.
Boot Mode		
Boot Mode: UEFI only		Displays the boot mode of this computer.
Enable Boot Devices		Enables or disables boot devices for this computer.
Boot Sequence		Displays the boot sequence.
BIOS Setup Advanced Mode		Enables or disables advanced BIOS settings. Default: ON.
UEFI Boot Path Security		Enables or disables the system to prompt the user to enter the Admin password when booting a UEFI boot path from the F12 boot menu. Default: Always Except Internal HDD.

Table 6. System setup options—System Configuration menu


System Configuration	
Date/Time	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can switch between 12-hour and 24-hour clock. Changes to the time take effect immediately.
Enable SMART Reporting	Enables or disables SMART (Self-Monitoring, Analysis, and Reporting Technology) during computer startup to report hard drive errors. Default: OFF.
Enable Audio	Enables or disables all integrated audio controller. Default: ON.
Enable Microphone	Enables or disables microphone. Default: ON.
Enable Internal Speaker	Enables or disables internal speaker. Default: ON.
USB Configuration	
Enable Boot Support	Enables or disables booting from USB mass storage devices such as external hard drive, optical drive, and USB drive.
Enable External USB Ports	Enables or disables USB ports to be functional in an operating system environment.
SATA Operation	Configures operating mode of the integrated SATA hard drive controller. Default: RAID. SATA is configured to support RAID (Intel Rapid Restore Technology).
Drives	Enables or disables various onboard drives.
M.2 PCIe SSD-0/SATA-2	Default: ON.
SATA-0	Default: ON.
Drive Information	Displays the information of various onboard drives.
Miscellaneous Devices	Enables or disables various onboard devices.
Enable Camera	Enables or disables the camera. Default: ON.
Keyboard Illumination	Configures the operating mode of the keyboard illumination feature. Default: Disabled. The keyboard illumination will always be off.
Keyboard Backlight Timeout on AC	Configures the timeout value for the keyboard when an AC adapter is connected to the computer. The keyboard backlight timeout value is only effect when the backlight is enabled. Default: 10 seconds.
Keyboard Backlight Timeout on Battery	Configures the timeout value for the keyboard when the computer is running on battery. The keyboard backlight timeout value is only effect when the backlight is enabled. Default: 10 seconds.
Touchscreen	Enables or disables the touchscreen for the operating system.  NOTE: Touchscreen will always work in the BIOS setup irrespective of this setting.

Table 6. System setup options—System Configuration menu (continued)

System Configuration	
Default: ON.	

Table 7. System setup options—Video menu

Video	
LCD Brightness	
Brightness on battery power	Sets the screen brightness when the computer is running on battery power.
Brightness on AC power	Sets the screen brightness when the computer is running on AC power.
EcoPower	Enables or disables EcoPower which increases the battery life by reducing the screen brightness when appropriate. Default: ON.

Table 8. System setup options—Security menu

Security	
Enable Admin Setup Lockout	Enables or disables the user from entering BIOS Setup when an Admin Password is set. Default: OFF.
Password Bypass	Bypass the System (Boot) Password and the internal hard drive password prompts during a system restart. Default: Disabled.
Enable Non-Admin Password Changes	Enables or disables the user to change the system and hard drive password without the need for admin password. Default: ON.
Non-Admin Setup Changes	
Allow Wireless Switch Changes	Enables or disables changes to the setup option when an Administrator password is set. Default: OFF.
Enable UEFI Capsule Firmware Updates	Enables or disables BIOS updates through UEFI capsule update packages.
Computrace	Enable or disable the BIOS module interface of the optional Computrace(R) Service from Absolute Software.
Intel Platform Trust Technology On	Enables or disables Platform Trust Technology (PTT) visibility to the operating system. Default: ON.
PPI Bypass for Clear Commands	Enables or disables the operating system to skip BIOS Physical Presence Interface (PPI) user prompts when issuing the Clear command. Default: OFF.
Clear	Enables or disables the computer to clear the PTT owner information, and returns the PTT to the default state. Default: OFF.
Intel SGX	Enables or disables the Intel Software Guard Extensions (SGX) to provide a secured environment for running code/storing sensitive information. Default: Software Control
SMM Security Mitigation	Enables or disables additional UEFI SMM Security Mitigation protections. Default: OFF.

Table 8. System setup options—Security menu (continued)

Security	
	<p>NOTE: This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.</p>
Enable Strong Passwords	<p>Enables or disables strong passwords.</p> <p>Default: OFF.</p>
Password Configuration	<p>Control the minimum and maximum number of characters that are allowed for Admin and System passwords.</p>
Admin Password	<p>Sets, Changes, or deletes the administrator (admin) password (sometimes called the "setup" password).</p>
System Password	<p>Sets, Changes, or deletes the system password.</p>
Enable Master Password Lockout	<p>Enables or disables the master password support.</p> <p>Default: OFF.</p>

Table 9. System setup options—Secure Boot menu

Secure Boot	
Enable Secure Boot	<p>Enables or disables the computer to boots using only validated boot software.</p> <p>Default: OFF.</p> <p>NOTE: For Secure Boot to be enabled, the computer needs to be in UEFI boot mode and the Enable Legacy Option ROMs option needs to be turned off.</p>
Secure Boot Mode	<p>Selects the Secure Boot operation mode.</p> <p>Default: Deployed Mode.</p> <p>NOTE: Deployed Mode should be selected for normal operation of Secure Boot.</p>

Table 10. System setup options—Expert Key Management menu

Expert Key Management	
Enable Custom Mode	<p>Enables or disables the keys in the PK, KEK, db, and dbx security key databases to be modified.</p> <p>Default: OFF.</p>
Custom Mode Key Management	<p>Selects the custom values for expert key management.</p> <p>Default: PK.</p>

Table 11. System setup options—Performance menu

Performance	
Intel Hyper-Threading Technology	<p>Enables or disables the Intel Hyper-Threading Technology to use processor resources more efficiently.</p> <p>Default: ON.</p>
Intel SpeedStep	<p>Enables or disables the Intel SpeedStep Technology to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>Default: ON.</p>
Intel TurboBoost Technology	<p>Enabled or disabled the Intel TurboBoost mode of the processor. If enabled, the Intel TurboBoost driver increases the performance of the CPU or graphics processor.</p>

Table 11. System setup options—Performance menu (continued)

Performance	
Multi-Core Support	<p>Default: ON.</p> <p>Changes the number of CPU cores available to the operating system. The default value is set to the maximum number of cores.</p> <p>Default: All Cores.</p>
Enable C-State Control	<p>Enables or disables the CPU's ability to enter and exit low-power states.</p> <p>Default: ON.</p>

Table 12. System setup options—Power Management menu

Power Management	
Wake on AC	<p>Enables the computer to turn on and go to boot when AC power is supplied to the computer.</p> <p>Default: OFF.</p>
Auto on Time	<p>Enables the computer to automatically power on for defined days and times.</p> <p>Default: Disabled. The system will not automatically power up.</p>
Battery Charge Configuration	<p>Enables the computer to run on battery during power usage hours. Use the below options to prevent AC power usage between certain times of each day.</p> <p>Default: Adaptive. Battery settings are adaptively optimized based on your typical battery usage pattern.</p>
Enable Advanced Battery Charge Configuration	<p>Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day.</p> <p>Default: OFF.</p>
Block Sleep	<p>Blocks the computer from entering Sleep (S3) mode in the operating system.</p> <p>Default: OFF.</p> <p>NOTE: If enabled, the computer will not go to sleep, Intel Rapid Start will be disabled automatically, and the operating system power option will be blank if it was set to Sleep.</p>
Enable USB Wake Support	<p>Enables the USB devices to wake the computer from Standby mode.</p> <p>Default: OFF.</p>
Enable Intel Speed Shift Technology	<p>Enables or disables Intel Speed Shift Technology support which enables the operating system to select the appropriate processor performance automatically.</p> <p>Default: ON.</p>
Lid Switch	<p>Enables the computer to power up from the off state whenever the lid is opened.</p> <p>Default: ON.</p>

Table 13. System setup options—Wireless menu

Wireless	
Wireless Switch	<p>Determines which wireless devices can be controlled by the Wireless Switch. For Windows 8 systems, this is controlled by an operating system drive directly. As a result, the setting does not affect the Wireless Switch behavior.</p> <p>NOTE: When both WLAN and WiGig are present, enable/disable controls are tied together. Thus, they cannot be enabled or disabled independently.</p>

Table 13. System setup options—Wireless menu (continued)

Wireless	
WLAN	Default: ON.
Bluetooth	Default: ON.
Wireless Device Enable	Enable or disable internal WLAN/Bluetooth devices.
WLAN	Default: ON.
Bluetooth	Default: ON.

Table 14. System setup options—POST Behavior menu


POST Behavior	
Numlock Enable	Enables or disables Numlock when the computer boots. Default: ON.
Enable Adapter Warnings	Enables the computer to display adapter warning messages during boot. Default: ON.
Extend BIOS POST Time	Configures the BIOS POST (Power-On Self-Test) load time. Default: 0 seconds.
Fastboot	Configures the speed of the UEFI boot process. Default: Thorough. Performs complete hardware and configuration initialization during boot.
Fn Lock Options	Enables or disables the Fn lock mode. Default: ON.
Lock Mode	Default: Lock Mode Secondary. Lock Mode Secondary = If this option is selected, the F1-F12 keys scan the code for their secondary functions.
Pull Screen Logo	Enabled or disabled the computer to display full screen logo if the image match screen resolution. Default: OFF.
Warnings and Errors	Selects an action on encountering a warning or error during boot. Default: Prompt on Warnings and Errors. Stop, prompt and wait for user input when warnings or errors are detected.
 NOTE: Errors deemed critical to the operation of the computer hardware will always halt the computer.	

Table 15. System setup options—Virtualization menu

Virtualization	
Intel Virtualization Technology	Enables the computer to run a virtual machine monitor (VMM). Default: ON.
VT for Direct I/O	Enables the computer to perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O. Default: ON.

Table 16. System setup options—Maintenance menu



Maintenance	
Asset Tag	Creates a system Asset Tag that can be used by an IT administrator to uniquely identify a particular system. Once set in BIOS, the Asset Tag cannot be changed.
Service Tag	Displays the Service Tag of the computer.
BIOS Recovery from Hard Drive	<p>Enables the computer to recover from a bad BIOS image, as long as the Boot Block portion is intact and functioning.</p> <p>Default: ON.</p> <p> NOTE: BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p>
BIOS Auto-Recovery	<p>Enables the computer to automatically recover the BIOS without user actions. This feature requires BIOS Recovery from Hard Drive to be set to Enabled.</p> <p>Default: OFF.</p>
Start Data Wipe	<p> CAUTION: This Secure Wipe Operation will delete information in a way that it cannot be reconstructed.</p> <p>If enabled, the BIOS will queue up a data wipe cycle for storage devices that are connected to the motherboard on the next reboot.</p> <p>Default: OFF.</p>
Allow BIOS Downgrade	<p>Controls flashing of the system firmware to previous revisions.</p> <p>Default: ON.</p>

Table 17. System setup options—System Logs menu

System Logs	
Power Event Log	<p>Displays Power events.</p> <p>Default: Keep.</p>
BIOS Event Log	<p>Displays BIOS events.</p> <p>Default: Keep.</p>
Thermal Event Log	<p>Displays Thermal events.</p> <p>Default: Keep.</p>

Table 18. System setup options—SupportAssist menu


SupportAssist	
Dell Auto operating system Recovery Threshold	<p>Controls the automatic boot flow for SupportAssist System Resolution Console and for Dell operating system Recovery tool.</p> <p>Default: 2.</p>
SupportAssist operating system Recovery	<p>Enables or disables the boot flow for SupportAssist operating system Recovery tool in the even of certain system errors.</p> <p>Default: ON.</p>

Updating the BIOS in Windows

Prerequisites


It is recommended to update your BIOS (System Setup), when you replace the system board or if an update is available.


About this task


 **NOTE:** If BitLocker is enabled, it must be suspended before updating the system BIOS, and then re-enabled after the BIOS update is completed.


Steps

1. Restart the computer.
2. Go to www.dell.com/support.
 - Enter the **Service Tag** or **Express Service Code** and click **Search**.
 - Click **Drivers & Downloads**.
 - Click **Detect Drivers** and follow the on-screen instructions.
3. If you are unable to detect or find the Service Tag, click **Browse all products**.
4. Choose the appropriate category to reach the product page.
5. Select your computer model, followed by its model number.


 **NOTE:** The **Product Support** page of your computer appears.
6. Click **Drivers & Downloads**.

 **NOTE:** The Drivers & Downloads section is displayed.
7. Click **Category**, and select **BIOS** from the drop-down list.
8. Click the toggle button **Show downloads for only THIS PC XXXXXXXX**.

 **NOTE:** XXXXXXXX denotes the Service Tag.
9. Select the latest BIOS file and click **Download**.
10. After the download is complete, browse to the folder where you saved the system BIOS executable file.
11. Double-click the system BIOS executable file.

 **NOTE:** Follow the on-screen instructions.


Updating BIOS on systems with BitLocker enabled

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

Updating your system BIOS using a USB flash drive

About this task

If the computer cannot load into Windows but there is still a need to update the BIOS, download the BIOS file using another computer and save it to a bootable USB flash drive.

 **NOTE:** You must use a bootable USB flash drive. For more information, see the knowledge base article [SLN143196](https://www.dell.com/support/article/sln143196).

Steps

1. Download the BIOS update .exe file to another computer.

2. Copy the .exe file onto the bootable USB flash drive.
3. Insert the USB flash drive into the computer that requires the BIOS update.
4. Restart the computer and press F12 when the Dell logo appears to display the One Time Boot Menu.
5. Using arrow keys, select **USB Storage Device** and press Enter.
6. The computer restarts to a Diag C:\> prompt.
7. Run the file by typing the complete filename and press Enter.
8. The BIOS Update Utility is displayed. Follow the on-screen instructions.

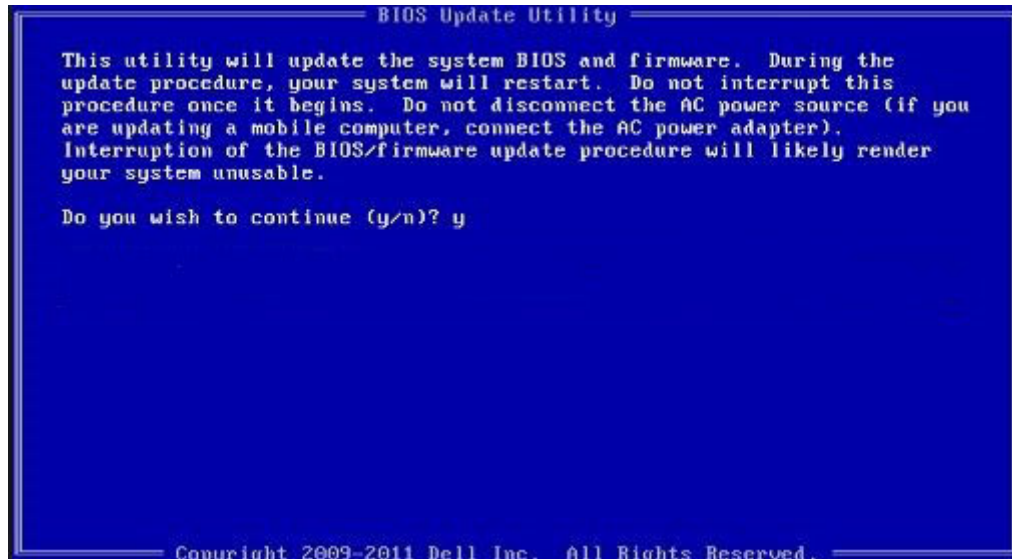


Figure 1. DOS BIOS Update Screen

Updating the Dell BIOS in Linux and Ubuntu environments

If you want to update the system BIOS in a Linux environment such as Ubuntu, see <https://www.dell.com/support/article/sln171755/>.

Flashing the BIOS from the F12 One-Time boot menu

Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

About this task

BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.

i | NOTE: Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)

- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

 **CAUTION:** Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.

Steps

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

System and setup password


Table 19. System and setup password

Password type	Description
System password	Password that you must enter to log in to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data that is stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system setup password

Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

About this task

To enter the system setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not valid.

- Only the following special characters are valid: Space, ("), (+), (.), (-), (.), (/), (:), ([), (\), (]), (`).
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
 4. Press Esc and a message prompts you to save the changes.
 5. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system setup password


Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

About this task

To enter the System Setup, press F12 immediately after a power-on or reboot.

Steps


1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Clearing CMOS settings

About this task

 **CAUTION:** Clearing CMOS settings will reset the BIOS settings on your computer.


Steps

1. Turn off your computer.
2. Remove the [base cover](#).
 **NOTE:** The battery cable must be disconnected from the system board (see Step 4 in [Removing the base cover](#)).
3. Turn your computer over and press the power button for 15 seconds to drain the flea power.
4. Before you turn on your computer, follow the steps in [installing the base cover](#).

Clearing BIOS (System Setup) and System passwords

About this task

To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

-  **NOTE:** For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.


Troubleshooting

SupportAssist diagnostics

About this task

The SupportAssist diagnostics (previously known as ePSA diagnostics) performs a complete check of your hardware. The SupportAssist diagnostics is embedded in the BIOS and is launched by it internally. The SupportAssist diagnostics provides a set of options for particular devices or device groups. It allows you to:

- Run tests automatically or in an interactive mode.
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options and provide extra information about the failed device(s)
- View status messages that indicate if the tests are completed successfully
- View error messages that indicate if problems were encountered during the test

 **NOTE:** Some tests are meant for specific devices and require user interaction. Ensure that you are present in front of the computer when the diagnostic tests are performed.

For more information, see [SupportAssist Pre-Boot System Performance Check](#).

System diagnostic lights

Battery-status light

Indicates the power and battery-charge status.

Solid white—Power adapter is connected and the battery has more than 5 percent charge.

Amber—Computer is running on battery and the battery has less than 5 percent charge.

Off

- Power adapter is connected, and the battery is fully charged.
- Computer is running on battery, and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.

Table 20. LED codes

Diagnostic light codes	Problem description
1,1	TPM detection failure
1,2	Unrecoverable SPI flash failure
1,5	i-Fuse failure
1,6	EC internal failure
2,1	Processor failure
2,2	System board: BIOS or ROM (Read-Only Memory) failure

Table 20. LED codes (continued)

Diagnostic light codes	Problem description
2,3	No memory or RAM (Random-Access Memory) detected
2,4	Memory or RAM (Random-Access Memory) failure
2,5	Invalid memory installed
2,6	System board or chipset error
2,7	Display failure - SBIOS message
2,8	Display failure - EC detection of power rail failure
3,1	Coin-cell battery failure
3,2	PCI, video card/chip failure
3,4	Recovery image found but invalid
3,5	Power-rail failure
3,6	System BIOS Flash incomplete
3,7	Management Engine (ME) error

Camera status light: Indicates whether the camera is in use.

- Solid white—Camera is in use.
- Off—Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- Solid white—Caps Lock enabled.
- Off—Caps Lock disabled.

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled in all Dell computers installed with Windows 10 operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at www.dell.com/support.

Flashing the BIOS

About this task


You may need to flash (update) the BIOS when an update is available or when you replace the system board.

Follow these steps to flash the BIOS:

Steps

1. Turn on your computer.
2. Go to www.dell.com/support.

3. Click **Product support**, enter the Service Tag of your computer, and then click **Submit**.

 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

4. Click **Drivers & downloads > Find it myself**.
5. Select the operating system installed on your computer.
6. Scroll down the page and expand **BIOS**.
7. Click **Download** to download the latest version of the BIOS for your computer.
8. After the download is complete, navigate to the folder where you saved the BIOS update file.
9. Double-click the BIOS update file icon and follow the instructions on the screen.

Flashing BIOS (USB key)

Steps

1. Follow the procedure from step 1 to step 7 in "[Flashing the BIOS](#)" to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information see the knowledge base article [SLN143196](#) at www.dell.com/support.
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12** when the Dell logo is displayed on the screen.
6. Boot to the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.
8. The **BIOS Update Utility** appears. Follow the instructions on the screen to complete the BIOS update.

Backup media and recovery options

It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell proposes multiple options for recovering Windows operating system on your Dell PC. For more information, see [Dell Windows Backup Media and Recovery Options](#).

Drain residual flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.


For your safety, and to protect the sensitive electronic components in your computer, you are requested to drain residual flea power before removing or replacing any components in your computer.

Draining residual flea power, also known as a performing a "hard reset", is also a common troubleshooting step if your computer does not power on or boot into the operating system.

To drain residual flea power (perform a hard reset)

Steps


1. Turn off your computer.
2. Disconnect the power adapter from your computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to your computer.
9. Turn on your computer.

 **NOTE:** For more information about performing a hard reset, see the knowledge base article [SLN85632](https://www.dell.com/support) at www.dell.com/support.

WiFi power cycle

About this task

If your computer is unable to access the Internet due to WiFi connectivity issues, a WiFi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a WiFi power cycle:

 **NOTE:** Some ISPs (Internet Service Providers) provide a modem/router combo device.

Steps



1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on your computer.

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 21. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows www.dell.com/support/linux
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> 1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.