Quick Guide

1. Before Installing

Congratulations on purchasing your **AudioCodes C455HD for Microsoft Teams IP Phone**! Before installing your phone, make sure the following items are included in the shipped box / boxes:

- ✓ C455HD IP Phone
- Expansion Module (optional, supported on C455HD models whose CPN suffix is DBW and purchased separately).
- AC power adapter (optional)
- ✓ Cat 5e Ethernet cable
- Handset
- Handset cord
- Desktop stand
- 🗸 🛛 Wall mount

2. Physical Description







Note: The Expansion Module option is purchased separately as a standalone unit. For instructions on how to connect it to the phone, see the *C450HD and C455HD Expansion Module Installation Guide*.

3. Cabling the Phone



Warning: Prior to connecting power, refer to the *Compliancy and Regulatory Information* document at <u>https://www.audiocodes.com/library/technical-documents</u>.

To cable the phone:

- 1. [Refer to the illustration below] Connect the short, straight end of the phone cord to the handset and the longer straight end of the cord to the handset jack on the phone.
- 2. (Optional) Connect a headset:
 - With the C455HD DBW model: Connect it to the USB 'Device port' shown rightmost in the next figure.
 - With the C455HD non-DBW model: Connect it to the USB 'Host port' shown rightmost in the figure below the next figure ; this model features a *single* USB 'Host port'. The model also does not feature an Expansion Module option.
- 3. Connect the RJ-45 LAN port to your LAN network (LAN port or LAN switch/router) with a CAT5 / 5e Ethernet cable.
- 4. Connect the RJ-45 PC port to a computer with a CAT5 / 5e straight-through Ethernet cable.
- 5. Connect the connector tip of the AC power adapter to the phone's DC 12V power socket and connect the two-prong AC adapter directly to the electrical wall outlet. When the phone powers up, all the LEDs momentarily light up.





Page 4

Wall Mount



5. Signing in

See also here a brief introductory video clip demonstrating signing in to AudioCodes Teams phones.

To sign in to your account:

1. Connect the device to the network.



2. Point your browser to <u>https://microsoft.com/devicelogin</u> as instructed.

Microsoft	
Enter code	
Enter the code displayed on you	ur app or device.
C87R3HTWG	
	Next

3. In the browser, enter the code as shown and click Next.



4. Click the account, close the 'Microsoft Authentication Broker' window, and then Continue.

AudioCodes Ltd	
Registering your device	
This may take a few minutes You can use other apps but you might not have access to AudioCodes Ltd resources yet.	

5. View the home screen; you've successfully signed in.

6. Changing your Presence Status

To change your presence status: Swipe right, touch the current presence status, and then select the status you require.



Page | 7

7. Basic Phone Operations

For basic phone operations, refer to Microsoft documentation and the User's and Administrator's Manual.

8. Connecting to a Router via Wi-Fi



Note: This section is applicable only to models with Wi-Fi functionality (models whose CPN suffix is **DBW**).

The phone can connect to an Access Point via Wi-Fi. The Wi-Fi interface can be used to make VoIP calls over Wi-Fi when the phone is installed in an environment free of LAN/cables.

Settings	
O	Date & time GMT+02:00 Central Africa Time
•	WI-FI Disconnected
ŧ	Accessibility
*	Bluetooth Disconnected
O	Power saving

✓ You can connect to Wi-Fi by navigating to the 'Settings' menu, and then selecting the Wi-Fi option.

9. Enabling or Disabling Wi-Fi

To enable Wi-Fi:

1. Turn Wi-Fi on by moving the switch in the upper right corner (Wi-Fi is disabled by default).



- 2. After enabling Wi-Fi, "Searching for Wi-Fi networks..." is displayed. The phone then displays the available Wi-Fi Access Points. Select the desired Wi-Fi Access Point (network).
- 3. Enter the Wi-Fi password if needed, and then tap **Connect**.

AudioCodes WiFi Password		
·····		
Show password		
Advanced options		~
	CANCEL	CONNECT

4. When connected to the Access Point, "Connected" is displayed:

=	Wi-Fi	
	On	
₹.	AudioCodes WiFi Connected	
•	Audc_Reception_Visitors	
•	MP264_Pilot	
▼.	QA_automation_DMZ	
₹.	AC-Training	

10. Configuring Bluetooth



Note: This section is applicable only to models with Bluetooth functionality (models whose CPN ends with suffix **DBW**).

The Bluetooth interface is used to connect the phone to a wireless headset or speaker.

To pair and connect a remote Bluetooth device:

1. Press the phone's **MENU** hard key to access the 'Settings' menu.

Settin	Settings	
©	Date & time GMT+02:00 Central Africa Time	
•	Wi-Fi Disconnected	
*	Accessibility	
*	Bluetooth Disconnected	
O	Power saving	

2. In the **Settings** screen, select the **Bluetooth** option, and then in the Bluetooth screen, move the switch to **On** to start Bluetooth scanning.



3. Select the desired Bluetooth device to pair. If prompted for the Bluetooth Pairing code, enter it, and then touch **Pair**.

≡	Bluetooth		
	On 🔹		
Availa	Available devices		
*	78:A7:EB:5B:F7:03		
*	78:A7:EB:5E:01:91		
e	Mi True Wireless Earphones Pairing_		
e.	C450HD_BT_65		
e.	C450HD_BT_E3		

- 4. Once successfully paired, the Bluetooth audio device appears under the 'Paired devices' section. To connect, touch the device name.
- 5. To unpair, touch the gear icon ²² on the right of the device name, and then click **Forget**.





FCC WARNING

Prior to operating this device, refer to the device's <u>Regulatory Information and FCC warnings</u>.

Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document can be downloaded from https://www.audiocodes.com/library/technical-documents.

This document is subject to change without notice. Date Published: Dec-21-2021 Document #: LTRT-13368

CE

