

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

PD9003



EN	User manual	3	FR	Mode d'emploi	131
DA	Brugervejledning	33	IT	Manuale utente	163
DE	Benutzerhandbuch	63	NL	Gebruiksaanwijzing	195
ES	Manual del usuario	97	SV	Användarhandbok	229

# PHILIPS

# Contents

---

<b>1</b>	<b>Important</b>	5
	Important Safety Instructions	5
	Hearing safety	6
	Notice	7

---

<b>2</b>	<b>Your portable DVD player</b>	10
	Introduction	10
	What's in the box	10
	Overview of the main unit	11
	Overview of remote control	13

---

<b>3</b>	<b>Get started</b>	15
	Preparation (for in-car use)	15
	Charge the battery	18
	Install remote control battery	19
	Connect additional equipment	20

---

<b>4</b>	<b>Use your player</b>	22
	Turn on	22
	Select OSD language	22
	Play discs	22
	Play from USB	23
	Play options	23

---

<b>5</b>	<b>Watch TV</b>	24
	First time settings	24
	Manual search	25
	Set time	25
	View program information	26
	Use the electronic program guide	27
	Rearrange the channel list	28
	Manage channels	28

---

6	Adjust settings	29
7	Product information	30
8	Troubleshooting	31

---

# 1 Important

## Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.

- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
- Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
- ⑮ Apparatus shall not be exposed to dripping or splashing.
- ⑯ Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).



#### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.



#### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

---

## Hearing safety

### Listen at a moderate volume.

- Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.

- Sound can be deceiving. Over time your hearing 'comfort level' adapts to higher volumes of sound. So after prolonged listening, what sounds 'normal' can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

**To establish a safe volume level:**

- Set your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, without distortion.

**Listen for reasonable periods of time:**

- Prolonged exposure to sound, even at normally 'safe' levels, can also cause hearing loss.
- Be sure to use your equipment reasonably and take appropriate breaks.

**Be sure to observe the following guidelines when using your headphones.**

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.
- You should use caution or temporarily discontinue use in potentially hazardous situations. Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.

---

## Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

---

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.



Manufactured under license from Dolby Laboratories.

“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.



DivX®, DivX Certified® and associated logos are trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, Inc. This is an official DivX Certified® device that plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

**This apparatus includes this label:**





# 2 Your portable DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

---

## Introduction

Your portable DVD player plays digital video discs that conform to the universal DVD Video standard. With it, you can play movies with true cinema picture quality and stereo or multi-channel sound (depending on disc and playback set-up). You can also select sound track, subtitle languages, and different angle of view (again depending on DVD disc). Besides, you can restrict the play of discs that are not suitable for children.

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):

 
- DVD-Video
  - Video CD
  - Audio CD
  - MP3 CD
  - DivX
  - Discs with JPEG files
- 


## What's in the box





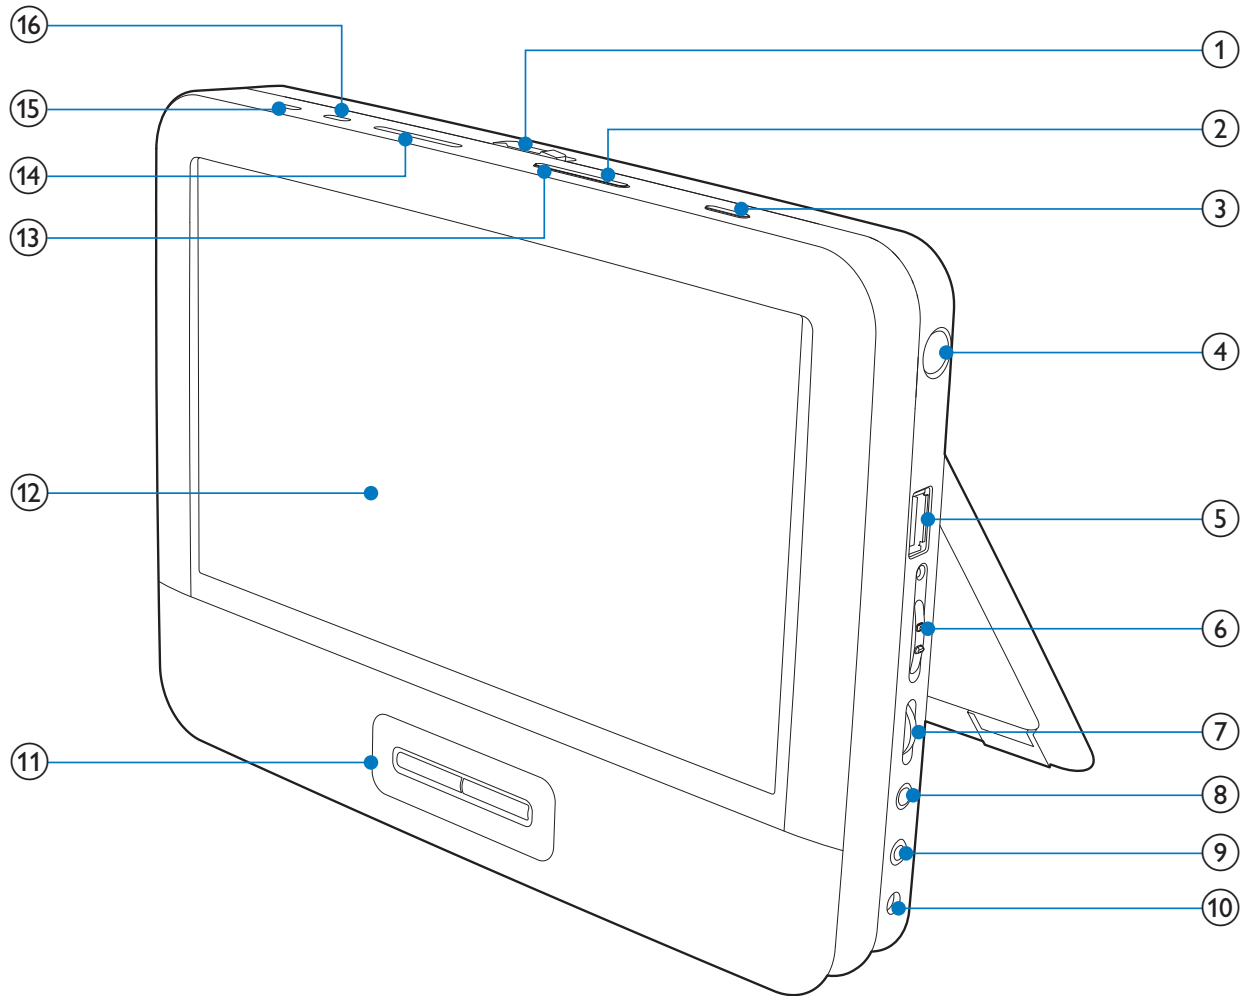


Check and identify the contents of your package:

- Portable DVD player
- Remote control
- AC power adaptor, AY5518 (Philips)
- AV cable
- Antenna
- Car mounting bracket
- User manual


## Overview of the main unit







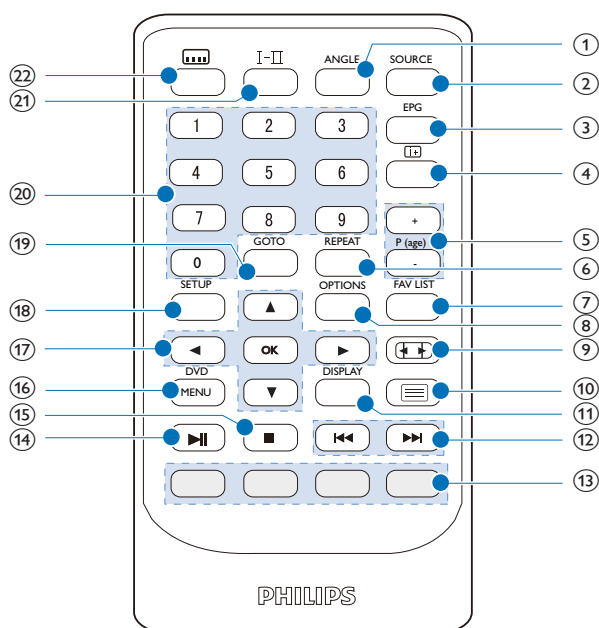 


- ① **OPEN ▶**
  - Opens the disc compartment.
- ② **OPTIONS**
  - Accesses options relating to the current activity or selection.
- ③ **SOURCE**
  - Switches between Disc, USB, DTTV, and Radio-DVBT,source.
- ④ **ANTENNA**
  - Antenna jack.
- ⑤ 
  - Connects to a USB flash drive.

- ⑥ **ON/OFF**
  - Turns on/off DVD player.
- ⑦ **VOL +/-**
  - Increases or decreases volume.
- ⑧ 
  - Headphone jack.
- ⑨ **AV OUT**
  - Audio/video output jack.
- ⑩ **DC IN**
  - Power supply socket.
- ⑪ 
  - Navigates menus.
- 
  - Switches to the next or previous channel.
- 
  - Searches backward/forward at different speeds.
-  /OK
  - Confirms an entry or selection.
  - Starts, pauses or resumes disc play.
- 
  - Stops disc play.
- ⑫ **Display panel**
- ⑬ **DISC MENU**
  - For DVD, accesses or exits disc menu.
  - ForVCD, turns on or off PBC (Playback Control) mode.
  - ForVCD version 2.0 or SVCD with PBC turned on, returns to the menu.
- ⑭ 
  - Skips to the previous or next title, chapter, or track.
- ⑮ **DISPLAY**
  - Adjusts screen brightness, contrast and color.
  - Turns off the backlight of the screen.
- ⑯ **SETUP**
  - Accesses or exits the setup menu.

# Overview of remote control



 - ① **ANGLE**
  - Selects a different viewing angle of a DVD.
- ② **SOURCE**
  - Switches between Disc, USB, DTTV, and Radio-DVBT,source.
- ③ **EPG**
  - Toggles the Electronic Program Guide (EPG) on or off. Enabled on digital channels only.
- ④ **i+**
  - Displays program information, if available.
- ⑤ **P (age) +/-**
  - Switches to the next or previous channel.
- ⑥ **REPEAT**
  - Repeats a chapter/track/title.
- ⑦ **FAV LIST**
  - Accesses or exits the favorite list.
- ⑧ **OPTIONS**
  - Accesses options relating to the current activity or selection.
- ⑨ **Aspect Ratio**
  - Adjusts screen aspect ratio.

- ⑩ 
  - Toggles teletext on or off.
- ⑪ **DISPLAY**
  - Adjusts the display value of the system.
- ⑫ 
  - Skips to the previous or next title, chapter, or track.
- ⑬ **Color keys**
  - Selects tasks or options.
- ⑭ 
  - Starts or resumes disc play.
- ⑮ 
  - Stops disc play.
- ⑯ **MENU**
  - Accesses or exits the disc menu.
- ⑰ 
  - Navigates menus.
- 
  - Searches backward/forward at different speeds.
- OK**
  - Confirms an entry or selection.
  - Accesses or exits the channel list.
- ⑱ **SETUP**
  - Accesses or exits the setup menu.
- ⑲ **GO TO**
  - Skip to a chapter/track/title or a play time
- ⑳ **0-9**
  - Numeric keypad
- ㉑ **I-II**
  - For DVD, selects an audio language.
  - For VCD, selects an audio mode.
  - For DTTV, press and hold this button to select the dual audio channels.
- ㉒ 
  - Selects DVD subtitle language.
  - Accesses closed caption settings in the DTTV mode.

# 3 Get started



## Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

 
## Preparation (for in-car use)



## Warning


- Remove the mounting kit and the DVD player from the seat when the DVD player is not in use.

To use the player in a car, attach the player to the back of the front seat headrest.

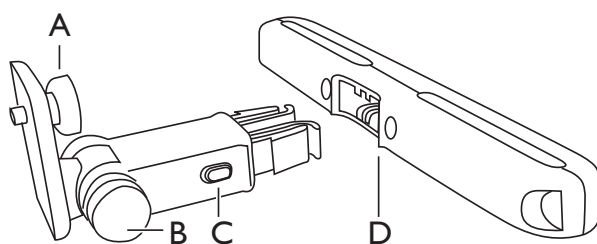

- A. DVD player fastening screw node
- B. Viewing angle adjustment node
- C. Buckle release button
- D. Headrest mount bracket

 - 1 Fix the headrest mount bracket on to the front seat headrest.

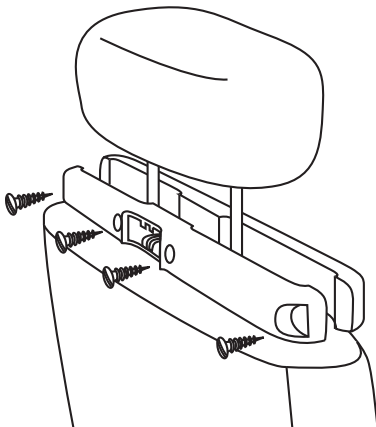


- ① Position the bracket on the bars of the headrest.
- ② Fasten the screw to fix the bracket firmly on the bars.

- 2 Fix the DVD mount bracket to the portable DVD player.


#### Note

 - There are three holes on the bracket. Use any one as you like.

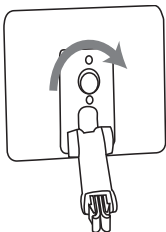


- 3 Aim the screw of the bracket to the screw nut on the back of the DVD player.
  - Screw tight the bracket onto the DVD player.

 - 4** Install the DVD player to the headrest.

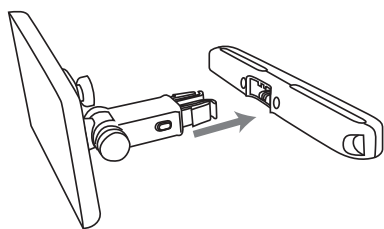


- Buckle DVD bracket into the headrest mount bracket.

 - 5** Adjust the viewing angle.

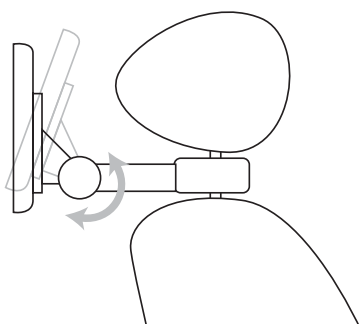

- ① Release the node.
- ② Adjust the viewing angle as desired.
- ③ Fasten the node.

 - 6** Press the release button to release the DVD player from headrest.

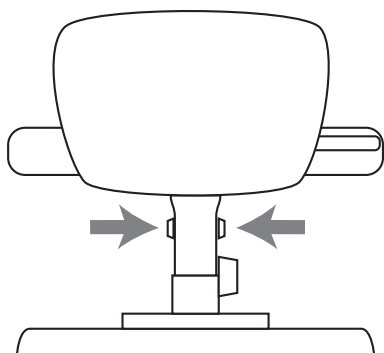



---

# Charge the battery



## Caution

 
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the player.
- Use only the supplied AC adaptor to charge the battery.



## Note

- The type plate is located on the bottom of the player.
- You can only charge the player when it is in power-off mode.

- 1 Slide the **POWERON/OFF** switch to **OFF** position.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.
  - ↳ The charge indicator turns on.
  - ↳ When the battery is fully charged, the charge indicator turns off.

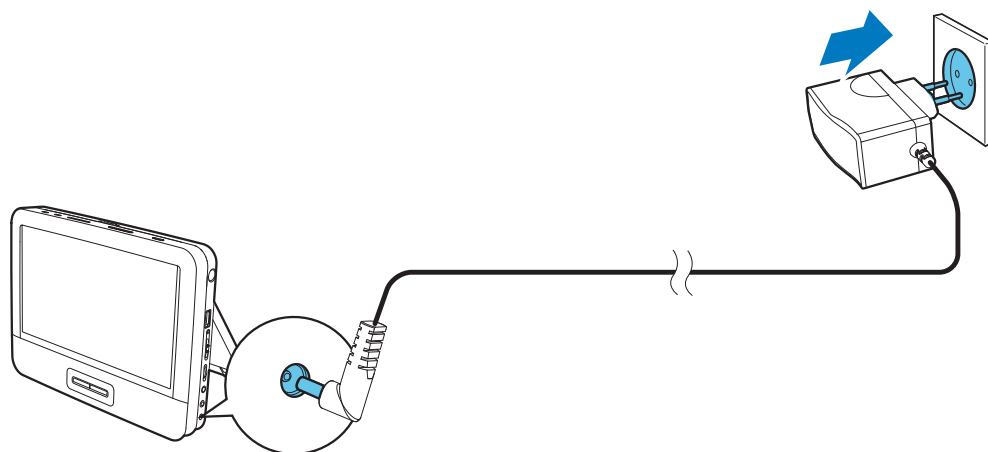

# Install remote control battery



## Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Batteries contain chemical substances, they should be disposed of properly.
- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

### For first-time use:

 
**1** Remove the protective tab to activate the remote control battery.

### To replace the remote control battery:

**1** Open the battery compartment.

**2** Insert one CR2025 battery with correct polarity (+/-) as indicated.

**3** Close the battery compartment.

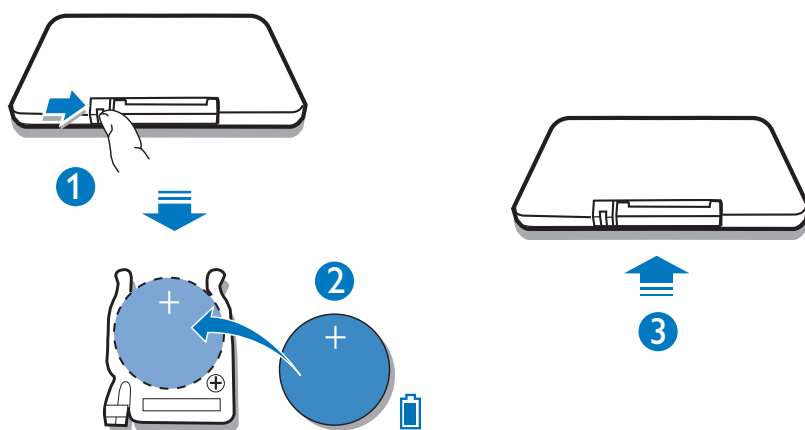

---

# Connect additional equipment

---

## Connect a TV



### Caution

- Turn off your player before connecting to any additional equipment.

 
You can connect the player to a TV or an amplifier to enjoy DVDs. Match the color of the AV cables (the AV cable connected to TV is not supplied) with the jacks:

- the yellow cable is for the yellow video jack
- the red/white cable is for the red/white audio jacks.



### Note

- You cannot output the TV content from the player to a TV.

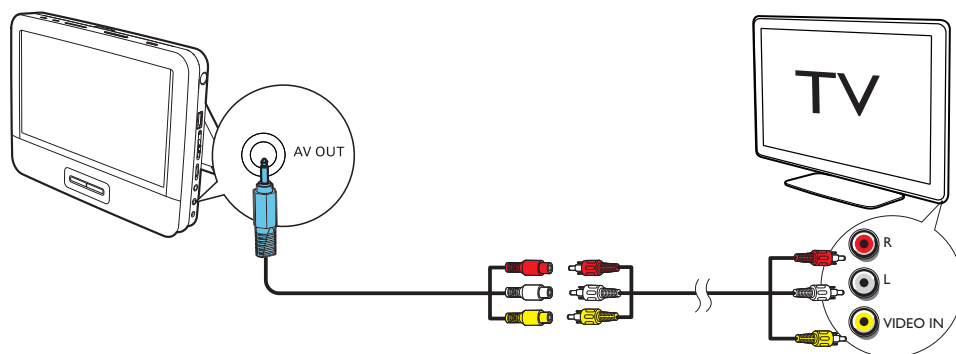

## Connect TV antenna

 
You can connect your player to the supplied antenna or home antenna to receive digital TV program.

**1** Connect the antenna to the **ANTENNA** jack.



### Tip

- For better reception, connect the player to home antenna.

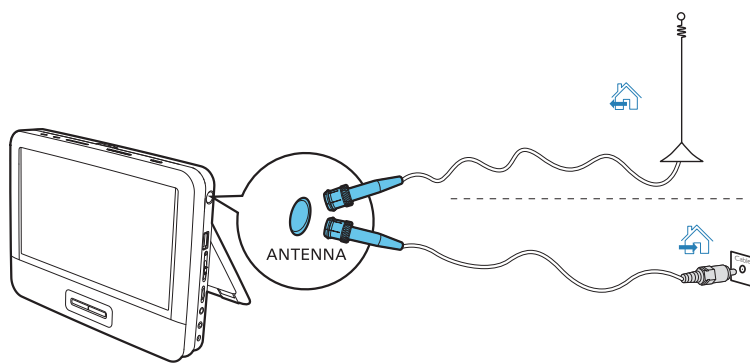


# 4 Use your player

---

## Turn on

Slide the **ON/OFF** switch to the **ON** position.

 ↳ The **Ⓢ** indicator turns on (green).

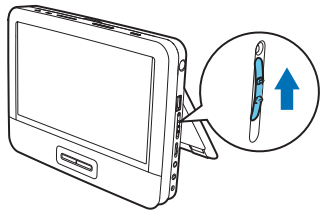

---

## Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **SETUP**.  
↳ The setup menu is displayed.
- 2 Go to **[General] > [Language]**.
- 3 Press **▲ / ▼** to select a language option.
- 4 Press **OK** to confirm.
- 5 Press **SETUP** to exit.

---

## Play discs


- 1 Slide **OPEN ►** on the player.
- 2 Insert the disc with label side facing up.
- 3 Push down to close the disc compartment.  
↳ Play starts automatically. If not, press **► || / OK**.

 
- If a menu is displayed, select an item, then press ►||/OK to start play.
- To pause, press ►||/OK. Press again to resume play.
- To stop, press ■ twice.
- To select the previous/next item, press ◀ or ▶.
- To start search within video/audio, press ◀ or ▶ once or more.

---

## Play from USB

You can play DivX, MP3, or JPEG files that are stored on a USB storage device.

- 1 Press **SOURCE** repeatedly until you select the USB source.
- 2 Connect the USB device to the  port.  
↳ The content menu is displayed.

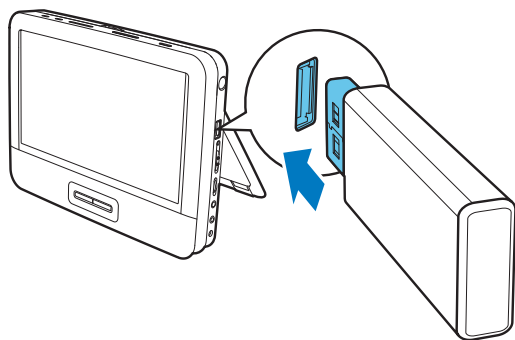

- 3 Select a file, then press ►||/OK.  
↳ Play starts.
- 4 To stop play, press ■.

---

## Play options

- 1 During play, press **OPTIONS** to select some play options.
- 2 Follow the on-screen instructions.

# 5 Watch TV



## Note

- Before you start, ensure that you have connected the antenna to the player.
- Make sure you are in an area with sufficient DTTV signal coverage. You can check the signal coverage with the TV broadcast authority of your country or visit [www.philips.com/support](http://www.philips.com/support).

---

 
## First time settings

- 1** Press **SOURCE** repeatedly to switch to the DTTV mode.
  - ↳ You are prompted to select your country.
- 2** Select your country, then press **OK** to confirm.
  - ↳ You are prompted to perform auto channel search.
- 3** Select [**Auto search**], then press **OK** to confirm.
  - ↳ Auto channel search starts.
  - ↳ When auto channel search is complete, the total number of TV and radio channels found is displayed.
  - ↳ To view the programs of the first found channel, press **OK**.
  - ↳ To change channels, press **P (age) +/-**.

## Manual search

You can search TV channels manually.

- 1 Press **SETUP**.
- 2 Select **[DTV]** > **[Manual search]**, then press **OK** to confirm.

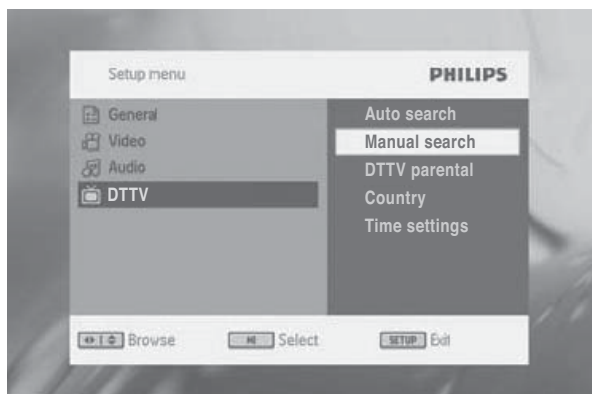

- 3 Select channel number, then press **OK** to confirm.

## Set time

- 1 Press **SETUP**.
- 2 Select **[DTV]** > **[Time settings]**.

To set time format:

- 1 Select **[Time format]**.
- 2 Select an option, then press **OK** to confirm.
  - **[24hrs]**
  - **[12 hrs]**

To select time setting mode:

- 1 Select **[Setting mode]**.
- 2 Select an option, then press **OK** to confirm.
  - **[Auto time setting]**: The time is updated automatically according to the broadcasted TV channel.
  - **[Manual time setting]**: Set your time manually.



To set time zone:

- 1 Select **[Setting mode]** > **[Manual time setting]**, then press **OK** to confirm.
- 2 Select **[Time zone]**.
  - Select GMT +01:00 for Germany and Central Europe (time difference with regard to the Greenwich mean time)

 
To set summer time/DST:

- 1 Select **[Setting mode]** > **[Manual time setting]**, then press **OK** to confirm.
- 2 Select **[Summer time/DST]**.
  - If it is not summer time at the moment, select **[Off]**.

---

## View program information

To view brief information of the current program, press **i+**.

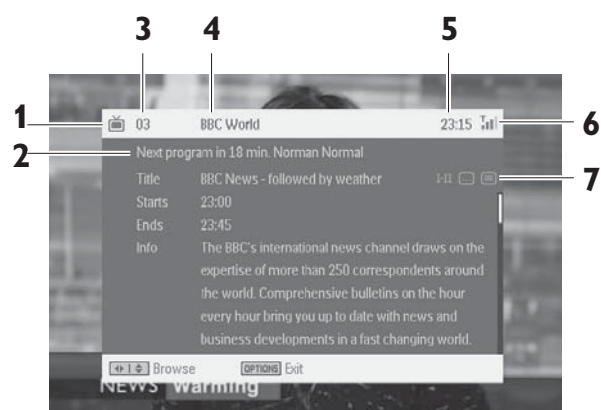

- ① **TV program**  
Radio program
- ② **Next program's information**
- ③ **Program number**
- ④ **Program name**
- ⑤ **Local time**
- ⑥ **Signal length indicator**
- ⑦ **Program information icons**

**I-II** : Program containing different audio languages. You can press **I-II** to access this functions.

 : Program containing subtitles. You can press  to access this function.

 : Program containing Teletext. You can press  to access this function.

---

## Access teletext

If the current channel has teletext available,  is shown.

- To access teletext, press .



### Tip

- The program may request using color keys to access or control the viewing features. Follow the instructions on the teletext screen.

---

## Use the electronic program guide

EPG is an on-screen guide available for digital TV programs. You can navigate, select and view programs by time or title.

- 1 Select a channel.
- 2 Press **EPG**.  
↳ The Electronic Program Guide appears.
- 3 Press **▼▲** to select a program.
- 4 Press **OK**.  
↳ The brief information of this program is displayed.
- 5 To exit the EPG menu, press **EPG**.

---

## Rearrange the channel list

- 1 Press **OPTIONS**.
- 2 Select **[Channel Edit]**.  
↳ The channel list is displayed.
- 3 Select a channel.
- 4 Follow the on-screen instructions to move the channel up or down.

---

## Manage channels

- 1 Press **OK**.  
↳ The channel list is displayed.
- 2 Select a channel.
  - To lock the channel, press the red button.
  - To hide the channel, press the yellow button.
  - To set the channel your favorite one, press the green button.

## 6 Adjust settings

To maximize your play experience, use **SETUP** to fine tune your settings.

- 1 Press **SETUP**.
  - ↳ The setup menu is displayed.
- 2 Use navigation keys to select an option and press **OK** to confirm.
  - To go back to the previous menu, press ◀.

[General]	
[Language]	Select on-screen display language
[PBC settings]	Set playback control function on/off.
[Power save]	Set power saving mode.
[DivX (VOD)]	Get DivX registration code.
[DivX subtitles]	Select DivX subtitle language.
[Parental(DVD)]	Select parental options.
[Set password]	Change existing password.
[Factory settings]	Restore factory settings.
[Video]	
[TV display]	Set screen display aspect ratio.
[TV standard]	Set video output format to TV system.
[Audio]	
[Dolby]	Set Dolby output.
[DTTV]	
[Auto search]	Search channels automatically.
[Manual search]	Search channels manually.
[DTTV Parental]	Select parental options.
[Country]	Select specific country.
[Time settings]	Set time.
[Version]	Check the version information.

- 3 Press **SETUP** to exit.

# 7 Product information



## Note

- Product information is subject to change without prior notice.

Dimensions	210 × 170 × 39.5 mm
Weight	0.84 kg
Power supply	Input: 100-240V, 50/60Hz Output: DC 9-12V, 1.0A
Operating temperature range	0-50°C
Laser wavelength	650 nm
Video system	NTSC/PAL

# 8 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of the player.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using the player, check the following points before requesting service. If the problem remains unsolved, register your player and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

### No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

### No sound

- Ensure that the AV cable is connected correctly.

### No response to the remote control

- Ensure that the path between the remote control and the player is clear from obstacles.
- From a close distance, point the remote control directly at the player.
- Replace the remote control batteries.
- The function does not work for this disc. Refer to the disc instructions.

### Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

### **Cannot play disc**

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

### **No response to operating commands**

- The operation is not permitted by the disc.

### **The player feels warm**

 
- When the player is in use for a long period of time, its surface will be heated. This is normal.

### **No/weak signal displayed on the screen**

- DVB-T signal is too weak or out of DVB-T signal covering area.
- Make sure you are in an area with sufficient coverage.
- Receiving DVB-T in a driving car may cause signal problems.

### **Loss of current TV programs when travelling to another country**

- 1** Press **SETUP**.
- 2** Select **[DTTV] > [Country]**.
- 3** Select you country.
- 4** Select **[Auto search]**.

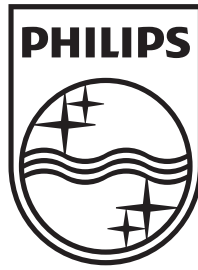

© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

PD9003\_12\_UM\_V2.0

