

Inspiron 3891

Setup and Specifications



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.


 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents


Chapter 1: Set up your computer.....	4
Chapter 2: Views of Inspiron 3891.....	9
Front.....	9
Back.....	11
Back panel.....	12
Chapter 3: Specifications of Inspiron 3891.....	13
Dimensions and weight.....	13
Processors.....	13
Chipset.....	14
Operating system.....	14
Memory.....	15
External ports.....	15
Internal slots.....	16
Ethernet.....	16
Wireless module.....	16
Audio.....	17
Storage.....	17
Media-card reader.....	18
Power supply.....	18
GPU—Integrated.....	18
GPU—Discrete.....	19
Operating and storage environment.....	19
Chapter 4: Getting help and contacting Dell.....	21

Set up your computer

1. Connect the keyboard and mouse.

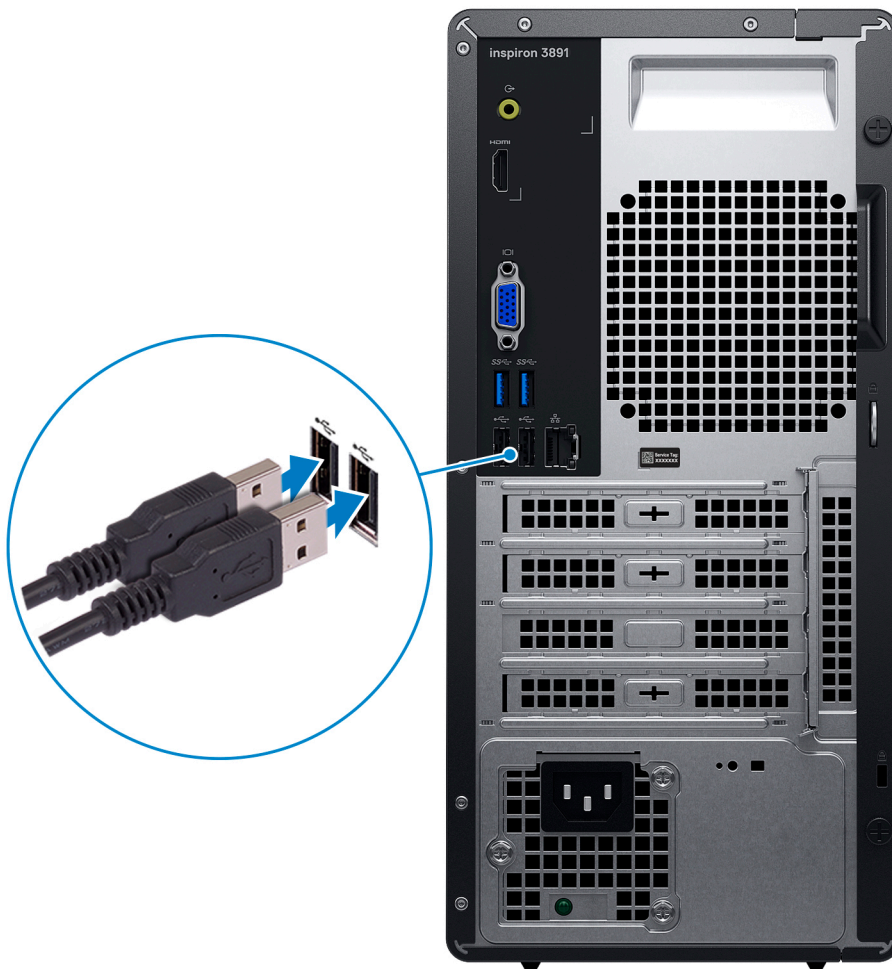

2. Connect to your network using a cable, or connect to a wireless network.

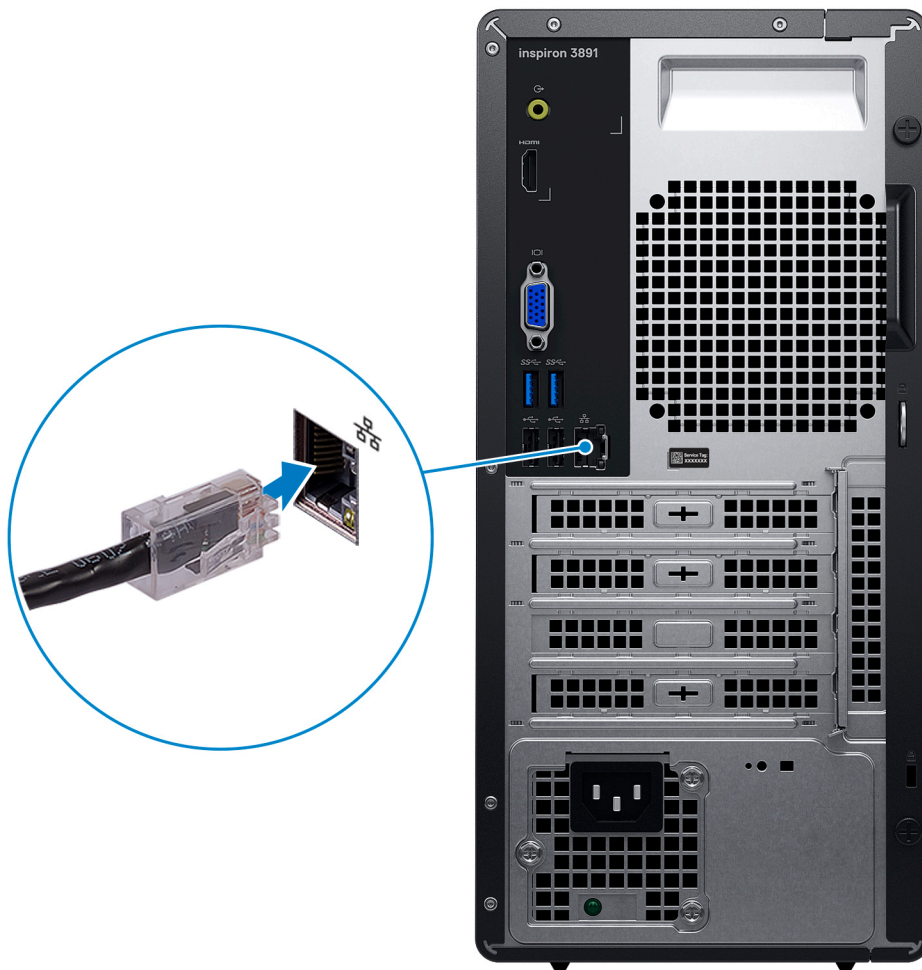


3. Connect the display.



NOTE: If you ordered your computer with a discrete graphics card, the HDMI and VGA ports on the back panel of your computer may be covered. Connect the display to the discrete graphics card.

4. Connect the power cable.

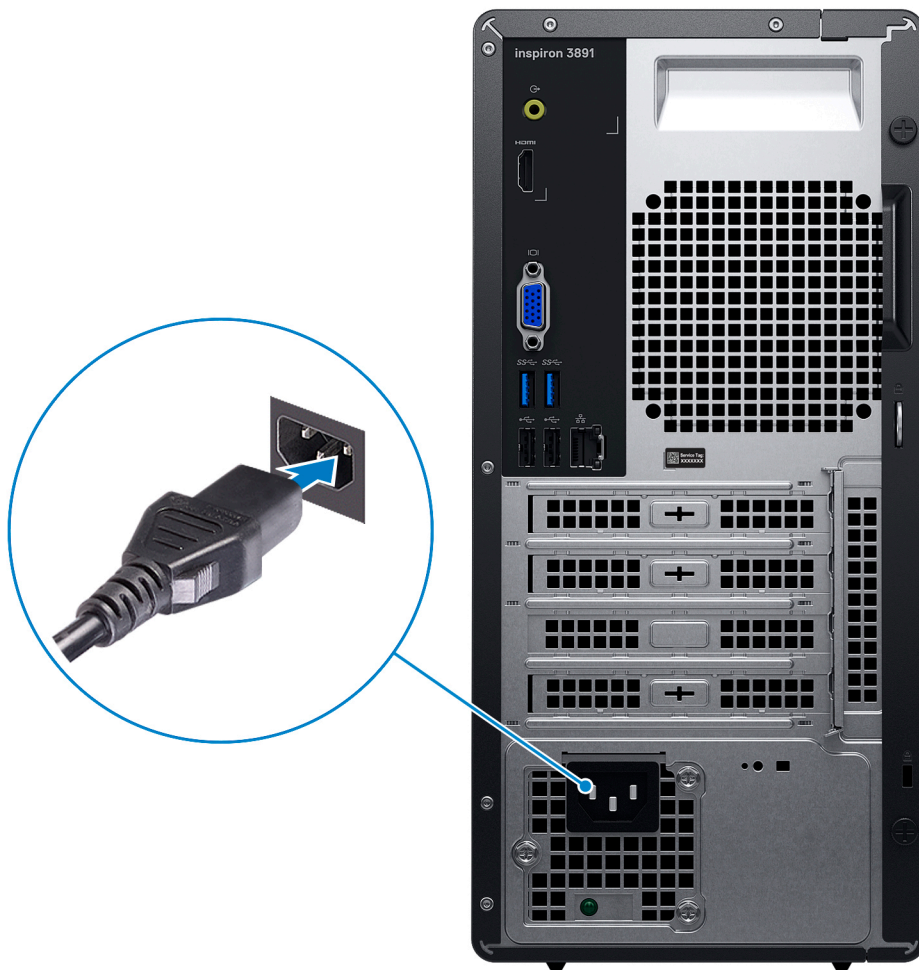

5. Press the power button.



6. Finish operating system setup.

For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, see the knowledge base articles [000131655](#) and [000131676](#) at www.dell.com/support.

For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.
 - **NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

7. Locate and use Dell apps from the Windows Start menu—Recommended

Table 1. Locate Dell apps






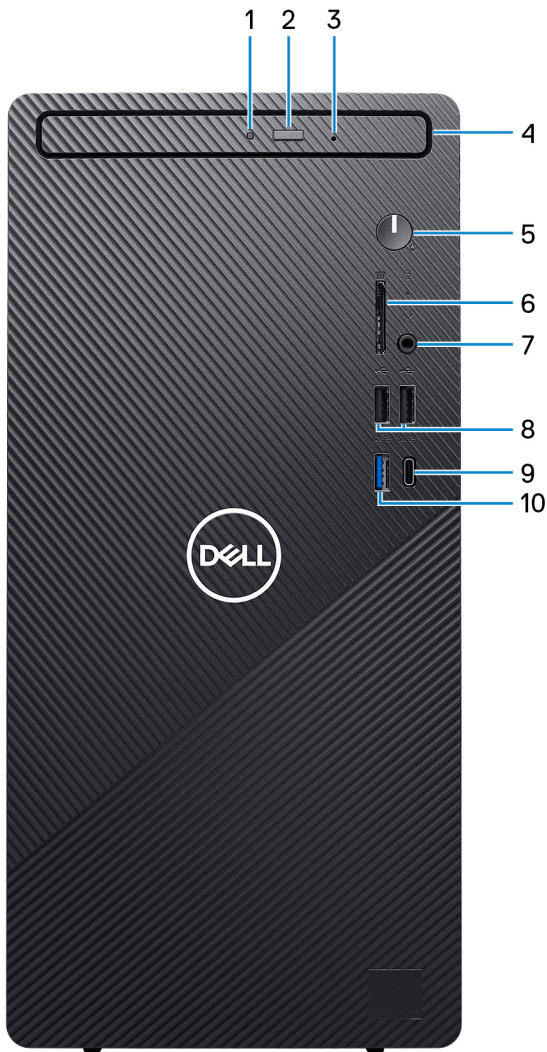
Resources	Description
	My Dell Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.

Table 1. Locate Dell apps (continued)

Resources	Description
	<p>SupportAssist</p> <p>SupportAssist proactively and predictively identifies hardware and software issues on your computer and automates the engagement process with Dell Technical support. It addresses performance and stabilization issues, prevents security threats, monitors, and detects hardware failures. For more information, see <i>SupportAssist for Home PCs User's Guide</i> at www.dell.com/serviceabilitytools. Click SupportAssist and then, click SupportAssist for Home PCs.</p> <p> NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>
	<p>Dell Update</p> <p>Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the knowledge base article 000149088 at www.dell.com/support.</p>
	<p>Dell Digital Delivery</p> <p>Download software applications, which are purchased but not preinstalled on your computer. For more information about using Dell Digital Delivery, see the knowledge base article 000129837 at www.dell.com/support.</p>

Views of Inspiron 3891

Front



1. Optical-drive activity light

The Optical-drive activity light turns on when the computer reads from or writes to an optical drive.

2. Optical-drive eject button

Press to open the optical drive tray.

3. Optical-drive emergency eject pinhole

If the optical-drive eject button fails, use the pinhole to eject the optical-drive tray manually.

NOTE: For more information about manually ejecting optical-drive trays, see the knowledge base article [000139665](https://www.dell.com/support/article/000139665) at www.dell.com/support.


4. Optical drive (optional)

An optical drive reads from and writes to CDs and DVDs.

5. Power button

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 10 seconds to force shut-down the computer.

 **NOTE:** You can customize the power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.

6. SD-card slot (optional)

Reads from and writes to the SD card. The computer supports the following card types:

- Secure Digital (SD)
- Secure Digital High Capacity (SDHC)
- Secure Digital Extended Capacity (SDXC)

7. Global headset jack


Connect headphones or a headset (headphone and microphone combo).

8. USB 2.0 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

9. USB 3.2 Gen 1 (Type-C) port


Connect to external storage devices. Provides data transfer speeds up to 5 Gbps.

 **NOTE:** This port does not support video/audio streaming.

10. USB 3.2 Gen 1 port

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

Back

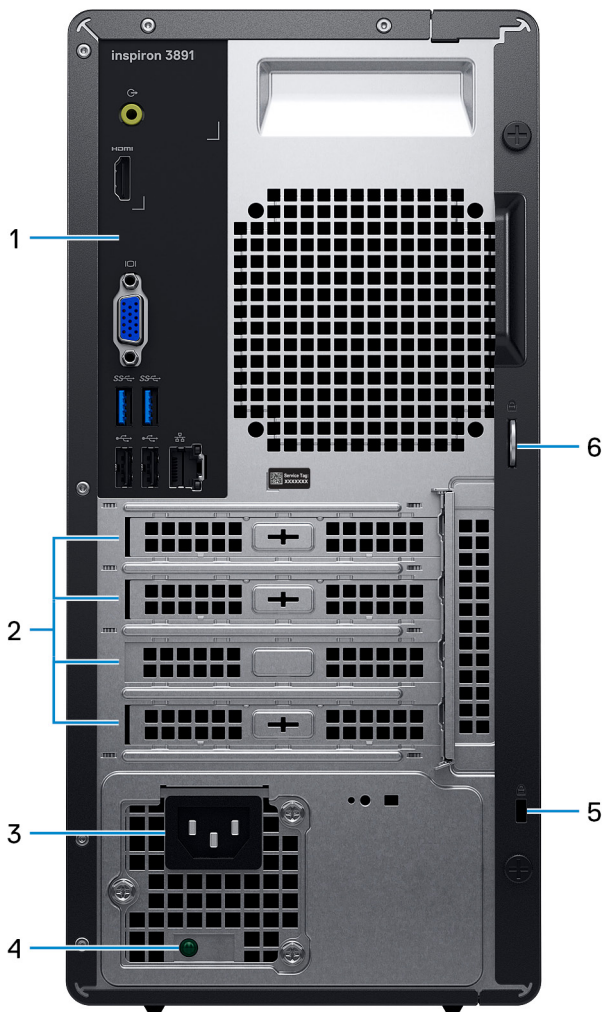

1. Back panel

Connect USB, audio, video, and other devices.

2. Expansion-card slots

Provide access to ports on any installed PCI Express cards.

3. Power port

Connect a power cable to provide power to your computer.

4. Power-supply diagnostics light

Indicates the power-supply state.


5. Security-cable slot (for Kensington locks)

Connect a security cable to prevent unauthorized movement of your computer.

6. Padlock rings

Attach a standard padlock to prevent unauthorized access to the interior of your computer.

Back panel

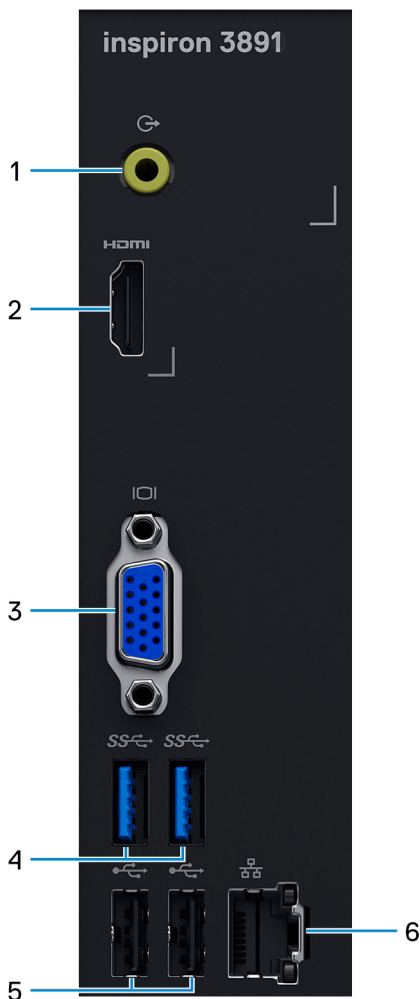

1. Line-out port

Connect speakers.

2. HDMI 1.4b port

Connect to a TV or another HDMI-in enabled device. Provides video and audio output.

NOTE: This port is covered by mylar for computers shipped with 11th Generation Intel Core i5-11400F and 11th Generation Intel Core i7-11700F processors.

3. VGA port

Connect an external display or a projector.

NOTE: This port is covered for computers shipped with 11th Generation Intel Core i5-11400F and 11th Generation Intel Core i7-11700F processors.

4. USB 3.2 Gen 1 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

5. USB 2.0 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

6. Network port


Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

Specifications of Inspiron 3891

Dimensions and weight

The following table lists the height, width, depth, and weight of your Inspiron 3891.

Table 2. Dimensions and weight

Description	Values
Height:	
Front height	324.30 mm (12.77 in.)
Rear height	324.30 mm (12.77 in.)
Width	154 mm (6.06 in.)
Depth	293 mm (11.54 in.)
Weight  NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.	7.02 kg (15.47 lb)

Processors

The following table lists the details of the processors supported by your Inspiron 3891.

Table 3. Processors

Processors	Wattage	Core count	Thread count	Speed	Cache
10 th Generation Intel Core i3-10105	65 W	4	8	Up to 4.4 GHz	6 MB
10 th Generation Intel Core i5-10400	65 W	6	12	Up to 4.3 GHz	12 MB
10 th Generation Intel Core i5-10400F	65 W	6	12	Up to 4.3 GHz	12 MB
10 th Generation Intel Core i5-10700	65 W	8	16	Up to 4.8 GHz	16 MB
10 th Generation Intel Core i5-10700F	65 W	8	16	Up to 4.8 GHz	16 MB
11 th Generation Intel Core i5-11400	65 W	6	12	Up to 4.4 GHz	12 MB

Table 3. Processors (continued)

Processors	Wattage	Core count	Thread count	Speed	Cache
11 th Generation Intel Core i5-11400F	65 W	6	12	Up to 4.4 GHz	12 MB
11 th Generation Intel Core i7-11700	65 W	8	16	Up to 4.9 GHz	16 MB
11 th Generation Intel Core i7-11700F	65 W	8	16	Up to 4.9 GHz	16 MB
Intel Pentium Gold G6405	58 W	2	4	Up to 4.1 GHz	4 MB
Intel Celeron G5905	58 W	2	2	Up to 3.5 GHz	4 MB

Chipset

The following table lists the details of the chipset supported by your Inspiron 3891.

Table 4. Chipset

Description	Option one	Option two	Option three
Processors	10 th Generation Intel Core i3/i5/i7	11 th Generation Intel Core i5/i7	Intel Pentium/Celeron
Chipset	Intel B560	Intel B560	Intel B560
DRAM bus width	64-bit	64-bit	64-bit
Flash EPROM	32 MB	32 MB	32 MB
PCIe bus	Up to Gen3	Up to Gen3	Up to Gen3

Operating system


Your Inspiron 3891 supports the following operating systems:

- Windows 11 Home, 64-bit
- Windows 11 Home in S-mode, 64-bit
- Windows 11 Pro, 64-bit
- Windows 10 Home, 64-bit
- Windows 10 Pro, 64-bit
- Ubuntu 20.04 LTS, 64-bit

Memory

The following table lists the memory specifications of your Inspiron 3891.

Table 5. Memory specifications

Description	Values
Memory slots	Two UDIMM slots
Memory type	DDR4
Memory speed	2933 MHz, 2666 MHz  NOTE: 2933 MHz speed memory modules are only available for computers that are shipped with 11 th Generation Intel Core i5/i5F/i7/i7F processors.
Maximum memory configuration	64 GB
Minimum memory configuration	4 GB
Memory size per slot	4 GB, 8 GB, 12 GB, 16 GB, 32 GB
Memory configurations supported	<ul style="list-style-type: none">• 4 GB, 1 x 4 GB, DDR4, 2666 MHz, 2933 MHz• 8 GB, 1 x 8 GB, DDR4, 2666 MHz, 2933 MHz• 8 GB, 2 x 4 GB, dual-channel, DDR4, 2666 MHz, 2933 MHz• 12 GB, 1 x 4 GB + 1 x 8 GB, DDR4, 2666 MHz, 2933 MHz• 16 GB, 1 x 16 GB, DDR4, 2666 MHz, 2933 MHz• 16 GB, 2 x 8 GB, dual-channel, DDR4, 2666 MHz, 2933 MHz• 32 GB, 1 x 32 GB, DDR4, 2666 MHz, 2933 MHz• 32 GB, 2 x 16 GB, dual-channel, DDR4, 2666 MHz, 2933 MHz• 64 GB, 2 x 32 GB, dual-channel, DDR4, 2666 MHz, 2933 MHz

External ports

The following table lists the external ports of your Inspiron 3891.

Table 6. External ports


Description	Values
Network port	One RJ-45 port
USB ports	<ul style="list-style-type: none">• Three USB 3.2 Gen 1 ports• One USB 3.2 Gen 1 Type-C port• Four USB 2.0 ports
Audio port	One global headset jack (front) and Line-out audio port (rear)
Video port	One HDMI 1.4b port and one VGA port  NOTE: The access to these ports is blocked for computers that are shipped with 11 th Generation Intel Core i5-11400F and 11 th Generation Intel Core i7-11700F processors.

Table 6. External ports (continued)

Description	Values
Media-card reader	Supported, optional
Security	One Kensington lock slot and one padlock loop

Internal slots

The following table lists the internal slots of your Inspiron 3891.

Table 7. Internal slots

Description	Values
PCIe	One full-height Gen 3 PCIe x16 slot and One full-height Gen 3 PCIe x1 slot
SATA	One SATA 2.0 slot for slim optical drive and two SATA 3.0 slots for 3.5-inch/2.5-inch hard drive
M.2	<ul style="list-style-type: none"> One M.2 2230 slot for Wi-Fi/Bluetooth One M.2 2230/2280 slot for solid-state drive <p>NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article 000144170 at www.dell.com/support.</p>

Ethernet

The following table lists the wired Ethernet Local Area Network (LAN) specifications of your Inspiron 3891.

Table 8. Ethernet specifications

Description	Values
Model number	Realtek RTL8111HSD
Transfer rate	10/100/1000 Mbps

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Inspiron 3891.

Table 9. Wireless module specifications

Description	Option one	Option two	Option three
Model number	Qualcomm QCA61x4A	Qualcomm QCA9377	Intel AX201
Transfer rate	Up to 867 Mbps	Up to 433 Mbps	Up to 2400 Mbps
Frequency bands supported	2.4 GHz/5 GHz	2.4 GHz/5 GHz	2.4 GHz/5 GHz
Wireless standards	<ul style="list-style-type: none"> Wi-Fi 802.11a/b/g Wi-Fi 4 (Wi-Fi 802.11n) Wi-Fi 5 (Wi-Fi 802.11ac) 	<ul style="list-style-type: none"> Wi-Fi 802.11 a/b/g Wi-Fi 4 (Wi-Fi 802.11n) Wi-Fi 5 (Wi-Fi 802.11ac) 	<ul style="list-style-type: none"> Wi-Fi 802.11a/b/g Wi-Fi 4 (Wi-Fi 802.11n) Wi-Fi 5 (Wi-Fi 802.11ac)

Table 9. Wireless module specifications (continued)

Description	Option one	Option two	Option three
			<ul style="list-style-type: none"> Wi-Fi 6 (WiFi 802.11ax)
Encryption	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP TKIP 	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP TKIP 	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP TKIP
Bluetooth	Bluetooth 5.0	Bluetooth 5.0	Bluetooth 5.1

Audio

The following table lists the audio specifications of your Inspiron 3891.

Table 10. Audio specifications

Description	Values
Audio controller	C-media CM6548
Stereo conversion	Supported
Internal audio interface	USB 2.0
External audio interface	Global headset jack and Line-out audio port

Storage

This section lists the storage options on your Inspiron 3891.

Your Inspiron 3891 supports one of the following storage configurations:

- One 3.5-inch hard-disk drive
- One M.2 2230/2280 solid-state drive
- One M.2 2230/2280 solid-state drive + One 3.5-inch hard-disk drive

The primary drive of your Inspiron 3891 varies with the storage configuration. For computers:

- with a solid-state drive, the solid-state drive is the primary drive
- without a solid-state drive, the hard-disk drive is the primary drive

Table 11. Storage specifications

Storage type	Interface type	Capacity
3.5-inch SATA hard drive	SATA AHCI, up to 6 Gbps	Up to 2 TB
M.2 2230, PCIe NVMe, solid-state drive	PCIe Gen 3 NVMe, up to 32 Gbps	Up to 512 GB
Slim optical drive, optional	SATA AHCI, up to 1.5 Gbps	N/A

Media-card reader

The following table lists the media cards supported by your Inspiron 3891.

Table 12. Media-card reader specifications

Description	Values
Media-card type	SD-card slot
Media-cards supported	<ul style="list-style-type: none">Secure Digital (SD)Secure Digital High Capacity (SDHC)Secure Digital Extended Capacity (SDXC)
i NOTE: The maximum capacity supported by the media-card reader varies depending on the standard of the media card installed in your computer.	

Power supply

The following table lists the power supply specifications of your Inspiron 3891.

Table 13. Power supply specifications

Description		Option 1	Option 2
Type		260 W Bronze	360 W Bronze
Input voltage		90 VAC–264 VAC	90 VAC–264 VAC
Input frequency		47 Hz–63 Hz	47 Hz–63 Hz
Input current (maximum)		4.20 A	5 A
Output current (continuous)		16.50 A	18 A
Rated output voltage		12 VDC	12 VDC
Temperature range:			
	Operating	5°C to 45°C (41°F to 113°F)	5°C to 45°C (41°F to 113°F)
	Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Inspiron 3891.

Table 14. GPU—Integrated

Controller	External display support	Memory size	Processor
Intel HD Graphics	One HDMI 1.4b port and one VGA port i NOTE: The access to these ports is blocked for computers that are shipped with 11 th Generation Intel	Shared memory	11 th Generation Intel Core i5/i7

Table 14. GPU—Integrated (continued)

Controller	External display support	Memory size	Processor
	Core i5-11400F and 11 th Generation Intel Core i7-11700F processors.		
Intel HD Graphics	One HDMI 1.4b port and one VGA port	Shared memory	10 th Generation Intel Core i3
Intel HD Graphics	One HDMI 1.4b port and one VGA port	Shared memory	Intel Pentium/Celeron

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Inspiron 3891.

Table 15. GPU—Discrete

Controller	External display support	Memory size	Memory type
NVIDIA GeForce GTX 1660 Super	<ul style="list-style-type: none"> One HDMI 2.0b port One DisplayPort 1.4 port One DVI-D port 	6 GB	GDDR6
NVIDIA GeForce GTX 1650 Super	<ul style="list-style-type: none"> One HDMI 2.0b port One DisplayPort 1.4 port One DVI-D port 	4 GB	GDDR6
NVIDIA GeForce GT 1030	<ul style="list-style-type: none"> One HDMI 2.0b port One DVI-D port 	2 GB	GDDR5
NVIDIA GeForce GT 730	<ul style="list-style-type: none"> One HDMI 1.4 port One DVI-D port One VGA port 	2 GB	GDDR5

Operating and storage environment


This table lists the operating and storage specifications of your Inspiron 3891.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 16. Computer environment

Description	Operating	Storage
Temperature range	10°C to 35°C (50°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	20% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.2 m to 3048 m (-49.87 ft to 10000 ft)	-15.2 m to 10668 m (-49.87 ft to 35000 ft)

Table 16. Computer environment (continued)

Description	Operating	Storage
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		

* Measured using a random vibration spectrum that simulates user environment.



† Measured using a 2 ms half-sine pulse when the hard drive is in use.

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 17. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows www.dell.com/support/linux
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> 1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.