




**GB**

**PROGRAMME CHART**

**A. "Door open" indication**

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

- B. "Service" indication**
- C. "Water tap closed" indication**
- D. "Clean filter" indication**

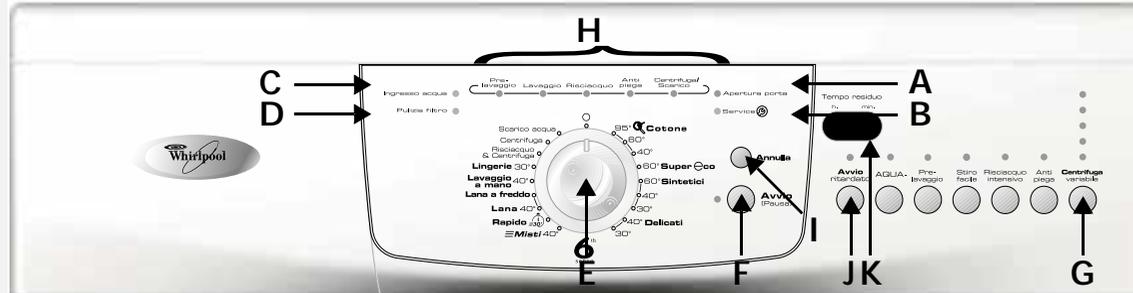

**E. Programme selector**

- F. "Start (Pause)" button**
- G. Spin speed selector**
- H. Programme sequence indicator**



- I. "Reset" button**
- J. "Start delay" button**
- K. Time display**

| Programme  | Care Labels                         | Max Load kg | Type of wash/Notes<br><i>- For temperature selection, respect the manufacturer's recommendations on the care label</i>   | Detergents and additives |           |          | Special options                |            |                       |                           |                                      |                       | Max Spin Speed rpm |                                    |
|--|-------------------------------------|-------------|--|--------------------------|-----------|----------|--------------------------------|------------|-----------------------|---------------------------|--------------------------------------|-----------------------|--------------------|------------------------------------|
|  |                                     |             |  | Pre-wash                 | Main wash | Softener | Start delay<br>Avvio ritardato | AQUA-AQUA- | Pre-wash Pre-lavaggio | Easy ironing Stiro facile | Intensive rinse Risciacquo intensivo | Rinse hold Anti piega |                    | Variable spin Centrifuga variabile |
| <b>Cotton / Antibacterial</b><br>40 - 60 - 95 °C | <b>Cotone</b><br>40 - 60 - 95 °C    |             | 8.0<br>Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.<br>Selecting "Cotton 95", this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.   | *                        | Yes       | *        | *                              | *          | *                     | *                         | *                                    | *                     | *                  | max.                               |
| <b>SuperEco</b><br>60 °C                         | <b>SuperEco</b><br>60 °C            |             | 8.0<br>Normally to heavily soiled and robust bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.<br><i>Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start delay" accordingly.</i> | —                        | Yes       | *        | *                              | —          | —                     | —                         | *                                    | *                     | *                  | max.                               |
| <b>Synthetics</b><br>30 - 40 - 60 °C             | <b>Sintetici</b><br>30 - 40 - 60 °C |             | 3.0<br>Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.  | *                        | Yes       | *        | *                              | *          | *                     | *                         | *                                    | *                     | *                  | max.                               |
| <b>Delicates</b><br>30 - 40 °C                   | <b>Delicati</b><br>30 - 40 °C       |             | 1.5<br>Curtains and delicate clothing, dresses skirts, shirts and blouses.   | *                        | Yes       | *        | *                              | —          | *                     | —                         | —                                    | *                     | *                  | 1000 <sup>1)</sup>                 |
| <b>Daily load</b><br>40 °C                       | <b>Misti</b><br>40 °C               |             | 4.0<br>Slightly to normally soiled textiles made of cotton and/or synthetics.  | —                        | Yes       | *        | *                              | —          | —                     | *                         | *                                    | *                     | *                  | max.                               |
| <b>Quick wash</b><br>30 °C                       | <b>Rapido</b><br>30 °C              |             | 4.0<br>Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.  | —                        | Yes       | *        | *                              | —          | —                     | —                         | —                                    | *                     | *                  | max.                               |
| <b>Wool</b><br>Cold - 40 °C                      | <b>Lana</b><br>A freddo - 40 °C     |             | 1.0<br>Only woollens labelled with the Woolmark and identified as machine washable.<br>This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.<br><i>If you select "Rinse Hold" do not leave items to soak for too long.</i>   | —                        | Yes       | *        | *                              | —          | —                     | —                         | —                                    | *                     | *                  | 1000 <sup>1)</sup>                 |
| <b>Handwash</b><br>40 °C                         | <b>Lavaggio a mano</b><br>40 °C     |             | 1.0<br>Textiles made of linen, silk, wool and viscose marked as "handwashable".<br>This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.<br><i>If you select "Rinse Hold" do not leave items to soak for too long. A very gentle spin is used in this programme.</i>   | —                        | Yes       | *        | *                              | —          | —                     | —                         | —                                    | *                     | *                  | 400 <sup>2)</sup>                  |
| <b>Lingerie</b><br>30 °C                         | <b>Lingerie</b><br>30 °C            |             | 1.0<br>Textiles made of silk, linen, wool and viscose marked as "handwashable".<br>Up to a temperature of 30°C, this cycle is particularly suitable to treat delicate lingerie (use of a laundry net strongly recommended).  | —                        | Yes       | *        | *                              | —          | —                     | —                         | —                                    | *                     | *                  | 400 <sup>2)</sup>                  |
| <b>Rinse &amp; Spin</b>                          | <b>Risciacquo &amp; Centrifuga</b>  | —           | 8.0<br><i>Same as the last rinse and the final spin in the "Cotton" programme.</i>   | —                        | —         | *        | *                              | —          | —                     | —                         | *                                    | *                     | *                  | max.                               |
| <b>Spin</b>                                      | <b>Centrifuga</b>                   | —           | 8.0<br><i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>   | —                        | —         | —        | *                              | —          | —                     | —                         | —                                    | —                     | *                  | max.                               |
| <b>Drain</b>                                     | <b>Scarico acqua</b>                | —           | —<br><i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>  | —                        | —         | —        | *                              | —          | —                     | —                         | —                                    | —                     | —                  | —                                  |

<sup>1)</sup> optional / Yes : dosing required  
<sup>2)</sup> For improved garment care, spin speed is restricted to 1000 rpm in this programme.  
 For improved garment care, spin speed is restricted to 400 rpm in this programme.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0620

Whirlpool is a registered trademark of Whirlpool USA

**5019 301 06322**



## CONSUMPTION DATA

| Programme              | Temperature (°C) | Load (kg) | Water (l) | Energy (kWh) | Approx. Programme Duration (hours : minutes)* |
|------------------------|------------------|-----------|-----------|--------------|---|
| Cotton                 | 95               | 8.0       | 82**      | 2.40         | 2:10  |
| Cotton                 | 60               | 8.0       | 77        | 1.52         | 2:20  |
| Cotton with "AQUA-"*** | 60               | 8.0       | 59        | 1.36         | 3:30  |
| Cotton                 | 40               | 8.0       | 77        | 0.75         | 2:05  |
| SuperEco               | 60               | 8.0       | 75        | 0.95         | 4:00  |
| Synthetics             | 60               | 3.0       | 46**      | 0.80         | 1:35  |
| Synthetics             | 40               | 3.0       | 42        | 0.40         | 1:20  |
| Delicates              | 30               | 1.5       | 60        | 0.50         | 0:45  |
| Daily load             | 40               | 4.0       | 48        | 0.50         | 1:00  |
| Quick wash             | 30               | 4.0       | 48        | 0.25         | 0:30  |
| Wool                   | 40               | 1.0       | 60        | 0.55         | 0:45  |
| Handwash               | 40               | 1.0       | 45        | 0.55         | 0:40  |
| Lingerie               | 30               | 1.0       | 45        | 0.45         | 0:40  |

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time.

\*\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme and temperature.
2. The **time display** shows the duration of the chosen programme (in hours and minutes), and the "Start (Pause)" indication lamp is flashing.
3. The **indication lamp** of the predefined spin speed lights up.

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up.

When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### "AQUA-" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption can be achieved.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.

### "Easy ironing" button

- Can be used together with "Cotton", "Synthetics" and "Daily load" programmes to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

### "Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helps people with allergies.

### "Rinse hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the programmes "Synthetics", "Daily load" and "Delicates".
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

**Note:** The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indication is on. The indication lamp next to the "Start (Pause)" button flashes.

### Terminate the "Rinse hold" option:

- Press the "Start (Pause)" button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the "Start (Pause)" button.

### "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

## START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper.

- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time by 1 to 23 hours.
- Press the "Start (Pause)" button. The indication light next to the "Start delay" button lights up and the countdown of the delay time begins.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the "Start (Pause)" button, the number of hours preselected can be reduced by pressing again the "Start delay" button.

### To cancel the "Start delay"

...before you press the "Start (Pause)" button:

- Turn the programme selector to another position or press the "Reset" button.

...after having pressed the "Start (Pause)" button:

- Press the "Reset" button for at least 3 seconds - the start delay time disappears from the time display.

## PROGRAMME START

Open the tap and press the "Start (Pause)" button. The indication lamp next to the "Start (Pause)" button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The time display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, an animation appears on the time display.

## "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel (Reset) a running programme before the end".

## RED INDICATIONS

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean filter"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.
1. Turn the programme selector to the "Off/O" position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the "Start (Pause)" button to pause the programme. The light flashes.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the "Start (Pause)" button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The "Reset" button cancels a programme before the end.

- Press the "Reset" button for at least 3 seconds. Any existing water is drained out before the door can be opened.