 


JABRA SOLEMATE MAX

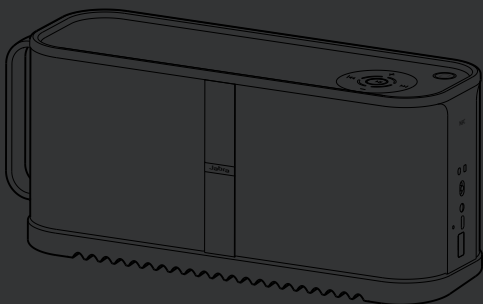

User Manual

jabra.com/solematemax

A BRAND BY

GN Netcom

© 2013 GN Netcom A/S. All rights reserved. Jabra® is a registered trademark of GN Netcom A/S. All other trademarks included herein are the property of their respective owners. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by GN Netcom A/S is under license. (Design and specifications subject to change without notice).

MADE IN CHINA
MODEL: HFS220



Declaration of Conformity can be found on
www.jabra.com/CP/US/declarations-of-conformity

1. WELCOME	4
2. SPEAKER OVERVIEW	5
2.1 POSITIONING THE SPEAKER	
2.2 TURNING ON THE SPEAKER	
3. HOW TO CHARGE THE BATTERY.....	7
3.1 BATTERY STATUS	
3.1 CHARGE YOUR PHONE	
4. HOW TO CONNECT.....	9
4.1 CONNECT USING BLUETOOTH	
4.2 CONNECT USING NFC	
4.3 CONNECT USING 3.5 MM JACK CONNECTOR	
4.3 CONNECT USING USB (PLUG & PLAY)	
5. PLAY MUSIC & CHAT	13
5.1 PLAY MUSIC	
5.2 CHAT USING MOBILE PHONE	
6. VOICE GUIDANCE	15
6.1 TURN VOICE GUIDANCE ON	
6.2 TURN VOICE GUIDANCE OFF	
6.3 SWITCH BETWEEN MALE/FEMALE VOICE GUIDANCE	
6.3 LISTEN TO VOICE GUIDANCE	
7. UPDATE FIRMWARE	17
8. SUPPORT	18
8.1 FAQ	
8.2 HOW TO CARE FOR THE JABRA SOLEMATE MAX	
9. TECHNICAL SPECIFICATIONS	20

 
1. WELCOME

Thank you for using the Jabra Solemate Max. We hope you will enjoy it!

JABRA SOLEMATE MAX FEATURES

- Two tweeters, two woofers and a custom-designed bass built into a lightweight design.
- Connect with Bluetooth or NFC and control your playlists from across the room – wirelessly.
- Portable and durable so you can venture outside.
- Massive rechargeable battery keeps the music playing on and on and on.
- Charges your smartphone (when connected via USB cable).

2. SPEAKER OVERVIEW

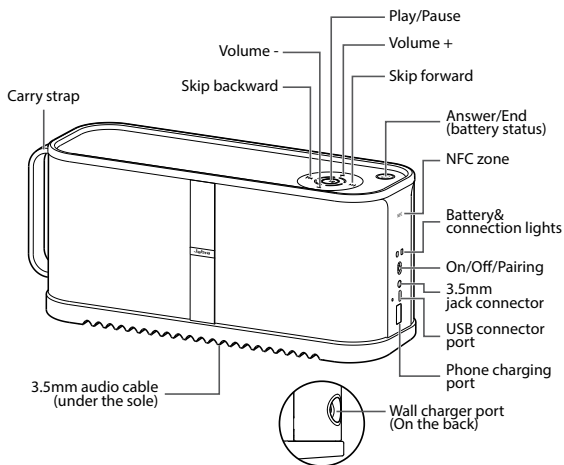

3.5 mm audio cable
(under the sole)



Micro-USB cable



 
Charger adapter



Charger cable


2.1 POSITIONING THE SPEAKER

The Jabra Solemate Max functions best when placed flat on any surface, and angled for optimal sound.

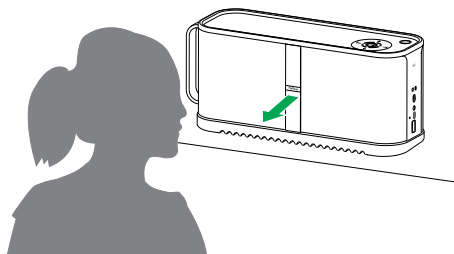


2.2 TURNING ON THE SPEAKER

  Slide the **On/Off/Pairing** switch to the On position to turn the Jabra Solemate Max on.

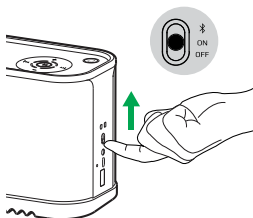


 


3. HOW TO CHARGE THE BATTERY

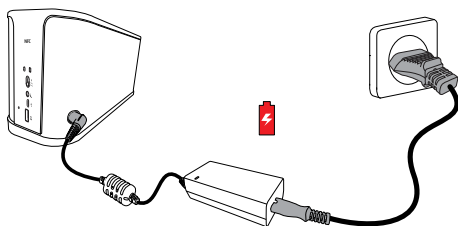The Jabra Solemate Max can only be charged using the wall charger.




3.1 BATTERY STATUS

WHAT YOU SEE	WHAT IT MEANS
	The battery is full
	The battery is half full
	The battery is low
	The battery is critically low and requires immediate charging

The Jabra Solemate Max takes approx. 2.5 hours to fully charge and can be used during charging.

3.2 CHARGE YOUR PHONE

 Your mobile phone will charge when connected to the Jabra Solemate Max using the USB cable supplied with your mobile phone.

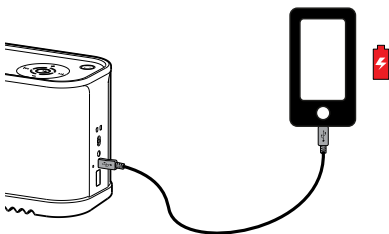


Note: Tablets and larger devices will not charge when connected to the Jabra Solemate Max.

4. HOW TO CONNECT

The Jabra Solemate Max can connect to almost everything.

4.1 CONNECT USING BLUETOOTH

 1. Hold the **On/Off/Pairing** switch in the Up position for 3 seconds.
2. Pairing mode will be announced, and the Bluetooth light will flash.
3. Follow the voice-guided pairing instructions to connect.

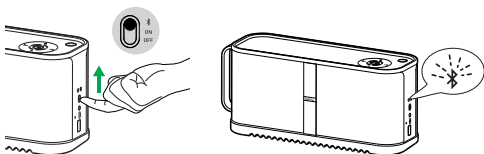


Note: If connection is lost (e.g. out of range) tap the Answer/end button when the Jabra Solemate Max is in range and powered on to reconnect.

4.2 CONNECT USING NFC


NFC is a faster, simpler way to connect using Bluetooth.

 1. Ensure that NFC is enabled on your mobile phone.
2. Locate and gently touch the **NFC zone** on your mobile phone against the **NFC zone** on the Jabra Solemate Max.

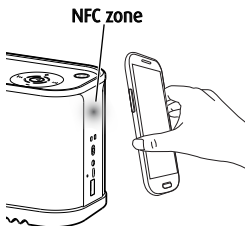

4.3 CONNECT USING 3.5 MM JACK CONNECTOR

 
Connect the Jabra Solemate Max to any audio device with a 3.5 mm Jack Connector, using the supplied audio cable. The microphone is disabled on the Jabra Solemate Max when connected via the 3.5 mm Jack Connector.

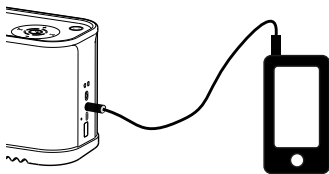

NOTE: When a mobile phone is connected to the 3.5 mm Jack Connector, Bluetooth is disabled and wireless devices will not be able to play music.

4.4 CONNECT USING USB (PLUG & PLAY)

 Plug the Jabra Solemate Max into any available USB port on your PC. The Jabra Solemate Max microphone is enabled when connected via USB.

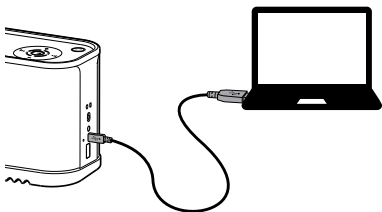
 




NOTE: If you cannot hear anything, set the Jabra Solemate Max as the default audio device under 'Sound and Audio devices' in Windows.

5. PLAY MUSIC & CHAT

5.1 PLAY MUSIC

Music played on your connected device will automatically transfer to the Jabra Solemate Max. If you cannot hear audio, ensure the device is connected via Bluetooth, NFC, USB or 3.5mm Jack Connector, or turn up the speaker volume. The volume can be adjusted on the speaker, or on the connected device.




	MUSIC FUNCTION	HOW TO DO IT
	Play/pause music	Tap the Play/pause button
	Adjust speaker volume	Tap the Volume + or Volume - button
	Skip track	Tap the Skip forward or Skip backward button
	Battery status	Tap the Answer/end button when not on a call

The music can also be controlled (skip tracks, pause music etc) using the connected device.

5.2 CHAT USING MOBILE PHONE

 When the Jabra Solemate Max is connected to your mobile phone via Bluetooth, NFC or USB calls will automatically transfer to the Jabra Solemate, which will function as a speakerphone.

Note: Music will automatically pause during a call, and will resume when the call is ended.

	CALL FUNCTION	HOW TO DO IT
	Adjust speaker volume	Tap the Volume + or Volume - button
	Answer/end call	Tap the Answer/end button
	Reject call	Double-tap the Answer/end button
	Redial last number	Double-tap the Answer/end button when not on a call
	Mute/un-mute microphone	Press the Volume + and Volume - buttons at the same time

6. VOICE GUIDANCE

6.1 TURN VOICE GUIDANCE ON

1. Turn off the Jabra Solemate Max.
2. Press and hold the **Volume up** button while turning on the Jabra Solemate Max. Release the **Volume up** button when you hear 'Sound prompts on'.

6.2 TURN VOICE GUIDANCE OFF

1. Turn off the Jabra Solemate Max.
2. Press and hold the **Volume down** button while turning on the Jabra Solemate Max. Release the **Volume down** button when you hear 'Sound prompts off'.

6.3 SWITCH BETWEEN MALE/FEMALE VOICE GUIDANCE

1. Turn off the Jabra Solemate Max.
2. Press and hold the **Skip forward** button (FEMALE) or **Skip backward** button (MALE) while turning on the Jabra Solemate Max. Release the button when you hear 'Sounds prompts on'.

6.4 LISTEN TO VOICE GUIDANCE

MALE	FEMALE	WHAT YOU HEAR
		Go ahead and connect me. Use the Bluetooth setting on your phone
		Connected
		Battery full
		Battery medium
		Battery low
		Recharge battery
		Muted
		un-muted
		Redialing
		Sound prompts off
		Sound prompts on
		Connection cancelled

7. UPDATE FIRMWARE

1. Visit jabra.com/solematemax and download the latest firmware from the support section.
2. Run the downloaded file and follow the on-screen instructions to update the firmware.

NOTE: The Jabra Solemate Max must be connected to a PC via USB to update firmware.



8. SUPPORT

8.1 FAQ

View the full FAQ on Jabra.com/solematemax.

Q Why do I hear crackling noises?

A Bluetooth is a radio technology that is sensitive to objects between the speaker and the connected device. Ensure the speaker and the connected device are within range (up to 10 meters or 33 feet).

Q What is the range of the speaker?

A The Jabra Solemate Max supports the following maximum ranges: 10m/33ft.

Q I am having Bluetooth connecting problems

A You may have deleted your Jabra Solemate pairing connection in Bluetooth device. Reconnect by holding the **On/Off/Pairing** switch in the Up position for 3 seconds to put the Jabra Solemate into pairing mode, and then connect to your Bluetooth device.

Q Why can't I use Reject call or redial?

A These features are dependent on the ability of your phone to support a hands-free profile. Even if the hands-free profile is implemented, reject call and redialing are optional features that are not supported by all devices. Please consult your device manual for details.

8.2 HOW TO CARE FOR THE JABRA SOLEMATE MAX

- Always store the speaker with the power off.
- Avoid storage at extreme temperatures (below -20°C/-4°F or above 85°C/185°F). This can shorten battery life and may affect speaker operation.
- Do not expose the speaker to rain or other liquids.

9. TECHNICAL SPECIFICATIONS

JABRA SOLEMATE MAX	SPECIFICATION
Weight:	3kg
Dimensions:	H 138mm x W 102mm x L 302mm
Microphones:	Omni directional microphone
Speakers:	2 x 76 mm Mid-woofers 2 x 20 mm Tweeters 1 235mm X 92mm Passive radiator
Operating range:	10m/33ft (phone dependent)
Bluetooth version:	3.0
Paired devices:	Up to 8 paired devices, Two active device connected at a time
Supported Bluetooth profiles:	A2DP(v1.2), Hands Free Profile (v1.6), Headset profile(v1.2)
Music time:	Up to 14 hours
Standby time:	Up to 130 days
Operating temperature:	-10°C to 60°C (14°F to 140°F)
Storage temperature:	-20°C to 85°C (-4°F to 185°F)
Pairing passkey or PIN:	0000

