

**Lenovo Legion Tower 5 (26L, 5)**

# **Setup Guide**

**Lenovo**

---



The illustrations are for your reference.

See *User Guide* for USB transfer rate.

\* For selected models


# Initial setup

---

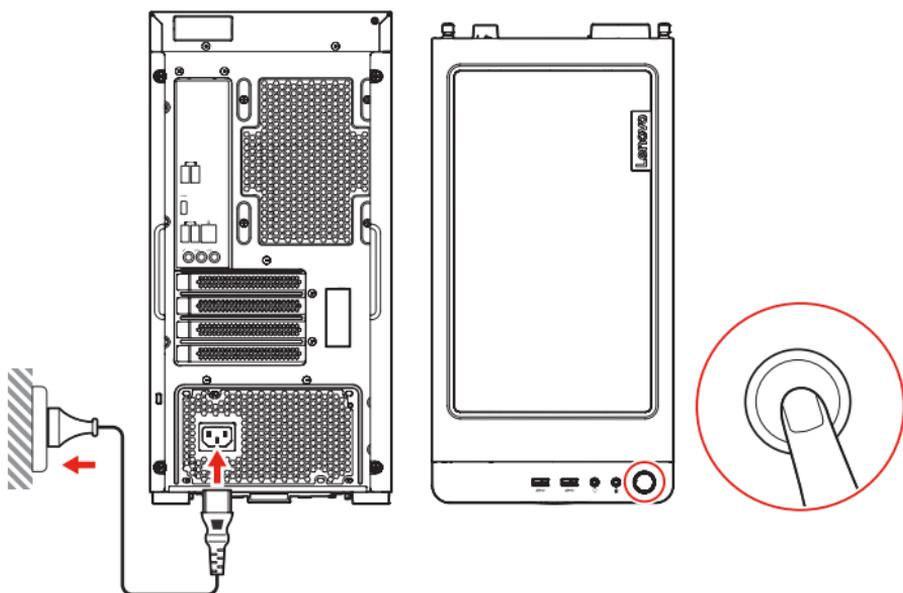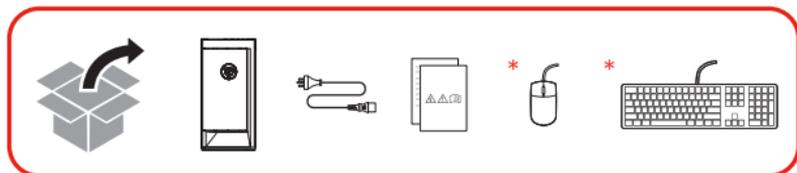

# Overview

---

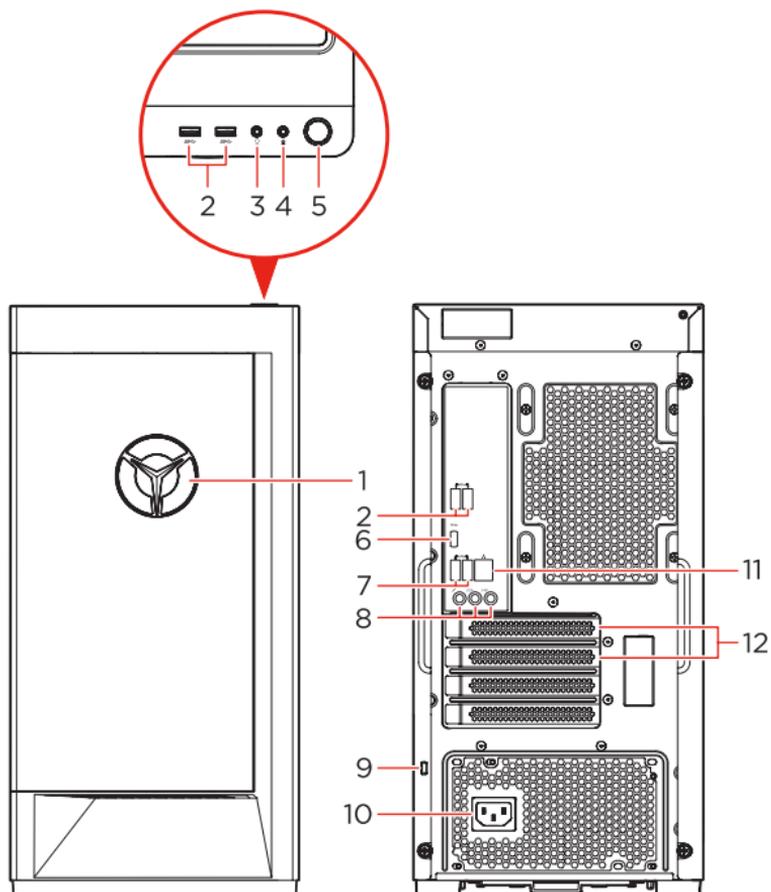

1. Lenovo Legion logo LED indicator
2. USB 3.2 connectors Gen 1 (4)
3. Headphone connector
4. Microphone connector
5. Power button
6. USB-C™ connector
7. USB 2.0 connectors (2)
8. Audio connectors
9. Security-lock slot
10. Power cord connector
11. Ethernet connector
12. PCI-Express card area

# Additional information

---

## European Union – compliance with the Radio Equipment Directive

Hereby, Lenovo (Singapore) Pte. Ltd., declares that the radio equipment type Lenovo Legion T5 26AMR5 is in compliance with Directive 2014/53/EU.

The full text of the system EU declaration of conformity is available at the following Internet address:

<https://www.lenovo.com/us/en/compliance/eu-doc>

This radio equipment operates with the following frequency bands and maximum radio-frequency power:

Technology	Frequency band [MHz]	Maximum transmit power
WLAN 802.11b/g/n/ax	2400 - 2483.5	< 20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5725	< 23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	< 13.98 dBm
Bluetooth BR/EDR/LE	2400 - 2483.5	< 20 dBm

Usage of all the radio devices is limited to indoor in the band 5150 MHz to 5350 MHz (channels 36, 40, 44, 48, 52, 56, 60, 64).

---

First Edition (July 2020)  
© Copyright Lenovo 2020.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.



Reduce | Reuse | Recycle