


**AKZM 756**

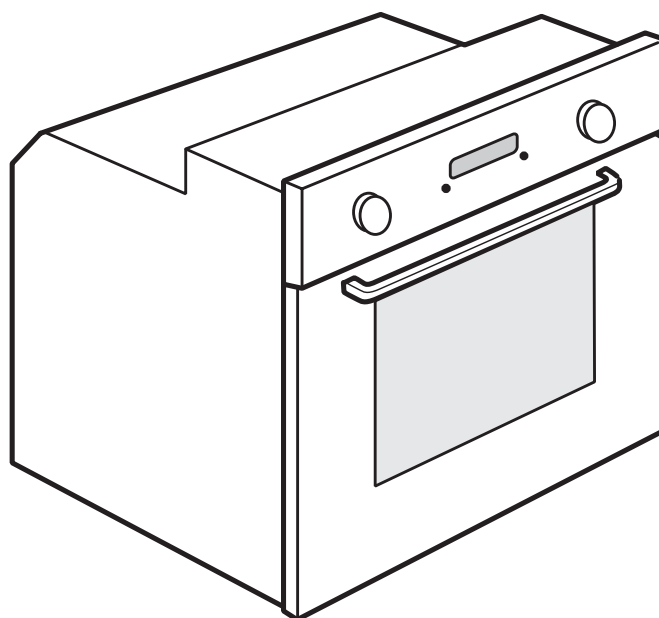

**GB**

**User and maintenance manual**

**FR**

**Manuel d'utilisation et d'entretien**

**NL**

**Handleiding voor gebruik en onderhoud**

**IT**

**Manuale d'uso e manutenzione**





# IMPORTANT SAFETY INSTRUCTIONS

## YOUR SAFETY AND THAT OF OTHERS IS PARAMOUNT

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.



This is the danger symbol, pertaining to safety, which alerts users to potential risks to themselves and others. All safety warnings are preceded by the danger symbol and the following terms:



### **DANGER**

**Indicates a hazardous situation which, if not avoided, will cause serious injury.**



### **WARNING**

**Indicates a hazardous situation which, if not avoided, could cause serious injury.**

All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions:

- The appliance must be disconnected from the power supply before carrying out any installation work.
- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Regulations require that the appliance is earthed.
- The power cable must be long enough for connecting the appliance, once fitted in its housing, to the power supply socket.
- For installation to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be utilized.
- Do not use multiple plug adapters or extension leads.
- Do not pull the power supply cable in order to unplug the appliance.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance is designed solely for use as a domestic appliance for cooking food. No other type of use is permitted (e.g.: heating rooms). The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- The appliance is not intended for use by persons (including children) with any physical, sensory or mental impairment, or without experience and knowledge of the appliance, unless supervised or previously instructed in its use by those responsible for their safety.
- The accessible parts of the appliance may become very hot during use. Young children should be kept away from the appliance and supervised to ensure that they do not play with it.
- During and after use, do not touch the heating elements or interior surfaces of the appliance - risk of burns. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled sufficiently.
- At the end of cooking, exercise caution when opening the appliance door, letting the hot air or steam exit gradually before accessing the oven. When the appliance door is shut, hot air is vented from the aperture above the control panel. Do not obstruct the vent apertures.
- Use oven gloves to remove pans and accessories, taking care not to touch the heating elements.
- Do not place flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.
- Do not heat or cook sealed jars or containers in the appliance. The pressure that builds up inside might cause the jar to explode, damaging the appliance.
- Do not use containers made of synthetic materials.
- Overheated oils and fats catch fire easily. Always remain vigilant when cooking foods rich in fat and oil.
- Never leave the appliance unattended during food drying.
- If alcoholic beverages are used when cooking foods (e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapours released by the alcohol may catch fire upon coming into contact with the electrical heating element.

## Scrapping of household appliances

- This appliance is manufactured with recyclable or reusable materials. Dispose of it in accordance with local waste disposal regulations. Before scrapping, cut off the power supply cable.
- For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchased the appliance.

## INSTALLATION

After unpacking the oven, make sure that it has not been damaged during transport and that the oven door closes properly. In the event of problems, contact the dealer or your nearest After-sales Service. To prevent any damage, only remove the oven from its polystyrene foam base at the time of installation.

### **PREPARING THE HOUSING UNIT**

- Kitchen units in contact with the oven must be heat resistant (min 90°C).
- Carry out all cabinet cutting work before fitting the oven in the housing and carefully remove all wood chips and sawdust.
- After installation, the bottom of the oven must no longer be accessible.
- For correct appliance operation, do not obstruct the minimum gap between the worktop and the upper edge of the oven.

### **ELECTRICAL CONNECTION**

Make sure the power voltage specified on the appliance dataplate is the same as the mains voltage. The dataplate is on the front edge of the oven (visible when the door is open).

- Power cable replacement (type H05 RR-F 3 x 1.5 mm<sup>2</sup>) must be carried out by a qualified electrician. Contact an authorized service centre.

### **GENERAL RECOMMENDATIONS**

#### **Before use:**

- Remove cardboard protection pieces, protective film and adhesive labels from accessories.
- Remove the accessories from the oven and heat it at 200° for about an hour to eliminate the smell and fumes from the insulating materials and protective grease.

#### **During use:**


- Do not place heavy objects on the door as they could damage it.
- Do not cling to the door or hang anything from the handle.
- Do not cover the inside of the oven with aluminium foil.
- Never pour water into the inside of a hot oven; this could damage the enamel coating.
- Never drag pots or pans across the bottom of the oven as this could damage the enamel coating.
- Make sure that the electrical cables of other appliances do not touch hot parts of the oven or become trapped in the door.
- Do not expose the oven to atmospheric agents.

## SAFEGUARDING THE ENVIRONMENT

### **Disposal of packing material**

The packing material is 100% recyclable and is marked with the recycle symbol (♻). The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### **Scrapping the product**

- This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

### **Energy saving**

- Only pre-heat the oven if specified in the cooking table or your recipe.
- Use dark lacquered or enamelled baking moulds as they absorb heat far better.
- Switch the oven off 10/15 minutes before the set cooking time. Food requiring prolonged cooking will continue to cook even once the oven is switched off.

## DECLARATION OF CONFORMITY

- This oven, which is intended to come into contact with foodstuffs, complies with European Regulation (CE) n.1935/2004 and has been designed, manufactured and sold in conformity with the safety requirements of the "Low Voltage" directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments), the protection requirements of "EMC" 2004/108/CE.

## TROUBLESHOOTING GUIDE

### The oven does not work:

- Check for the presence of mains electrical power and if the oven is connected to the electrical supply.
- Turn off the oven and restart it to see if the fault persists.

### The electronic programmer does not work:

- If the display shows the letter "F" followed by a number, contact your nearest After-sales Service. Specify in this case the number that follows the letter "F".

## AFTER-SALES SERVICE

### Before calling the After-Sales Service:

1. See if you can solve the problem yourself with the help of the suggestions given in the "Troubleshooting guide".
2. Switch the appliance off and back on again to see if the fault persists.

**If after the above checks the fault still occurs, get in touch with the nearest After-sales Service.**

Always specify:

- a brief description of the fault;
- the type and exact model of the oven;
- the service number (number after the word Service on the rating plate), located on the right hand edge of the oven cavity (visible when the oven door is open). The service number is also indicated on the guarantee booklet;
- your full address;
- your telephone number.

**SERVICE** 0000 000 00000



If any repairs are required, please contact an authorised **After-sales Service** (to guarantee that original spare parts will be used and repairs carried out correctly).

## CLEANING

### **WARNING**

- **Never use steam cleaning equipment.**
- **Only clean the oven when it is cool to the touch.**
- **Disconnect the appliance from the power supply.**

### Oven exterior

**IMPORTANT: do not use corrosive or abrasive detergents. If any of these products accidentally comes into contact with the appliance, clean immediately with a damp cloth.**

- Clean the surfaces with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Finish off with a dry cloth.

### Oven interior

**IMPORTANT: do not use abrasive sponges or metallic scrapers or scourers. Over time, these can ruin enamelled surfaces and the oven door glass.**

- After every use, allow the oven to cool then clean it preferably while it is still warm in order to remove built-up dirt and stains caused by food residues (e.g. food with a high sugar content).
- Use proprietary oven detergents and follow the manufacturer's instructions to the letter.
- Clean the door glass with a suitable liquid detergent. The oven door can be removed to facilitate cleaning (see MAINTENANCE).
- The top heating element of the grill (see MAINTENANCE) can be lowered (some models only) to clean the roof of the oven.

**N.B.: during prolonged cooking of foods with a high water content (e.g. pizza, vegetables, etc.) condensation may form on the inside of the door and around the seal. When the oven is cold, dry the inside of the door with a cloth or sponge.**

### Accessories:

- Soak the accessories in water with washing up detergent immediately after use, handling them with oven gloves if still hot.
- Food residues can be easily removed using a brush or sponge.

### Cleaning the rear wall and catalytic side panels of the oven (if present):

**IMPORTANT: do not use corrosive or abrasive detergents, coarse brushes, pot scourers or oven sprays which could damage the catalytic surface and ruin its self-cleaning properties.**

- Operate the oven empty with the fan-assisted function at 200°C for about one hour
- Next, leave the appliance to cool down before removing any food residue with a sponge.

## MAINTENANCE

### WARNING

- Use safety gloves.
- Ensure the oven is cold before carrying out the following operations.
- Disconnect the oven from the power supply.

## REMOVING THE DOOR

### To remove the door:

1. Open the door fully.
2. Lift the catches and push them forwards as far as they will go (fig. 1).
3. Close the door as far as it will go (A), lift it up (B) and turn it (C) until it is released (D) (fig. 2).

### To refit the door:

1. Insert the hinges in their seats.
2. Open the door fully.
3. Lower the two catches.
4. Close the door.

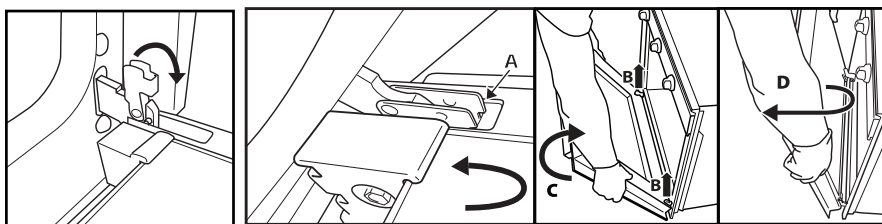


Fig. 1

Fig. 2

## MOVING THE TOP HEATING ELEMENT (SOME MODELS ONLY)

1. Remove the side accessory holder grilles (Fig. 3).
2. Pull the heating element out a little (Fig. 4) and lower it (Fig. 5).
3. To reposition the heating element, lift it up, pulling it slightly towards you, making sure it comes to rest on the lateral supports.

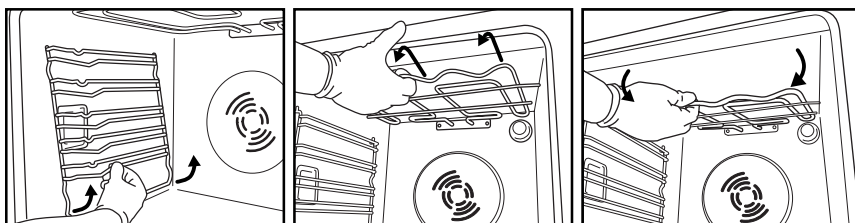


Fig. 3

Fig. 4

Fig. 5

## **REPLACING THE OVEN LAMP**

**To replace the rear lamp** (if present):

1. Disconnect the oven from the power supply.
2. Unscrew the lamp cover (Fig. 6), replace the lamp (see note for lamp type) and screw the lamp cover back on.
3. Reconnect the oven to the power supply.

**To replace the side lamp** (if present):

1. Disconnect the oven from the power supply.
2. Remove the side accessory holder grilles, if present (Fig. 3).
3. Use a screwdriver to prise off the lamp cover (Fig. 7).
4. Replace the lamp (see note for lamp type) (Fig. 8).
5. Reposition the lamp cover, pushing it on firmly until it snaps into place (Fig. 9).
6. Refit the side accessory holder grilles.
7. Reconnect the oven to the power supply.

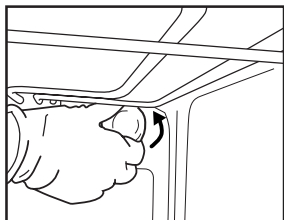


Fig. 6

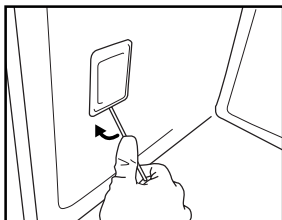


Fig. 7

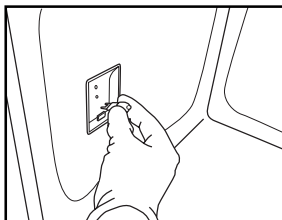


Fig. 8

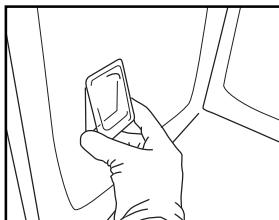


Fig. 9

### **N.B.:**


- Only use 25-40W/230V type E-14, T300°C incandescent lamps, or 20-40W/230 V type G9, T300°C halogen lamps.
- Lamps are available from our After-sales Service.

### **IMPORTANT:**

- **If using halogen lamps, do not handle with bare hands since fingerprints can damage them.**
- **Do not use the oven until the lamp cover has been repositioned.**

# INSTRUCTIONS FOR OVEN USE

FOR ELECTRICAL CONNECTION, SEE THE PARAGRAPH ON INSTALLATION

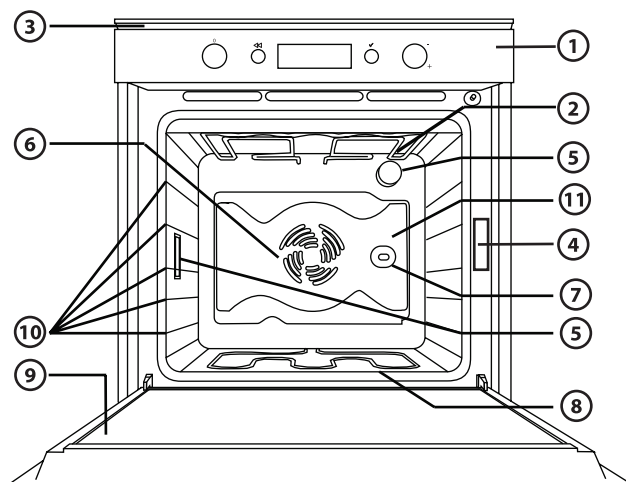

1. Control panel
2. Upper heating element/grill
3. Cooling fan (not visible)
4. Dataplate (not to be removed)
5. Light
6. Fan
7. Turnspit (if present)
8. Lower heating element (hidden)
9. Door
10. Position of shelves (the number of shelves is indicated on the front of the oven)
11. Rear wall

## NOTE:

- During cooking, the cooling fan may switch on at intervals in order to minimise energy consumption.
- At the end of cooking, after the oven is switched off, the cooling fan may continue to run for a while.
- When the oven door is opened during cooking, the heating elements switch off.

## ACCESSORIES SUPPLIED

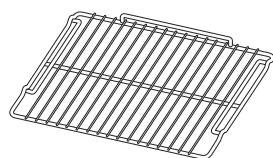


Fig. A

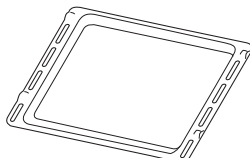


Fig. B

- A. WIRE SHELF (n. 2):** the wire shelf can be used to grill food or as a support for pans, cake tins and other ovenproof cooking receptacles.
- B. DRIP TRAY (n. 1):** the drip tray is designed to be positioned under the wire shelf in order to collect fat or as an oven tray for cooking meat, fish, vegetables, focaccia, etc.

## ACCESSORIES NOT SUPPLIED

Other accessories which can be purchased separately from the After-sales Service include baking trays, catalytic panels and a turnspit.



## **INSERTING WIRE SHELVES AND OTHER ACCESSORIES IN THE OVEN**

The wire shelf and other accessories are provided with a locking mechanism to prevent their accidental removal.

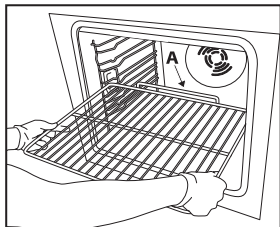


Fig. 1

1. Insert the wire shelf horizontally, with the raised part "A" upwards (fig. 1).
2. Angle the wire shelf when it reaches the locking position "B" (fig. 2).

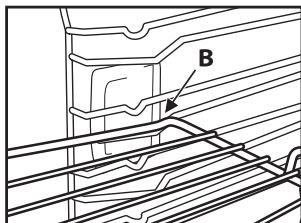


Fig. 2

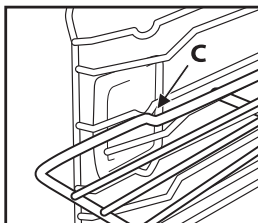



Fig. 3

3. Return the wire shelf to the horizontal position and push it in fully to "C" (fig. 3).
4. To remove the wire shelf proceed in reverse order.

The other accessories, like the drip tray and baking tray, are inserted in exactly the same way. The protrusion on the flat surface enables the accessories to lock in place.

## **CONTROL PANEL DESCRIPTION**

### **ELECTRONIC PROGRAMMER**

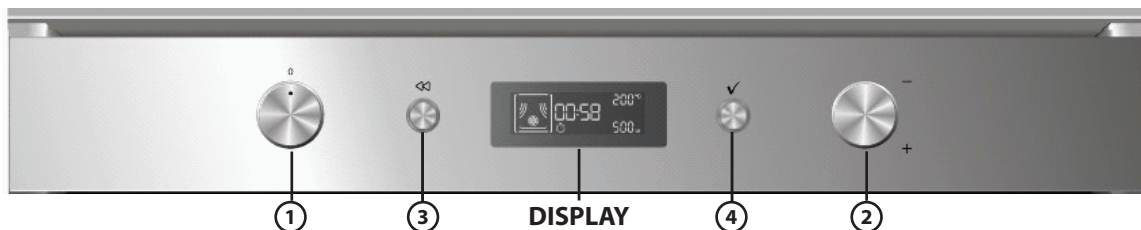

1. **FUNCTION SELECTOR KNOB:** On/off and function selector knob
2. **BROWSE KNOB:** for browsing the menu and adjusting pre-set values

**NOTE: the two knobs are retractable. Press the knobs in the middle and they pop up.**

3. **BUTTON** (←): to return to the previous screen
4. **BUTTON** (✓): to select and confirm settings


## **LIST OF FUNCTIONS**

Turn the "Functions" knob to any position and the oven switches on: the display shows the functions or the associated submenus.

The submenus are available and selectable by turning the knob to the functions GRILL, SPECIALS, SETTINGS, BREAD/PIZZA.


**NOTE: for the list and description of functions, see the specific table at page 12.**

## DESCRIPTION OF DISPLAY

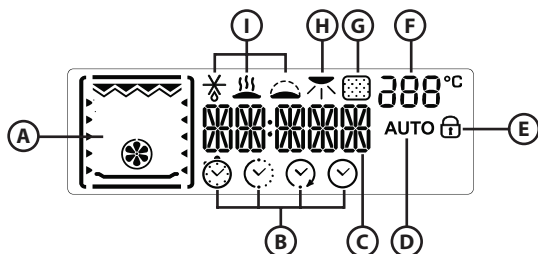

- A.** Display of heating elements activated during the various cooking functions
- B.** Time management symbols: timer, cooking time, end of cooking time, time
- C.** Information regarding selected functions
- D.** Automatic BREAD/PIZZA function selected
- E.** Indication of door locked during automatic cleaning cycle (not available on these models)
- F.** Internal oven temperature
- G.** Pyro-cleaning function (not available on these models)
- H.** Browning
- I.** Special functions: defrosting, warm keeping, rising

## STARTING THE OVEN - SETTING THE TIME

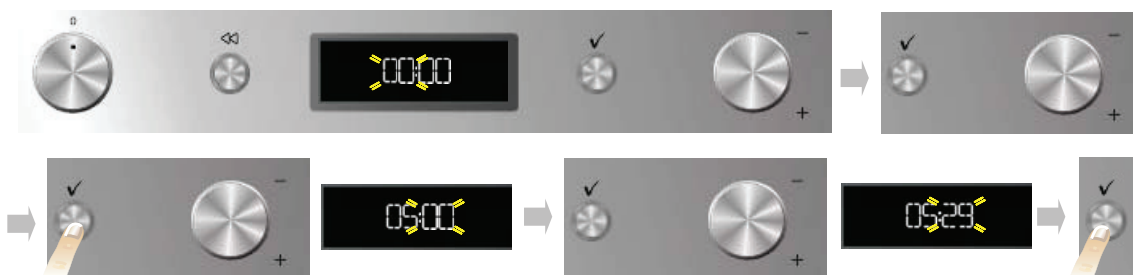

After connecting the oven to the mains power, the time must be set on the clock. The two hour digits flash on the display.

1. Turn the "Browse" knob to display the correct hour.
2. Press the button (✓) to confirm; the two minute digits flash on the display.
3. Turn the "Browse" knob to display the correct minutes.
4. Press button (✓) to confirm.

To change the time, for example following a power cut, see the next paragraph (SETTINGS).


## SELECTING COOKING FUNCTIONS



1. Turn the "Functions" knob to the desired function: the cooking settings are shown on the display.
2. If the values shown are those desired, press (✓). To change them, proceed as indicated below.

## SETTING THE TEMPERATURE/OUTPUT OF THE GRILL


To change the temperature or output of the grill, proceed as follows:

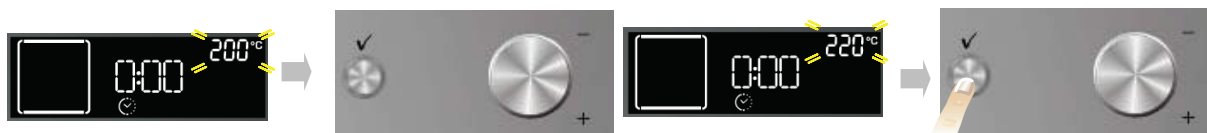

1. Turn the "Browse" knob to display the desired value.
2. Press button (✓) to confirm.

The oven automatically confirms your selection 10 seconds after the last operation.


## **FAST PREHEATING**

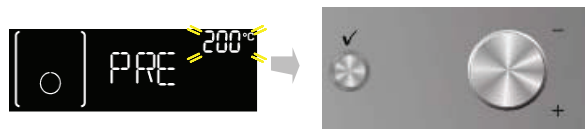

1. Turn the "Functions" knob to the symbol to select the fast preheating function.
2. Confirm by pressing : the settings are shown on the display.
3. If the proposed temperature is that desired, press button . To change the temperature, proceed as described in previous paragraphs. The message **PRE** appears on the display. When the set temperature is reached, the corresponding value (e.g. 200°C) appears on the display and the acoustic signal sounds. At the end of preheating, the oven automatically selects the conventional function .  
At this point food can be placed in the oven for cooking.
4. If you wish to set a different cooking function, turn the "Functions" knob and select the desired function.

## **SETTING COOKING TIME**

This function can be used to cook food for a set length of time, from a minimum of 1 minute to the maximum time allowed by the selected function, after which the oven switches off automatically.

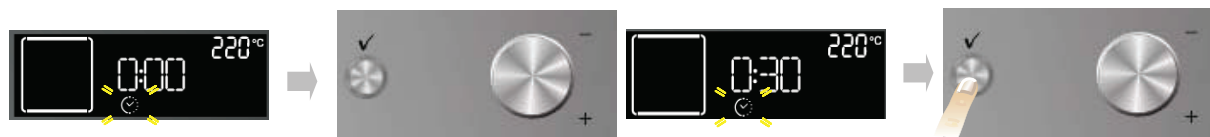

1. Once the temperature is confirmed, the symbol flashes.
  2. Turn the adjustment knob to display the desired cooking time.
  3. To confirm the cooking time, press button .
- The oven automatically confirms your selection 10 seconds after the last operation.


## **SETTING END OF COOKING TIME /START DELAYED**

**IMPORTANT: the start delayed setting is not available for the following functions: FAST PREHEATING, BREAD/PIZZA, GENTLE CONVECTION BAKE.**

**N.B.: with this setting, the selected temperature is reached in a more gradual way, so cooking times will be slightly longer than stated in the cooking table.**

The end of cooking time can be set, delaying the start of cooking by up to a maximum of 23 hours and 59 minutes. This can only be done once cooking time has been set.

After setting cooking time, the display shows the end of cooking time (for example 15:45) and the symbol flashes.

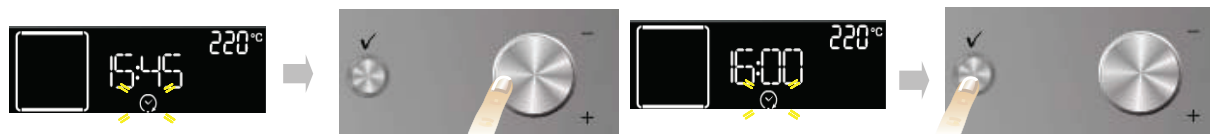

To delay the end of cooking time, and thus also the cooking start time, proceed as follows:

1. Turn the "Browse" knob to display the time you wish cooking to end (for example 16:00).
2. Confirm the selected value by pressing button : the two dots of end of cooking time flash, indicating that the setting has been made correctly.
3. The oven will automatically delay the start of cooking so as to finish cooking at the set time.

**At any time, however, set values (temperature, grill setting, cooking time) can be changed using button to go back, followed by the "Browse" knob to change values and button to confirm.**

## **INDICATION OF THE RESIDUAL HEAT INSIDE THE OVEN**



If at the end of cooking, or when the oven is switched off, the temperature inside the oven is over 50°C, the display shows the word HOT and the current temperature. When the residual heat reaches 50°C, the display shows the current time again.

## **TIMER**



This function can be used only with the oven switched off and is useful, for example, for monitoring the cooking time of pasta. The maximum time which can be set is 23 hours and 59 minutes.

1. With the "Functions" knob at zero, turn the "Browse" knob to display the desired time.
2. Press button ✓ to start the countdown. When the set time has elapsed, the display will show "00:00:00" and an acoustic signal will sound. To mute the acoustic signal, press button ✓ (the time of day appears on the display).

## **KEY-LOCK**




This function can be used to lock the buttons and knobs on the control panel.

To activate it, press ⊞ and ✓ at the same time for at least 3 seconds. When activated, the functions associated with the buttons are locked and the display shows a key symbol. This function can also be activated during cooking. To deactivate it, repeat the above procedure. When the key-lock function is activated, the oven can be switched off by turning the knob to 0 (zero). In this case, however, the previously selected function will have to be set again.

## **SELECTING SPECIAL FUNCTIONS**

Turn the "Functions" knob indicator to the symbol ★ to access a submenu containing three special functions.

To browse, select and start one of these functions, proceed as follows:

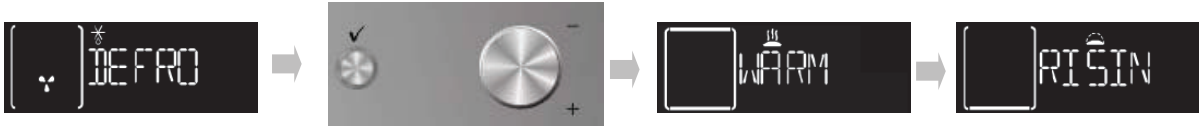

1. Turn the "Functions" knob to symbol ★: the display shows "DEFROST" along with this function's corresponding symbol.
2. Turn the "Browse" knob to scroll the list of functions; the function names are in English: DEFROST, KEEP WARM, RISING.
3. Press button ✓ to confirm.

## **BROWNING**

At the end of cooking, with certain functions, the display indicates the possibility of browning. This function can only be used when cooking time has been set.



At the end of cooking time, the display shows: "PRESS ✓ TO BROWN (press ✓ for browning). Press button ✓, and the oven starts a 5-minute browning cycle. This function can be selected consecutively a maximum of twice.

## **BREAD/PIZZA FUNCTION SELECTION**

Turn the "Function" knob pointer to the symbol 🍞 to access a submenu containing the automatic baking functions for "bread" and "pizza".





### **Bread**




1. Turn the "Function" knob to the symbol 🍞: the display shows "BREAD" and AUTO alongside.
2. Press ✓ to select the function.
3. Turn the "Browse" knob to set the required temperature (between 180°C and 220°C) and confirm with button ✓.
4. Turn the "Browse" knob to set the required cooking duration and press ✓ to start cooking.

## **Pizza**




1. Turn the Function knob to the symbol : the display shows "BREAD". To select the "PIZZA" function, proceed as follows:
2. Turn the "Browse" knob: "PIZZA" appears on the display.
3. Press  to select the function.
4. Turn the "Browse" knob to set the required temperature (between 220°C and 250°C) and confirm with button .
5. Turn the "Browse" knob to set the required cooking duration and press  to start cooking.

## **SETTING**



Turn the "Functions" knob indicator to the symbol  to access a submenu containing four display settings which can be changed.

### **Clock**

Turn the "Functions" knob to the symbol : the word CLOCK appears on the display. To change the time of day, see the previous paragraph (SETTING THE TIME).



### **Eco**

With the ECO mode selected (ON), the display switches off when the oven is on standby or 5 minutes after the end of cooking. To view information on the display, simply press a button or turn a knob.

1. Turn the "Browse" knob to display "ECO".
2. Press  to access the setting (ON/OFF).
3. Turn the "Browse" knob to select the desired setting and confirm by pressing button .



### **Acoustic signal**

To activate or deactivate the acoustic signal, proceed as follows:












1. Turn the "Browse" knob to display "SOUND".
2. Press  to access the setting (ON/OFF).
3. Turn the "Browse" knob to select the desired setting and confirm by pressing button .

### **Brightness**












To change the display brightness, proceed as follows:





1. Turn the "Browse" knob to display "BRIGHTNESS".
2. Press button : number 1 appears on the display.
3. Turn the "Browse" knob to increase or decrease brightness and confirm by pressing .

## FUNCTION DESCRIPTION TABLE

| FUNCTION SELECTOR KNOB  |   |  |
|---|---|--|
| 0   | OFF   | To stop cooking and switch off the oven.   |
|    | LAMP  | To switch the oven light on/off.   |
|    | <br>DEFROSTING | To speed up defrosting of food. Place food on the middle level. It is advisable to leave food in its packaging to prevent it from drying on the outside.   |
|   | <br>KEEP WARM  | For keeping just-cooked food (e.g. meat, fried food, flans) hot and crisp. It is advisable to place food on the middle level. The function will not activate if the compartment temperature is above 65°C.   |
|   | <br>RISING     | For optimal proving of sweet or savoury dough. To preserve the quality of proving, the function will not activate if the compartment temperature is above 40°C. Place dough on the 2nd level. The oven does not have to be preheated.  |
|    | CONVENTIONAL  | To cook any kind of dish on one shelf only. Use the 3rd level. To bake pizzas, savoury pies and cakes with liquid fillings use the 1st or 2nd level. Preheat the oven before placing food inside.  |
|    | CONVECTION BAKE   | For baking cakes with liquid filling (sweet or savoury) on a single shelf. This function can also be used for cooking on two shelves. Switch the position of the dishes to cook food more evenly. Use the 3rd shelf to cook on one shelf only, and the 1st and 4th to cook on two shelves. Preheat the oven before cooking.  |
|   | GENTLE CONVECTION BAKE  | To cook food requiring medium/low cooking temperatures on a maximum of two shelves. This function is used to cook gently and slowly on two levels without having to switch the position of the dishes during the cooking process. Use the 3rd shelf to cook on one shelf only, and the 1st and 4th to cook on two shelves. Preheat the oven before cooking.  |
|  | GRILL   | To grill steak, kebabs and sausages; to gratinate vegetables and toast bread. Place food on the 4th or 5th level. When grilling meat, it is advisable to use the drip-tray to collect the cooking juices. Position it on the 3rd/4th level, adding approx. half a litre of water. The oven does not have to be preheated. During cooking the oven door must remain closed.   |
|   | TURBO GRILL   | To roast large cuts of meat (legs, roast beef, chicken). Position food on the middle levels. It is advisable to use the drip-tray to collect the cooking juices. Position it on the 1st/2nd level, adding approx. half a litre of water. The oven does not have to be preheated. During cooking, the oven door must remain closed. With this function the spit can be used, if the relevant accessory is provided. |
|  | SETTINGS  | To set the display (time, brightness, buzzer volume, energy saving).   |
|  | BREAD/PIZZA   | To bake different types and sizes of bread and pizza. This function has two programmes with predefined settings. Just indicate the required values (temperature and time) and the oven will automatically manage the optimum cooking cycle. Place the dough on the 2nd shelf after preheating the oven.  |
|  | FAST PREHEATING   | To preheat the oven rapidly.   |
















# COOKING TABLES

| Recipe  | Function  | Pre-heating | Cooking level (from bottom) | Temperature (°C) | Time (min) | Accessories  |
|---|---|-------------|-----------------------------|------------------|------------|--|
| Leavened cakes                                      |              | Yes         | 2 / 3                       | 160 - 180        | 30 - 90    | Cake tin on grill  |
|   | <br>GENTLE   | Yes         | 1 - 4                       | 160 - 180        | 30 - 90    | Level 4: cake tin on grill   |
|   |   |             |                             |                  |            | Level 1: cake tin on grill   |
| Filled pies (cheesecake, strudel, apple pie)        |              | Yes         | 3                           | 160 - 200        | 30 - 85    | Drip-tray / baking tray or cake tin on grill                       |
|   | <br>GENTLE   | Yes         | 1 - 4                       | 160 - 200        | 35 - 90    | Level 4: cake tin on grill (switch levels halfway through cooking) |
|   |   |             |                             |                  |            | Level 1: cake tin on grill   |
| Biscuits/Tartlets                                   |              | Yes         | 3                           | 170 - 180        | 15 - 45    | Drip-tray / baking tray  |
|   | <br>GENTLE   | Yes         | 1 - 4                       | 160 - 170        | 20 - 45    | Level 4: grill   |
|   |   |             |                             |                  |            | Level 1: drip-tray / baking tray                                   |
| Choux pastry  |              | Yes         | 3                           | 180 - 200        | 30 - 40    | Drip-tray / baking tray  |
|   | <br>GENTLE   | Yes         | 1 - 4                       | 180 - 190        | 35 - 45    | Level 4: pan on grill  |
|   |   |             |                             |                  |            | Level 1: drip-tray / baking tray                                   |
| Meringues   |            | Yes         | 3                           | 90               | 110 - 150  | Drip-tray / baking tray  |
|   | <br>GENTLE | Yes         | 1 - 4                       | 90               | 130 - 150  | Level 4: pan on grill  |
|   |   |             |                             |                  |            | Level 1: drip-tray / baking tray                                   |
| Bread / Pizza / Focaccia                            |            | Yes         | 1 / 2                       | 190 - 250        | 15 - 50    | Drip-tray / baking tray  |
|   | <br>GENTLE | Yes         | 1 - 4                       | 190 - 250        | 25 - 45    | Level 4: pan on grill (switch levels halfway through cooking)      |
|   |   |             |                             |                  |            | Level 1: drip-tray / baking tray                                   |
| Frozen pizzas                                       |            | Yes         | 3                           | 250              | 10 - 15    | Level 3: drip-tray / baking tray or grill                          |
|   | <br>GENTLE | Yes         | 1 - 4                       | 250              | 10 - 20    | Level 4: pan on grill (switch levels halfway through cooking)      |
|   |   |             |                             |                  |            | Level 1: drip-tray / baking tray                                   |
| Meat & potato pies (vegetable pie, quiche lorraine) | <br>GENTLE | Yes         | 3                           | 180 - 190        | 40 - 55    | Cake tin on grill  |
|   | <br>GENTLE | Yes         | 1 - 4                       | 180 - 190        | 40 - 55    | Level 4: cake tin on grill (switch levels halfway through cooking) |
|   |   |             |                             |                  |            | Level 1: cake tin on grill   |
| Vols-au-vent / Puff pastry crackers                 |            | Yes         | 3                           | 190 - 200        | 20 - 30    | Drip-tray / baking tray  |
|   | <br>GENTLE | Yes         | 1 - 4                       | 180 - 190        | 20 - 40    | Level 4: pan on grill  |
|   |   |             |                             |                  |            | Level 1: drip-tray / baking tray                                   |

| Recipe  | Function  | Pre-heating | Cooking level (from bottom) | Temperature (°C) | Time (min) | Accessories   |
|---|---|-------------|-----------------------------|------------------|------------|---|
| Lasagne / Baked pasta / Cannelloni / Flans            |              | Yes         | 3                           | 190 - 200        | 45 - 55    | Pan on grill  |
| Lamb / Veal / Beef / Pork 1 kg                        |              | Yes         | 3                           | 190 - 200        | 80 - 110   | Drip-tray or pan on grill   |
| Chicken / Rabbit / Duck 1 kg                          |              | Yes         | 3                           | 200 - 230        | 50 - 100   | Drip-tray or pan on grill   |
| Turkey / Goose 3 kg                                   |              | Yes         | 2                           | 190 - 200        | 80 - 130   | Drip-tray or pan on grill   |
| Baked fish / en papillote (fillet, whole)             |              | Yes         | 3                           | 180 - 200        | 40 - 60    | Drip-tray or pan on grill   |
| Stuffed vegetables (tomatoes, courgettes, aubergines) |              | Yes         | 2                           | 180 - 200        | 50 - 60    | Pan on grill  |
| Toast   |              | -           | 5                           | High             | 3 - 5      | Grill   |
| Fish fillets / steaks                                 |              | -           | 4                           | Medium           | 20 - 30    | Level 4: grill (turn food halfway through cooking)  |
|   |   |             |                             |                  | 20 - 30    | Level 3: drip-tray with water   |
| Sausages / Kebabs / Spare ribs / Hamburgers           |              | -           | 5                           | Medium - High    | 15 - 30    | Level 5: grill (turn food halfway through cooking)  |
|   |   |             |                             |                  |            | Level 4: drip-tray with water   |
| Roast chicken 1-1.3 kg                                |            | -           | 2                           | Medium           | 55 - 70    | Level 2: grill (turn food two thirds of the way through cooking)                          |
|   |   | -           | 2                           | High             | 60 - 80    | Level 2: spit   |
| Roast Beef rare 1 kg                                  |            | -           | 3                           | Medium           | 35 - 45    | Pan on grill (if necessary, turn food two thirds of the way through cooking)              |
| Leg of lamb / Knuckle                                 |            | -           | 3                           | Medium           | 60 - 90    | Drip-tray or pan on grill (if necessary, turn food two thirds of the way through cooking) |
| Roast potatoes  |            | -           | 3                           | Medium           | 45 - 55    | Drip-tray / baking tray (if necessary, turn food two thirds of the way through cooking)   |
| Gratinated vegetables                                 |            | -           | 3                           | High             | 10 - 15    | Pan on grill  |
| Lasagna & Meat  |            | Yes         | 1 - 4                       | 200              | 50 - 100   | Level 4: pan on grill (if necessary, turn food two thirds of the way through cooking)     |
|   |   |             |                             |                  |            | Level 1: drip-tray or pan on grill  |
| Carne & Potatoes                                      |            | Yes         | 1 - 4                       | 200              | 45 - 100   | Level 4: pan on grill (if necessary, turn food two thirds of the way through cooking)     |
|   |   |             |                             |                  |            | Level 1: drip-tray or pan on grill  |
| Fish & Vegetables                                     | <br>GENTLE | Yes         | 1 - 4                       | 180              | 30 - 50    | Level 4: pan on grill   |
|   |   |             |                             |                  |            | Level 1: drip-tray or pan on grill  |



**Tested Recipes Table (in compliance with regulations EC 60350:99+A1:05 +A2:08 and DIN 3360-12:07:07)**

| Recipe                                   | Function  | Preheating | Level (from bottom) | Temp (°C) | Time (min) | Accessories and notes  |
|--|---|------------|---------------------|-----------|------------|--|
| <b>IEC 60350:99+A1:05 +A2:08 § 8.4.1</b> |   |            |                     |           |            |  |
| Shortbread biscuits                      |    | Yes        | 3                   | 170       | 15 - 25    | Drip-tray / baking tray  |
|  |    | Yes        | 1 - 4               | 160       | 25 - 35    | Level 4: baking tray (switch levels halfway through cooking)       |
|  |   |            |                     |           |            | Level 1: drip-tray   |
| <b>IEC 60350:99+A1:05 +A2:08 § 8.4.2</b> |   |            |                     |           |            |  |
| Small cakes                              |    | Yes        | 3                   | 170       | 20 - 30    | Drip-tray / baking tray  |
|  |    | Yes        | 1 - 4               | 160       | 20 - 30    | Level 4: baking tray (switch levels halfway through cooking)       |
|  |   |            |                     |           |            | Level 1: drip-tray   |
| <b>IEC 60350:99+A1:05 +A2:08 § 8.5.1</b> |   |            |                     |           |            |  |
| Fatless sponge cake                      |    | Yes        | 2                   | 170       | 25 - 35    | Cake tin on grill  |
| <b>IEC 60350:99+A1:05 +A2:08 § 8.5.2</b> |   |            |                     |           |            |  |
| 2 Apple pies                             |    | Yes        | 2 / 3               | 185       | 55 - 75    | Cake tin on grill  |
|  |    | Yes        | 1 - 4               | 175       | 75 - 95    | Level 4: cake tin on grill (switch levels halfway through cooking) |
|  |   |            |                     |           |            | Level 1: cake tin on grill   |
| <b>IEC 60350:99+A1:05 +A2:08 § 9.1.1</b> |   |            |                     |           |            |  |
| Toast                                    |   | -          | 5                   | High      | 3 - 5      | Grill  |
| <b>IEC 60350:99+A1:05 +A2:08 § 9.2.1</b> |   |            |                     |           |            |  |
| Burgers                                  |  | -          | 5                   | High      | 20 - 30    | Level 5: grill (turn food halfway through cooking)                 |
|  |  | -          | 5                   | High      | 20 - 30    | Level 4: drip-tray with water                                      |
| <b>DIN 3360-12:07 § 6.5.2.3</b>          |   |            |                     |           |            |  |
| Apple cake, yeast tray cake              |  | Yes        | 3                   | 180       | 30 - 40    | Drip-tray / baking tray  |
|  |  | Yes        | 1 - 4               | 160       | 50 - 60    | Level 4: baking tray (switch levels halfway through cooking)       |
|  |   |            |                     |           |            | Level 1: drip-tray   |
| <b>DIN 3360-12:07 § 6.6</b>              |   |            |                     |           |            |  |
| Roast pork                               |  | -          | 3                   | 190       | 150 - 170  | Level 3: grill   |
|  |   |            |                     |           |            | Level 2: drip-tray with water (top-up when necessary)              |
| <b>DIN 3360-12:07 annex C</b>            |   |            |                     |           |            |  |
| Flat cake                                |  | Yes        | 3                   | 170       | 35 - 45    | Drip-tray / baking tray  |
|  |  | Yes        | 1 - 4               | 170       | 40 - 50    | Level 4: baking tray (switch levels halfway through cooking)       |
|  |   |            |                     |           |            | Level 1: drip-tray   |

The cooking table suggests the functions and ideal temperatures for obtaining best results with any type of recipe. For hot air cooking on a single level, it is advisable to use the third shelf and the same temperature suggested for "CONVECTION BAKE" cooking on several levels.

When grilling, it is advisable to leave 3-4 cm free from the front edge of the grill to facilitate removal.

## RECOMMENDED USE AND TIPS

### How to read the cooking table

The table indicates the best function to use for any given food, to be cooked on one or more shelves at the same time. Cooking times start from the moment food is placed in the oven, excluding pre-heating (where required). Cooking temperatures and times are purely for guidance and will depend on the amount of food and type of accessory used. Use the lowest recommended values to begin with and, if the food is not cooked enough, then move on to higher values. Use the accessories supplied and preferably dark coloured metal cake tins and oven trays. You can also use pans and accessories in pyrex or stoneware, but bear in mind that cooking times will be slightly longer. To obtain best results, carefully follow the advice given in the cooking table for the choice of accessories (supplied) to be placed on the various shelves.

### Cooking different foods at the same time

Using the "GENTLE CONVECTION BAKE" function, you can cook different foods which require the same cooking temperature at the same time (for example: fish and vegetables), using different shelves. Remove the food which requires less cooking time and leave food which requires longer cooking time in the oven.

### Desserts

- Cook delicate desserts with the conventional function on one shelf only. Use dark coloured metal cake tins and always position them on the wire shelf supplied. To cook on more than one shelf, select the forced air function and stagger the position of the cake tins on the shelves, aiding optimum circulation of the hot air.
- To check whether a raising cake is cooked, insert a wooden toothpick into the centre of the cake. If the toothpick comes out clean, the cake is ready.
- If using non-stick cake tins, do not butter the edges as the cake may not rise evenly around the edges.
- If the cake "sinks" during cooking, set a lower temperature the next time, perhaps reducing the amount of liquid in the mixture and mixing more gently.
- For sweets with moist fillings (cheesecake or fruit pies) use the "CONVECTION BAKE" function". If the base of the cake is soggy, lower the shelf and sprinkle the bottom of the cake with breadcrumbs or biscuit crumbs before adding the filling.

### Meat

- Use any kind of oven tray or pyrex dish suited to the size of the piece of meat being cooked. For roast joints, it is best to add some stock to the bottom of the pan, basting the meat during cooking for added flavour. When the roast is ready, let it rest in the oven for another 10-15 minutes, or wrap it in aluminium foil.
- When you want to grill meat, choose cuts with an even thickness all over in order to achieve uniform cooking results. Very thick pieces of meat require longer cooking times. To prevent the meat from burning on the outside, lower the position of the wire shelf, keeping the food farther away from the grill. Turn the meat two thirds of the way through cooking.

To collect the cooking juices it is advisable to place a drip-tray with half a litre of water directly under the grill on which the meat is placed. Top-up when necessary.

### Turnspit (only in some models)

Use this accessory to evenly roast large pieces of meat and poultry. Place the meat on the spit rod, tying it with string if chicken, and check that it is secure before inserting the rod in the seat located on the front wall of the oven and resting it on the respective support. To prevent smoke and to collect cooking juices, it is advisable to place a drip-tray with half a litre of water on the first level. The rod has a plastic handle which must be removed before starting to cook, and used at the end of cooking to avoid burns when taking the food out of the oven.

### Pizza

Lightly grease the trays to ensure the pizza has a crispy base. Scatter the mozzarella over the pizza two thirds of the way through cooking.

### Dough proving function

It is always best to cover the dough with a damp cloth before placing it in the oven. Dough proving time with this function is reduced by approximately one third compared to proving at room temperature (20-25°C). Proving time for a 1 Kg batch of pizza dough is around one hour.