

ThinkSmart One Hardware Maintenance Manual

ThinkSmart



Lenovo

Second Edition (October 2025)

© Copyright Lenovo 2022, 2025.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Contents

About this manual	ii	Remove the camera module	19
Chapter 1. Product Overview	1	Remove the Skype board and I/O board cables	20
Front	1	Remove the Wi-Fi antennas	23
Rear	2	Remove the video capture card and the AL foil.	24
Right	3	Remove the thermal module with thermal pad	25
Chapter 2. General checkout	4	Remove the system board and RJ45 thermal pad	26
Chapter 3. Hardware removal and installation	5	Remove the system board bracket	27
Service tool kit	5	Remove the M.2 solid-state drive and thermal pad	28
Major FRUs and CRUs	7	Remove the Wi-Fi card and thermal pad	29
Board connectors	10	Remove the left fan	31
General Guidelines	12	Remove the right fan	31
Remove the wall mount bracket	12	Remove the left I/O board and bracket	32
Remove the cable door	13	Remove the right I/O board and bracket	34
Remove the top cover	14	Remove the power cable	35
Remove the top frame	14	Chapter 4. Help and support	37
Remove the left speaker	15	Self-help resources	37
Remove the right speaker	16	Appendix A. Serial Number Location	38
Remove the USB Type-C cable.	16	Appendix B. Notices and trademarks.	39
Remove the Skype board power cable	17		
Remove the RJ45 cable	18		
Remove the button board with cable	18		

About this manual

This manual provides service and reference information for ThinkSmart® devices listed on the front cover.

Illustrations in this manual might look different from your product.


Use this manual along with the advanced diagnostic tests to troubleshoot problems.

Important: This manual is intended only for trained service technicians who are familiar with ThinkSmart devices. Use this manual along with the advanced diagnostic tests to troubleshoot problems effectively. Before servicing a ThinkSmart device, be sure to read and understand *Generic Safety and Compliance Notices* at <https://smartsupport.lenovo.com>.

Chapter 1. Product Overview


This chapter provides introductions to the connectors of ThinkSmart One. For detailed technical specifications, go to Product Specifications Reference at: Product Specifications Reference(PSREF) (lenovo.com)

Front

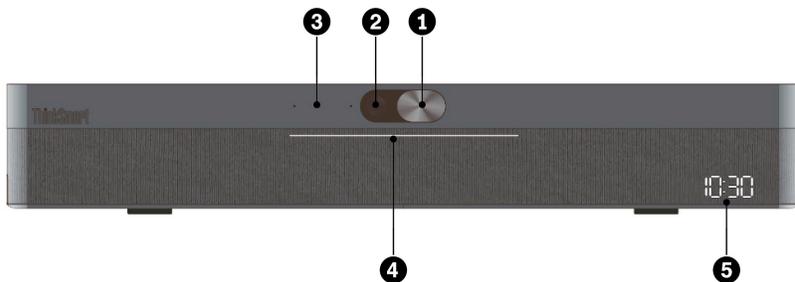

Item	Description
1. Camera cover slider	Move the slider to cover or uncover the camera lens.
2. Camera	Use for video conferences.
3. Camera status indicator	Show the camera status of your device. <ul style="list-style-type: none">• On: The camera is working for a video conference.• Off: The camera is off.
4. Power indicator	Show the system status of your device. <ul style="list-style-type: none">• Solid blue: The USB Mode is enabled.• Solid white: The device is powered on and not in a meeting.• Solid green: The device is in a meeting or in a call.• Solid red: The device is muted.• Blinking green: A call is on hold.• Green dot flowing from both sides to the center: There is an incoming call.
5. System clock	Show the system time.

Rear

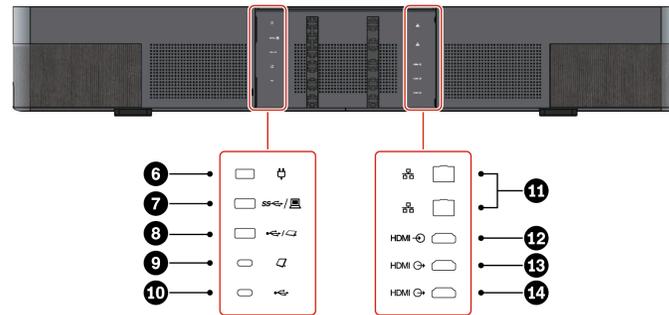


Item	Description
6. Power connector	Connect to a power supply.
7. USB-A connector (USB 5Gbps)	<ul style="list-style-type: none"> Connect to your computer for USB Mode. In the USB Mode, you can use the device's camera, speakers, and microphone. Connect to USB-A accessories.
8. USB-A connector (Hi-Speed USB)	Connect to Lenovo IP Controller (recommended) or other USB-A accessories.
9. USB-C™ connector (USB 5Gbps)	Connect to ThinkSmart Controller or other USB-C accessories.
10. USB-C connector (Hi-Speed USB)	Connect to USB-C accessories.
11. Ethernet connectors	Connect to a local area network (LAN).
12. HDMI™ -in connector	Connect to your computer only. Note: Do not connect an external HDMI display to this connector.
13. HDMI-out connector	Connect to an external HDMI display. This HDMI 1.4 connector supports display resolutions up to 3840 x 2160 pixels, 30 Hz.
14. HDMI-out connector	Connect to an external HDMI display. This HDMI 2.0 connector supports display resolutions up to 3840 x 2160 pixels, 60 Hz.

Statement on USB transfer rate

Depending on many factors such as the processing capability of the host and peripheral devices, file attributes, and other factors related to system configuration and operating environments, the actual transfer rate using the various USB connectors on this device will vary and will be slower than the data rate listed in the connector name for each corresponding device.

Right

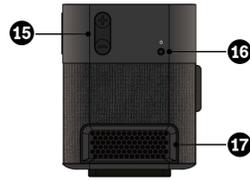

Item	Description
15. Volume button	Adjust the volume.
16. Power button	Switch between the Operation mode and the Non-operation mode. <ul style="list-style-type: none">• Press to enter the Operation mode. In this mode, ThinkSmart One is ready for a meeting.• Press for four seconds to enter the Non-operation mode. In this mode, the system clock is working while the system running has stopped.
17. Ventilation holes	Maintain the outgoing airflow to dissipate internal heat.

Chapter 2. General checkout

Before you go to the checkout guide, be sure to read the following important notes.

Important notes:

- **We recommend that all service be performed by a certified service technician. If you choose to perform the service yourself, please follow all instructions carefully.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **When you replace FRUs, it is recommended to use new nylon-coated screws.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the product that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace a FRU only with another FRU of the correct model.** When you replace a FRU, ensure that the model of the machine and the FRU part number are correct.
- **A FRU should not be replaced because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, ESD, or software errors. Consider replacing a FRU only when a problem recurs. If you suspect that a FRU is defective, clear the error log and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you return a FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of service technician
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Failure symptoms, error codes appearing on the display, and beep symptoms
6. Procedure index and page number in which the failing FRU was detected
7. Failing FRU name and part number
8. Machine type, model number, and serial number
9. Customer's name and address

Before checking problems with the product, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- Display cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) component
- Distortion, deformation, or discoloration of the cosmetic component
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Forgotten product password (making the product unusable)
- Use of an incorrect ac power adapter on laptop products

The following symptoms might indicate damage caused by non-warranted activities:

- Missing part might be a symptom of service or modification.
- Check for obvious damage to a hard disk drive. If the spindle of a hard disk drive becomes noisy, the hard disk drive might have been dropped or subject to excessive force.

Chapter 3. Hardware removal and installation

This chapter provides instructions on how to remove and install hardware for your product. Video tutorials on hardware removal and installation are available at <https://support.lenovo.com/solutions/ht505031>.

Service tool kit

Ensure that the following common service tool kit is prepared before you service the product.

No.	Tool name	Specification	Product scope	Tool type
1	Screwdriver: Phillips Head 0	PH0	All	Common tool
2	Screwdriver: Phillips Head 00	PH00	All	Common tool
3	Screwdriver: Phillips Head 01	1	All	Common tool
4	Screwdriver: Phillips Head 01	1, Shank length greater than 6 inches	ThinkStation/DT	Common tool
5	Screwdriver: Phillips Head 02	2, Shank length greater than 6 inches	ThinkStation/SC/DT	Common tool
6	Screwdriver: Torx Head T5	T5	IdeaPad	Common tool
7	Screwdriver: Torx Head T15	T15, for Chassis outside	ThinkStation	Common tool
8	Screwdriver: Torx Head T20	T20, Shank length greater than 6 inches, for heatsink and CPU	ThinkStation	Common tool
9	Screwdriver: Torx Head T30	T30, Shank length greater than 6 inches, for heatsink and CPU	ThinkStation	Common tool
10	Pry tools 1	N/A	All	Common tool
11	Tweezers (conductive)	N/A	All	Common tool
12	Tweezers (isolated)	N/A	All	Common tool
13	Suction cup	N/A	All	Common tool

No.	Tool name	Specification	Product scope	Tool type
14	Hexagonal socket (for VGA)	H5 mm or 4.8 mm	ThinkCentre/Tiny	Common tool
15	Hexagonal socket (for Tinyantenna)	H8 mm	ThinkCentre/Tiny	Common tool
16	Ajustable Torque Screwdriver	0.2 Nm to 4.0 Nm, Threadripper CPU, CAMM, etc	All	Common tool
17	ESD Mat	ESD Mat	All	Common tool
18	USB Flash Drives	For Golden Key, Chrome Reloads, AutoPilot, etc	All	Common tool
19	USB-C to USB-A Converter	For USB-C only systems	All	Common tool
20	SSD/WWAN/IC Thermal pad	Thermal pads are typically used under the SSD/WWAN/IC in different thicknesses, the most common being 0.5 mm.	All	Consumable
21	Thermal grease	Standard thermal grease. Honeywell PTM 7958SP is recommended.	All	Consumable
22	Polyamide tape	N/A	All	Consumable
23	Mylar tape	N/A	All	Consumable
24	Eraser	N/A	All	Consumable
25	Electrical tape	N/A	All	Consumable
26	Double sided tape	N/A	All	Consumable
27	Conductive tape	N/A	All	Consumable
28	Cleaning pads/wipes	N/A	All	Consumable
29	Heat gun	N/A	All	Special Tool (Depot only)

No.	Tool name	Specification	Product scope	Tool type
30	Brown brush	25 mm to 35 mm wide	All	Special tool
31	Contact Cleaner Spray	WD-40 Contact Cleaner for battery connector	ThinkPad X1 Carbon	Special tool
32	Hexagonal socket	17 mm	Yoga AIO 7 27ACH6/ Yoga AIO 7 27ARH6	Special tool


Note: The silicone grease can be applied to the surfaces of the microprocessor and heat sink to eliminate air gaps. For parts with silicone grease applied, it is suggested that you apply new grease during the installation.

Major FRUs and CRUs

Your product contains the following types of CRUs and FRUs:

- **Self-service CRUs:** Refer to parts that can be replaced easily by customer themselves or by trained service technicians at an additional cost.
- **Optional-service CRUs:** Refer to parts that can be replaced by customers with a greater skill level. Trained service technicians can also provide service to replace the parts under the type of warranty designated for the customer's machine.
- **FRUs:** Refer to parts that are more complicated to replace and it is recommended that these should be replaced by trained service technicians. If customers elect to replace the FRUs by themselves, we recommend that you ensure the correct instructions provided by Lenovo are carefully followed.

For detailed FRU and CRU information, such as the FRU part numbers and supported models, go to: <http://www.lenovo.com/serviceparts-lookup>

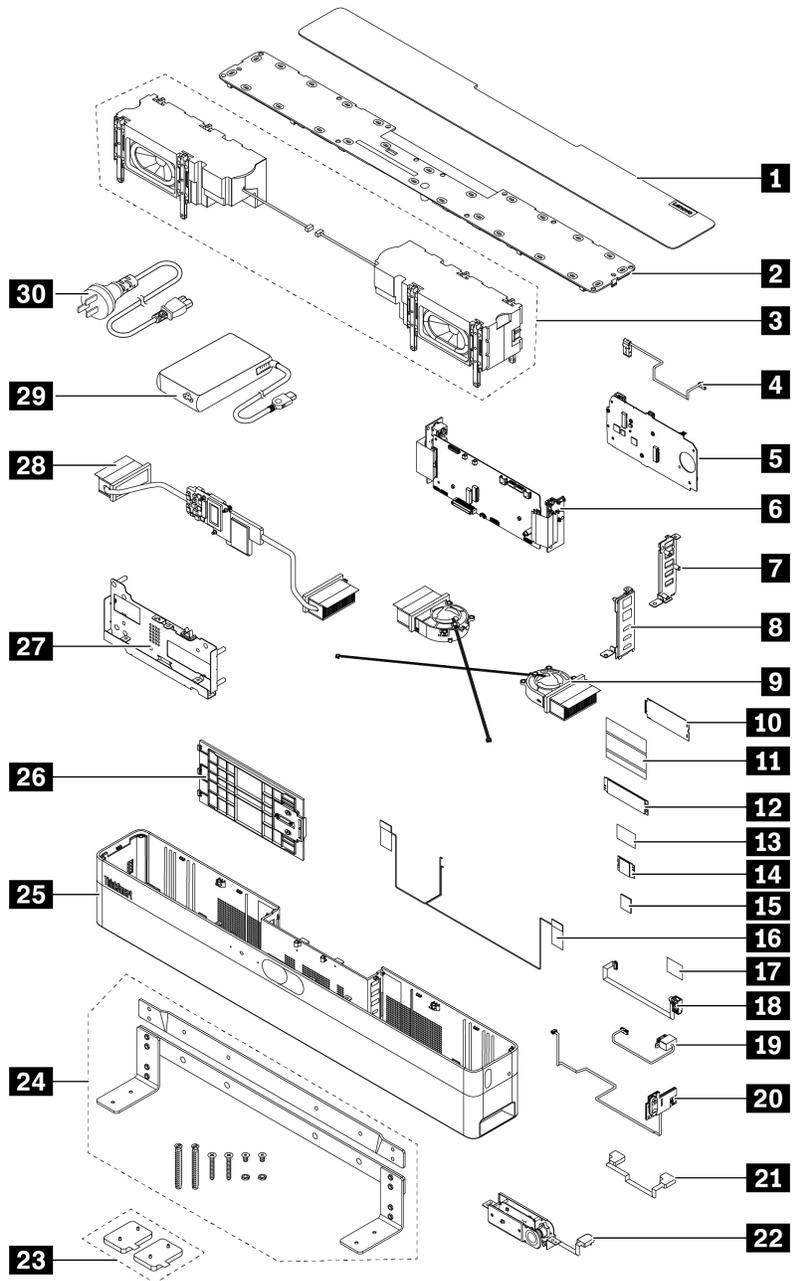

Number	Description	Self-service CRU	Optional-service CRU
1	Top cover	No	No
2	Top frame	No	No
3	Speakers	No	No
4	Skype board power cable	No	No
5	System board	No	No
6	Skype board and I/O board assembly (with I/O board cables)	No	No

Number	Description	Self-service CRU	Optional-service CRU
7	Right I/O board bracket	No	No
8	Left I/O board bracket	No	No
9	Fans	No	No
10	Video capture card	No	No
11	Video capture card AL foil	No	No
12	M.2 solid-state drive	No	No
13	M.2 solid-state drive thermal pad	No	No
14	Wi-Fi® card	No	No
15	Wi-Fi card thermal pad	No	No
16	Wi-Fi antennas	No	No
17	RJ45 thermal pad	No	No
18	RJ45 cable	No	No
19	Power cable	No	No
20	Button board with cable	No	No
21	USB Type-C cable	No	No
22	Camera module	No	No
23	Rubber feet	Yes	No
24	Wall mount bracket & screws	Yes	No
25	Chassis module	No	No
26	Cable door	Yes	No
27	System board bracket	No	No
28	Thermal module	No	No
29	AC power adapter	Yes	No
30	Power cord	Yes	No

Board connectors

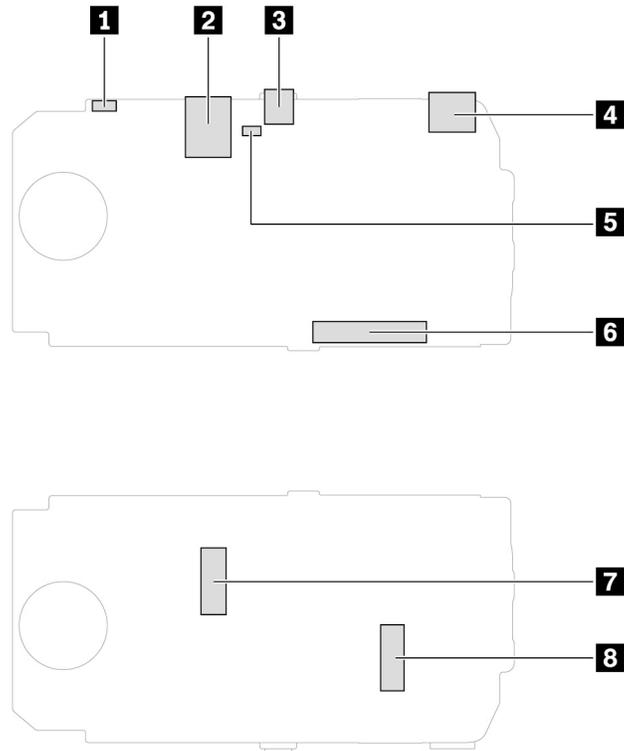


Figure 1. System board

1 Clear CMOS (Complementary Metal Oxide Semiconductor)	2 RJ45 cable connector
3 USB-C connector	4 USB-A connector
5 CMOS battery connector	6 Board-to-board connector
7 M.2 solid-state drive slot	8 Wi-Fi card slot

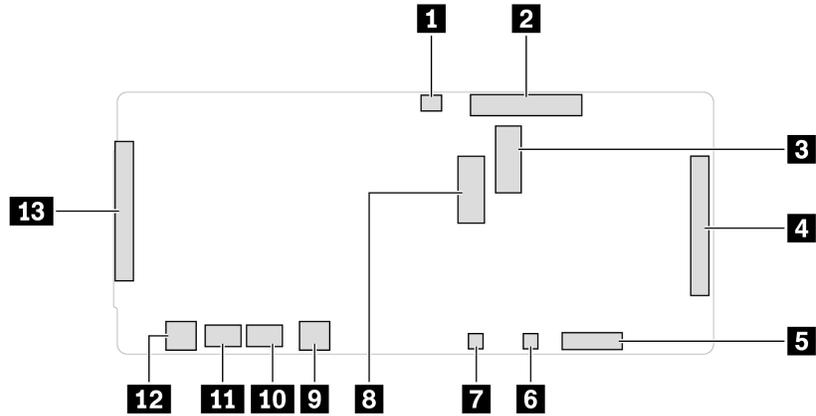


Figure 2. Skype board

1 Thermal sensor connector	2 Board-to-board connector
3 Video capture card slot	4 Left I/O board connector
5 Microphone connector	6 Left speaker connector
7 Right speaker connector	8 DSP card slot
9 USB-C connector	10 DC-out connector
11 DC-in connector	12 USB-C connector
13 Right I/O board connector	

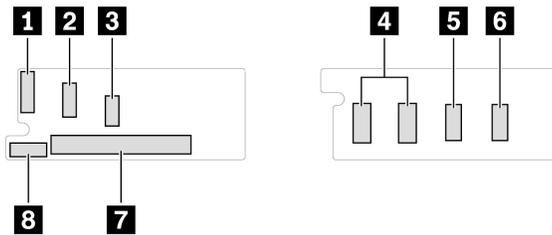


Figure 3. Right I/O board

1 LED cable connector	2 Power board cable connector
3 System fan cable connector	4 USB-A connector
5 USB-C connector	6 USB-C connector (Controller connector)
7 I/O board cable connector	8 Clock cable connector

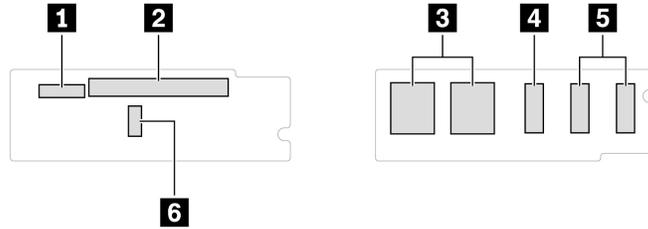


Figure 4. Left I/O board

1 RJ45 cable connector	2 I/O board cable connector
3 Ethernet connector	4 HDMI-in connector
5 HDMI-out connector	6 System fan cable connector

General Guidelines

When removing or replacing an FRU, ensure that you observe the following general guidelines:

1. We recommend that all service be performed by a certified service technician. If you choose to perform the service yourself, please follow all instructions carefully.
2. Begin by removing any FRUs that have to be removed before replacing the failing FRU. Any such FRUs are listed at the beginning of each FRU replacement procedure. Remove them in the order in which they are listed.
3. Follow the correct sequence in the steps for removing an FRU, as shown in the illustrations by the numbers in square callouts.
4. When removing an FRU, move it in the direction as shown by the arrow in the illustration.
5. To install a new FRU in place, perform the removal procedure in reverse and follow any notes that pertain to replacement.
6. When replacing an FRU, carefully retain and reuse all screws.
7. When replacing the base cover, reapply all labels that come with the replacement base cover. If some original labels are not included with the replacement base cover, peel them off from the original base cover and paste them on the replacement base cover.

Attention: The system board is sensitive to and can be damaged by ESD. Before touching it, establish personal grounding by touching a ground point with one hand or by using an ESD strap.

Remove the wall mount bracket


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, do the following:

1. Disconnect the power cord from electrical outlet and disconnect all the cables from the device.
2. Place a clean soft cloth, and then lay down the device with the top cover facing up.

Removal step

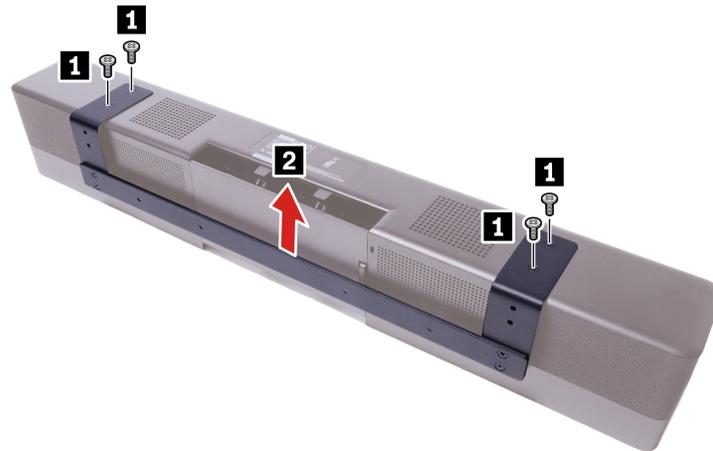

Remove the cable door


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, do the following:

1. Disconnect the power cord from electrical outlet and disconnect all the cables from the device.
2. Place a clean soft cloth, and then lay down the device with the top cover facing up.
3. Remove the wall mount bracket. See “Remove the wall mount bracket” on page 12.

Removal step

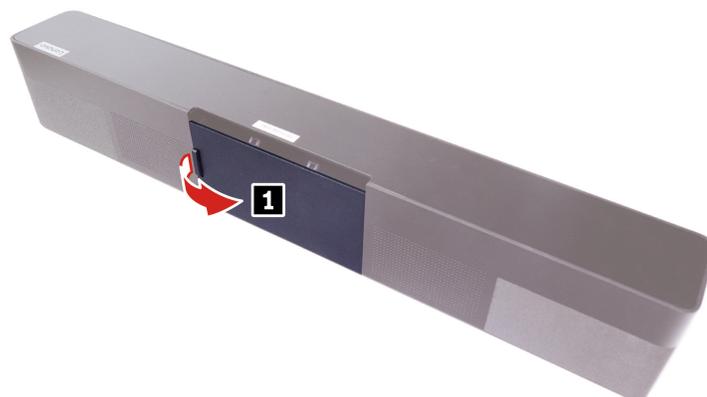

Remove the top cover


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, do the following:

1. Disconnect the power cord from electrical outlet and disconnect all the cables from the device.
2. Place a clean soft cloth, and then lay down the device with the top cover facing up.
3. Remove the wall mount bracket. See “Remove the wall mount bracket” on page 12
4. Remove the cable door. See “Remove the cable door” on page 13.

Removal step

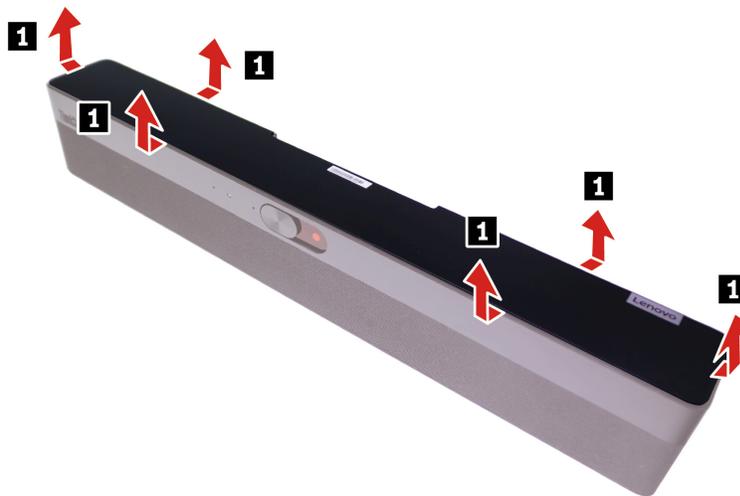

Remove the top frame


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14

Removal step

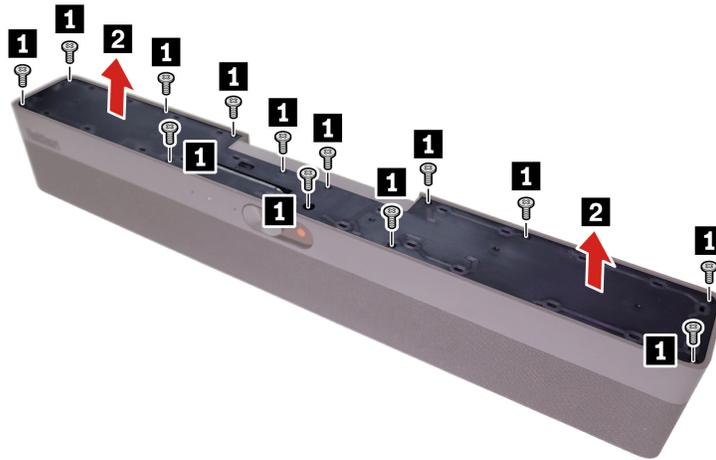

Remove the left speaker


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14

Removal step

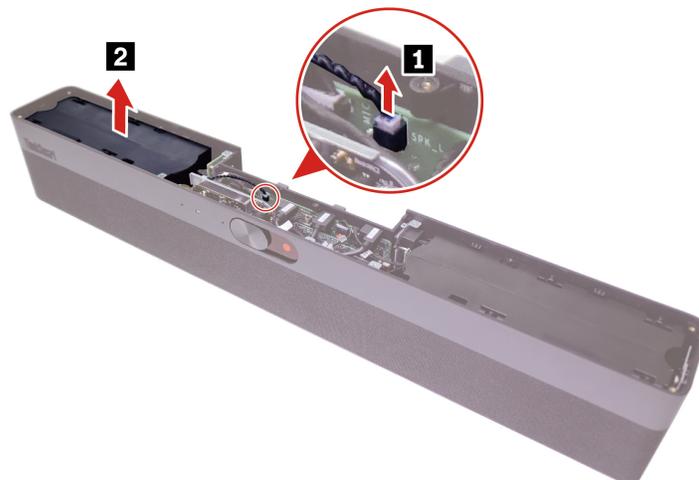

Remove the right speaker


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14

Removal step

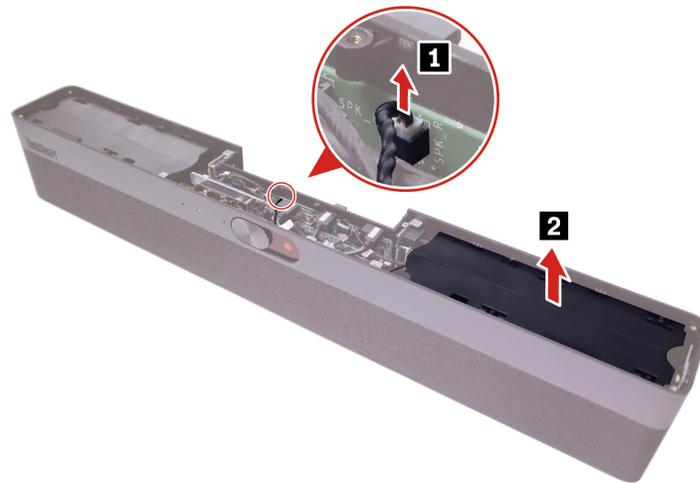

Remove the USB Type-C cable


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14

Removal step

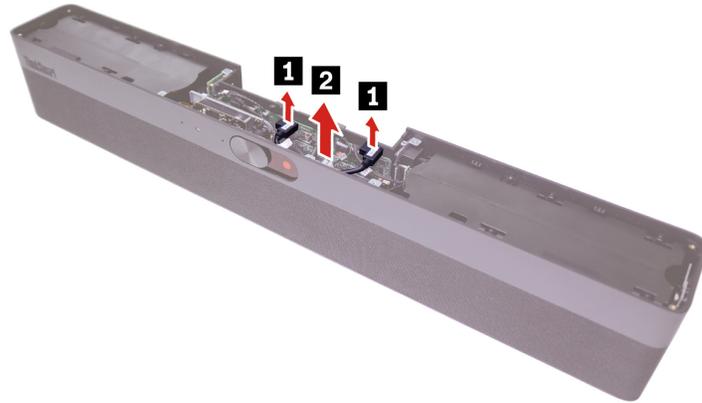

Remove the Skype board power cable


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14

Removal step

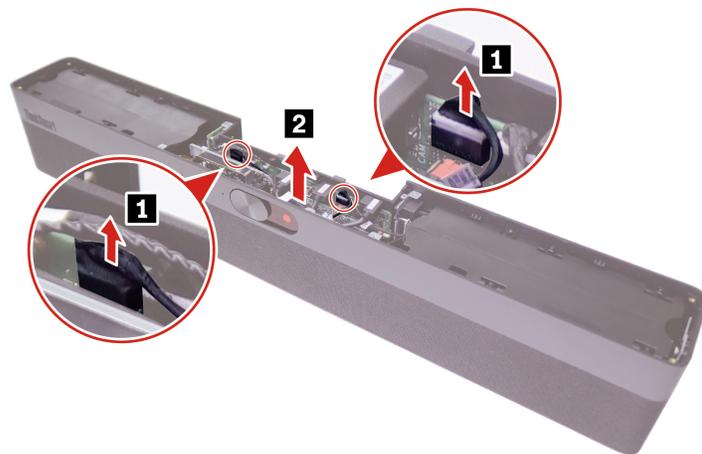

Remove the RJ45 cable


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the USB Type-C cable” on page 16

Removal step

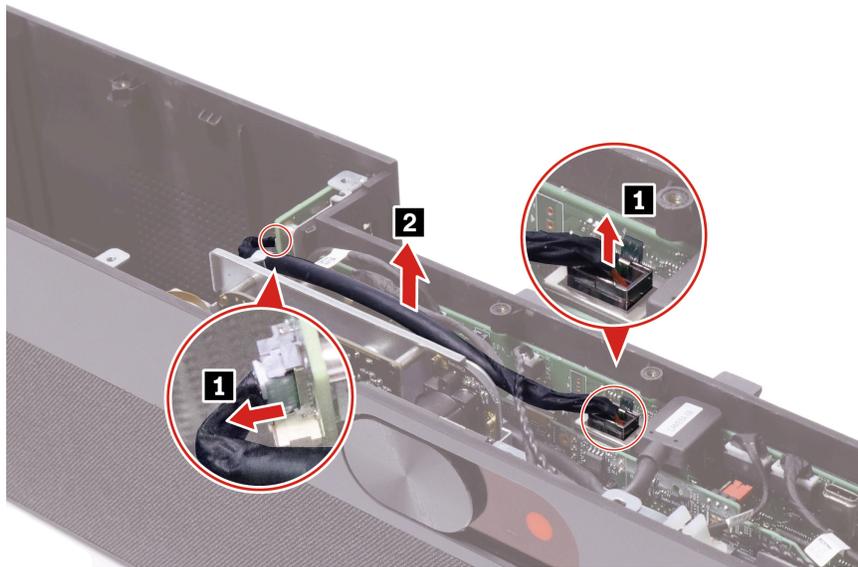

Remove the button board with cable


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the right speaker” on page 16

Removal step

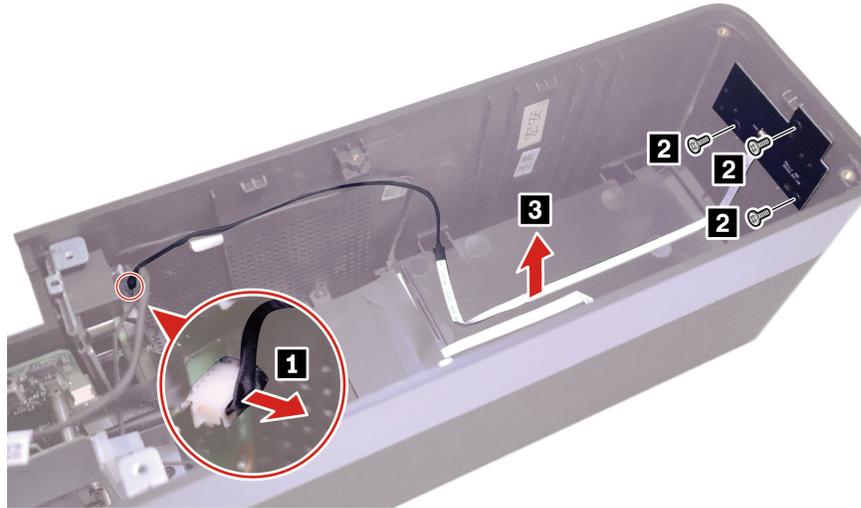

Remove the camera module


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the USB Type-C cable” on page 16

Removal step

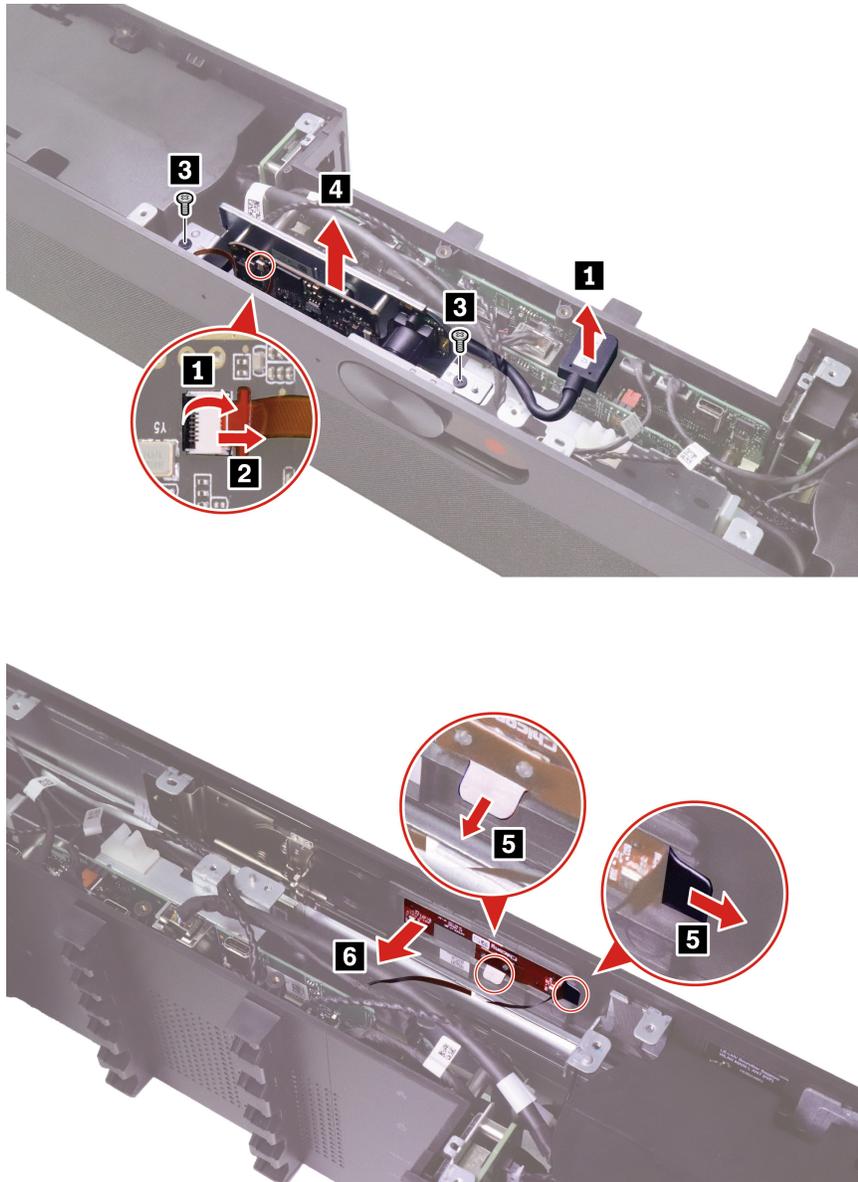

Remove the Skype board and I/O board cables

Prerequisite



Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.



For access, remove the following:


- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15

- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19

Removal steps

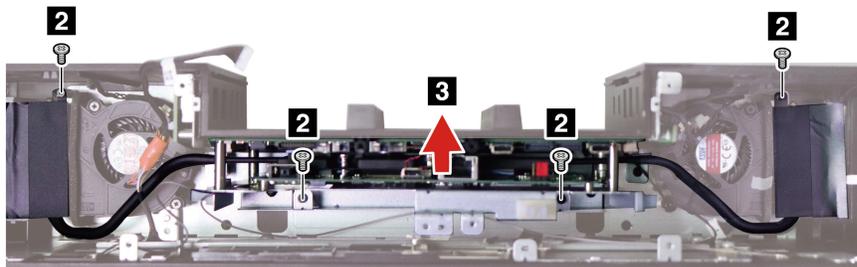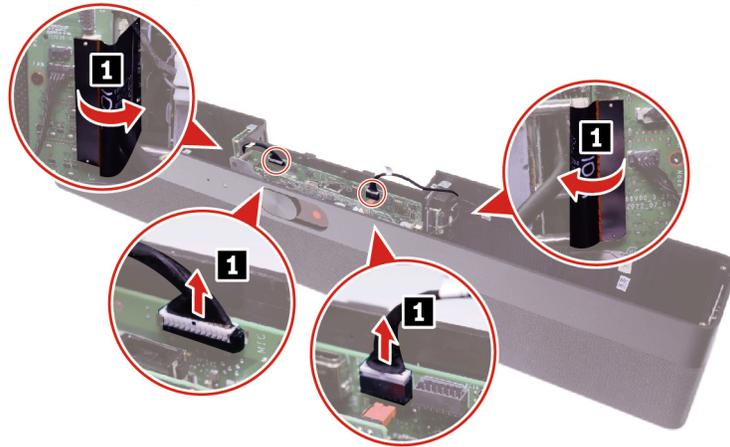

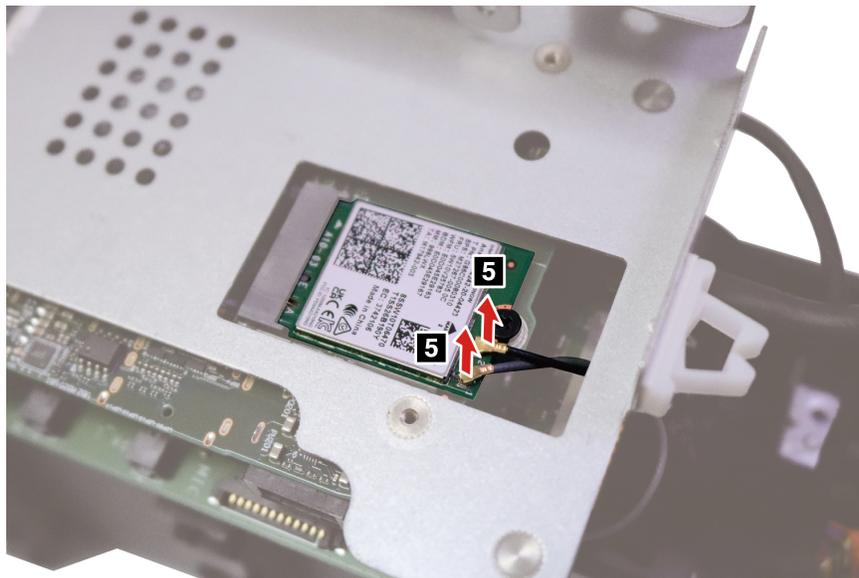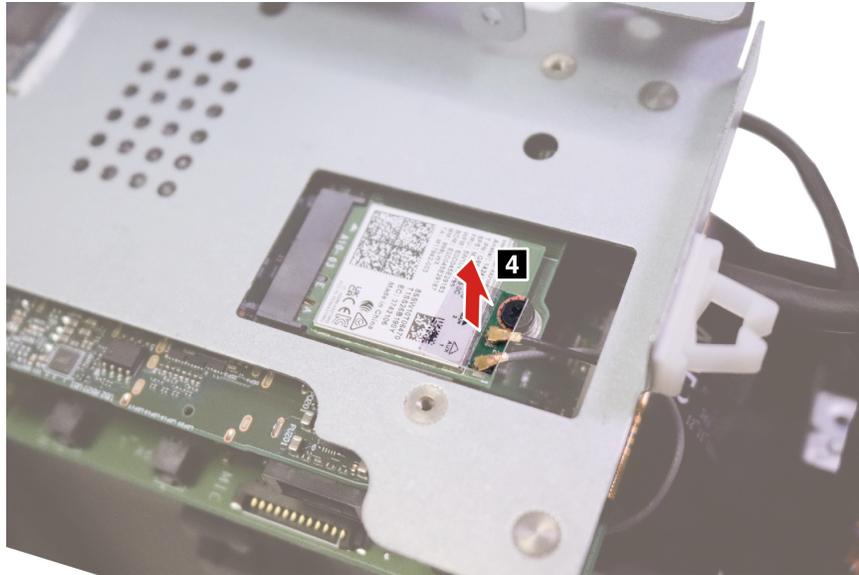

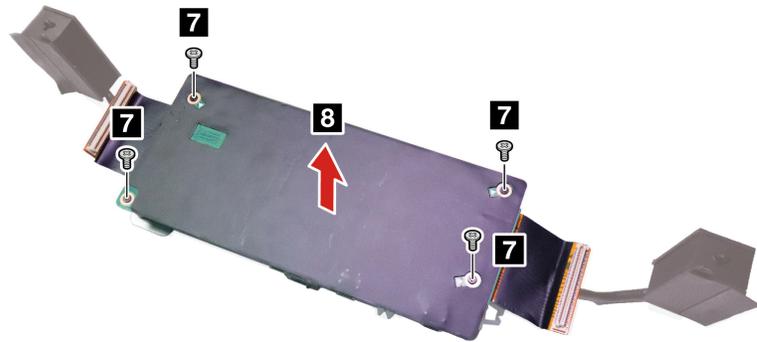

Remove the Wi-Fi antennas

Prerequisite


Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15

- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20

Removal step

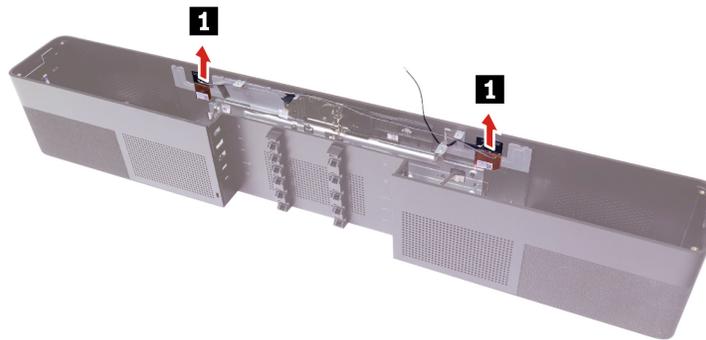

Remove the video capture card and the AL foil

Prerequisite


Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18

- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20

Removal step

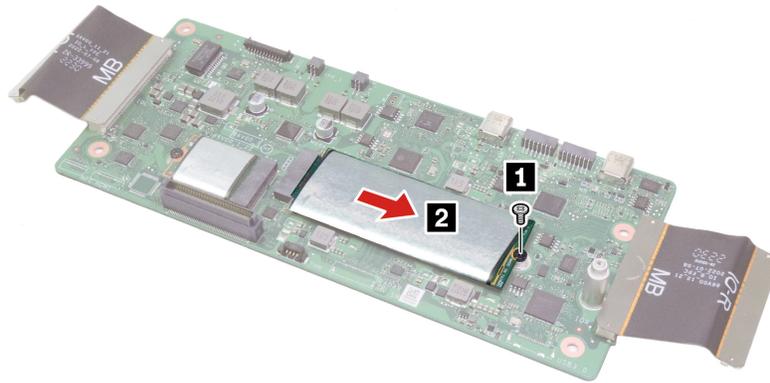

Remove the thermal module with thermal pad

Prerequisite


Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16

- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20

Removal step

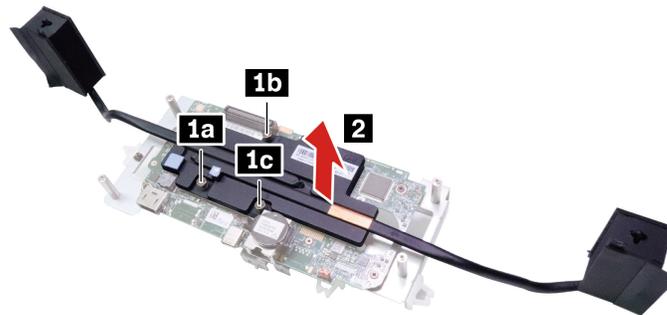

Remove the system board and RJ45 thermal pad

Prerequisite



Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19

- “Remove the Skype board and I/O board cables” on page 20
- “Remove the thermal module with thermal pad” on page 25

Removal step

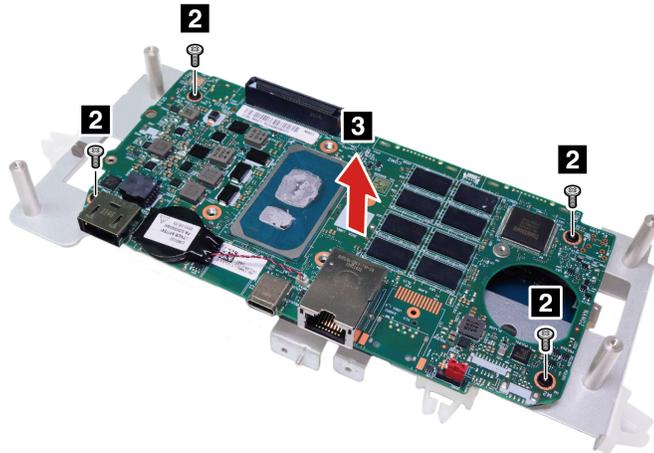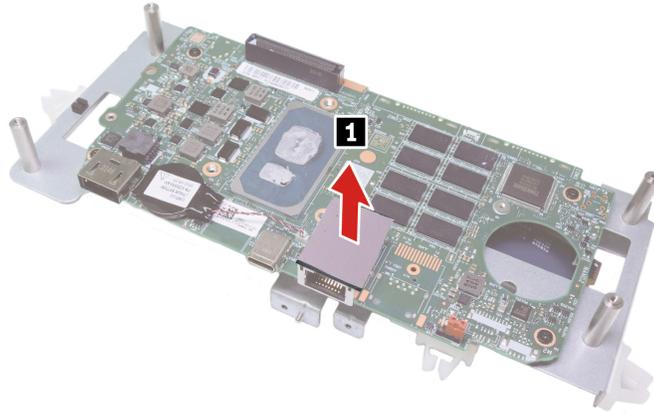

Remove the system board bracket

Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12

- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20
- “Remove the thermal module with thermal pad” on page 25
- “Remove the system board and RJ45 thermal pad” on page 26

Remove the M.2 solid-state drive and thermal pad



Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20
- “Remove the thermal module with thermal pad” on page 25
- “Remove the system board and RJ45 thermal pad” on page 26

Removal steps

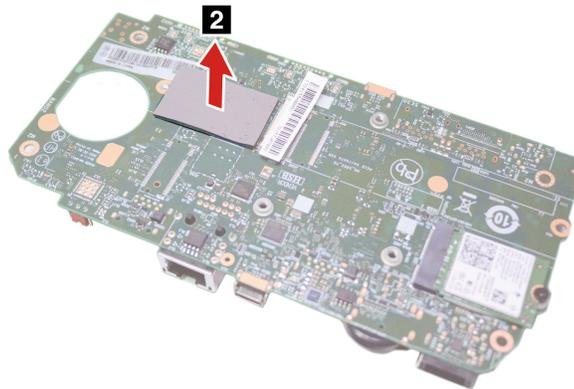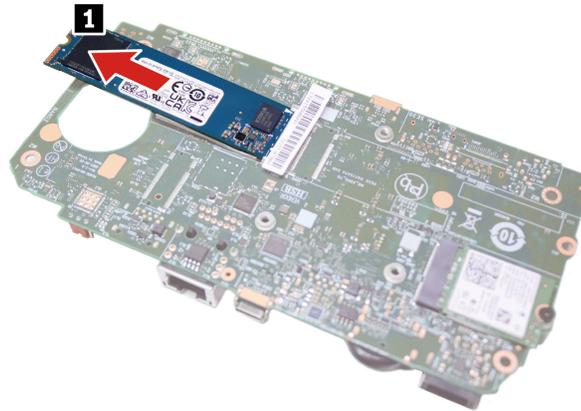

Remove the Wi-Fi card and thermal pad

Prerequisite


Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14

- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20
- “Remove the thermal module with thermal pad” on page 25
- “Remove the system board and RJ45 thermal pad” on page 26

Removal steps

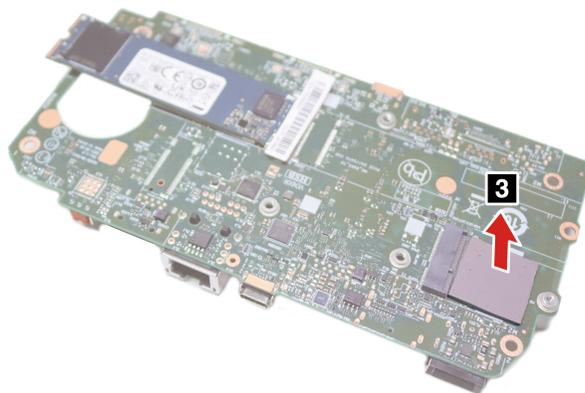

Remove the left fan


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20

Removal step

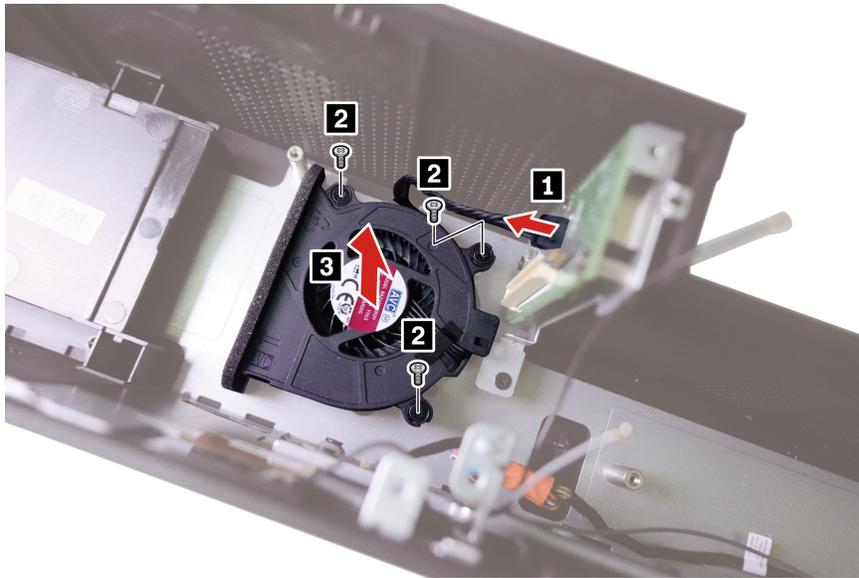

Remove the right fan


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20

Removal step

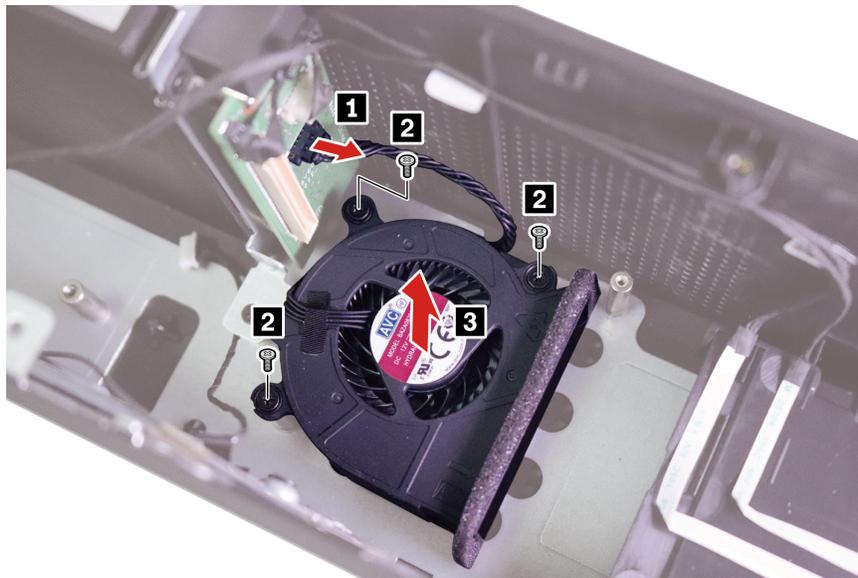

Remove the left I/O board and bracket

Prerequisite



Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14

- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20
- “Remove the left fan” on page 31

Removal steps

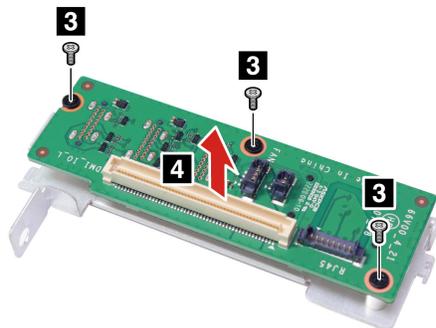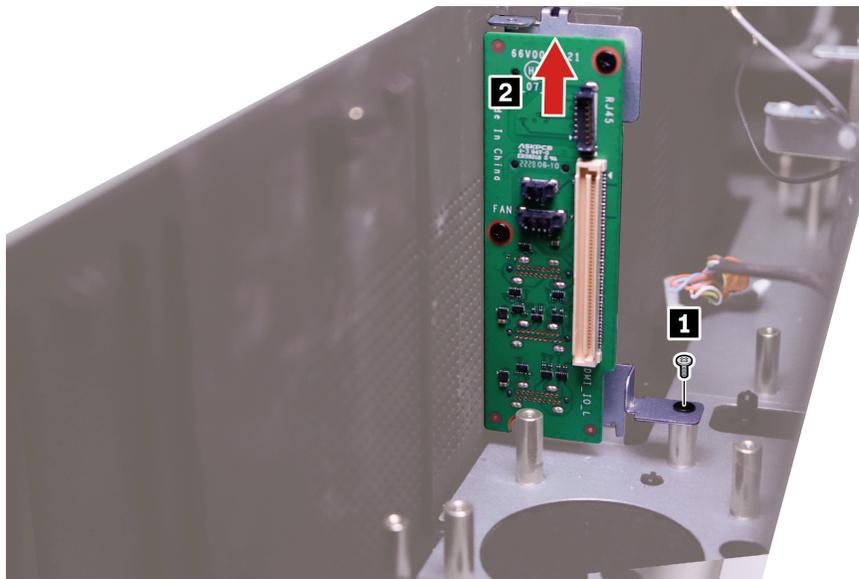

Remove the right I/O board and bracket


Prerequisite


Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20
- “Remove the right fan” on page 31

Removal steps

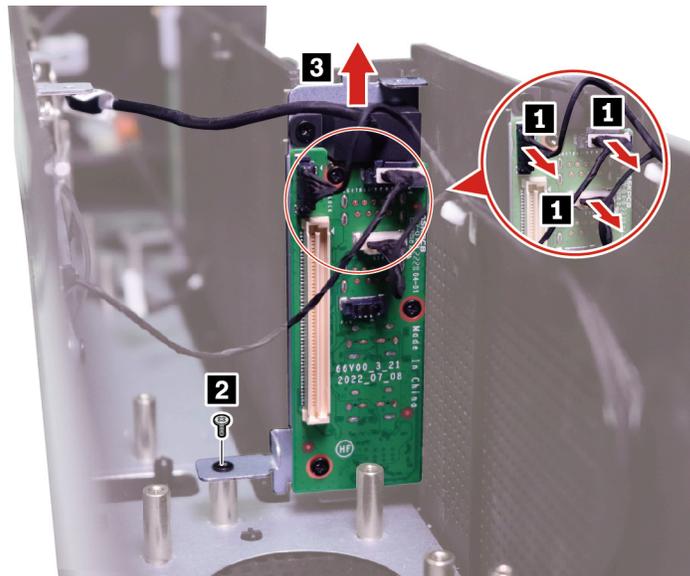

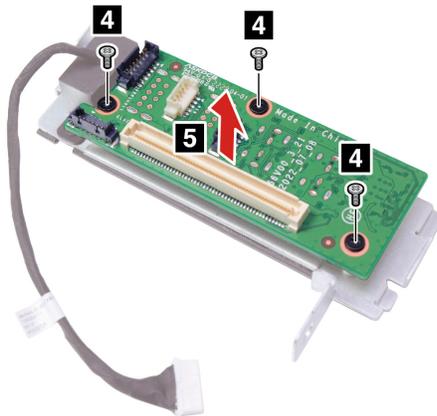

Remove the power cable


Prerequisite

Before you open the top cover, turn off ThinkSmart One and wait several minutes until it is cool.

For access, remove the following:

- “Remove the wall mount bracket” on page 12
- “Remove the cable door” on page 13
- “Remove the top cover” on page 14
- “Remove the top frame” on page 14
- “Remove the left speaker” on page 15
- “Remove the right speaker” on page 16
- “Remove the USB Type-C cable” on page 16
- “Remove the Skype board power cable” on page 17
- “Remove the RJ45 cable” on page 18
- “Remove the button board with cable” on page 18
- “Remove the camera module” on page 19
- “Remove the Skype board and I/O board cables” on page 20
- “Remove the right fan” on page 31
- “Remove the right I/O board and bracket” on page 34

Removal step

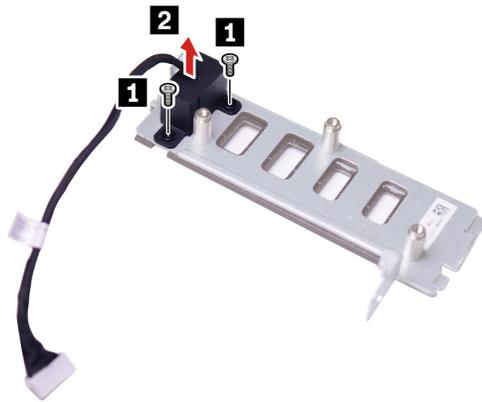

Chapter 4. Help and support

This chapter describes the various help and support resources.


Self-help resources

Use the following self-help resources to learn more about the product and troubleshoot problems.

Resources	How to access?
Lenovo Support Web site	https://smartsupport.lenovo.com
Product specifications	https://psref.lenovo.com
Serial number information	https://smartsupport.lenovo.com/solutions/ht512857
Windows help information	<ul style="list-style-type: none">• Open the Start menu and click Get Help or Tips.• Use Windows Search.• Microsoft support Web site: https://support.microsoft.com
ThinkSmart Manager Services	https://support.lenovo.com/solutions/tsm
Lenovo Community	https://forums.lenovo.com

Appendix A. Serial Number Location

Refer to the illustrations to find your product Serial Number.

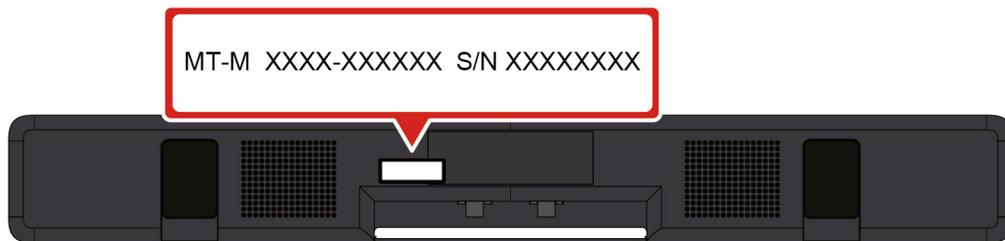

Appendix B. Notices and trademarks

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*Lenovo (United States), Inc.
8001 Development Drive
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing*

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in the manuals included with your product, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your product might not match exactly the actual configuration of the product that you purchase. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Lenovo and is not covered by any open source license, including any Linux agreement(s) which may accompany software included with this product. Lenovo may update this document at any time without notice.

For the latest information or any questions or comments, contact or visit the Lenovo Web site:

<https://pcsupport.lenovo.com>

Trademarks

Lenovo, Lenovo logo, ThinkSmart, and ThinkSmart logo are trademarks of Lenovo. Intel, Intel Xeon, and Thunderbolt are trademarks of Intel Corporation or its subsidiaries in the U.S. and/or other countries. Microsoft, Windows, and Cortana are trademarks of the Microsoft group of companies. The terms HDMI and HDMI High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance. USB-C is a registered trademark of USB Implementers Forum. All other trademarks are the property of their respective owners.