

Dell Vostro 3070

Setup and specifications guide



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.


© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

1 Set up your computer.....	5
2 Chassis.....	8
Chassis views.....	8
3 System specifications.....	10
Dimensions and weight.....	10
System information.....	10
Operating system.....	11
Memory.....	11
Ports and connectors.....	12
Communications.....	12
Video.....	12
Audio.....	13
Storage.....	13
Processor specifications.....	13
Power supply.....	14
Security hardware.....	14
Regulatory and Environmental Compliance.....	14
4 System setup.....	15
BIOS overview.....	15
General screen options.....	16
System Configuration screen options.....	16
Video screen options.....	18
Security screen options.....	18
Secure Boot screen options.....	19
Intel Software Guard Extensions screen options.....	19
Performance screen options.....	20
Power Management screen options.....	20
POST Behavior screen options.....	21
Virtualization support screen options.....	22
Wireless screen options.....	22
Maintenance screen options.....	22
System Log screen options.....	22
Advanced configuration options.....	22
SupportAssist System Resolution screen options.....	23
5 Software.....	24
Supported operating systems.....	24
Downloading drivers.....	24
Intel chipset drivers.....	24
Intel HID Event Filter.....	25


Disk drivers.....	26
Display adapter driver.....	26
Bluetooth drivers.....	26
Network drivers.....	26
Audio drivers.....	26
Storage drivers.....	27
Security drivers.....	27
6 Getting help.....	28
Contacting Dell.....	28

Set up your computer


- 1 Connect the keyboard and mouse.

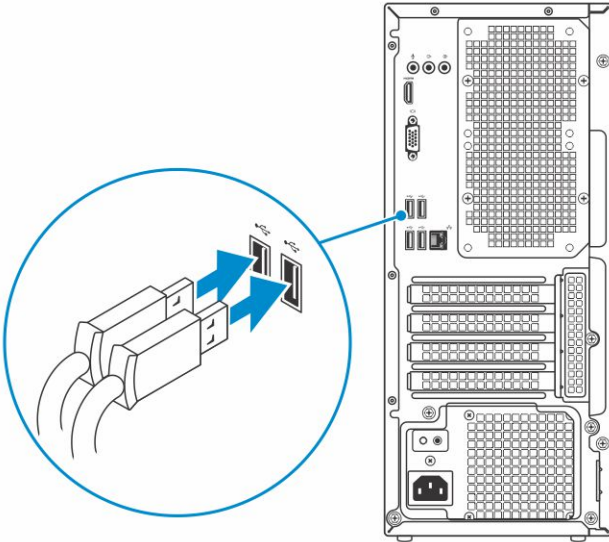


- 2 Connect to your network using a cable.

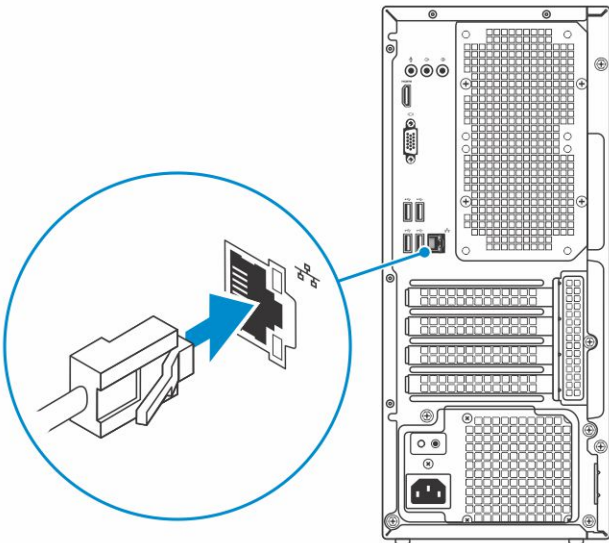


- 3 Connect the display.

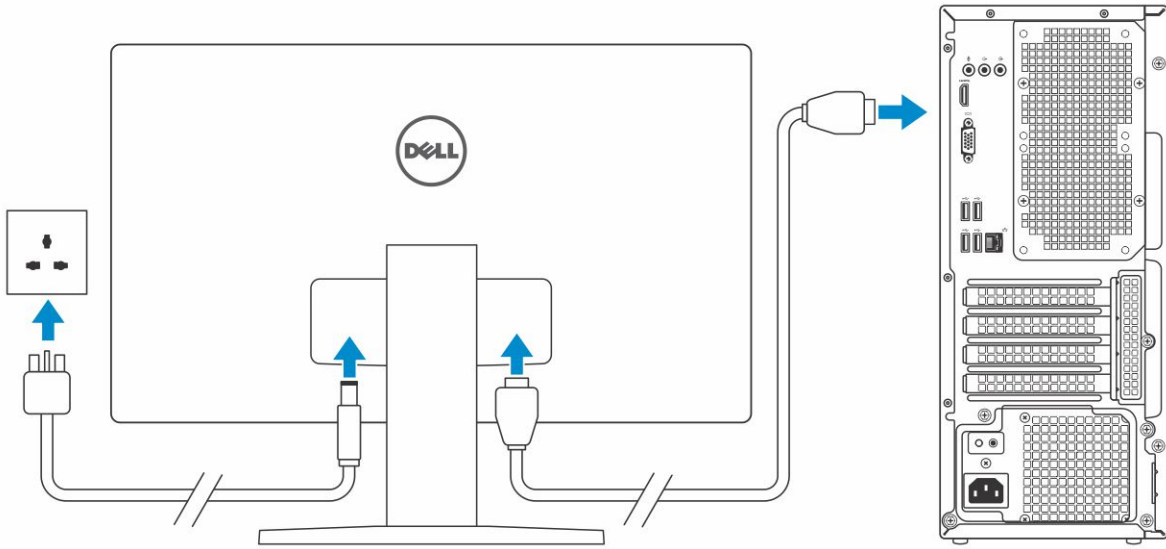

4 Connect the power cable.

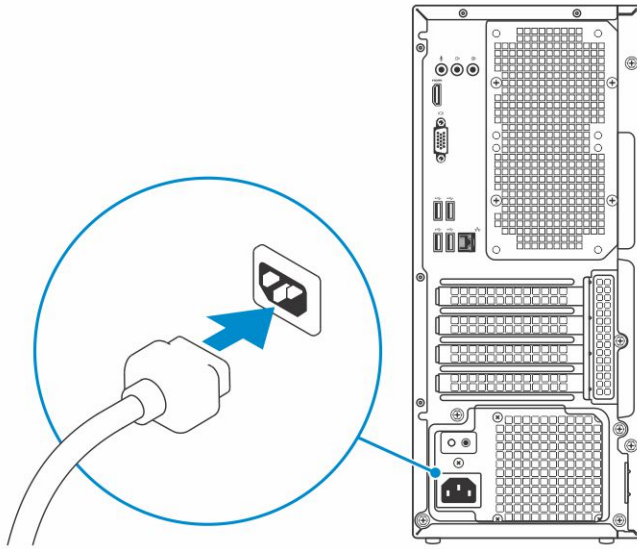


5 Press the power button.

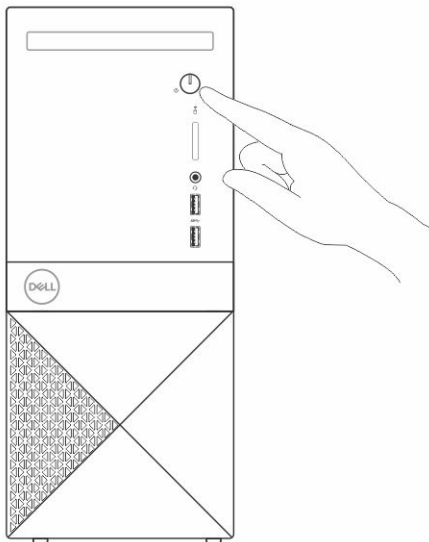


6 Follow the instructions on the screen to finish Windows setup:

- a Connect to a network.

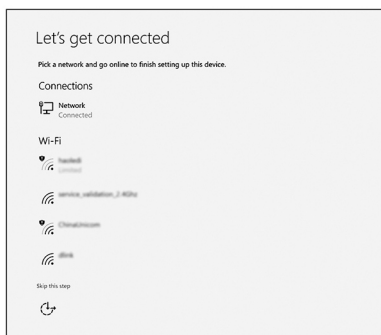

- b Sign-in to your Microsoft account or create a new account.

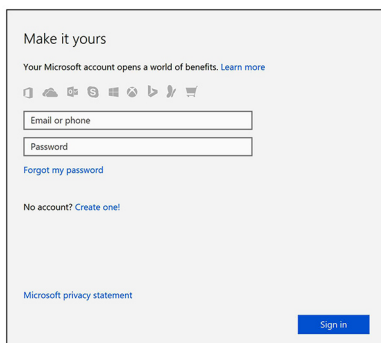


7 Locate Dell apps.

Table 1. Locate Dell apps



Register your computer

Dell Help & Support

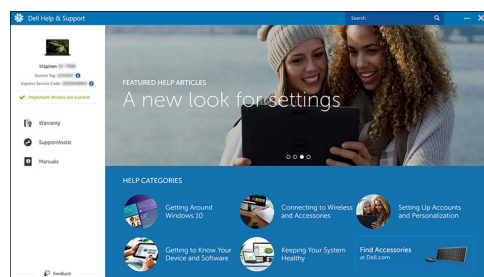

SupportAssist — Check and update your computer


Chassis

The chapter illustrates the multiple views of the chassis along with the ports and connectors.

Chassis views

The chassis view displays only the standard components and all the optional components may not be listed.


Front view

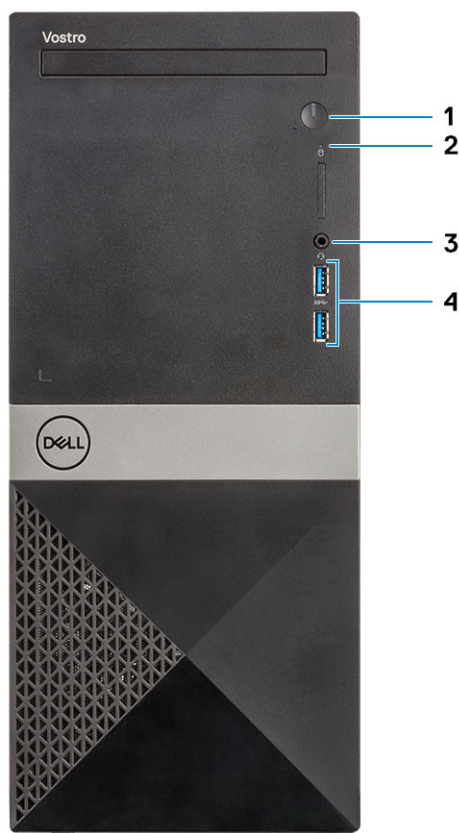

- 1 Power button/Power-status light
- 3 Headset port

- 2 Hard-drive activity light
- 4 USB 3.1 Gen 1 ports (2)

Back view

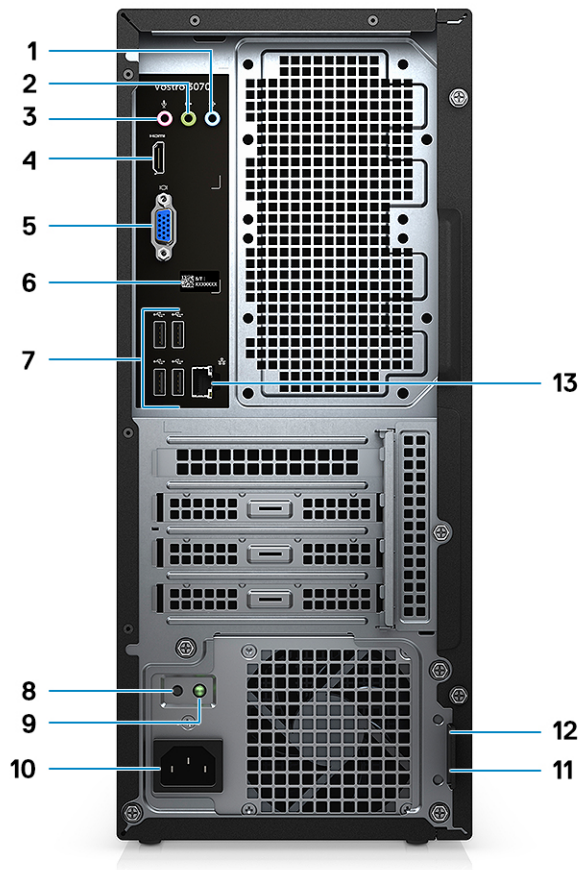

- | | | | |
|----|--------------------------------|----|---------------------------------|
| 1 | Line-in port | 2 | Line-out port |
| 3 | Microphone port | 4 | HDMI port |
| 5 | VGA port | 6 | Service tag label |
| 7 | USB 2.0 ports (4) | 8 | Power supply diagnostics button |
| 9 | Power supply diagnostics light | 10 | Power connector port |
| 11 | Padlock ring | 12 | Kensington security slot |
| 13 | Network port | | |

System specifications

NOTE: Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to Help and Support in your Windows operating system and select the option to view information about your computer.

Topics:

- [Dimensions and weight](#)
- [System information](#)
- [Operating system](#)
- [Memory](#)
- [Ports and connectors](#)
- [Communications](#)
- [Video](#)
- [Audio](#)
- [Storage](#)
- [Processor specifications](#)
- [Power supply](#)
- [Security hardware](#)
- [Regulatory and Environmental Compliance](#)

Dimensions and weight

Table 2. Dimensions and weight

Height	14.7 inch (373.7 mm)
Width	6.3 inch (160 mm)
Depth	11.4 inch (289.4 mm)
Weight	11.46 lb (5.2kg)

System information

Table 3. System information

Chipset	Intel B360
DRAM bus width	64-bit wide channels
FLASH EPROM	256Mbit
PCIe bus	100 Mhz

Operating system

Table 4. Operating system

Operating systems supported

- Windows 10 64-bit
- Windows 10 64-bit Professional
- Windows 10 64-bit National Academic (STF)
- Ubuntu 16.04 LTS (64-bit)

Memory

Table 5. Memory specifications

Minimum memory configuration

4 GB

Maximum memory configuration

32 GB

Number of slots

2 UDIMM

Maximum memory supported per slot

16 GB

Memory options

- 4 GB DDR4 2400 MHz (4Gx1)
- 8 GB DDR4 2400 MHz (8Gx1)
- 8 GB DDR4 2400 MHz (4Gx2)
- 12 GB DDR4 2400 MHz (8Gx1 + 4Gx1)
- 16 GB DDR4 2400 MHz (8Gx2)
- 16 GB DDR4 2400 MHz (16Gx1)
- 24 GB DDR4 2400 MHz (16Gx1 + 8Gx1)
- 32 GB DDR4 2400 MHz (16Gx2)
- 4 GB DDR4 2666 MHz (4Gx1)
- 8 GB DDR4 2666 MHz (8Gx1)
- 8 GB DDR4 2666 MHz (4Gx2)
- 12 GB DDR4 2666 MHz (8Gx1 + 4Gx1)
- 16 GB DDR4 2666 MHz (8Gx2)
- 16 GB DDR4 2666 MHz (16Gx1)
- 24 GB DDR4 2666 MHz (16Gx1 + 8Gx1)
- 32 GB DDR4 2666 MHz (16Gx2)

NOTE: The memory modules are customer replaceable units (CRU), and it can be upgraded.

NOTE:

- Memory configuration of 2400 MHz pair with PDC, CDC, core i3 CPU
- Memory configuration of 2666 MHz pair with core i5, i7 CPU

Type

DDR4 SDRAM Non-ECC memory

Speed	<ul style="list-style-type: none"> • 2666 MHz on Core i5, i7 processor • 2400 MHz on Celeron, Pentium, and i3 processor
-------	---

Ports and connectors

Table 6. Ports and connectors

USB	<ul style="list-style-type: none"> • Two USB 3.1 Gen 1 ports • Four USB 2.0 ports
Security	<ul style="list-style-type: none"> • Kensington lock slot • Padlock ring
Audio	<ul style="list-style-type: none"> • Headset port • Microphone port • Line-in port • Line-out port
Video	<ul style="list-style-type: none"> • HDMI 1.4 (UMA) • VGA port
Network adapter	One RJ-45 connector

Communications

Table 7. Communication specifications

Network adapter	Realtek RTL8111H Gigabit Ethernet controller 10/100/1000 Mb/s Ethernet (RJ-45)
-----------------	---

Video

Table 8. Video

Controller	Type	CPU Dependency	Graphics memory type	Capacity	External display support	Maximum resolution
Intel UHD Graphics 610	UMA	Pentium G5400 and Celeron G4900	Integrated	Shared system memory	VGA HDMI 1.4	VGA: 2048x1536@60 HZ 1920x1080@60Hz
Intel UHD Graphics 630	UMA	Intel 8th Generation Core i3-8100, i5-8400, i7-8700 processor	Integrated	Shared system memory	VGA HDMI 1.4	VGA: 2048x1536@60 HZ 1920x1080@60Hz

Audio

Table 9. Audio specifications

Controller	Waves MaxxAudio Pro
Type	Four-channel high-definition audio
Interface	<ul style="list-style-type: none">• 3-stack audio jacks supporting 5.1 surround sound.• High-quality speakers• Stereo headset/mic combo

Storage

Table 10. Storage specifications

Type	Form factor	Interface	Capacity
Hard drive (HDD)	3.5 inch	SATA AHCI, Up to 6 Gbps	Up to 2 TB at 7200 RPM

Processor specifications

NOTE: Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

Table 11. Processor specifications

Type	UMA Graphics
Intel 8th Generation Celeron processor G4900 (2M Cache, 2 cores, 54 W, up to 3.1 GHz)	Intel UHD Graphics 610 with shared graphics memory
Intel 8th Generation Pentium Gold processor G5400 (4M Cache, 2 cores, 58 W, up to 3.7 GHz)	Intel UHD Graphics 610 with shared graphics memory
Intel 8th Generation Core i3-8100 processor (6 MB Cache, 4 cores, 65 W, up to 3.6 GHz)	Intel UHD Graphics 630 with shared graphics memory
Intel 8th Generation Core i5-8400 processor (9 MB Cache, 6 cores, 65 W, up to 4.0 GHz)	Intel UHD Graphics 630 with shared graphics memory
Intel 8th Generation Core i7-8700 processor (12 MB Cache, 6 cores, 65 W, up to 4.6 GHz),	Intel UHD Graphics 630 with shared graphics memory
Intel Celeron 9th Gen Celeron G4930 (2M Cache, up to 3.2 GHz)	Intel UHD Graphics 610 with shared graphics memory
Intel 9th Generation Pentium Gold processor G5420 (4M Cache, up to 3.8 GHz)	Intel UHD Graphics 610 with shared graphics memory
Intel 9th Generation Core i5-9400 9th Generation i5-9400 processor (9 MB Cache, up to 4.1 GHz)	Intel UHD Graphics 630 with shared graphics memory

Type	UMA Graphics
Intel 9th Generation Core i7-9700 9th Generation Core i7-9700 processor (12 MB Cache, up to 4.7 GHz)	Intel UHD Graphics 630 with shared graphics memory

Power supply

Table 12. Power supply

Input Voltage	200–240 VAC, 50–60 Hz
Input current (maximum)	<ul style="list-style-type: none"> 180 W PSU APFC High voltage

Security hardware

Table 13. Security hardware

Security HW	<ul style="list-style-type: none"> Data wipe via BIOS (Secure Erase) Support of Computrace BIOS agent – supports both Computrace and Proactive Systems Management Control Vault 2.0 Advanced authentication w FIPS 140-2 Level 3 Certificate
-------------	---

Regulatory and Environmental Compliance

Table 14. Regulatory and Environmental Compliance

Regulatory and Environmental Compliance	<ul style="list-style-type: none"> CCC/CECP (China only) ESPL/ 1 Million Hr MTBF (China only, Post-RTS)
---	---

System setup

System setup enables you to manage your desktop hardware and specify BIOS level options. From the System setup, you can:

- Change the NVRAM settings after you add or remove hardware
- View the system hardware configuration
- Enable or disable integrated devices
- Set performance and power management thresholds
- Manage your computer security

Topics:

- [BIOS overview](#)
- [General screen options](#)
- [System Configuration screen options](#)
- [Video screen options](#)
- [Security screen options](#)
- [Secure Boot screen options](#)
- [Intel Software Guard Extensions screen options](#)
- [Performance screen options](#)
- [Power Management screen options](#)
- [POST Behavior screen options](#)
- [Virtualization support screen options](#)
- [Wireless screen options](#)
- [Maintenance screen options](#)
- [System Log screen options](#)
- [Advanced configuration options](#)
- [SupportAssist System Resolution screen options](#)

BIOS overview

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.


General screen options

This section lists the primary hardware features of your computer.

Option	Description				
System Information	<ul style="list-style-type: none">• System Information: Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and the Express Service Code.• Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channels Mode, Memory Technology, DIMM 1 Size, DIMM 2Size.• Processor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit technology.• Device Information: Displays Primary Hard Drive, SATA-OLOM MAC Address, Video Controller, Audio Controller.				
Boot Sequence	<table><tr><td>Boot Sequence</td><td>Allows you to change the order in which the computer attempts to find an operating system. The options are:<ul style="list-style-type: none">• Windows Boot Manager• Onboard NIC(IPV4)• Oboard NIC(IPV6)By default, all the options are checked. You can also deselect any option or change the boot order.</td></tr><tr><td>Boot List Options</td><td>Allows you to change the boot list option:<ul style="list-style-type: none">• Legacy External Devices• UEFI (default)</td></tr></table>	Boot Sequence	Allows you to change the order in which the computer attempts to find an operating system. The options are: <ul style="list-style-type: none">• Windows Boot Manager• Onboard NIC(IPV4)• Oboard NIC(IPV6) By default, all the options are checked. You can also deselect any option or change the boot order.	Boot List Options	Allows you to change the boot list option: <ul style="list-style-type: none">• Legacy External Devices• UEFI (default)
Boot Sequence	Allows you to change the order in which the computer attempts to find an operating system. The options are: <ul style="list-style-type: none">• Windows Boot Manager• Onboard NIC(IPV4)• Oboard NIC(IPV6) By default, all the options are checked. You can also deselect any option or change the boot order.				
Boot List Options	Allows you to change the boot list option: <ul style="list-style-type: none">• Legacy External Devices• UEFI (default)				
Advanced Boot Options	<p>This option allows you the legacy option ROMs to load.</p> <ul style="list-style-type: none">• By default, the Enable Legacy Option ROMs is enabled• This option allows you the legacy option ROMs to load. By default, the Enable Attenuot Legacy Boot is disabled.•				
UEFI Boot Path Security	<p>This options control whether or not the system will prompt the user to enter the Admin password (if set) when booting a UEFI boot path from the F12 Boot Menu</p> <ul style="list-style-type: none">• Always Except Internal HDD (default)• Always• Never				
Date/Time	Allows you to change the date and time.				

System Configuration screen options






Option	Description
Integrated NIC	Allows you to configure the integrated network controller. The options are: <ul style="list-style-type: none">• Disabled

Option	Description <ul style="list-style-type: none"> Enabled Enabled w/PXE: This option is enabled by default.
SATA Operation	<p>Allows you to configure the internal SATA hard-drive controller. The options are:</p> <ul style="list-style-type: none"> Disabled AHCI RAID On(default)
Drives	<p>Allows you to configure the SATA drives on board. All drives are enabled by default. The options are:</p> <ul style="list-style-type: none"> SATA-0
SMART Reporting	<p>This field controls whether hard drive errors for integrated drives are reported during system startup. This technology is part of the SMART (Self-Monitoring Analysis and Reporting Technology) specification. This option is disabled by default.</p> <ul style="list-style-type: none"> Enable SMART Reporting
USB Configuration	<p>This field configures the integrated USB controller. If Boot Support is enabled, the system is allowed to boot any type of USB Mass Storage Devices (HDD, memory key, floppy).</p> <p>If USB port is enabled, device attached to this port is enabled and available for OS.</p> <p>If USB port is disabled, the OS cannot see any device attached to this port.</p> <ul style="list-style-type: none"> Enable USB Boot Support (default) Enable Front USB Ports(default) Enable Rear USB Ports (default) <p> NOTE: USB keyboard and mouse always work in the BIOS setup irrespective of these settings.</p>
Front USB Configuration	<p>This field enables or disables the front USB configuration</p> <ul style="list-style-type: none"> Front Port 1 (Bottom Right)* (default) Front Port 2 (Bottom Left)* (default) <p>* denotes a USB 3.0-capable port</p>
Rear USB Configuration	<p>This field enables or disables the front USB configuration</p> <ul style="list-style-type: none"> Rear Port 1 Rear Port 2 Rear Port 3 (w/RJ-45) Rear Port 4 (w/RJ-45) <p>* denotes a USB 3.0-capable port</p>
Audio	<p>This field enables or disables the integrated audio controller. By default, the Enable Audio option is selected.</p>
Miscellaneous Devices	<p>Allows you to enable or disable the following devices:</p> <ul style="list-style-type: none"> Enabled Secure Digital (SD) Card

Video screen options


Option	Description
Primary Display	<p>This option determines which video controller becomes the primary display when multiple controllers are available in the system</p> <ul style="list-style-type: none">• Auto: This option is enabled by default.• Intel HD Graphics

Security screen options

Option	Description
Admin Password	<p>Allows you to set, change, or delete the administrator (admin) password.</p> <p> NOTE: You must set the admin password before you set the system or hard drive password. Deleting the admin password automatically deletes the system password and the hard drive password.</p> <p> NOTE: Successful password changes take effect immediately.</p> <p>Default setting: Not set</p>
System Password	<p>Allows you to set, change, or delete the system password.</p> <p> NOTE: Successful password changes take effect immediately.</p> <p>Default setting: Not set</p>
Internal HDD-0 Password	<p>Allows you to set, change, or delete the password on the system's internal hard-disk drive.</p> <p> NOTE: Successful password changes take effect immediately.</p> <p>Default Setting: Not set</p>
Password Change	<p>Allows you to enable the disable permission to the System and Hard Drive passwords when the admin password is set.</p> <p>Default setting: Allow Non-Admin Password Changes is selected.</p>
UEFI Capsule Firmware Update	<p>This option controls whether the system allows the BIOS updates through UEFI capsule update packages. This option is enabled by default.</p>
PTT Security	<p>Allows you to enable the Platform Trust Technology feature (PTT). The option is:</p> <ul style="list-style-type: none">• PTT On (not enabled)
Computrace	<p>Allows you to activate or disable the optional Computrace software The options are:</p> <ul style="list-style-type: none">• Deactivate• Disable• Activate <p> NOTE: The Activate and Disable options will permanently activate or disable the feature and no further changes are allowed</p> <p>Default setting: Deactivate</p>

Option	Description
Master Password Lockout	The option Enable Master Password Lockout is not selected by default.
SIMM Security Mitigation	Allows you to enable or disable the additional UEFI SIMM Security Mitigation protections. Default Setting: SIMM Security Mitigation is not selected.

Secure Boot screen options

Option	Description
Secure Boot Enable	This option enables or disables the Secure Boot feature. Default setting: Not selected
Secure Boot Mode	<ul style="list-style-type: none"> • Deployed Mode (default) • Audit Mode
Expert Key Management	<p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options are:</p> <ul style="list-style-type: none"> • PK (default) • KEK • db • dbx <p>If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are:</p> <ul style="list-style-type: none"> • Save to File—Saves the key to a user-selected file. • Replace from File—Replaces the current key with a key from a user-selected file. • Append from File—Adds a key to the current database from a user-selected file • Delete—Deletes the selected key • Reset All Keys—Resets to default setting • Delete All Keys—Deletes all the keys <p> NOTE: If you disable the Custom Mode, all the changes made are erased and the keys restore to default settings.</p>

Intel Software Guard Extensions screen options

Option	Description
Intel SGX Enable	<p>This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS. The options are:</p> <ul style="list-style-type: none"> • Disabled • Enabled • Software Controlled (default)
Enclave Memory Size	<p>This option sets SGX Enclave Reserve Memory Size. The options are:</p> <ul style="list-style-type: none"> • 32 MB • 64 MB

Option	Description
	<ul style="list-style-type: none"> 128 MB

Performance screen options

Option	Description
Multi Core Support	<p>This field specifies whether the process has one or all cores enabled. The performance of some applications improve with the additional cores. This option is enabled by default. Allows you to enable or disable multi-core support for the processor. The installed processor supports two cores. If you enable Multi Core Support, two cores are enabled. If you disable Multi Core Support, one core is enabled.</p> <ul style="list-style-type: none"> Enabled Multi Core Support (enabled by default)
Intel SpeedStep	<p>Allows you to enable or disable the Intel SpeedStep feature.</p> <ul style="list-style-type: none"> Enable Intel SpeedStep <p>Default setting: The option is enabled.</p>
C-States Control	<p>Allows you to enable or disable the additional processor sleep states.</p> <ul style="list-style-type: none"> C states <p>Default setting: The option is enabled.</p>

Power Management screen options

Option	Description
AC Recovery	<p>Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected.</p> <ul style="list-style-type: none"> Power Off (default) Power On Last Power State
Enable Intel Speed Shift Technology	<p>This option is used to enable or disable the Intel speed shift technology support. The option is enabled by default.</p>
Auto On Time	<p>Allows you to set the time at which the computer must turn on automatically. The options are:</p> <ul style="list-style-type: none"> Disabled Every Day Weekdays Select Days <p>Default setting: Disabled</p>
Deep Sleep Control	<p>Allows you to aggressive the system is at conserving power while Shut down (S5) or in Hibernate (S4) mode.</p> <ul style="list-style-type: none"> Disabled (default) Enabled in S5 only Enabled in S4 and S5
USB Wake Support	<p>Allows you to enable USB devices to wake the system from Standby.</p>

Option	Description
	<p>NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power.</p> <ul style="list-style-type: none"> • Enable USB Wake Support <p>Default setting: The option is enabled..</p>
Wake on LAN/WLAN	<p>Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal.</p> <ul style="list-style-type: none"> • Disabled: This option is enabled by default. • LAN Only • WLAN Only • LAN or WLAN • LAN with PXE Boot
Block Sleep	<p>This option lets you block entering to sleep (S3 state) in operating system environment.</p> <p>Block Sleep (S3 state)</p> <p>Default setting: This option is disabled</p>

POST Behavior screen options

Option	Description
Numlock LED	<p>This option specifies whether the NumLock LED should be on when the system boots.</p> <ul style="list-style-type: none"> • Enable Numlock LED: The option is enabled.
Keyboard Errors	<p>This option option specifies whether the keyboard related errors are reported when it boots.</p> <ul style="list-style-type: none"> • Enables Keyboard Error Detection: The option is enabled by default.
Fastboot	<p>Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are:</p> <ul style="list-style-type: none"> • Minimal • Thorough (default) • Auto
Extend BIOS POST Time	<p>This option created an additional pre-boot delay.</p> <ul style="list-style-type: none"> • 0 seconds (default) • 5 seconds • 10 seconds
Full Screen Logo	<p>. This option displays full screen logo if your image match screen resolution. The option Enable Full Screen Logo is not selected by default.</p>
Warnings and Errors	<ul style="list-style-type: none"> • Prompt on Warnings and Errors (default) • Continue on Warnings • Continue on Warnings and Errors

Virtualization support screen options

Option	Description
Virtualization	Allows you to enable or disable the Intel Virtualization Technology. Enable Intel Virtualization Technology (default).
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. Enable VT for Direct I/O - enabled by default.

Wireless screen options

Option	Description
Wireless Device Enable	Allows you to enable or disable internal wireless devices. <ul style="list-style-type: none">• WLAN/WiGig (default)• Bluetooth (default)

Maintenance screen options

Option	Description
Service Tag	Displays the Service Tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
SERR Messages	This field controls the SERR message mechanism. Some graphic card required the SERR message. <ul style="list-style-type: none">• Enable SERR Messages (default)
BIOS Downgrade	This field controls flashing of the system firmware to previous revisions. Allows BIOS Downgrade (Enabled by default)
Data Wipe	This field enables user to erase data from all internal storage device.
BIOS Recovery	Allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive. Enabled by default.
First Power On Date	This option lets you set Ownership date. This option is disabled by default.

System Log screen options

Option	Description
BIOS Events	Allows you to view and clear the System Setup (BIOS) POST events.

Advanced configuration options

Option	Description
ASPM	Allows you to set the ASPM level.

Option	Description
	<ul style="list-style-type: none"> • Auto (default) • Disabled • L1 Only

SupportAssist System Resolution screen options

Option	Description
Auto OS Recovery Threshold	<p>Allows you to control the automatic boot flow for SupportAssist System. Options are:</p> <ul style="list-style-type: none"> • Off • 1 • 2 (Enabled by default) • 3
SupportAssist OS Recovery	<p>Allows you to recover the SupportAssist OS Recovery (Enabledby default)</p>

Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Topics:

- [Supported operating systems](#)
- [Downloading drivers](#)
- [Intel chipset drivers](#)
- [Intel HID Event Filter](#)
- [Disk drivers](#)
- [Display adapter driver](#)
- [Bluetooth drivers](#)
- [Network drivers](#)
- [Audio drivers](#)
- [Storage drivers](#)
- [Security drivers](#)

Supported operating systems

Table 15. Supported operating systems

Supported operating systems	Description
Windows 10	<ul style="list-style-type: none"> • Microsoft Windows 10 Pro 64-bit • Microsoft Windows 10 Home 64-bit

Downloading drivers





































- 1 Turn on the desktop.
- 2 Go to **Dell.com/support**.
- 3 Click **Product Support**, enter the Service Tag of your desktop, and then click **Submit**.

NOTE: If you do not have the Service Tag, use the auto detect feature or manually browse for your desktop model.

- 4 Click **Drivers and Downloads**.
- 5 Select the operating system installed on your desktop.
- 6 Scroll down the page and select the driver to install.
- 7 Click **Download File** to download the driver for your desktop.
- 8 After the download is complete, navigate to the folder where you saved the driver file.
- 9 Double-click the driver file icon and follow the instructions on the screen.




Intel chipset drivers

Verify if the Intel chipset drivers are already installed in the system.

- ▼  System devices
 -  ACPI Fan
 -  ACPI Fan
 -  ACPI Fan
 -  ACPI Fan
 -  ACPI Fan
 -  ACPI Fixed Feature Button
 -  ACPI Power Button
 -  ACPI Processor Aggregator
 -  ACPI Thermal Zone
 -  CFL Host Bridge/DRAM Registers - 3E0F
 -  Composite Bus Enumerator
 -  Dell Diag Control Device
 -  Dell System Analyzer Control Device
 -  High Definition Audio Controller
 -  High precision event timer
 -  Intel(R) Management Engine Interface
 -  Intel(R) Power Engine Plug-in
 -  Intel(R) Xeon(R) E3 - 1200/1500 v5/6th Gen Intel(R) Core(TM) Gaussian Mixture Model - 1911
 -  Microsoft ACPI-Compliant System
 -  Microsoft System Management BIOS Driver
 -  Microsoft UEFI-Compliant System
 -  Microsoft Virtual Drive Enumerator
 -  Microsoft Windows Management Interface for ACPI
 -  Microsoft Windows Management Interface for ACPI
 -  Microsoft Windows Management Interface for ACPI
 -  NDIS Virtual Network Adapter Enumerator
 -  Numeric data processor
 -  PCI Express Root Complex
 -  PCI standard RAM Controller
 -  Plug and Play Software Device Enumerator
 -  Programmable interrupt controller
 -  Remote Desktop Device Redirector Bus
 -  System CMOS/real time clock
 -  System timer
 -  UMBus Root Bus Enumerator


Intel HID Event Filter

Verify if the Intel HID event filter is already installed in the computer.

- ▼  Human Interface Devices
 -  USB Input Device
 -  USB Input Device


Disk drivers

Disk drivers installed in the system

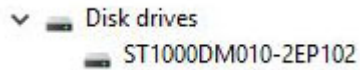

Display adapter driver

Verify if the display adapter driver is already installed in the computer.

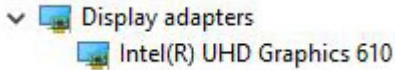


Bluetooth drivers

This platform supports a variety of Bluetooth drivers. The following is an example






Network drivers

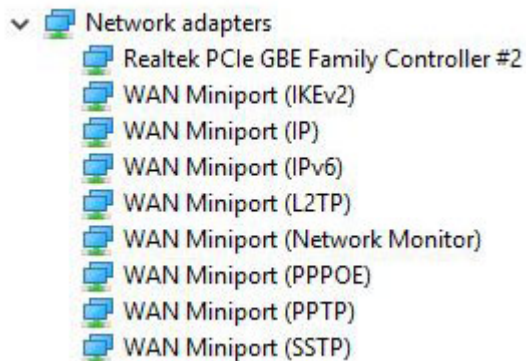Install the drivers from the Dell support site.





Audio drivers

Verify if audio drivers are already installed in the computer.

- ▼  Sound, video and game controllers
 -  Intel(R) Display Audio
 -  Realtek(R) Audio

Storage drivers

Verify if the storage controller drivers are installed in the system.

- ▼  Storage controllers
 -  Microsoft Storage Spaces Controller


Security drivers

Verify if the security device drivers are installed in the computer.

- ▼  Security devices
 -  Trusted Platform Module 2.0

Getting help

Contacting Dell

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 1 Go to **Dell.com/support**.
- 2 Select your support category.
- 3 Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
- 4 Select the appropriate service or support link based on your need.