


Vostro 15 3510

Service Manual



Identifier	GUID-5B8DE7B7-879F-45A4-88E0-732155904029
Version	15
Status	Translation Validated

Notas, precauciones y avisos

 **NOTA:** Una NOTA indica información importante que le ayuda a hacer un mejor uso de su producto.

 **PRECAUCIÓN:** Una PRECAUCIÓN indica la posibilidad de daños en el hardware o la pérdida de datos, y le explica cómo evitar el problema.

 **AVISO:** Un mensaje de AVISO indica el riesgo de daños materiales, lesiones corporales o incluso la muerte.

Chapter 1: Working inside your computer	7
Safety instructions.....	7
Before working inside your computer.....	8
Safety precautions.....	8
Electrostatic discharge—ESD protection.....	9
ESD field service kit	9
Entering Service Mode.....	10
Exiting Service Mode.....	10
After working inside your computer.....	11
Chapter 2: Removing and installing components	12
Recommended tools.....	12
Screw List.....	12
Major components of Vostro 15 3510.....	14
Secure Digital Card.....	16
Removing the Secure Digital card.....	16
Installing the Secure Digital card.....	18
Base cover.....	19
Removing the base cover.....	19
Installing the base cover.....	21
Batería.....	22
Lithium-ion battery precautions.....	22
Removing the 3-cell battery.....	23
Installing the 3-cell battery.....	24
Removing the 4-cell battery.....	25
Installing the 4-cell battery.....	25
Disconnecting the battery cable.....	26
Disconnecting the battery.....	27
Memory modules.....	28
Removing the memory module.....	28
Installing the memory module.....	29
WLAN card.....	30
Removing the WLAN card.....	30
Installing the WLAN card.....	31
Solid-state drive.....	33
Removing the M.2 2230 solid-state drive.....	33
Installing the M.2 2230 solid-state drive.....	34
Removing the M.2 2280 solid-state drive.....	35
Installing the M.2 2280 solid-state drive.....	35
Hard drive.....	36
Removing the hard drive.....	36
Installing the hard drive.....	37
System fan.....	39
Removing the system fan.....	39

Installing the system fan.....	40
Disipador de calor.....	41
Removing the heat sink - UMA.....	41
Installing the heat sink - UMA.....	42
Removing the heat sink - Discrete.....	43
Installing the heat sink - Discrete.....	44
Altavoces.....	45
Removing the speakers.....	45
Installing the speakers.....	45
IO board.....	46
Removing the I/O board.....	46
Installing the I/O board.....	47
Touchpad.....	48
Removing the touchpad assembly.....	48
Installing the touch pad assembly.....	49
Display assembly.....	51
Removing the display assembly.....	51
Installing the display assembly.....	53
Hinge caps.....	55
Removing the hinge caps.....	55
Installing the hinge caps	56
Embellecedor de la pantalla.....	58
Removing the display bezel.....	58
Installing the display bezel	59
Hinges.....	61
Removing the hinges.....	61
Installing the hinges	62
Panel de la pantalla.....	64
Removing the display panel.....	64
Installation display panel.....	66
Camera.....	68
Removing the camera.....	68
Installing the camera.....	69
Display eDP cable.....	70
Removing the eDP cable.....	70
Installing the eDP cable.....	71
Display back-cover.....	73
Removing the display back-cover.....	73
Installing the display back-cover.....	74
Power button.....	75
Removing the power button.....	75
Installing the power button.....	75
Power button with fingerprint reader.....	76
Removing the power-button with fingerprint reader.....	76
Installing the power-button with fingerprint reader.....	77
System board.....	79
System board connectors.....	79
Removing the system board.....	80
Installing the system board.....	82
Puerto del adaptador de alimentación.....	83

Removing the power-adapter port.....	83
Installing the power-adapter port.....	84
Palm-rest and keyboard assembly.....	85
Removing the palm-rest and keyboard assembly.....	85
Installing the palm-rest and keyboard assembly.....	86
Chapter 3: Drivers and downloads.....	88
Chapter 4: System setup.....	89
Entering BIOS setup program.....	89
Navigation keys.....	89
One time boot menu.....	90
One time boot menu.....	90
Boot Sequence.....	91
Navigation keys.....	91
System setup options.....	91
Boot menu.....	91
Overview.....	92
Boot Configuration.....	94
Integrated Devices.....	95
Storage.....	96
Display.....	96
Connection.....	97
Power.....	98
Security.....	99
Passwords.....	101
Update Recovery.....	102
System Management.....	103
Keyboard.....	103
Pre-boot Behavior.....	104
Virtualization.....	105
Performance.....	106
System Logs.....	107
Updating the BIOS in Windows	107
Updating BIOS on systems with BitLocker enabled.....	108
Updating your system BIOS using a USB flash drive.....	108
Updating the BIOS in Linux and Ubuntu.....	109
Updating the BIOS from the F12 One-Time boot menu.....	109
System and setup password.....	110
Assigning a system setup password.....	110
Deleting or changing an existing system setup password.....	111
Clearing BIOS (System Setup) and System passwords.....	111
Chapter 5: Solución de problemas.....	112
Recovering the operating system.....	112
SupportAssist diagnostics.....	112
Locate the Service Tag or Express Service Code of your Dell computer	113
System diagnostic lights.....	113
Drain residual flea power (perform hard reset).....	114

WiFi power cycle.....	115
M-BIST.....	115
Real Time Clock—RTC reset.....	116
Handling swollen Lithium-ion batteries.....	116

Chapter 6: Getting help and contacting Dell..... 118











Identifier	GUID-DD3AE169-A824-4F1D-832E-585B176F6FAF
Version	1
Status	Released

Working inside your computer

Identifier	GUID-ED275111-48F0-414D-80B1-1A6A56A6F7E4
Version	5
Status	Released

Safety instructions



Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at www.dell.com/regulatory_compliance.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the ports and the connectors are correctly oriented and aligned.
-  **CAUTION:** Press and eject any installed card from the media-card reader.
-  **CAUTION:** Exercise caution when handling Lithium-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.
-  **NOTE:** The color of your computer and certain components may appear differently than shown in this document.

Identifier	GUID-CEF5001C-74CA-41CA-8C75-25E2A80E8909
Version	35
Status	To be translated

Before working inside your computer

Pasos

1. Save and close all open files and exit all open applications.
2. Shut down your computer. Click **Start** > **Power** > **Shut down**.
 **NOTA:** If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
3. Disconnect your computer and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
5. Remove any media card and optical disc from your computer, if applicable.
6. After the computer is unplugged, press and hold the power button for 5 seconds to ground the system board.
 **PRECAUCIÓN:** Place the computer on a flat, soft, and clean surface to avoid scratches on the display.
7. Place the computer face down.

Identifier	GUID-30EEEBF7-B61E-422E-BF3E-75335EC500E3
Version	15
Status	Released

Safety precautions

The safety precautions chapter details the primary steps to be taken before performing any disassembly instructions.

Observe the following safety precautions before you perform any installation or break/fix procedures involving disassembly or reassembly:

- Turn off the system and all attached peripherals.
- Disconnect the system and all attached peripherals from AC power.
- Disconnect all network cables, telephone, and telecommunications lines from the system.
- Use an ESD field service kit when working inside any to avoid electrostatic discharge (ESD) damage.
- After removing any system component, carefully place the removed component on an anti-static mat.
- Wear shoes with non-conductive rubber soles to reduce the chance of getting electrocuted.

Standby power

Dell products with standby power must be unplugged before you open the case. Systems that incorporate standby power are essentially powered while turned off. The internal power enables the system to be remotely turned on (wake on LAN) and suspended into a sleep mode and has other advanced power management features.

Unplugging, pressing and holding the power button for 20 seconds should discharge residual power in the system board.

Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done through the use of a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or non-metal surface. The wrist strap should be secure and in full contact with your skin, and ensure that you remove all jewelry such as watches, bracelets, or rings prior to bonding yourself and the equipment.

Identifier	GUID-E1EAA29F-F785-45A4-A7F8-3E717B40D541
Version	8
Status	In translation

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory DIMMs, and system boards. Very slight charges can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory DIMM that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The DIMM receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, etc.

The more difficult type of damage to recognize and troubleshoot is the intermittent (also called latent or "walking wounded") failure.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. The use of wireless anti-static straps is no longer allowed; they do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, ensure that you discharge static electricity from your body.
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

Identifier	GUID-4AA1893E-5817-437E-8D54-6A96821FC6E6
Version	4
Status	In translation

ESD field service kit

The unmonitored Field Service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

Components of an ESD field service kit

The components of an ESD field service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the mat and to any bare metal on the system being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the mat. ESD-sensitive items are safe in your hand, on the ESD mat, in the system, or inside a bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the ESD mat is not required, or connected to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the ESD mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, mat, and bonding wire. Never use wireless wrist straps. Always be aware that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside of an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service call, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. If you do not have your own wrist strap tester, check with your

regional office to find out if they have one. To perform the test, plug the wrist-strap's bonding-wire into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.

- **Insulator Elements** – It is critical to keep ESD sensitive devices, such as plastic heat sink casings, away from internal parts that are insulators and often highly charged.
- **Working Environment** – Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or portable environment. Servers are typically installed in a rack within a data center; desktops or portables are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of system that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as Styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components
- **ESD Packaging** – All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged part using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the ESD mat, in the system, or inside an anti-static bag.
- **Transporting Sensitive Components** – When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.

ESD protection summary

It is recommended that all field service technicians use the traditional wired ESD grounding wrist strap and protective anti-static mat at all times when servicing Dell products. In addition, it is critical that technicians keep sensitive parts separate from all insulator parts while performing service and that they use anti-static bags for transporting sensitive components.

Identifier	GUID-C177F815-EDF9-4F79-8E4A-C9D0BA21E438
Version	2
Status	Released

Entering Service Mode

Service Mode allows users to immediately cut off electricity from the computer and conduct repairs without disconnecting the battery cable from the system board.

To enter **Service Mode**:

1. Shut down your computer and disconnect the AC adapter.
2. Hold **** key on the keyboard and press the power button for 3 seconds or until the Dell logo appears on the screen.
3. Press any key to continue.

NOTE: If the power adapter has not been disconnected, a message prompting you to remove the AC adapter appears on the screen. Remove the AC adapter and then press any key to continue the **Service Mode** procedure.

NOTE: The **Service Mode** procedure automatically skips the following step if the **Owner Tag** of the computer is not set up in advance by the manufacturer.

4. When the ready-to-proceed message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.

Once the computer shuts down, you may perform the replacement procedures without disconnecting the battery cable from the system board.

Identifier	GUID-035A6417-5C63-47D2-A459-07450EAD6E72
Version	1
Status	Released

Exiting Service Mode

Service Mode allows users to immediately cut off electricity from the computer and conduct repairs without disconnecting the battery cable from the system board.


To exit **Service Mode**:

1. Connect the AC adapter to the power-adapter port on your computer.
2. Press the power button to turn on the computer. Your computer will automatically return to normal functioning mode.

Identifier	GUID-F99E5E0D-8C96-4B55-A6C9-5722A035E20C
Version	11
Status	To be translated

After working inside your computer

Sobre esta tarea

 **NOTA:** Leaving stray or loose screws inside your computer may severely damage your computer.

Pasos

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, discs, or any other parts that you removed before working on your computer.
4. Connect your computer and all attached devices to their electrical outlets.
5. Turn on your computer.

Identifier	GUID-7FBB11D7-9820-47BB-AFAA-48FA912314D9
Version	2
Status	Released

Removing and installing components

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Identifier	GUID-7C481444-7F3B-404A-9DE3-E38823DB4378
Version	10
Status	Released

Recommended tools

The procedures in this document may require the following tools:

- Phillips #0 screwdriver
- Phillips #1 screwdriver
- Plastic scribe-Recommended for field technician

Identifier	GUID-C616501C-F5BF-4E95-A29A-4B88B3703AEE
Version	2
Status	Released

Screw List

The following table shows the screw list and the images for different components.

Table 1. Screw Size List






Component	Screw type	Quantity	Image
Base cover	M2x5	6	
	Captive screw	2	
Battery 3-cell	M2x3	3	
Battery 4-cell	M2x3	4	
WLAN	M2x3	1	
M.2 2230 SSD	M2x2	1	

Table 1. Screw Size List (continued)

Component	Screw type	Quantity	Image
M.2 2280 SSD	M2x2	1	
Hard drive	M2x3	4	
Hard Drive Bracket	M3x3	4	
Touchpad	M2x2	2	
Touchpad bracket	M2x2	3	
System fan	M2x5	2	
Heatsink - Integrated graphics	M2x3	4	
Heatsink - Discrete graphics	M2x3	7	
System board	M2.5x5 M2x3 M2x2	2 3 1	  


Table 1. Screw Size List (continued)

Component	Screw type	Quantity	Image
Power button	M2x2 M2.5x5	2	
I/O board	M2x3	3	
Display assembly	M2.5x5	4	
Display hinge	M2.5x3.8	6	

Identifier	GUID-6FADFA62-D1AD-40BE-9468-446ECAA4DF54
Version	2
Status	Released

Major components of Vostro 15 3510

The following image shows the major components of Vostro 15 3510.

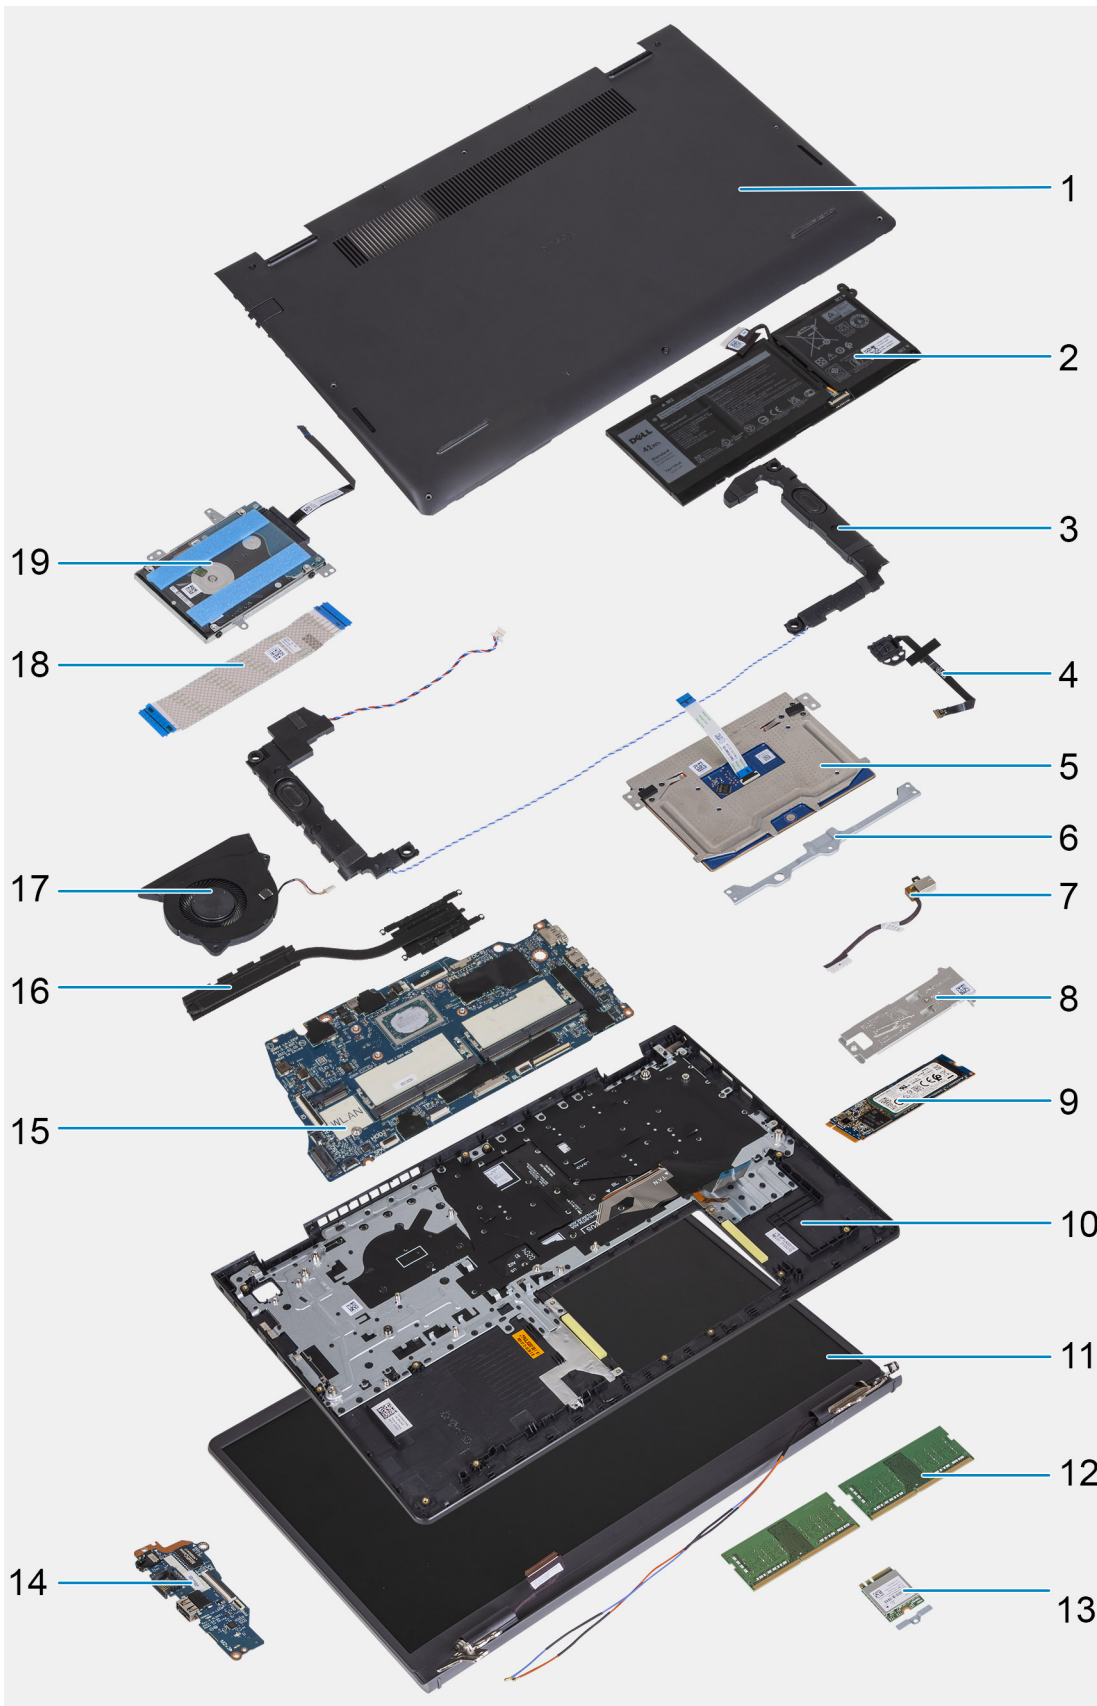

1. Base cover
2. Battery
3. Speaker
4. Power button with optional fingerprint reader

5. Trackpad
6. Trackpad bracket
7. DC-in port
8. SSD thermal bracket
9. Solid-state drive(SSD)
10. Palm-rest and keyboard assembly
11. Display assembly
12. Memory modules
13. WLAN card
14. IO daughter-board
15. System board
16. Heatsink
17. System fan
18. IO daughter-board FFC
19. Hard-drive assembly

Identifier	GUID-CB0FC0B6-E934-4408-8347-171864D1E605
Version	3
Status	Released

Secure Digital Card


Identifier	GUID-CC1B897C-2DAD-4290-8E61-737F386FC4F4
Version	2
Status	Released

Removing the Secure Digital card

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

About this task

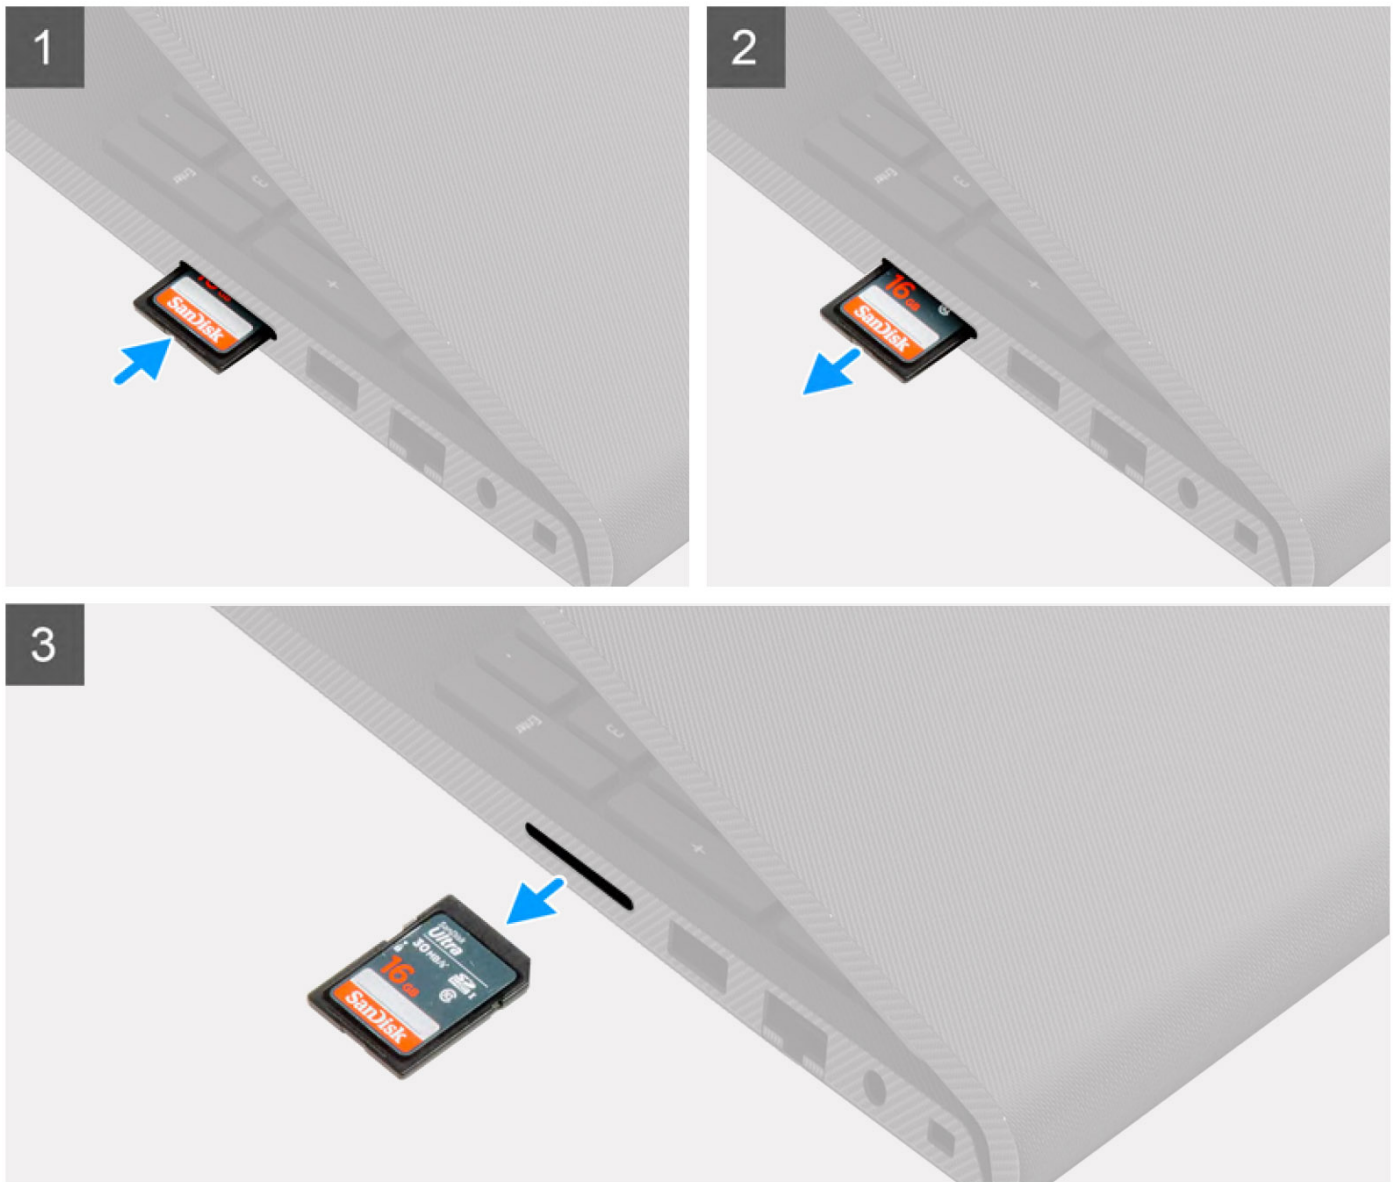

Steps

1. Push the secure digital card to release it from the computer.
2. Slide the secure digital card out of the computer.




Identifier	GUID-00E1A0B0-34A2-4A22-B186-631218D543DA
Version	2
Status	Released

Installing the Secure Digital card

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

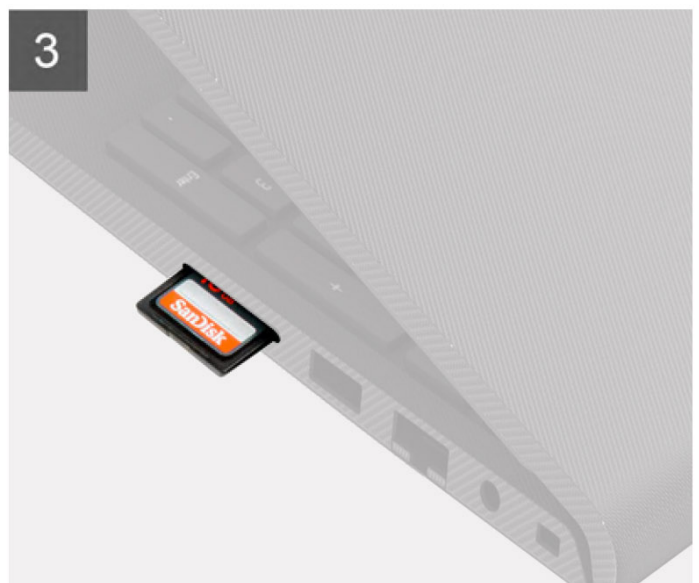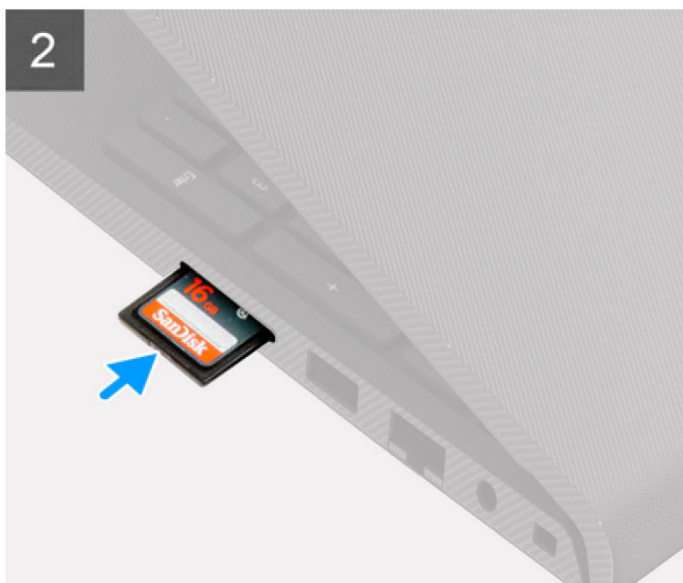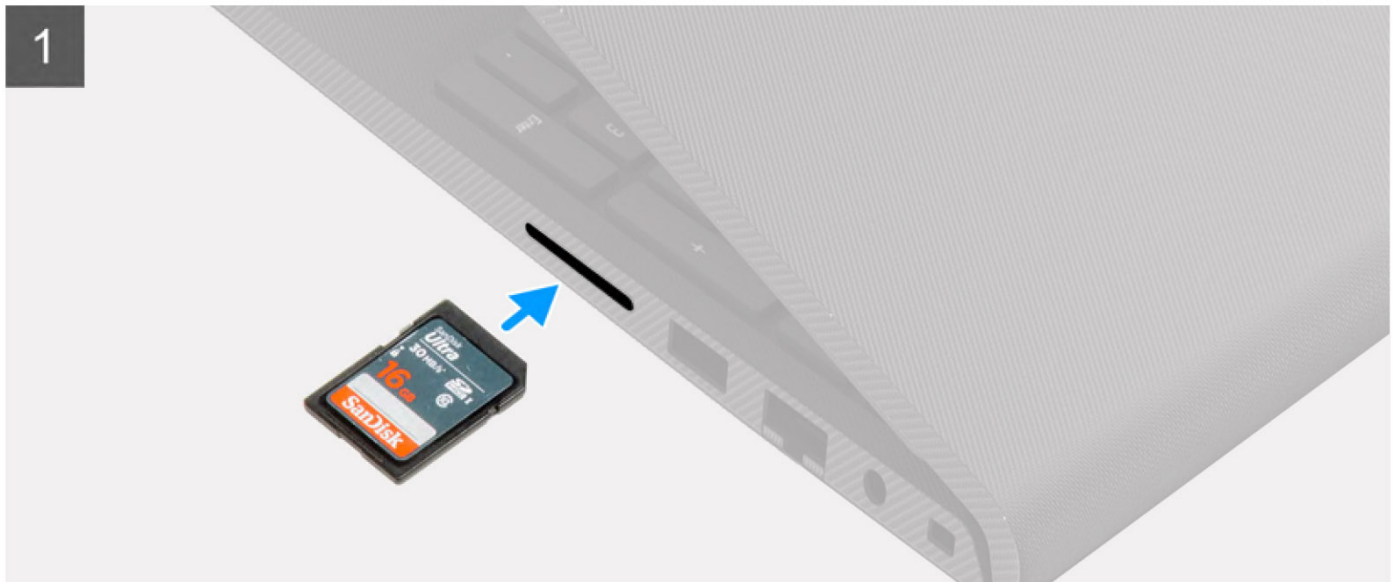

Steps

Slide the secure digital into the slot until it clicks into place.

Next steps

1. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-011AA877-0F90-479B-BF50-6CDFB72AD6D8
Version	2
Status	To be translated

Base cover

Identifier	GUID-36ED857B-FE85-44D6-818E-BE4D0E0E9600
Version	3
Status	Released


Removing the base cover

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).

About this task



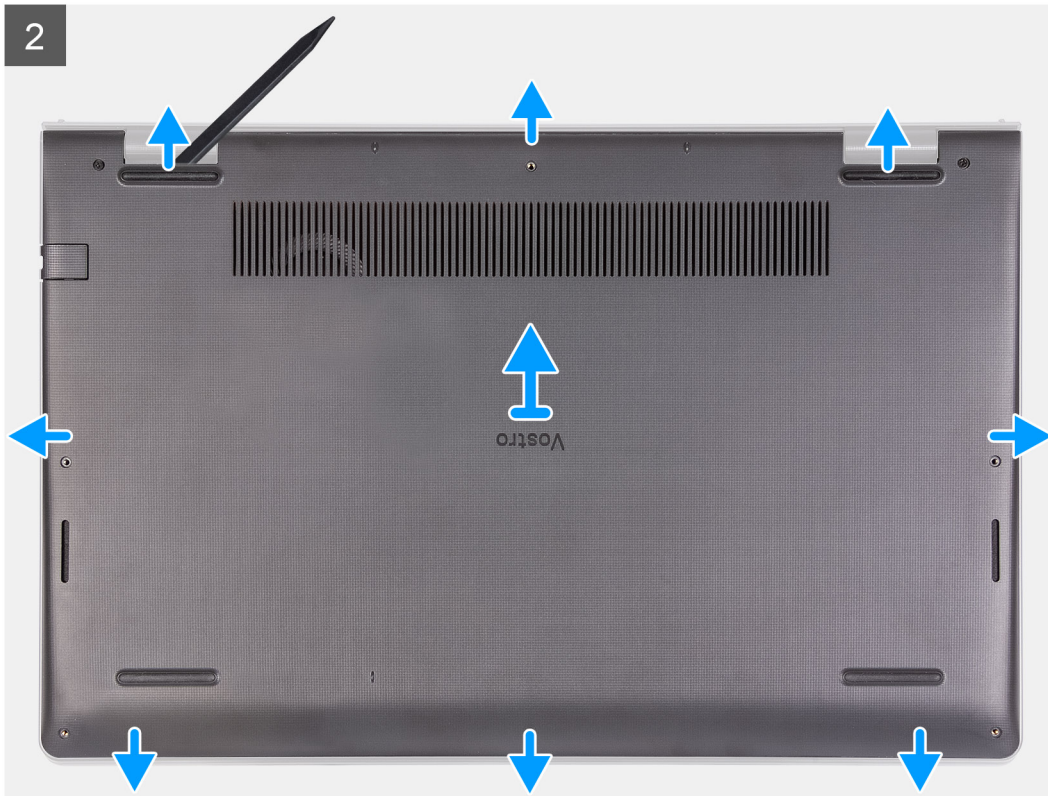

Steps

1. Remove the six screws (M2x5) that secure the base cover to the palm-rest and keyboard assembly.
2. Loosen the two captive screws that secure the base cover to the palm-rest and keyboard assembly.
3. Pry open the base cover starting from the recesses located in the U-shaped indents at the top edge of the base cover near the hinges.



4. Lift and slide the base cover off the palm-rest and keyboard assembly.


Identifier	GUID-DDCA37C7-FCB0-4E46-8430-228B1F05105A
Version	2
Status	Released

Installing the base cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

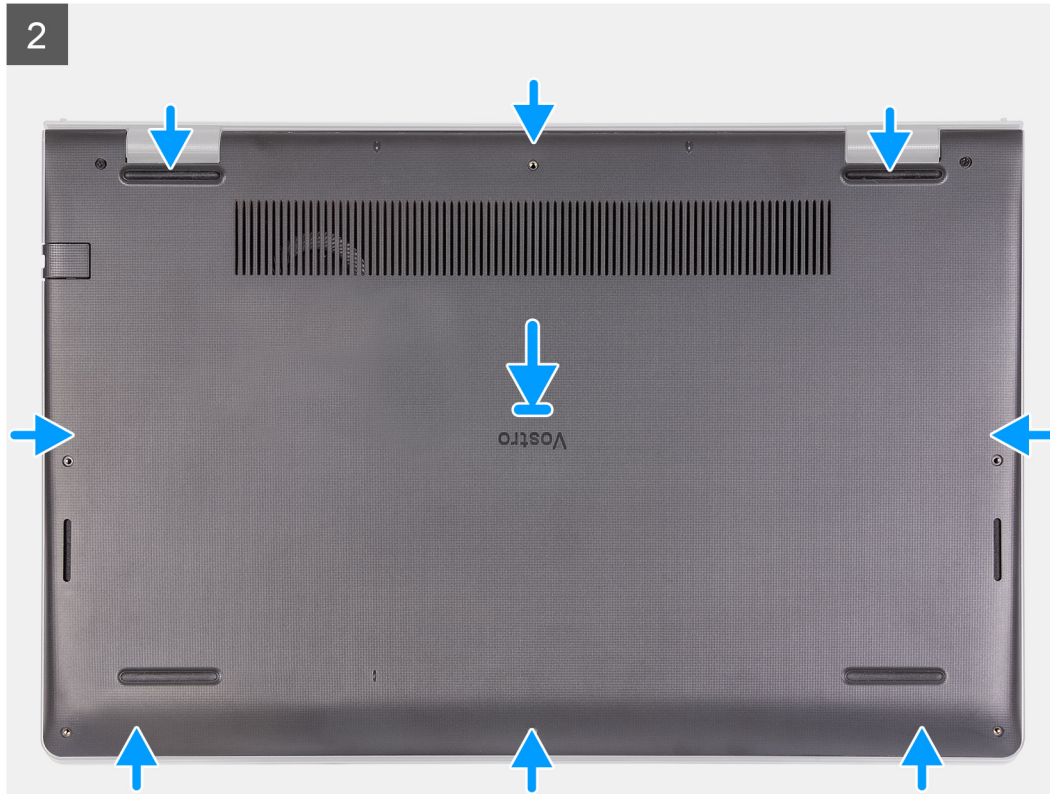

3



Steps

1. Align and place the base cover on the computer, press the edges and sides of the base cover until it snaps into place.
2. Tighten the two captive screws that secure the base cover to the palm-rest and keyboard assembly.
3. Replace the six screws (M2x5) that secure the base cover to the palm-rest and keyboard assembly.

Next steps

1. Exit [service mode](#).
2. Replace the [SD card](#)
3. Follow the procedure in [after working inside your computer](#)

Identifier	GUID-F65273B2-AF5E-4C69-B895-7CEF2148F79D
Version	1
Status	Translation Validated

Batería

Identifier	GUID-22C7DCB3-8D29-41D7-8D51-D90ABC7C2D63
Version	12
Status	Released

Lithium-ion battery precautions

⚠ CAUTION:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the system and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.

- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other system components.
- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a lithium-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See www.dell.com/contactdell.
- Always purchase genuine batteries from www.dell.com or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen Lithium-ion batteries, see [Handling swollen Lithium-ion batteries](#).

Identifier	GUID-08315ADF-9739-4EA5-B457-229E2CE3CD8F
Version	2
Status	Released


Removing the 3-cell battery

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).

About this task

The following image indicate the location of the battery and provides a visual representation of the removal procedure.

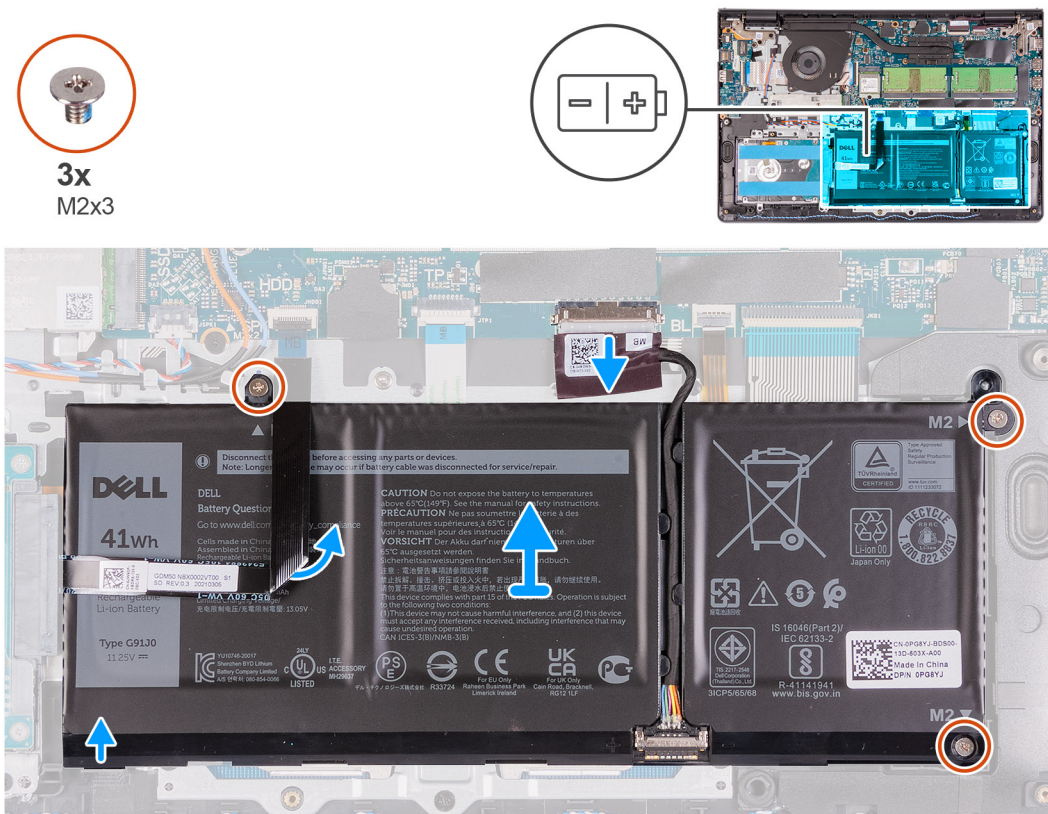

Steps

1. Disconnect the battery cable from the connector on the system board.
2. Fold back the hard-drive FFC from over the battery.
3. Remove the three (M2x3) screws that secure the battery to the palm-rest and keyboard assembly.

4. Lift and move the battery away from the computer.

Identifier	GUID-76747590-665C-45A2-9B64-3C7DEC4E72A9
Version	2
Status	Released


Installing the 3-cell battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the battery and provides a visual representation of the installation procedure.

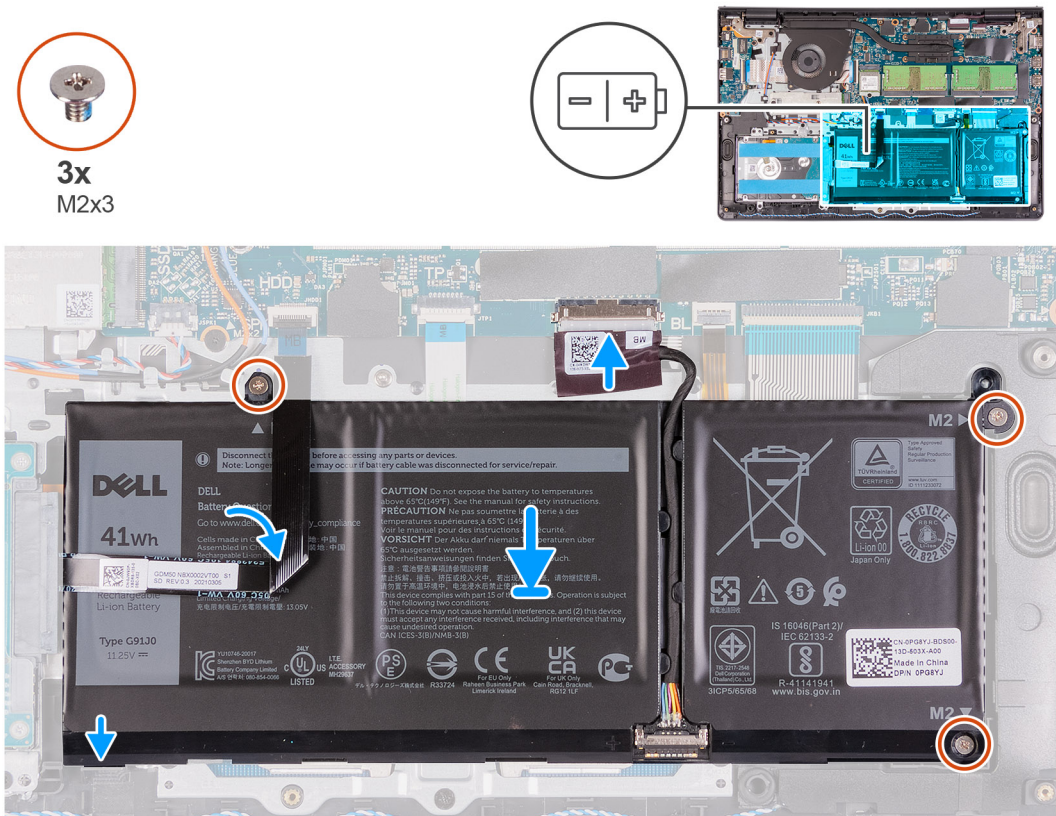

Steps

1. Place the battery on the palm-rest and keyboard assembly.
2. Fold back the hard-drive FFC over the battery.
3. Align the screw holes on the battery to the screw holes on the palm-rest and keyboard assembly.
4. Replace the three screws (M2x3) that secure the battery to the palm-rest and keyboard assembly.
5. Connect the battery cable to the connector on the system board.

Next steps

1. Install the [base cover](#).
2. Install the [SD card](#).
3. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-41446146-AA9B-425A-AD43-1FF527D1571B
Version	2
Status	Released


Removing the 4-cell battery

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).

About this task

The following images indicate the location of the battery and provides a visual representation of the installation procedure.

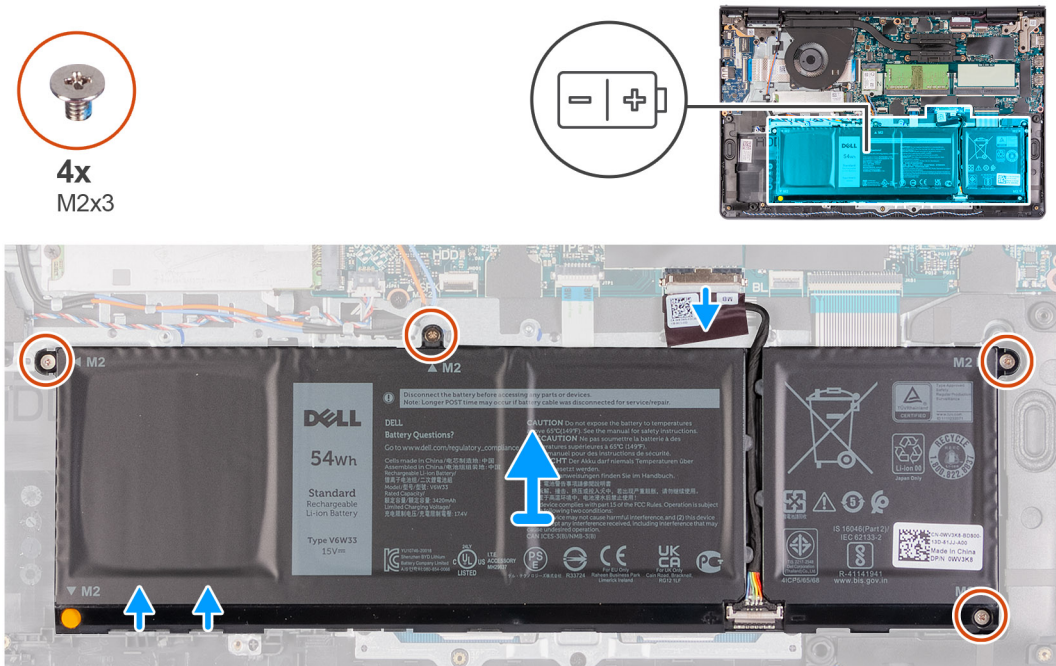

Steps

1. Disconnect the battery cable from the connector on the system board.
2. Remove the four (M2x3) screws that secure the battery to the palmrest.
3. Lift and move the battery away from the computer.

Identifier	GUID-FC40B647-A690-457B-A0D3-1F268EB8722D
Version	2
Status	Released

Installing the 4-cell battery

Prerequisites




If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the battery and provides a visual representation of the installation procedure.



4x
M2x3

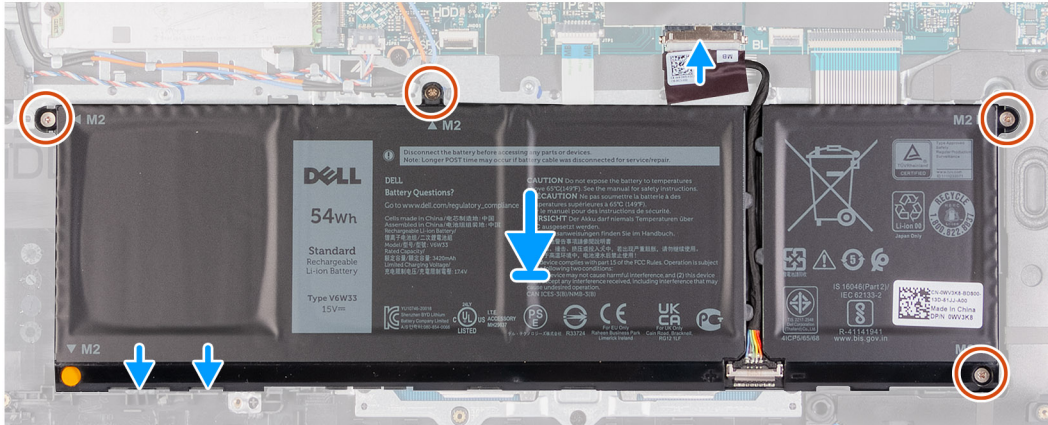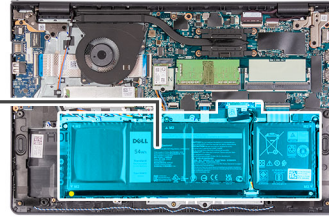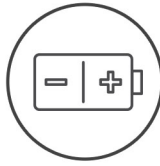

Steps

1. Place the battery on the palm-rest and keyboard assembly.
2. Align the screw holes on the battery to the screw holes on the palmrest and keyboard assembly.
3. Replace the three screws (M2x3) that secure the battery to the palmrest and keyboard assembly.
4. Connect the battery cable to the connector on the system board.

Next steps

1. Install the [base cover](#).
2. Install the [SD card](#).
3. Follow the procedure in [after working inside your computer](#).



Identifier	GUID-9D0A8798-46FD-42E0-9C60-56FCA96D40D4
Version	1
Status	Released

Disconnecting the battery cable

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).

About this task

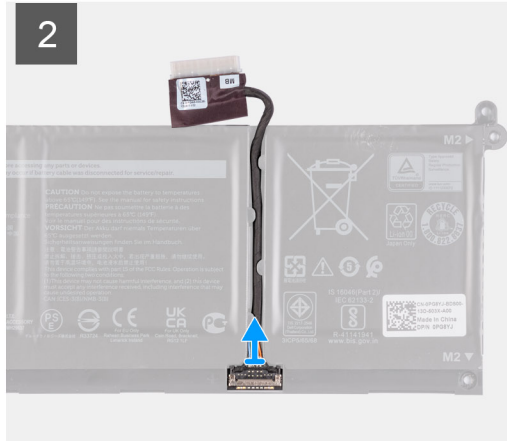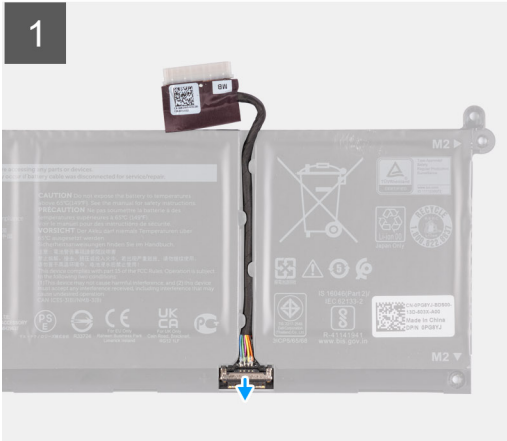

Steps

1. Lift the latch on the battery cable.
2. Disconnect the battery cable from the connector on the battery.


Identifier	GUID-AFEBB30C-1A12-417D-AB24-27B70D8B0767
Version	1
Status	Released

Disconnecting the battery

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).

About this task

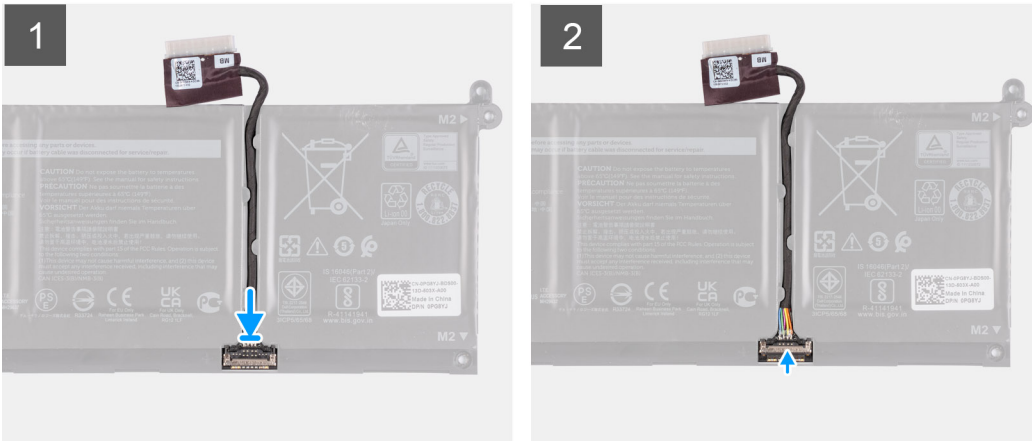

Steps

1. Connect the battery cable to the connector on the battery.
2. Close the latch on the battery cable connector to secure it to the battery.

Identifier	GUID-2A6DAE1B-1FBE-40F9-8D46-40E8C3FBD267
Version	3
Status	Released

Memory modules

Identifier	GUID-D0C39748-F936-4D87-8FFF-18C53FE6768E
Version	2
Status	Released

Removing the memory module





Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the memory module and provides a visual representation of the removal procedure.

NOTE: Depending on the configuration ordered your computer may come shipped with one or two memory module installed.

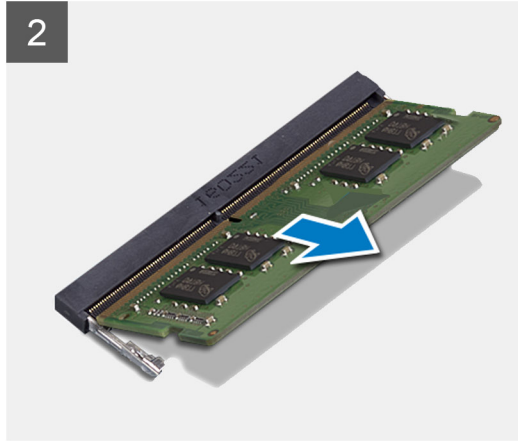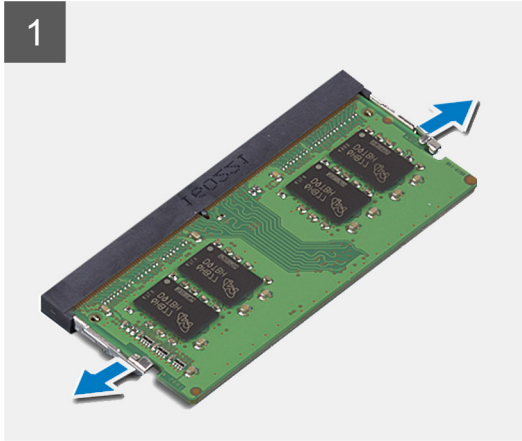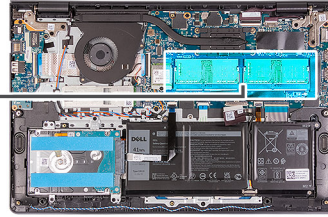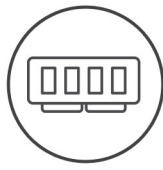

Steps

1. Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.
2. Lift at an angle and remove the memory module from its slot on the system board.
3. Repeat the procedure above for the second memory module, if applicable.

Identifier	GUID-3C7353EF-17A0-4759-BEAC-7DB29FF57398
Version	2
Status	Released





Installing the memory module

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the memory module and provides a visual representation of the installation procedure.

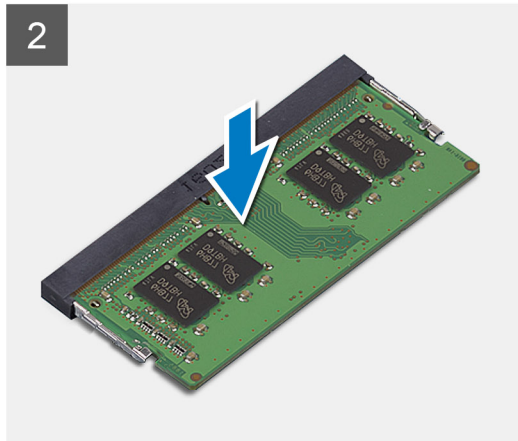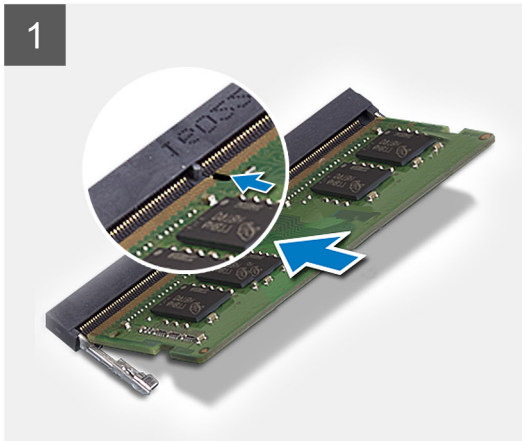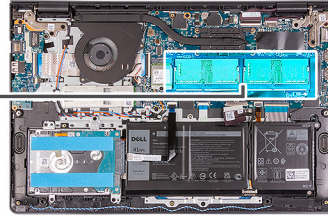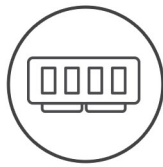

Steps

1. Align the notch on the memory module with the tab on the memory module slot and slide the memory module firmly into the slot at an angle.
2. Press down on the memory module to snap it into place.
i **NOTE:** If you do not hear the click, remove the memory module and reinstall it.
3. Ensure that the securing clips have locked the memory module into place.
i **NOTE:** If the securing clips are not locking the memory module into place remove the memory module from the slot and repeat steps 1 and 2.
4. Repeat the procedure above for the second memory module, if applicable.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-9DA8AD62-C8EF-4ECB-8C0C-2EFF7D88D28D
Version	1
Status	To be translated

WLAN card

Identifier	GUID-D7BFCC2B-69B7-41DF-B7C4-0073E6E2EDC7
Version	2
Status	Released

Removing the WLAN card



Prerequisites

1. Follow the procedure in [before working inside your computer](#).

2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the wireless card and provides a visual representation of the removal procedure.

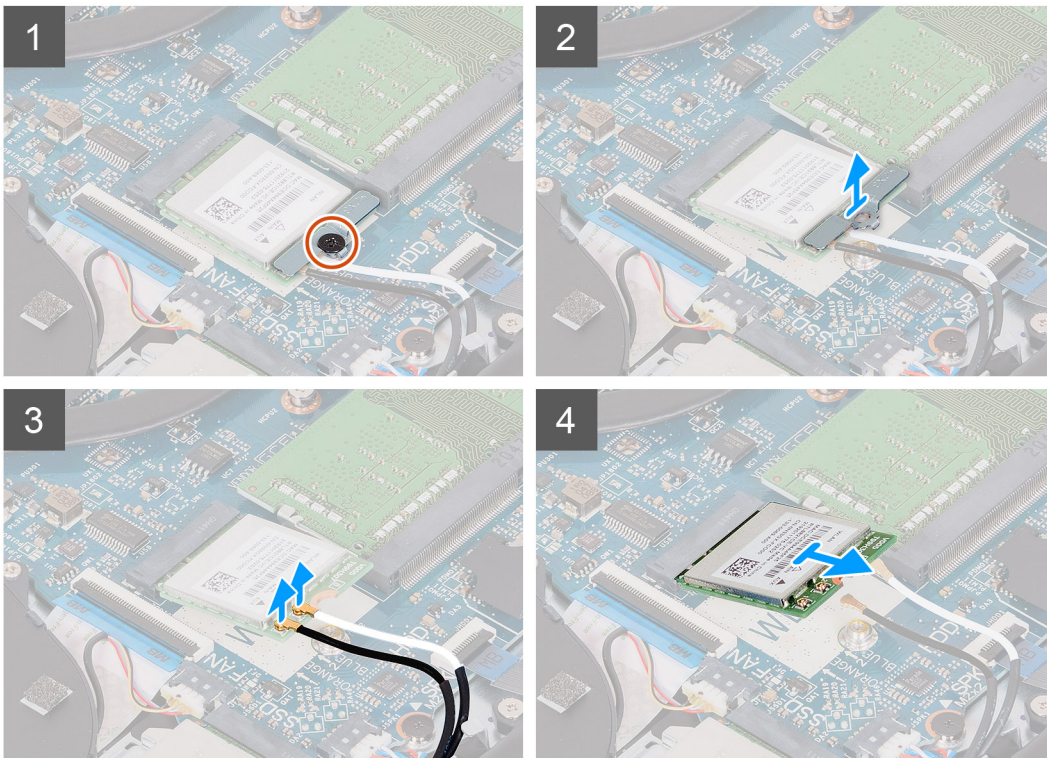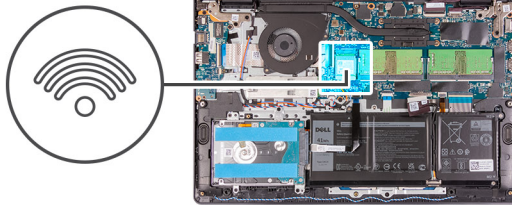

Steps

1. Remove the single (M2x3) screw that secures the WLAN-card bracket to the system board.
2. Slide and remove the WLAN-card bracket that secures the WLAN-antenna cables.
3. Disconnect the WLAN-antenna cables from the connectors on the WLAN card.
4. Slide and remove the wireless card from the M.2 card slot on the system board.

Identifier	GUID-38597F9B-0B41-4779-B638-F12E24AFCF98
Version	2
Status	Released

Installing the WLAN card

Prerequisites






If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the wireless card and provides a visual representation of the installation procedure.



1x
M2x3

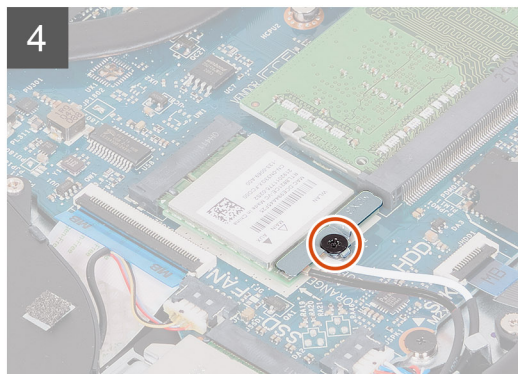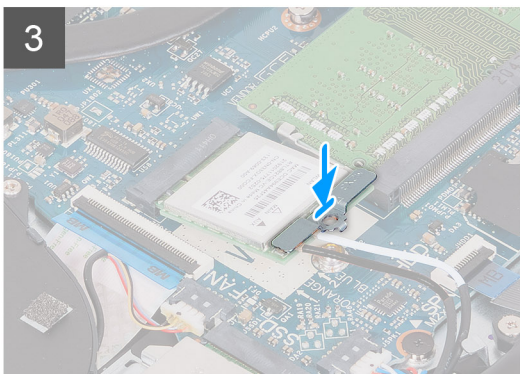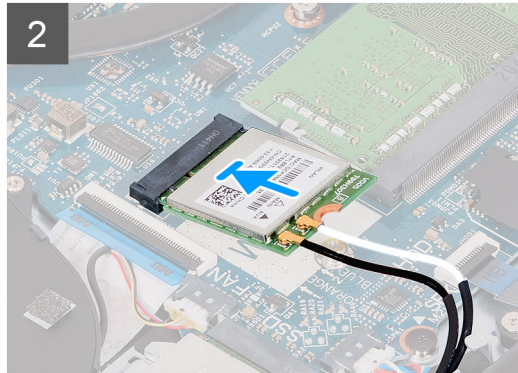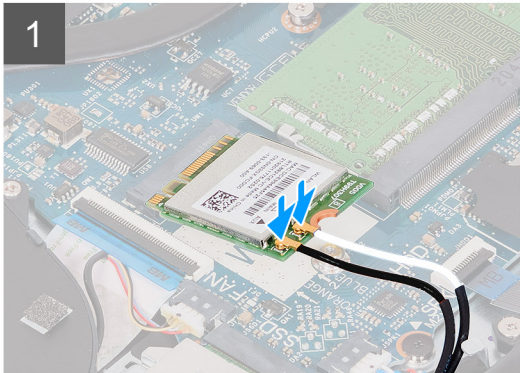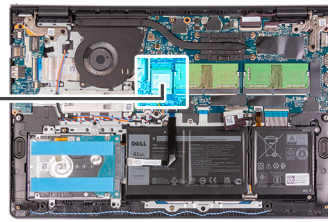

Steps

1. Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Table 2. WLAN Antenna Cables

Connectors on the wireless card	Antenna-cable color
Main(white triangle)	White
Auxiliary(black triangle)	Black

2. Slide the wireless card into the M.2 card slot on the system board.
3. Place the wireless-card bracket on the wireless card.
4. Replace the single (M2x3) screw to secure the wireless-card bracket and the wireless card to the system board.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-A710D3FC-4693-4EC6-B87F-E88D08524B48
Version	1
Status	Released

Solid-state drive

Identifier	GUID-5E719CB1-8EAB-476C-8A57-D4BA54001B8E
Version	3
Status	Released

Removing the M.2 2230 solid-state drive

Prerequisites




1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the M.2 2230 solid-state drive and provides a visual representation of the removal procedure.



1x
M2x2

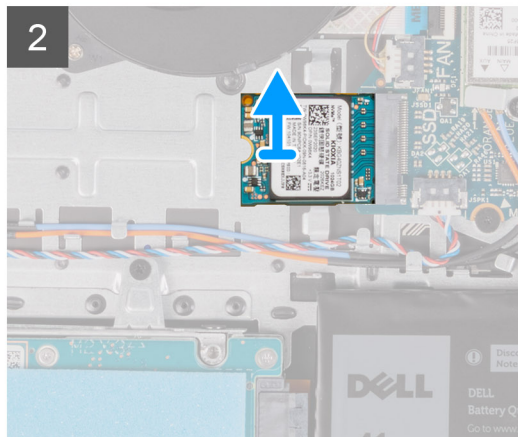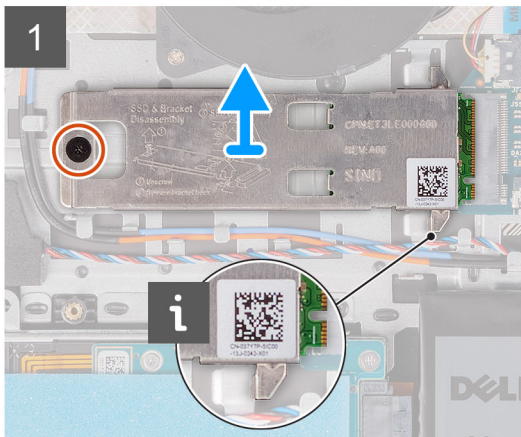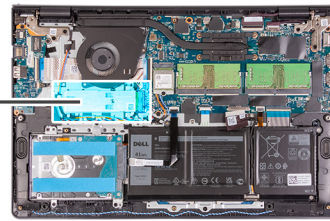

Steps

1. Remove the single (M2x2) screw that secures the thermal plate to the palm-rest and keyboard assembly.
2. Lift the M.2 2230 solid-state drive thermal pate from over the M.2 2230 solid-state drive.
3. Slide and remove the M.2 2230 solid-state drive from the M.2 card slot on the system board.

Identifier	GUID-B12284B3-9AB1-46FC-B0AA-B5D32793DA6E
Version	3
Status	Released


Installing the M.2 2230 solid-state drive

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the M.2 2230 solid-state drive and provide a visual representation of the installation procedure.

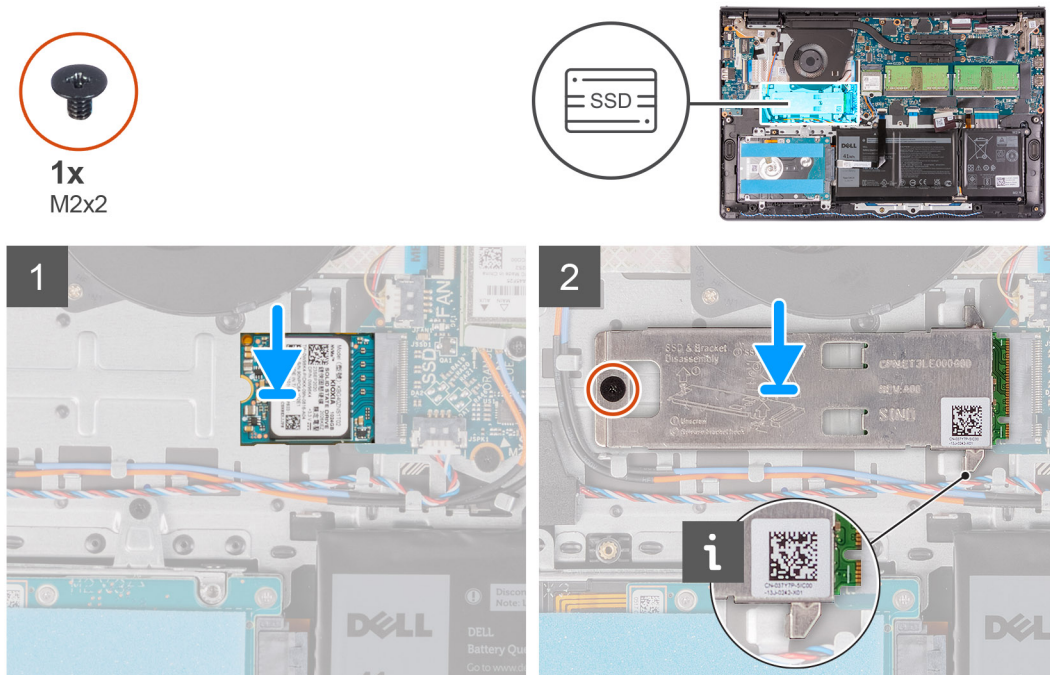

Steps

1. Align the notch on the M.2 2230 solid-state drive with the tab on the M.2 card slot on the system board.
2. Slide the M.2 2230 solid-state drive into the M.2 card slot on the system board
3. Place the thermal plate on the solid-state drive.

i NOTE:

When installing the M.2 2230 SSD on the system, tuck the tabs on the thermal plate under the hooks on the palm rest.

4. Align the screw hole on the thermal plate to the screw hole on the palm-rest and keyboard assembly.
5. Replace the screw (M2x2) that secures the thermal plate to the palm-rest and keyboard assembly.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-37B8E8D5-97BA-40D1-A291-949AE58BC8D
Version	3
Status	Released


Removing the M.2 2280 solid-state drive

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the M.2 2280 solid-state drive and provides a visual representation of the removal procedure.

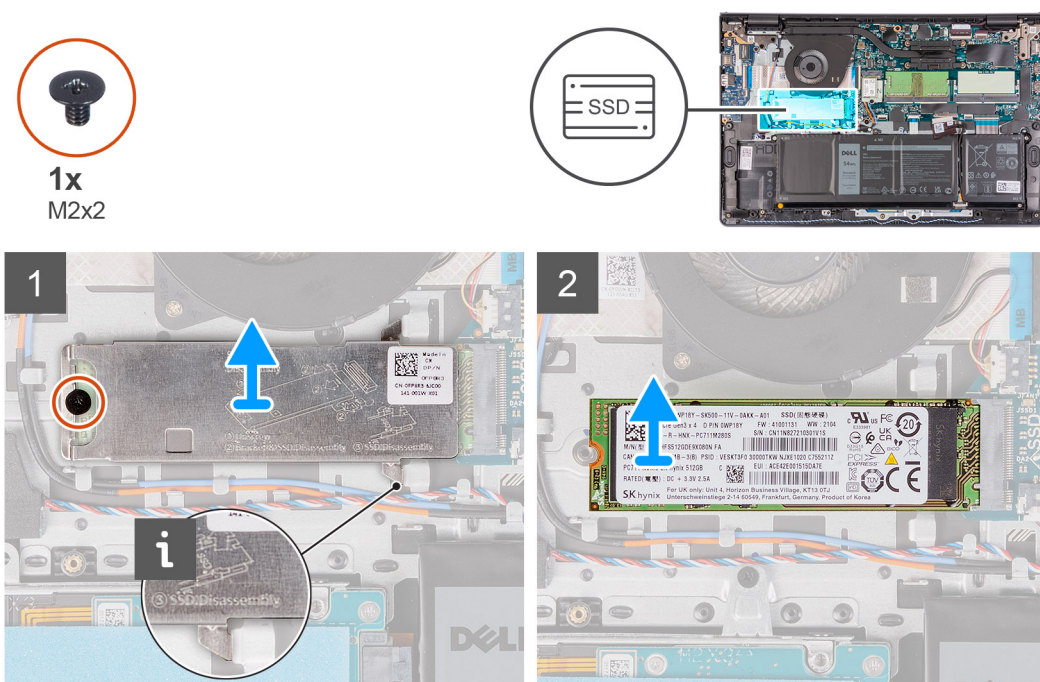

Steps

1. Remove the screw (M2x2) that secures the thermal plate to the palm-rest and keyboard assembly.
2. Lift the thermal plate from the palm-rest and keyboard assembly.
3. Slide and remove the M.2 2280 solid-state drive from the M.2 card slot on the system board.

Identifier	GUID-B34FAA3B-A67F-41A8-A369-28AA38200
Version	3
Status	Released

Installing the M.2 2280 solid-state drive

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the M.2 2280 solid-state drive and provides a visual representation of the installation procedure.



1x
M2x2

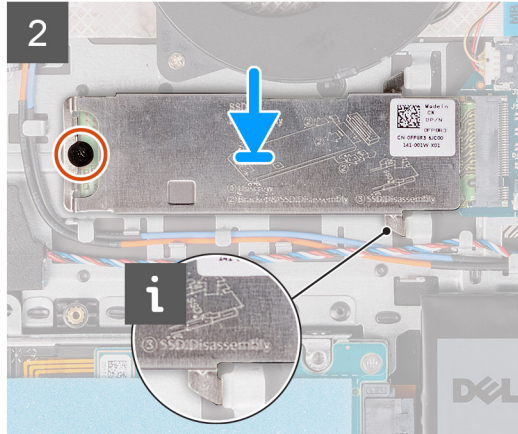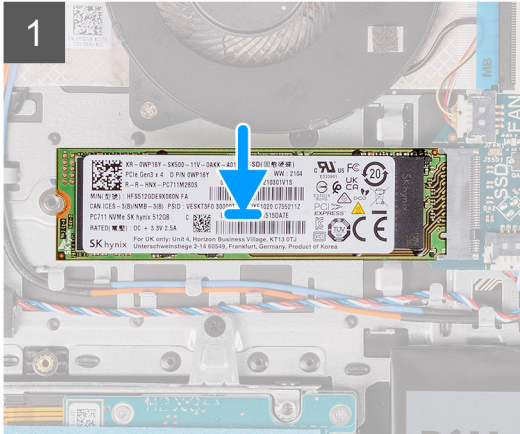

Steps

1. Align the notch on the M.2 2280 solid-state drive with the tab on the M.2 card slot on the system board.
2. Slide the M.2 2280 solid-state drive into the M.2 card slot on the system board.
3. Place the thermal plate on the M.2 2280 solid-state drive.

NOTE: While installing the M.2 2280 solid-state drive on the system, tuck the tabs on the thermal plate under the hooks on the palm rest.

4. Replace the screw (M2x2) that secures the thermal plate to the palm-rest and keyboard assembly.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-C7835D68-1B49-497B-91EA-1575ECB7DB9A
Version	1
Status	Released

Hard drive

Identifier	GUID-A706A78D-E391-418D-8D9C-3C73D1BC74E7
Version	2
Status	Released


Removing the hard drive

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [battery](#).

About this task

The following images indicate the location of the hard drive and provides a visual representation of the removal procedure.

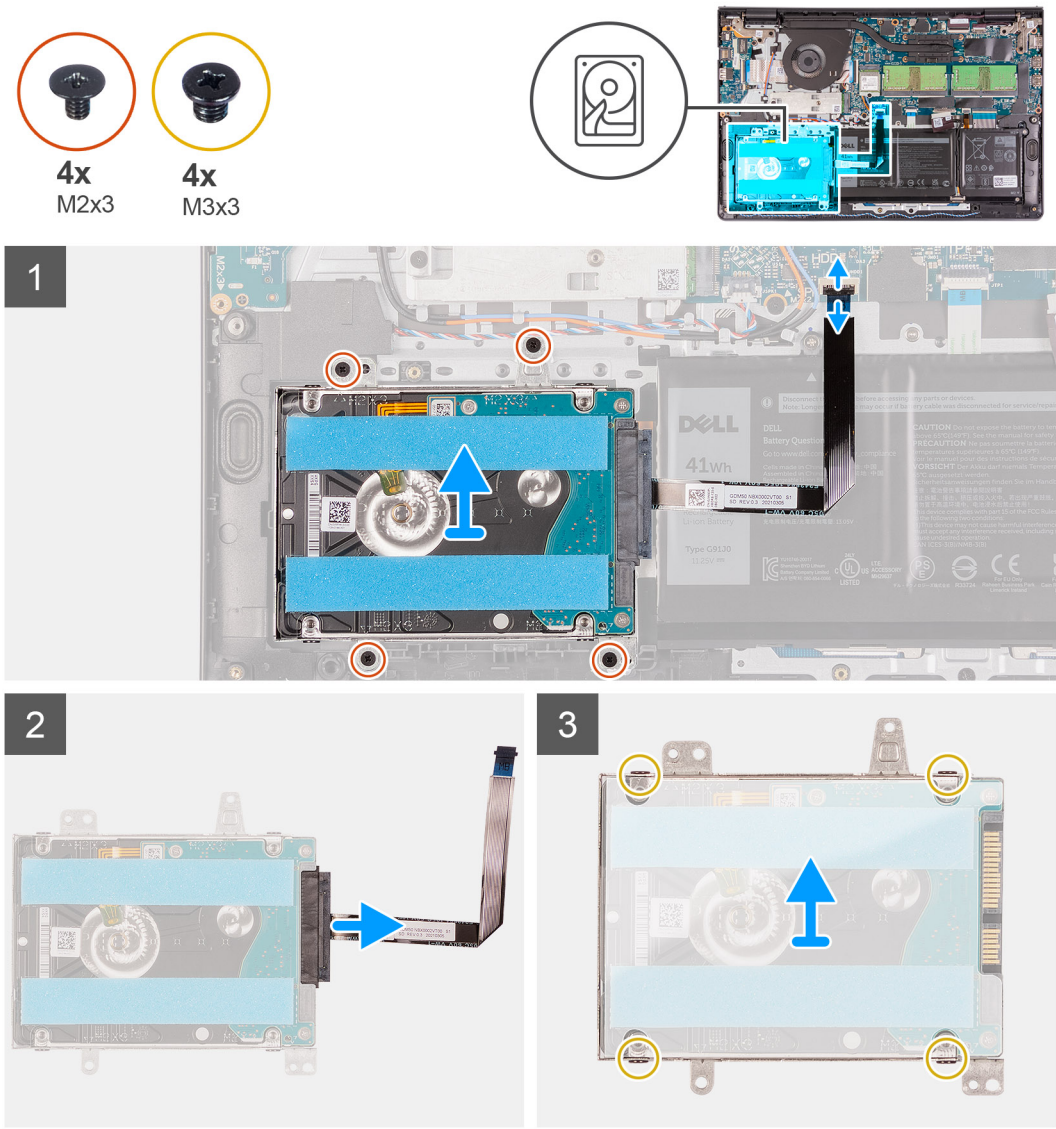

Steps

1. Lift the latch and disconnect the hard-drive cable from the system board.
2. Remove the three screws (M2x3) that secure the hard-drive assembly to the palm-rest and keyboard assembly.
3. Lift the hard-drive assembly along with its cable from the palm-rest and keyboard assembly.
4. Disconnect the interposer from the hard drive.
5. Remove the four (M3x3) screws from the hard-drive bracket.
6. Slide and remove the hard-drive bracket from the hard drive

Identifier	GUID-DECCAE97-01CA-4400-B5C4-04B3A2AAA211
Version	3
Status	Released


Installing the hard drive

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the hard drive and provides a visual representation of the installation procedure.

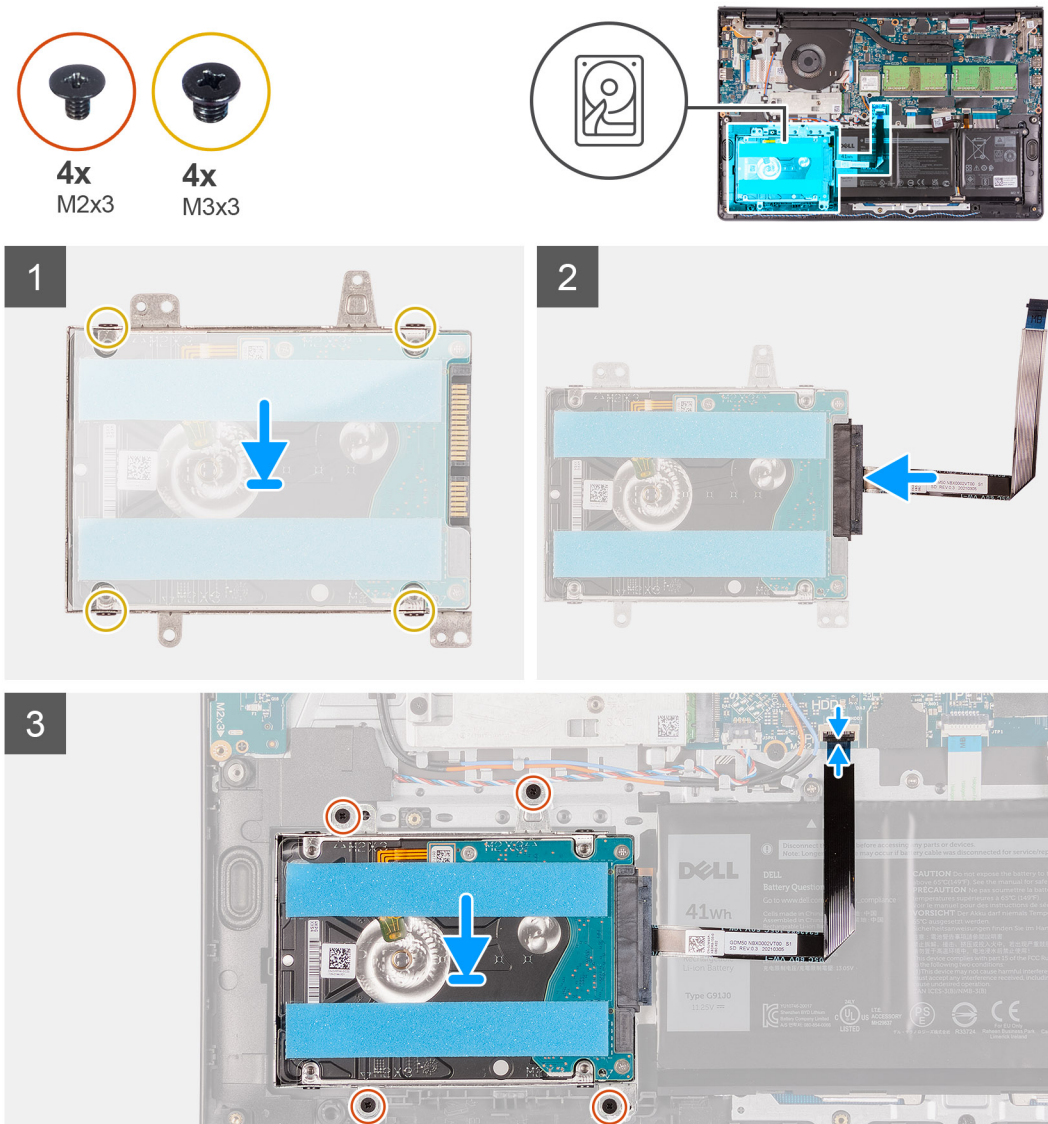

Steps

1. Slide and install the hard-drive into the hard-drive bracket.
2. Install the four (M3x3) screws to secure the hard drive to the hard-drive bracket.
3. Connect the interposer to the hard drive.
4. Align and place the hard-drive assembly on to the palm-rest and keyboard assembly.
5. Replace the four (M2x3) screws to secure the hard drive assembly to the palm-rest.
6. Connect the hard drive cable to the system board and close the latch to secure the cable.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Exit [service mode](#).
4. Install the [SD card](#).
5. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-9CAB0F1B-03D0-41E6-A1CE-CD35C5879D22
Version	2
Status	In translation

System fan

Identifier	GUID-DE3F8C1A-A7EF-4DB2-A065-34DDC580BC9B
Version	2
Status	Released

Removing the system fan

Prerequisites




1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the system fan and provides a visual representation of the removal procedure.



2x
M2x5

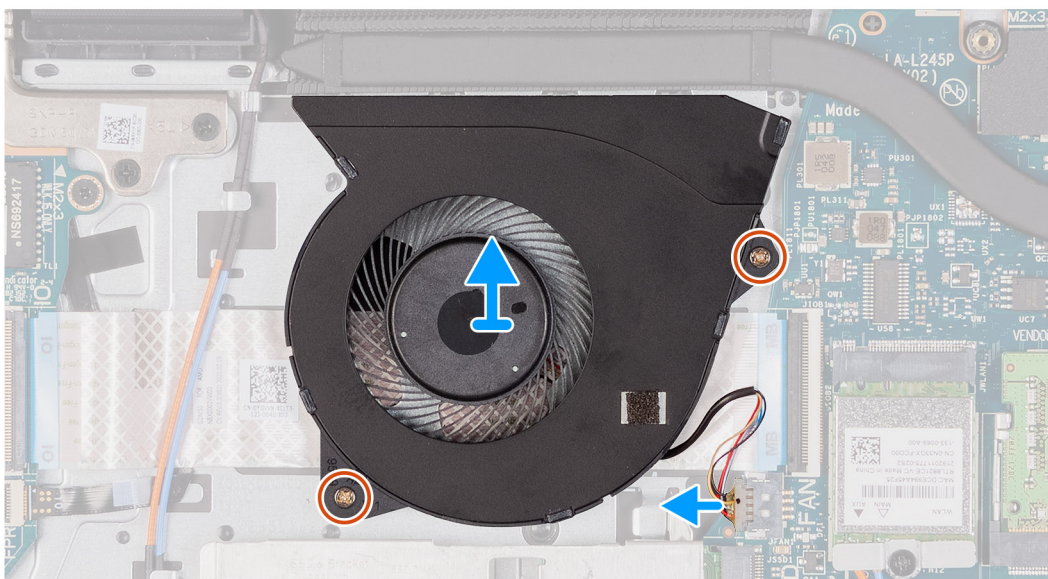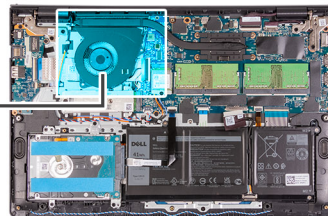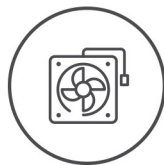

Steps

1. Disconnect the fan cable from the connector on the system board.
2. Remove the two screws (M2x5) that secures the fan to the palm-rest and keyboard assembly.
3. Lift and remove the fan from the computer.

Identifier	GUID-DAB9CFC9-28D1-400C-8256-F346BDB8CB8E
Version	2
Status	Released

Installing the system fan

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the system fan and provides a visual representation of the installation procedure.



2x
M2x5

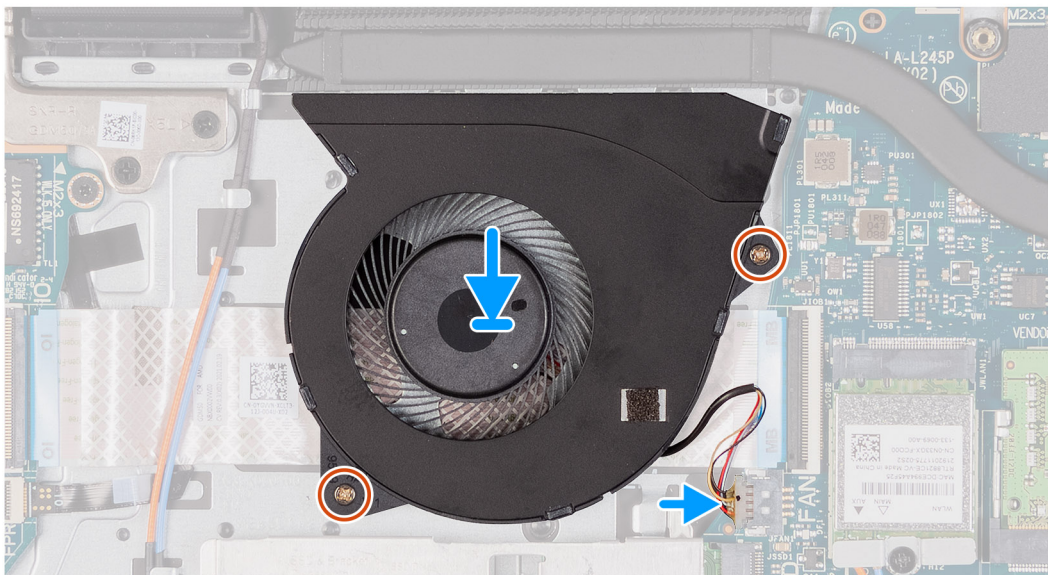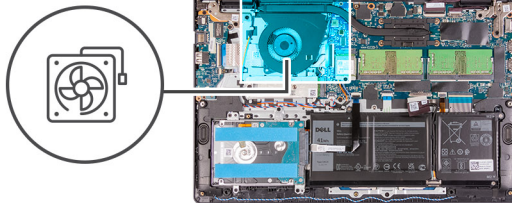

Steps

1. Align and place the fan on the palm-rest and keyboard assembly.
2. Replace the two screws (M2x5) to secure the fan to the palm-rest and keyboard assembly.
3. Connect the fan cable to the connector on the system board .

Next steps

1. Replace the [base cover](#).
2. Exit [service mode](#).
3. Replace the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-4DA6FA84-FF63-4D31-A148-125AAD9F4B2B
Version	1
Status	Translation Validated

Disipador de calor

Identifier	GUID-80316762-C4D8-472C-A0A8-65AAB438801B
Version	2
Status	Released


Removing the heat sink - UMA



Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the heat sink and provides a visual representation of the removal procedure.

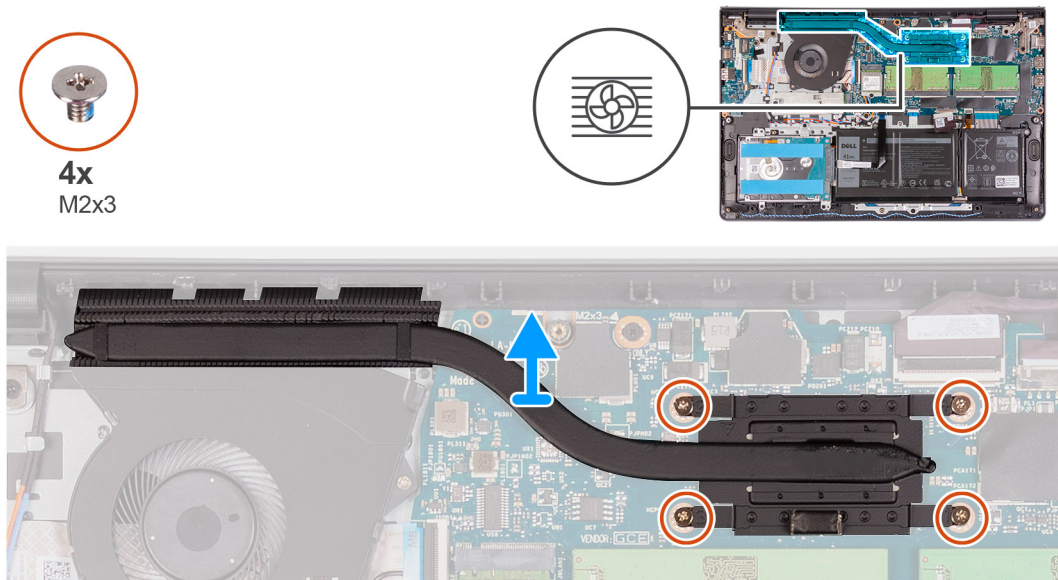

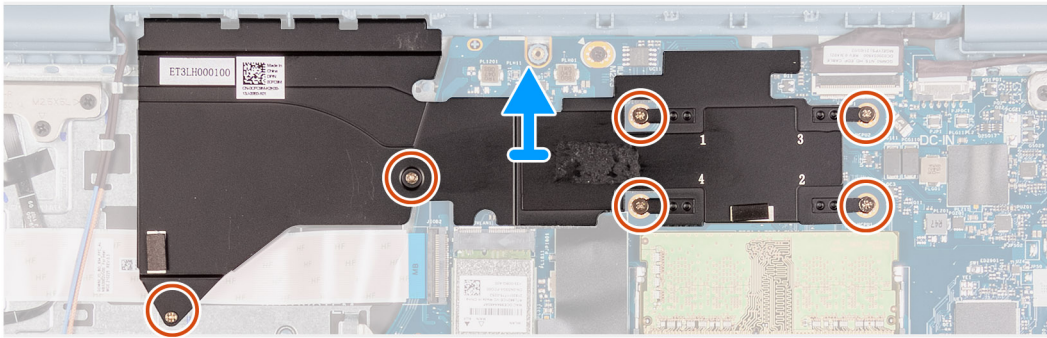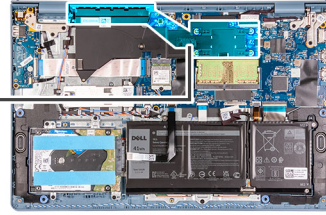

Steps

1. Loosen the four captive screws that secure the heat sink to the system board.
2. Lift the heat sink off the system board.

Identifier	GUID-5B8701B8-807E-43B4-961C-62ACFC2CB881
Version	3
Status	Released



Installing the heat sink - UMA

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the heat sink and provides a visual representation of the installation procedure.

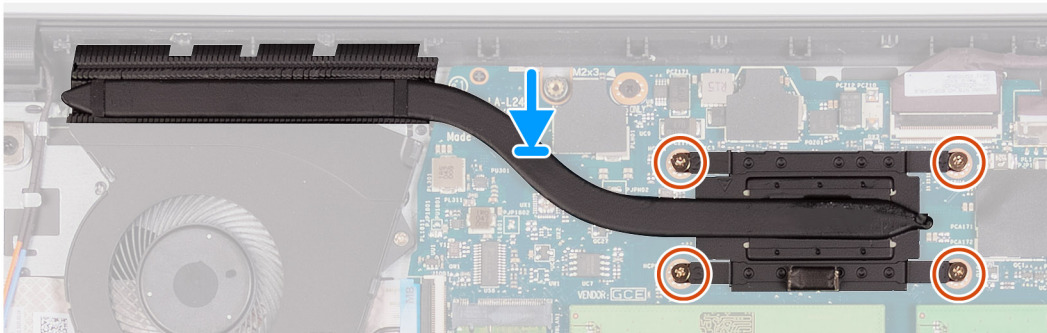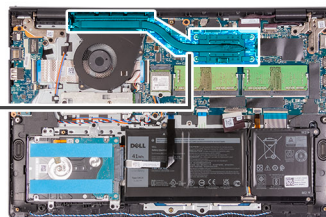

Steps

1. Place the heat sink on the system board and align the captive screws on the heat sink with the screw holes on the system board.
2. Tighten the four (M2x3) screws to secure the heat sink to the system board.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-3A0EA8AA-A874-40BD-A2FD-10529F76421D
Version	2
Status	Released



Removing the heat sink - Discrete

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the discrete heat sink and provides a visual representation of the removal procedure.

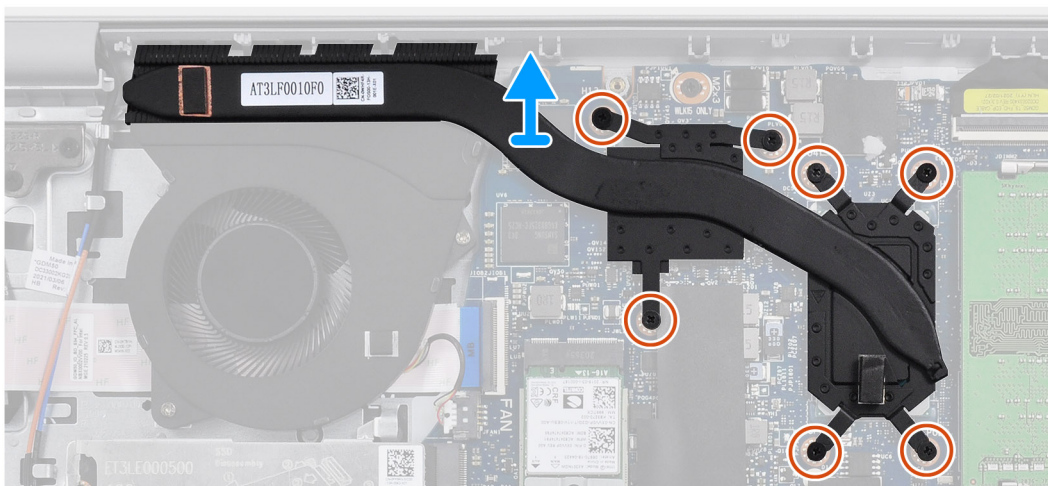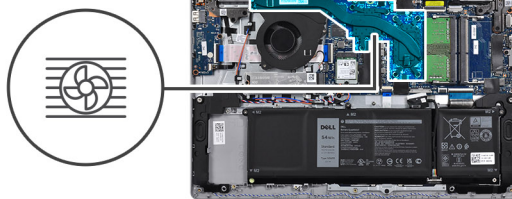

Steps

1. Remove the seven (M2x3) screws that secure the heat sink to the system board.
2. Lift the heat sink off the system board.

Identifier	GUID-571ACF2E-1EB8-4D7E-A598-FBB29CAD2D06
Version	2
Status	Released


Installing the heat sink - Discrete

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the discrete heat sink and provides a visual representation of the installation procedure.

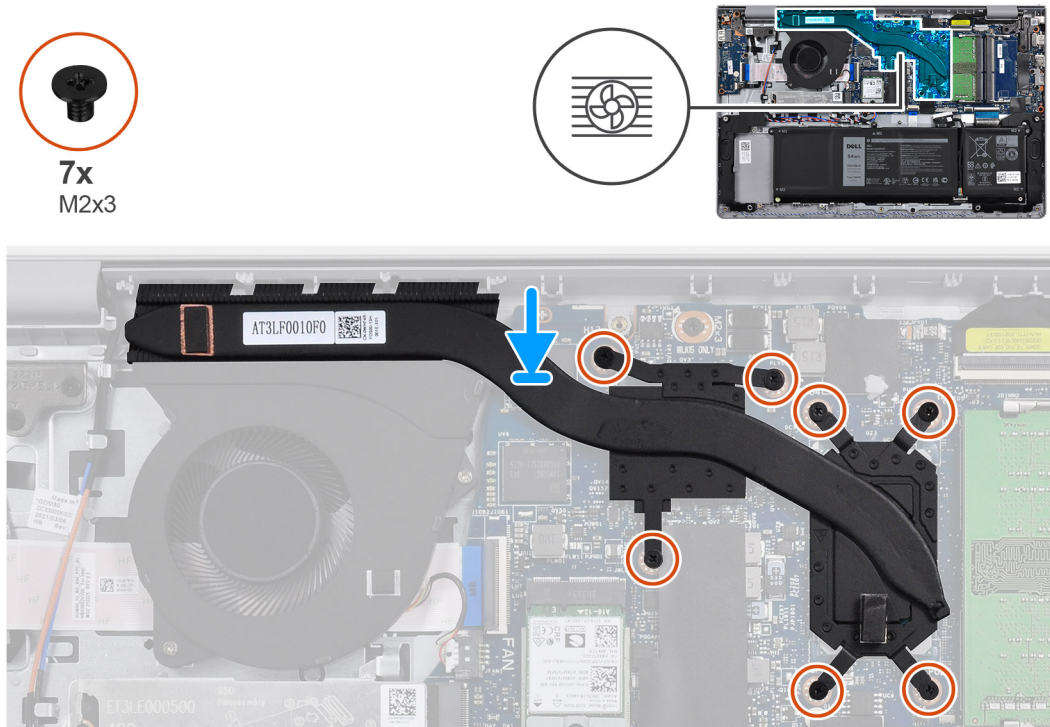

Steps

1. Place the heat sink on the system board and align the screw holes with the ones on the system board.
2. Replace the seven (M2x3) screws to secure the heat sink to the system board.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-A6445DA5-405C-4BDA-A929-FE53DC4A83F6
Version	1
Status	Translation Validated

Altavoces

Identifier	GUID-85DE3E56-C17C-4C04-B29C-4F4CE3B6051A
Version	2
Status	Released


Removing the speakers

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the speakers and provides a visual representation of the removal procedure.

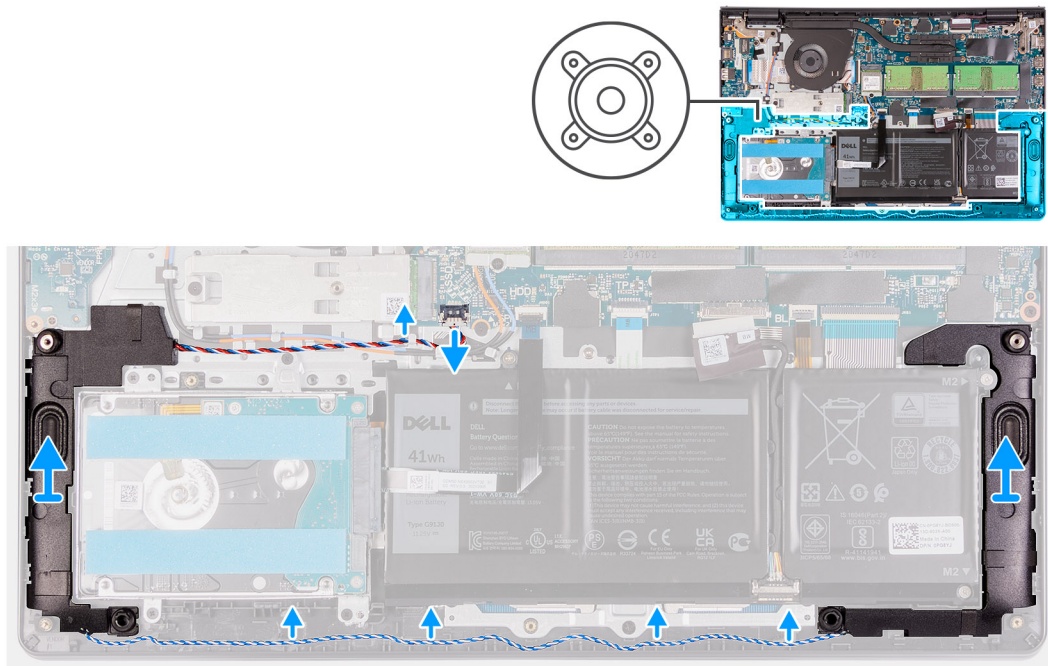

Steps

1. Disconnect the speaker cable from the system board.
2. Unroute and remove the speaker cable from the routing guides on palm-rest and keyboard assembly.
3. Lift the speakers, along with the cable, off the computer.

Identifier	GUID-EDF3A418-A0D7-460A-84CF-0361FF1E4C0F
Version	2
Status	Released

Installing the speakers


Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the speakers and provides a visual representation of the installation procedure.

NOTE: If the rubber grommets are pushed out when removing the speakers, push them back in before replacing the speakers.

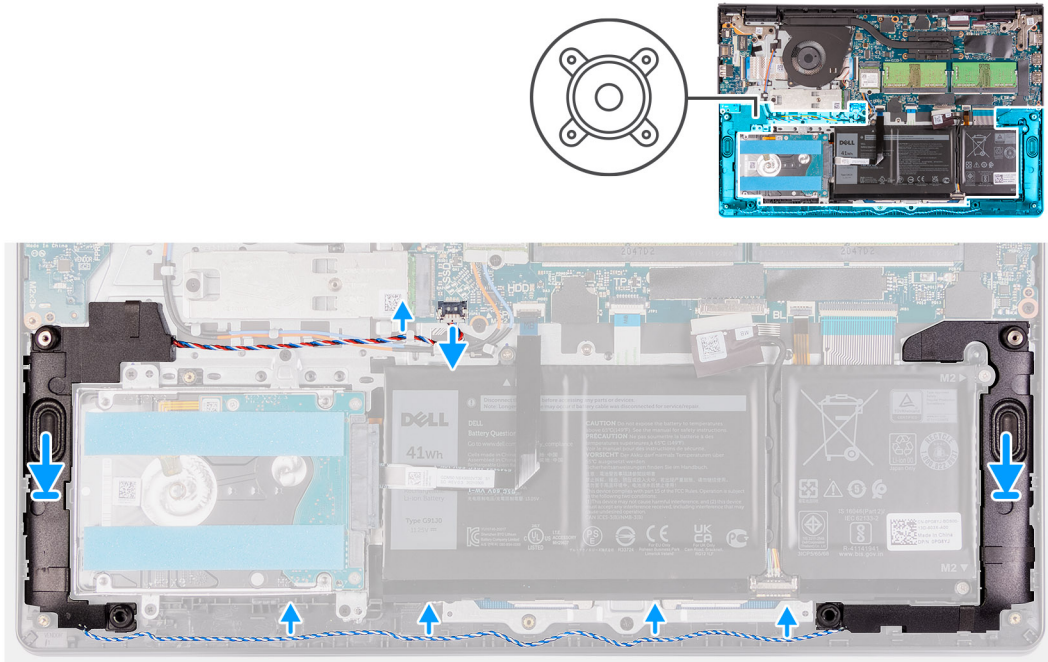

Steps

1. Using the alignment posts and rubber grommets, place the speakers in the slots on the palm-rest and keyboard assembly.
2. Route the speaker cable through the routing guides on the palm-rest and keyboard assembly..
3. Connect the speaker cable to the connector on the system board .

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-46163B9C-BF87-4A51-AA5A-379C1A852775
Version	1
Status	Released

IO board

Identifier	GUID-DCC7BA3D-97DA-4FFE-BE2B-240116B23D3A
Version	2
Status	Released

Removing the I/O board

Prerequisites



1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the I/O board and provides a visual representation of the removal procedure.



2x
M2x3

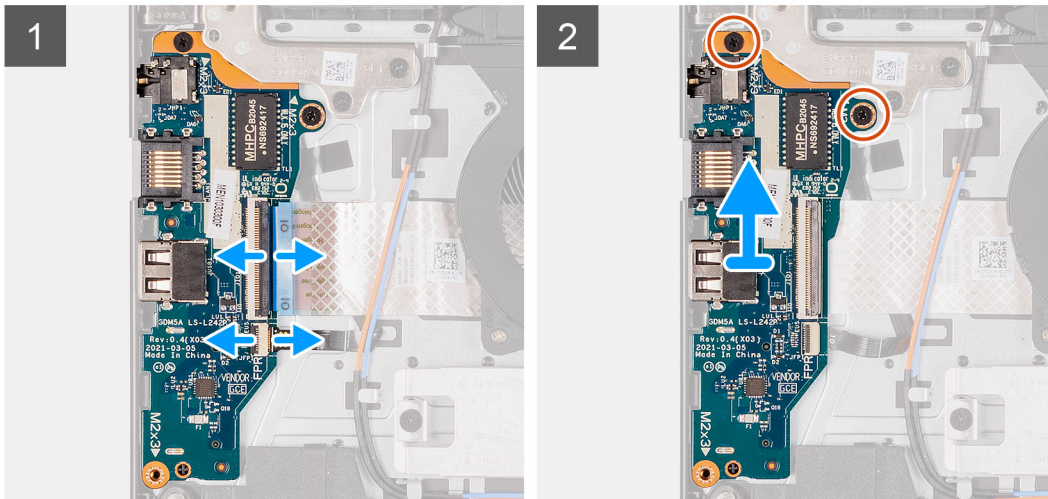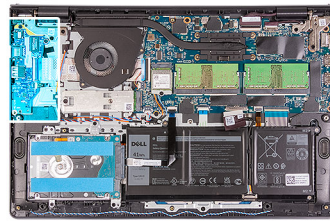

Steps

1. Open the latch and disconnect the fingerprint-reader board cable from the I/O board, if applicable.
2. Open the latch and disconnect the I/O-board power cable from the I/O board.
3. Remove the two (M2x3) screws that secure the I/O board to the palm-rest and keyboard assembly, and remove the I/O board from the system.
4. Remove the three (M2x3) screws that secure the I/O board to the palm-rest and keyboard assembly, and remove the I/O board from the system.

Identifier	GUID-FC0267E8-1EB1-40A1-B11E-78C1C9E385E4
Version	2
Status	Released

Installing the I/O board

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the I/O board and provides a visual representation of the installation procedure.



2x
M2x3

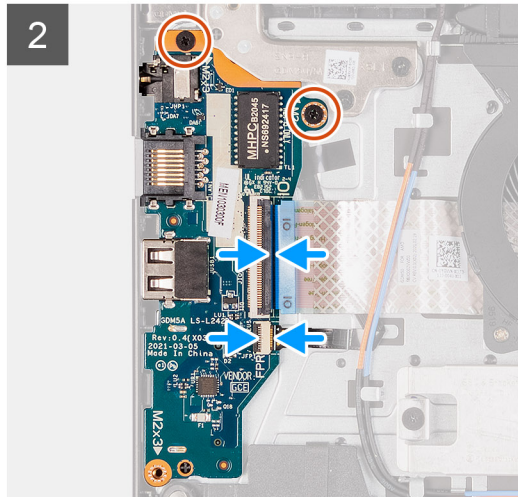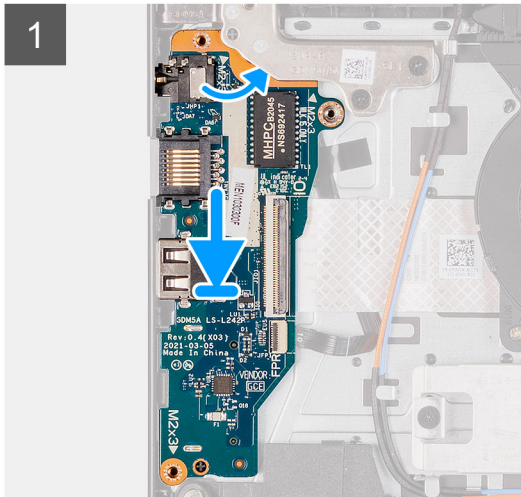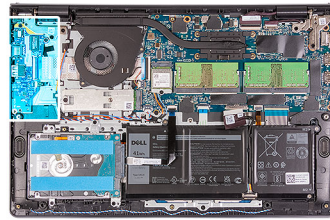

Steps

1. Align and place the I/O board under the left hinge assembly and on to the palm-rest and keyboard assembly.
2. Replace the two (M2x3) screws to secure the I/O daughter board to the palm-rest and keyboard assembly.
3. Replace the three (M2x3) screws to secure the I/O daughter board to the palm-rest and keyboard assembly.
4. Connect the fingerprint-reader board cable to the connector on the I/O board and close the latch, if applicable.
5. Connect the I/O-board power cable to the connector on the I/O board and close the latch.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-775EE71A-A503-47AD-AC10-E85111BEF34A
Version	3
Status	Released

Touchpad

Identifier	GUID-F325BB0C-72B3-4954-AFCD-2A8FB70C1536
Version	2
Status	Released

Removing the touchpad assembly

Prerequisites






1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).
4. Remove the [battery](#).

About this task

The following images indicate the location of the touchpad and provides a visual representation of the removal procedure.



5x
M2x2

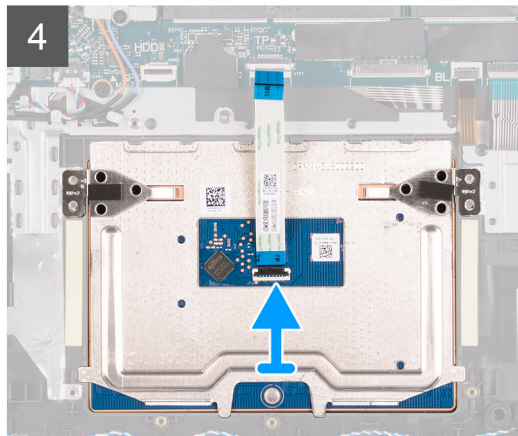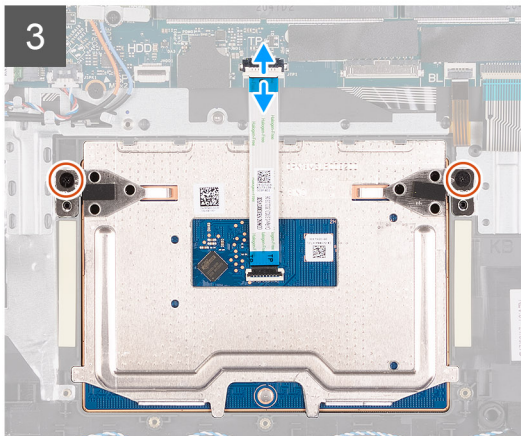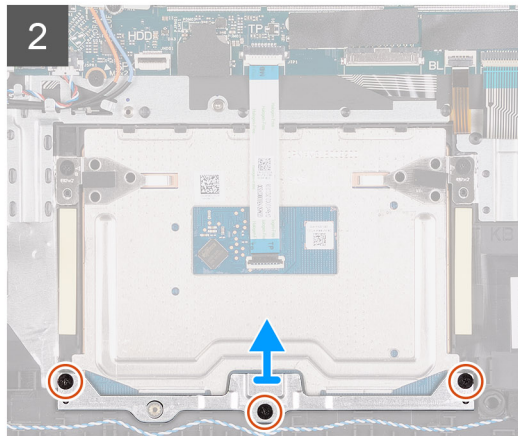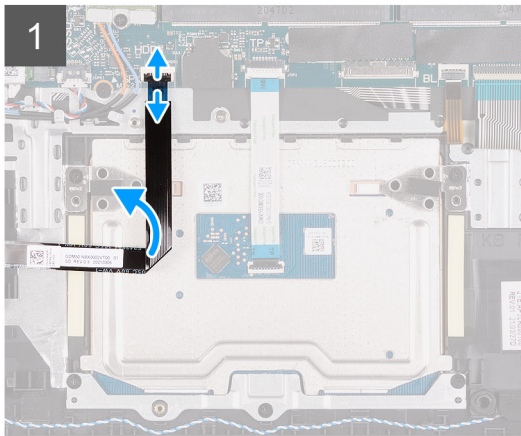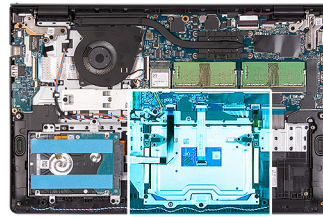

Steps

1. Disconnect the hard-drive FFC from the system board.
2. Remove the three (M2x2) screws securing the touchpad bracket to the palm-rest and keyboard assembly.
3. Remove the touchpad bracket from the computer.
4. Remove the two (M2x2) screws securing the touchpad module in palm-rest and keyboard assembly.
5. Disconnect the touchpad FFC from the system board.
6. Remove the touchpad module with touchpad FFC from the computer.

Identifier	GUID-0C0274D8-07B8-40C1-AE5E-55DAACB7CD49
Version	3
Status	Released

Installing the touch pad assembly



About this task

The following images indicate the location of the touchpad and provides a visual representation of the installation procedure.

NOTE: Ensure that the touch pad is aligned with the guides available on the palm-rest and keyboard assembly, and the gap on either sides of the touch pad is equal.



5x
M2x2

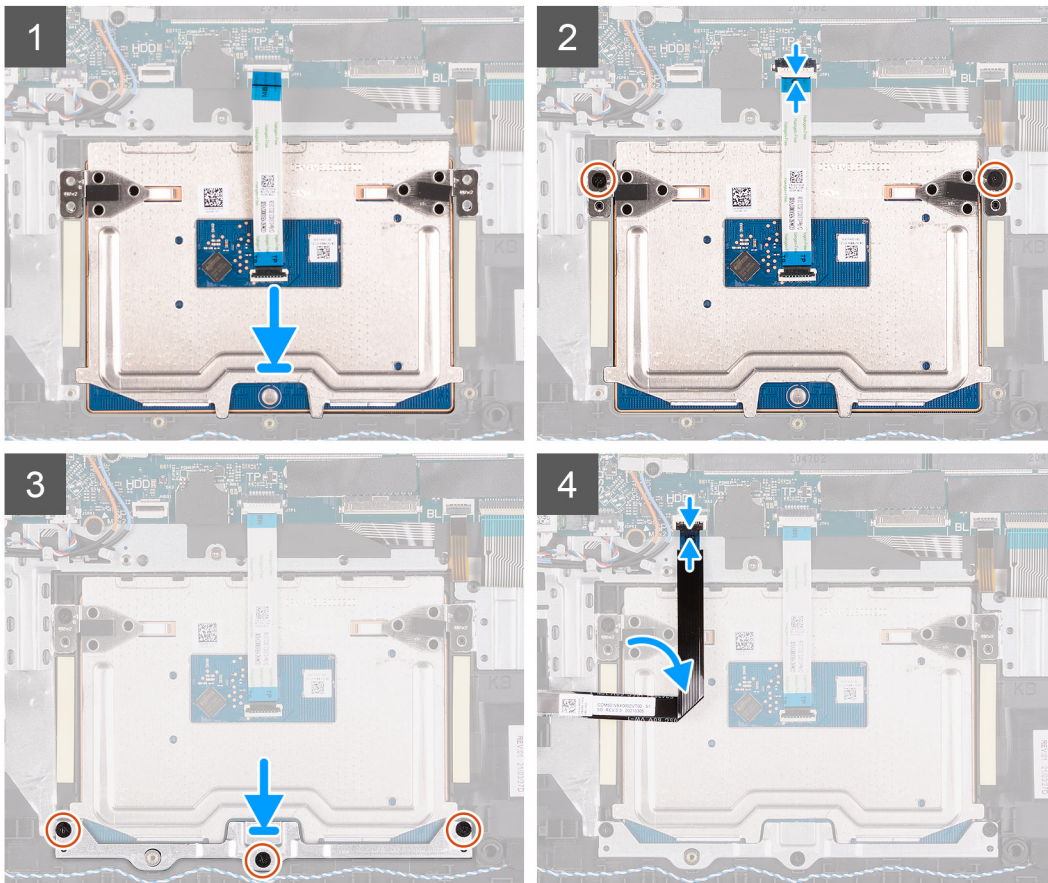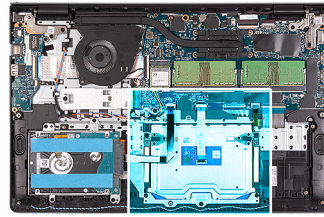

Steps

1. Align and place the touchpad module onto the computer.
2. Reconnect the touchpad FFC to the touchpad module.
3. Install the two (M2x2) screws to secure the touchpad module to the palm-rest and keyboard assembly.
4. Install the touchpad bracket on the touchpad and secure it using the three (M2x2) screws.
5. Reconnect the hard-drive FFC to the system board.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-E641BD48-9062-46FE-8F5A-723887A0921D
Version	2
Status	To be translated

Display assembly

Identifier	GUID-E8BEF5AA-E7B3-4245-A9CC-031B3D201346
Version	2
Status	Released

Removing the display assembly

Prerequisites



1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).



About this task

The following images indicate the location of the display assembly and provides a visual representation of the removal procedure.



4x
M2.5x5

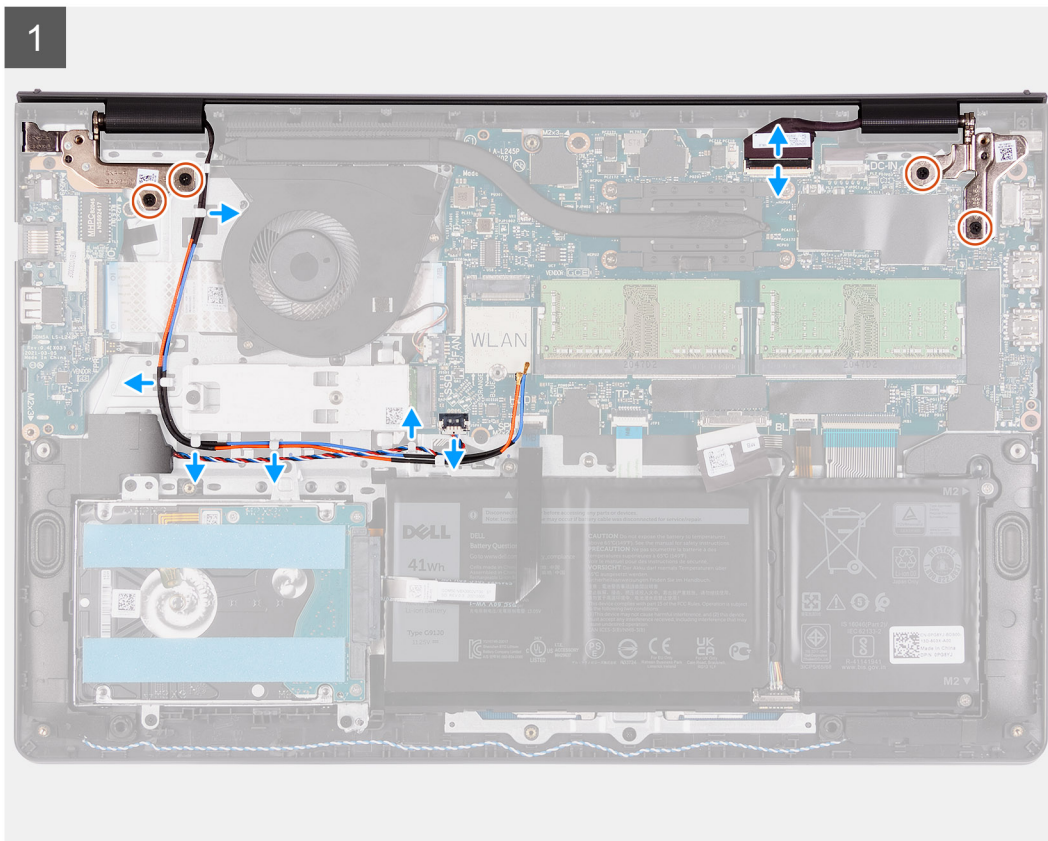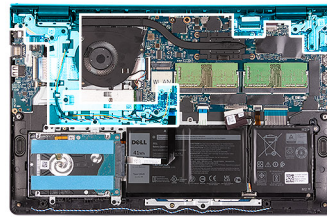

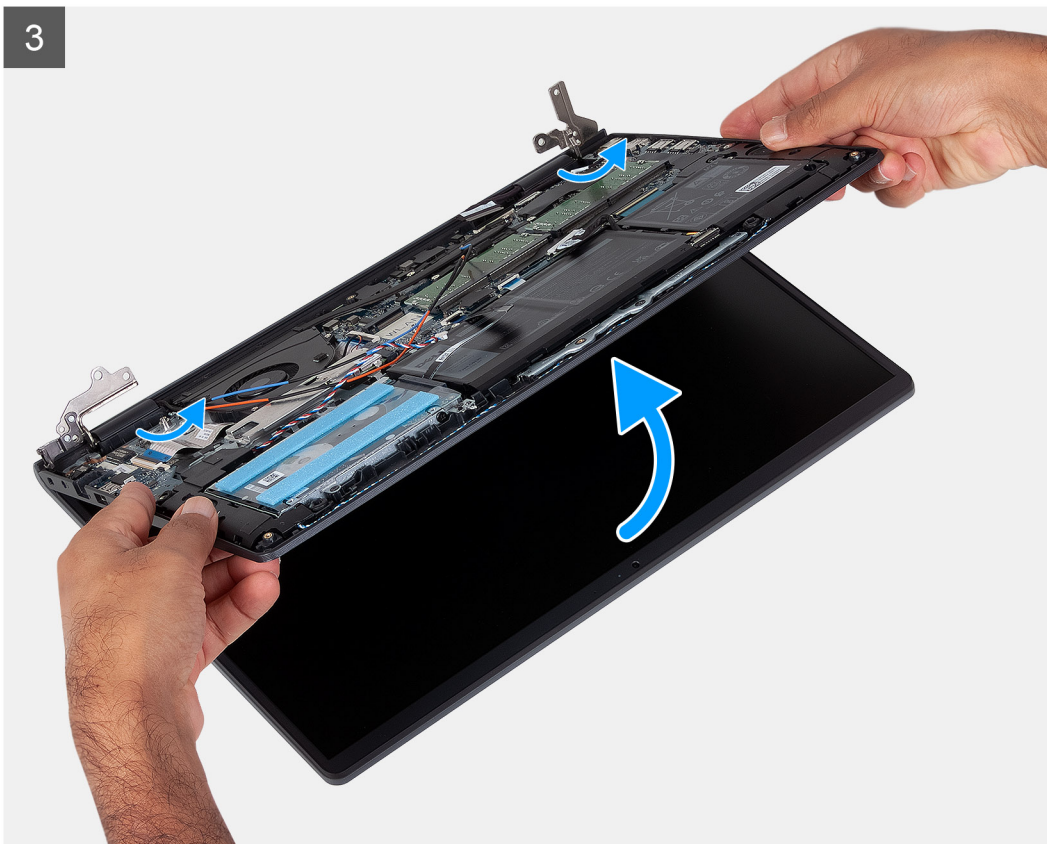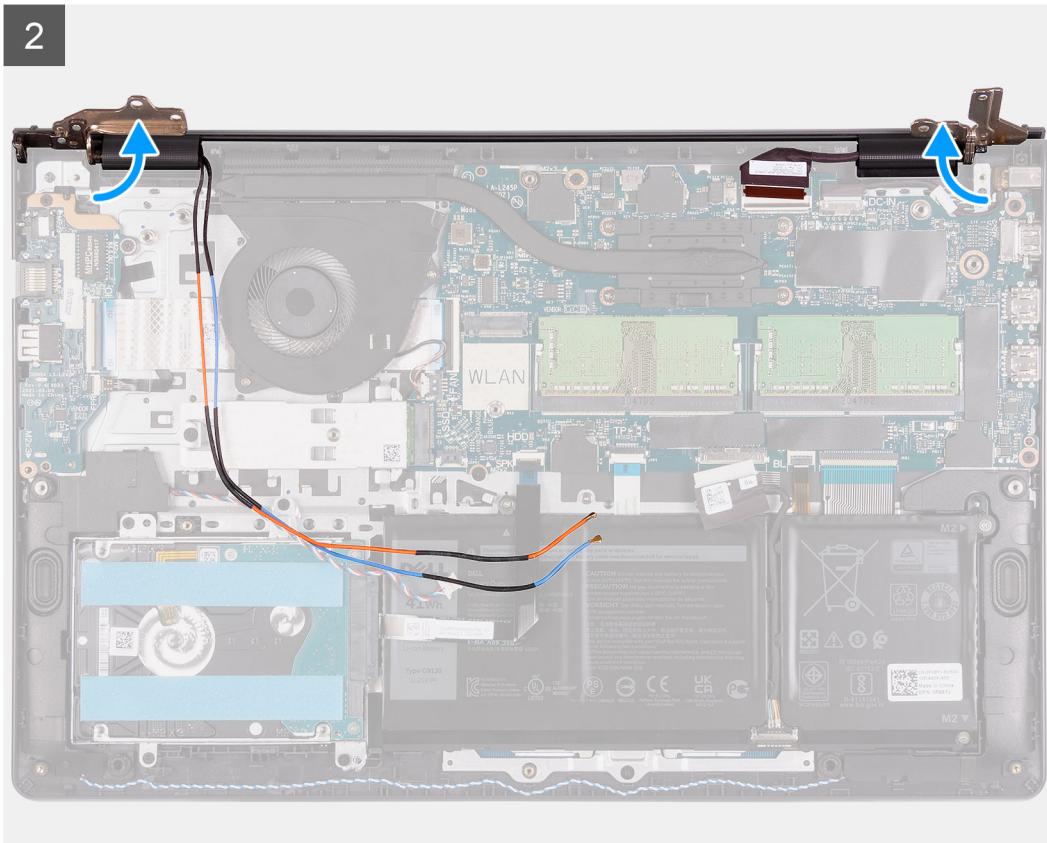

Steps

1. Disconnect the display cable from the connector on the system board.
2. Unroute the WLAN antenna cables and the speaker cables from the routing guides on the computer.

3. Remove the six (M2.5x5) screws that secure the display hinges to the palm-rest and keyboard assembly.
4. Fold the left and right hinges away from the palm-rest and keyboard assembly.
5. Lift the palm-rest and keyboard assembly at an angle to free it from the hinges and remove it from the display assembly.

Identifier	GUID-3E55AE4E-0E57-44B6-89C2-26909F241681
Version	2
Status	Released

Installing the display assembly

Prerequisites



If you are replacing a component, remove the existing component before performing the installation procedure.

About this task


NOTE: Ensure that the hinges are opened to the maximum before replacing the display assembly on the palmrest and keyboard assembly.




4x
M2.5x5

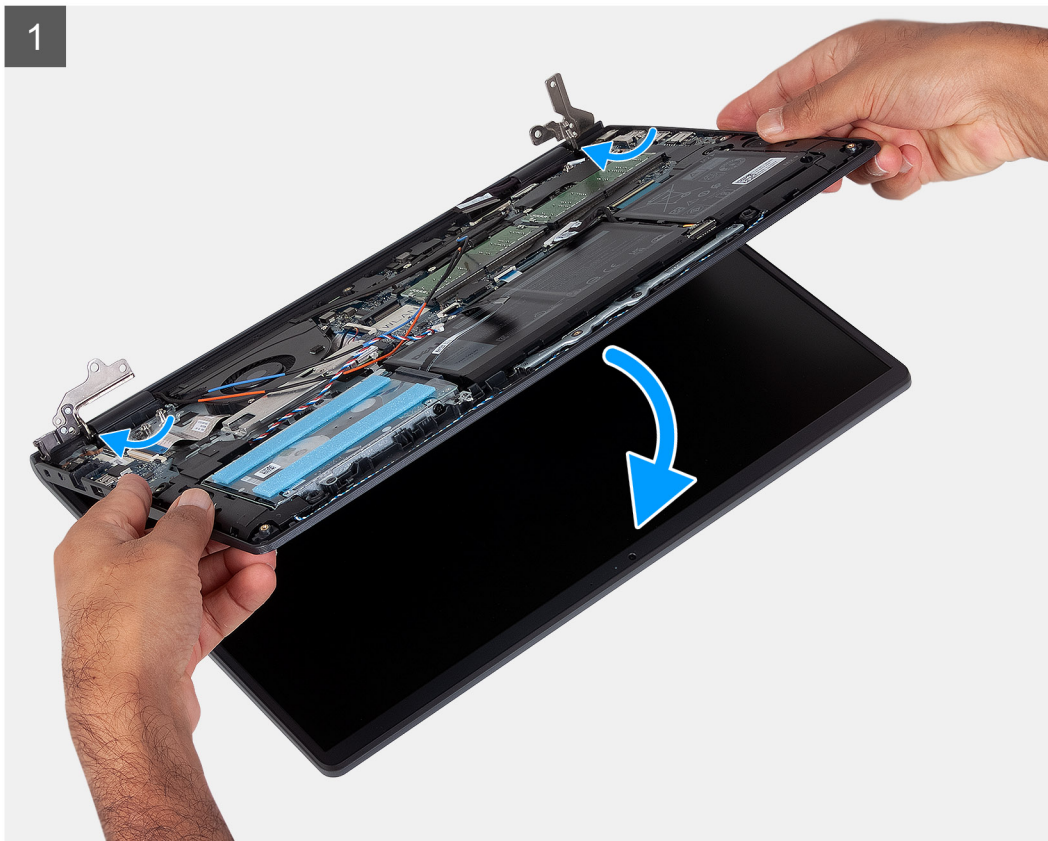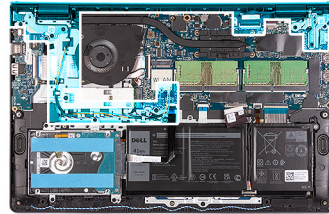

2

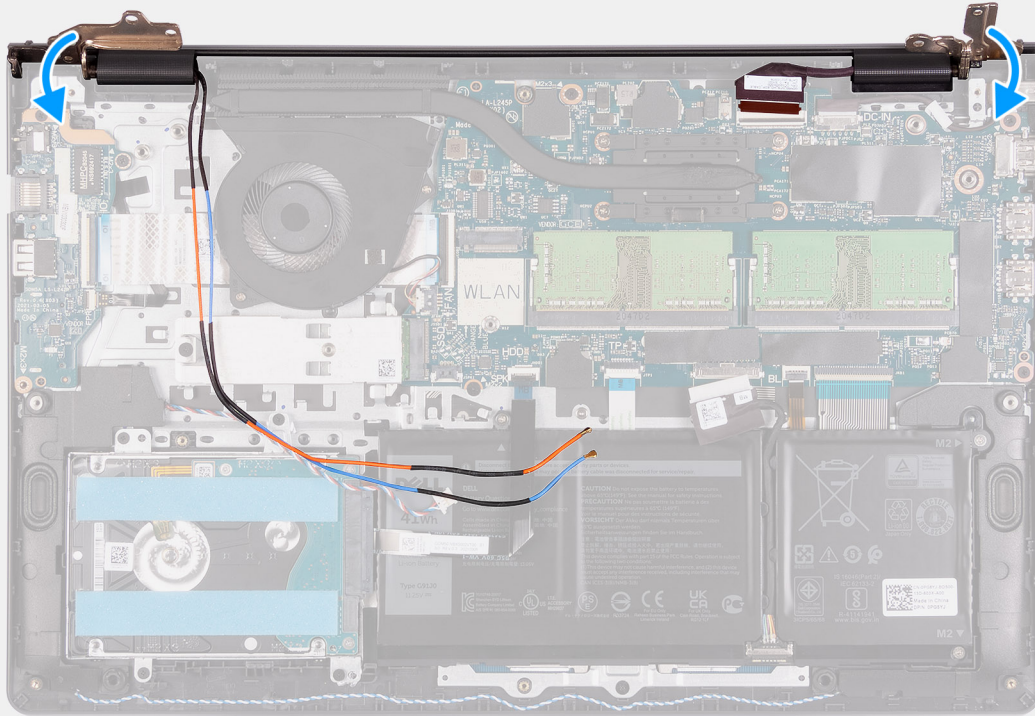

3

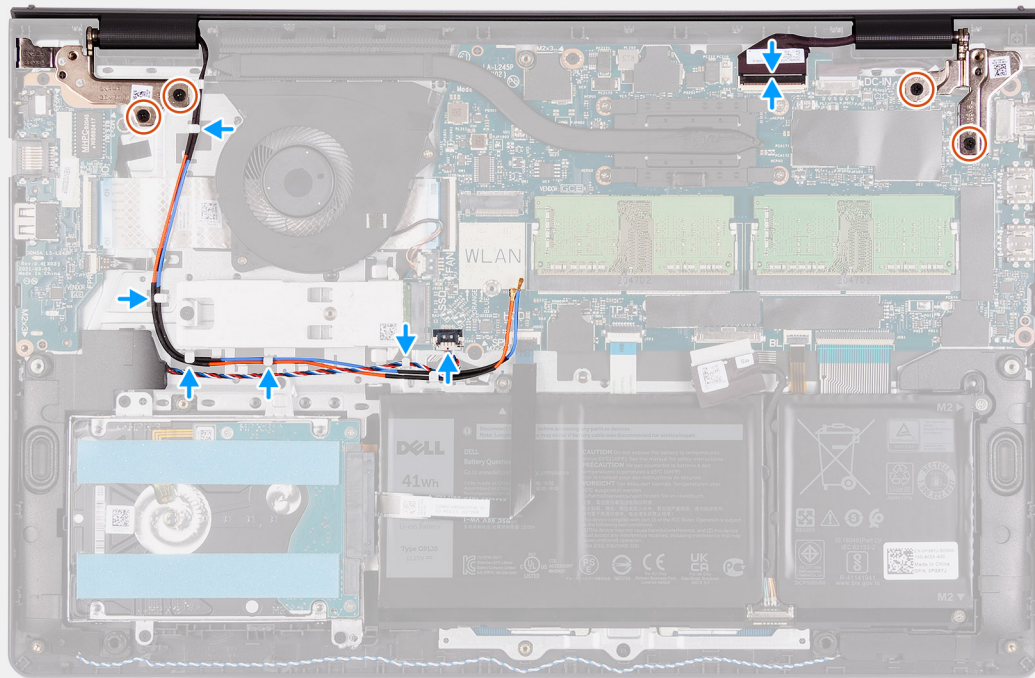

Steps

1. Align and place the system under the hinges on the display assembly.
2. Fold the hinges back and install the four (M2.5x5) screws to secure the display assembly.

3. Re-route the speaker and WLAN antenna cables through the routing channels on the palmrest.
4. Reconnect the display cable to the connector on the system board.

Next steps

1. Install the [WLAN card](#).
2. Install the [base cover](#).
3. Exit [service mode](#).
4. Install the [SD card](#).
5. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-73713549-DC5E-4E75-BCAE-47B5DBBF0153
Version	1
Status	Released

Hinge caps

Identifier	GUID-1DE4B7DD-BFA1-4C34-A54C-97ED87D97192
Version	3
Status	Released



Removing the hinge caps

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).
6. Remove the [display assembly](#).

About this task

The following images indicate the location of the hinge caps and provides a visual representation of the installation procedure.

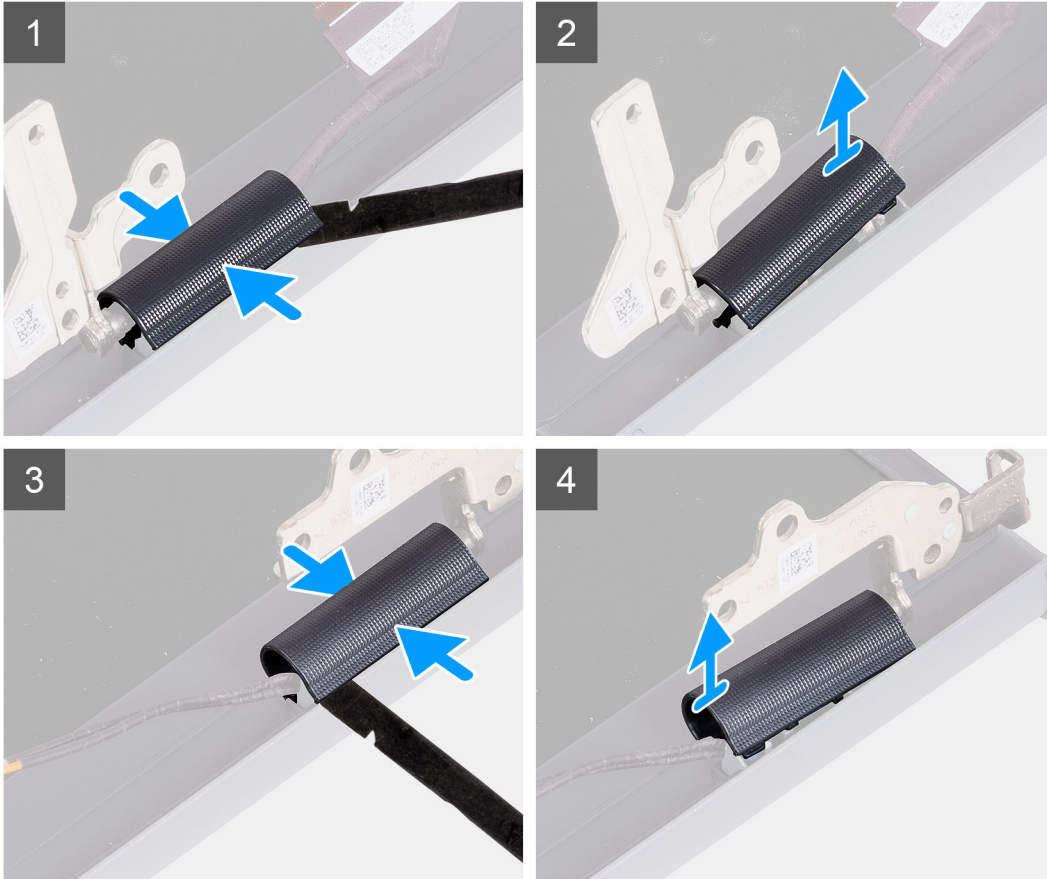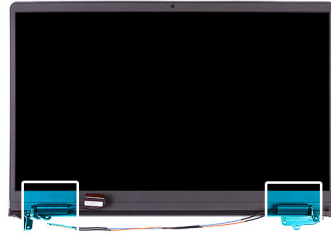

Steps

i **NOTE:** Before removing the display hinge caps, open the display hinges to at least 90 degrees.

1. Pinch the left-hinge cap in the center.
2. Use the scribe to pry open the left-hinge cap from the openings on its inner side.
3. Lift the inner side of the left-hinge cap and remove it from the left hinge.
4. Pinch the right hinge cap in the center.
5. Use the scribe to pry open the right-hinge cap from the openings on its inner side.
6. Lift the inner side of the right-hinge cap and remove it from the right hinge.

Identifier	GUID-132335E3-9030-40D5-A29F-6E6A7CBABDEA
Version	3
Status	Released





Installing the hinge caps

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the hinge caps and provides a visual representation of the installation procedure.

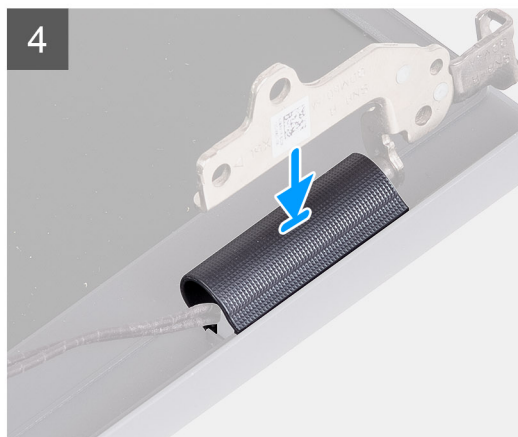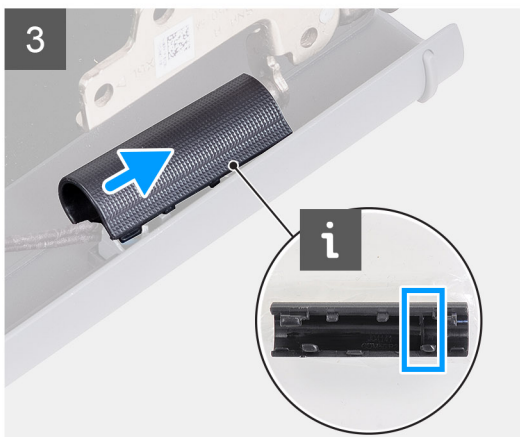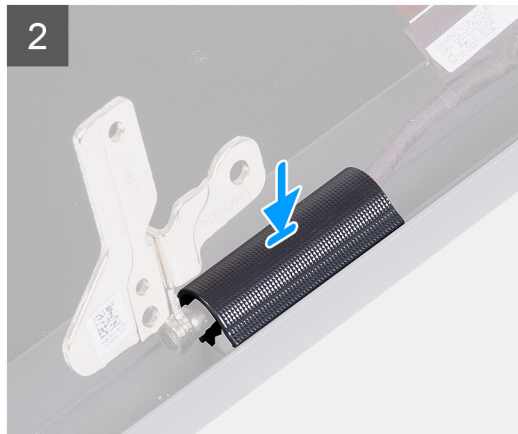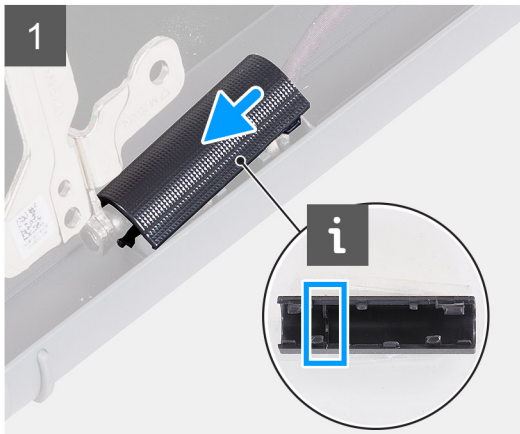

Steps

1. Align the rib inside the left-hinge cap to the outer sides.
2. Push the left-hinge cap down until it clicks in place.
3. Align the rib inside the right-hinge cap to the outer sides.
4. Push the right-hinge cap down until it clicks in place.

Next steps

1. Install the [display assembly](#).
2. Install the [WLAN card](#).
3. Install the [base cover](#).
4. Exit [service mode](#).
5. Install the [SD card](#).
6. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-7B4AB0D1-889B-4630-9CA4-9357E8DA5E67
Version	1
Status	Translation Validated

Embellecedor de la pantalla

Identifier	GUID-DF9F43F9-6C9E-48F8-A4D2-343E828E1B46
Version	2
Status	Released


Removing the display bezel

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [display assembly](#).

About this task


The following images indicate the location of the display bezel and provide a visual representation of the removal procedure.

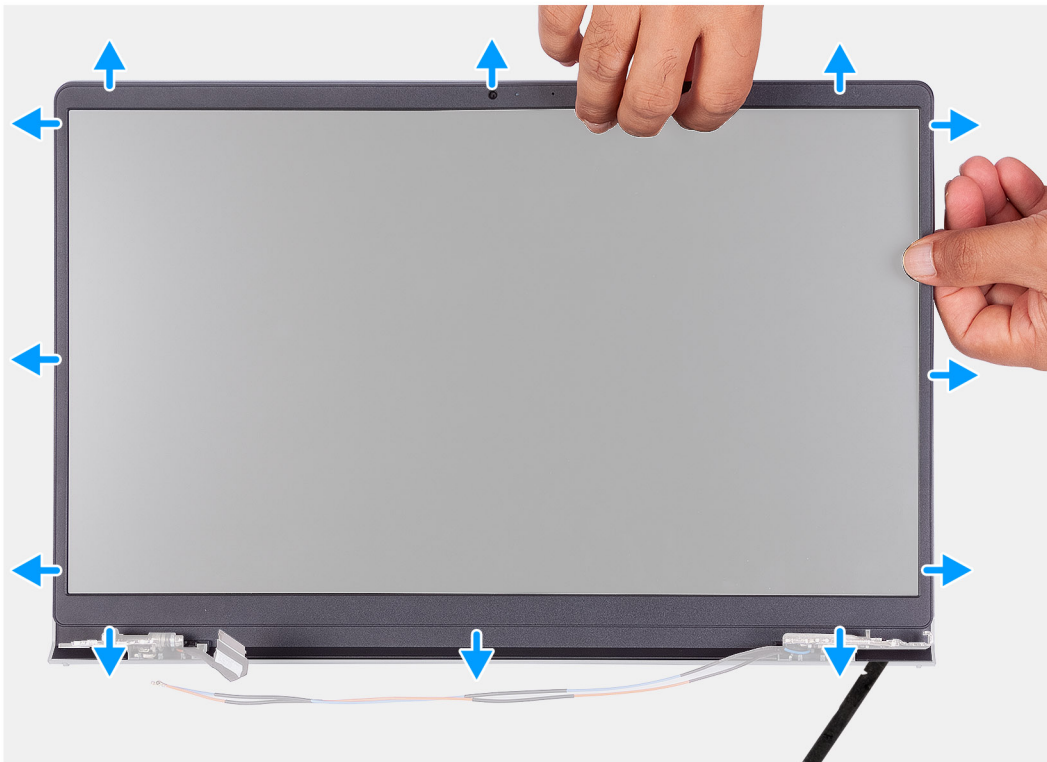

Steps

1. Use a plastic scribe to pry open the display bezel from the outer edge at the left and right sides of the display hinges.

NOTE: The display bezel is adhered to the display panel with adhesive. Insert a plastic scribe into the recesses near both hinge caps to start the prying process to release the display bezel. Pry along the outside edge of the display bezel and work your way around the entire display bezel until the display bezel is separated from the display cover.

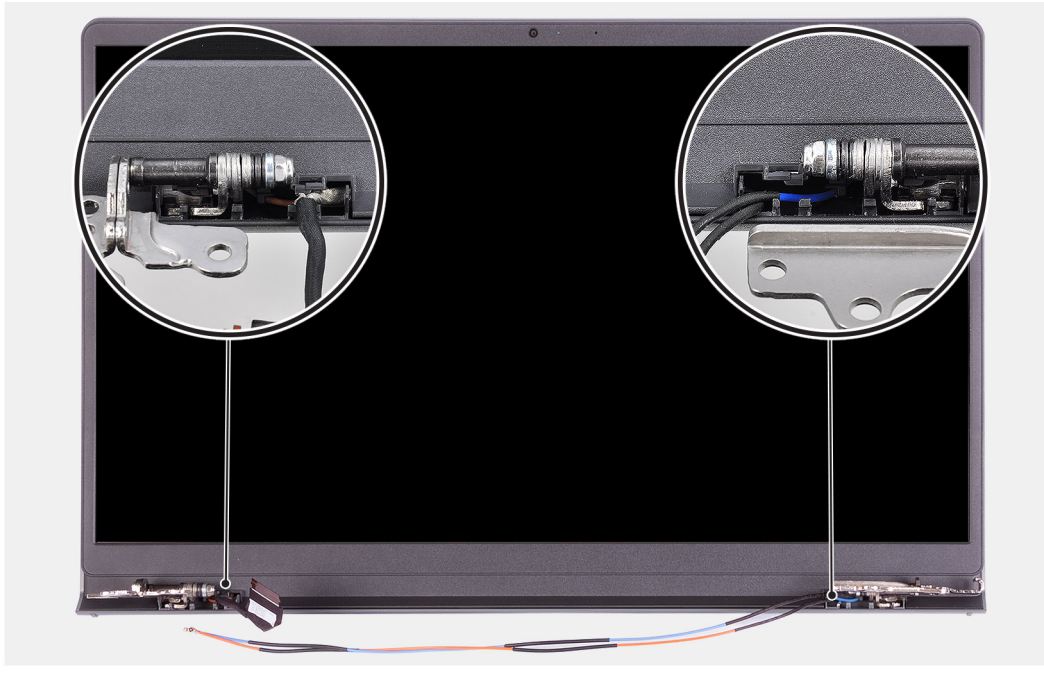

2. Carefully pry the bezel along the edges with your fingers.

NOTE: Do not use a scribe or any other objects, and apply pressure to the display panel to avoid damaging the display panel.

3. Work around the edge of the display assembly to pry the display bezel from the display assembly.
4. Lift and remove the display bezel from the display assembly.

Identifier	GUID-B2704294-D70E-4717-A760-C120B6E59589
Version	2
Status	Released


Installing the display bezel

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the display bezel and provides a visual representation of the installation procedure.

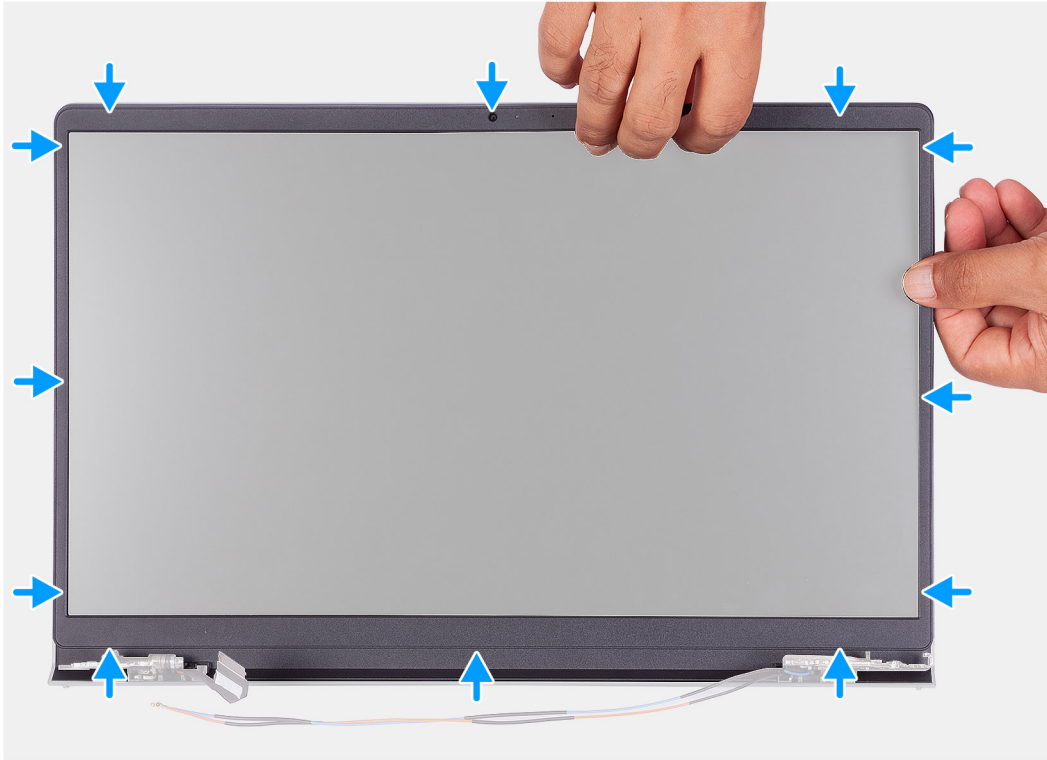

Steps

1. Place the display panel and display assembly on a clean and flat surface.
2. Place the display bezel on the display assembly.
3. Align the tabs on the display bezel to the slots on the display assembly.
4. Press down on the display bezel and snap the display bezel in place.

Next steps

1. Install the [display assembly](#).
2. Install the [base cover](#).
3. Exit [service mode](#).
4. Install the [SD card](#).
5. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-2DA3E7E0-AEBE-4A74-8500-BCF79F2F9936
Version	1
Status	Released

Hinges

Identifier	GUID-AE2573D9-7A91-4BB0-A123-B5DA9C872DA8
Version	3
Status	Released

Removing the hinges

Prerequisites






1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).
6. Remove the [display assembly](#).
7. Remove the [hinge caps](#).
8. Remove the [display bezel](#).

About this task

The following images indicate the location of the hinge caps and provides a visual representation of the installation procedure.



6x
M2.5x3.8

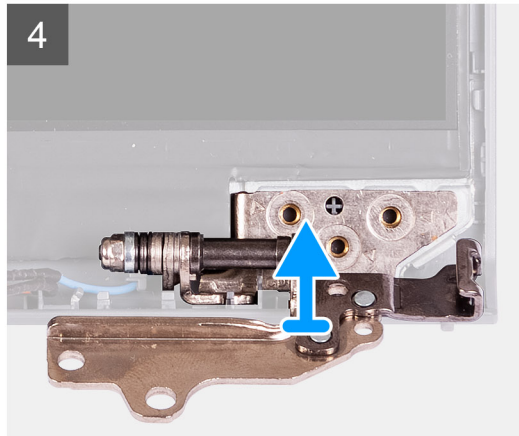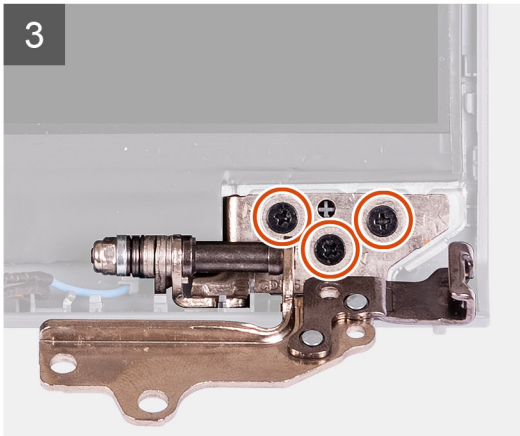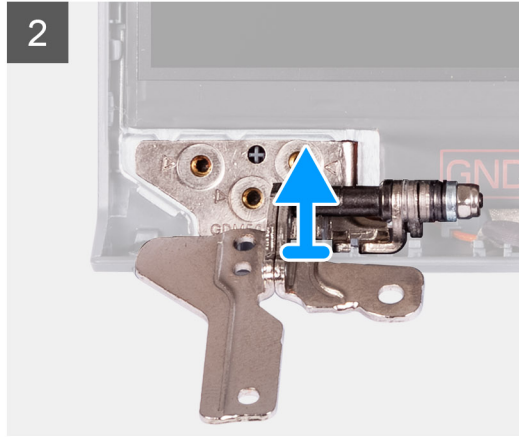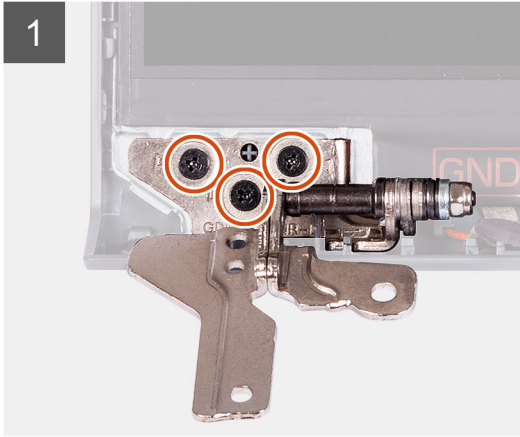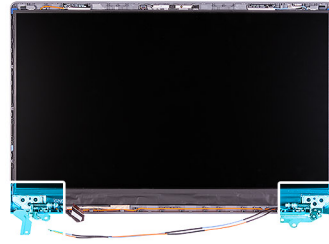

Steps

1. Remove the three (M2.5x3.8) from the left hinge.
2. Lift and remove the left hinge from the display assembly.
3. Remove the three (M2.5x3.8) from the right hinge.
4. Lift and remove the right hinge from the display assembly.

Identifier	GUID-231637E1-71B5-4C30-9FA4-81D6EB5F3BB3
Version	3
Status	Released

Installing the hinges

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the hinges and provides a visual representation of the installation procedure.



6x
M2.5x3.8

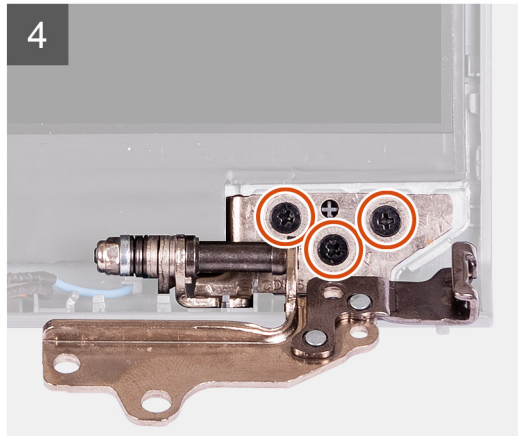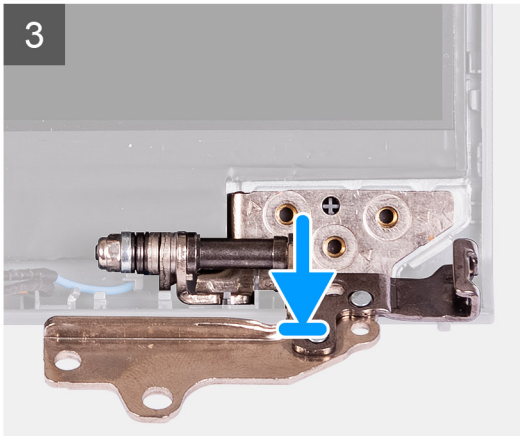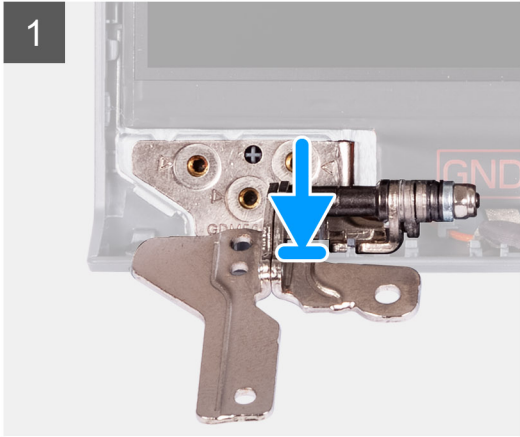

Steps

1. Align and place the left hinge on the display assembly.
2. Install the three (M2.5x3.8) screws to secure the hinge to the display panel and back cover.
3. Align and place the right hinge on the display assembly.
4. Install the three (M2.5x3.8) screws to secure the hinge to the display panel and back cover.

Next steps

1. Install the [display bezel](#).
2. Install the [hinge caps](#).
3. Install the [display assembly](#).
4. Install the [WLAN card](#).
5. Install the [base cover](#).
6. Exit [service mode](#).
7. Install the [SD card](#).
8. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-7A534254-A92B-4F10-93AE-BEC1E234AF5E
Version	1
Status	Translation approved

Panel de la pantalla

Identifier	GUID-70BDAECC-C0DA-4276-9F6E-87E740A3D8D0
Version	2
Status	Released



Removing the display panel

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).
6. Remove the [display assembly](#).
7. Remove the [hinge caps](#).
8. Remove the [display bezel](#).

About this task

The following images indicate the location of the display panel and provides a visual representation of the removal procedure.

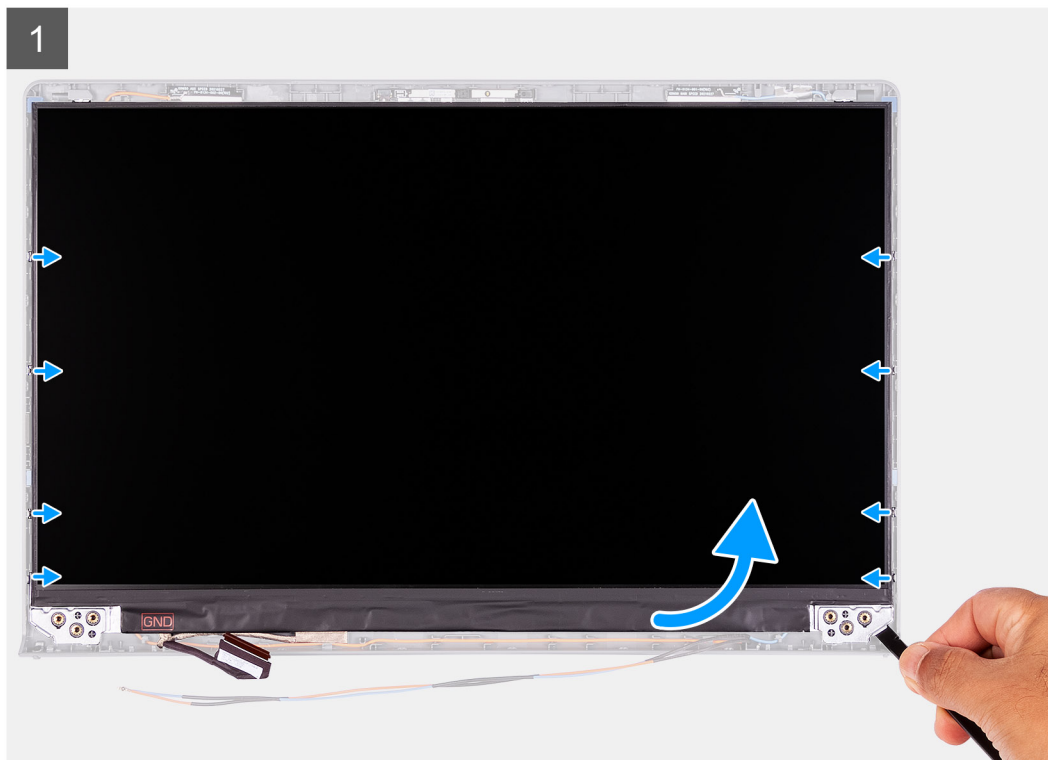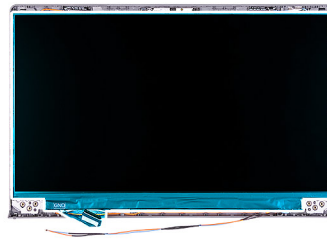



Steps

1. Use a plastic scribe to pry the display panel from the bottom-right corner.
2. Gently start prying the display panel along the left and right sides of the display back-cover using your hands.
3. Lift the bottom side of the display panel and slide it downward to release the display brackets from the slots at the top side of the display cover.
4. Gently flip the display panel assembly forward, peel back the Mylar tape securing the display cable on the rear of the display panel.

NOTE: Ensure that the panel has a clean and smooth surface to rest on to prevent damage.

5. Disconnect the display cable from the display panel assembly and lift the display panel away from the system.

NOTE: Do not remove the metal brackets from the panel.

Identifier	GUID-DFFA6141-1EDC-4311-BA31-6D8CD392FE2C
Version	2
Status	Released


Installation display panel


Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the display panel and provides a visual representation of the installation procedure.

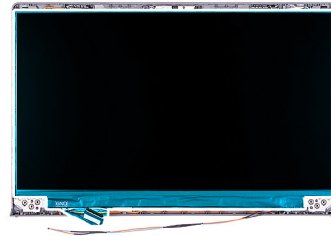

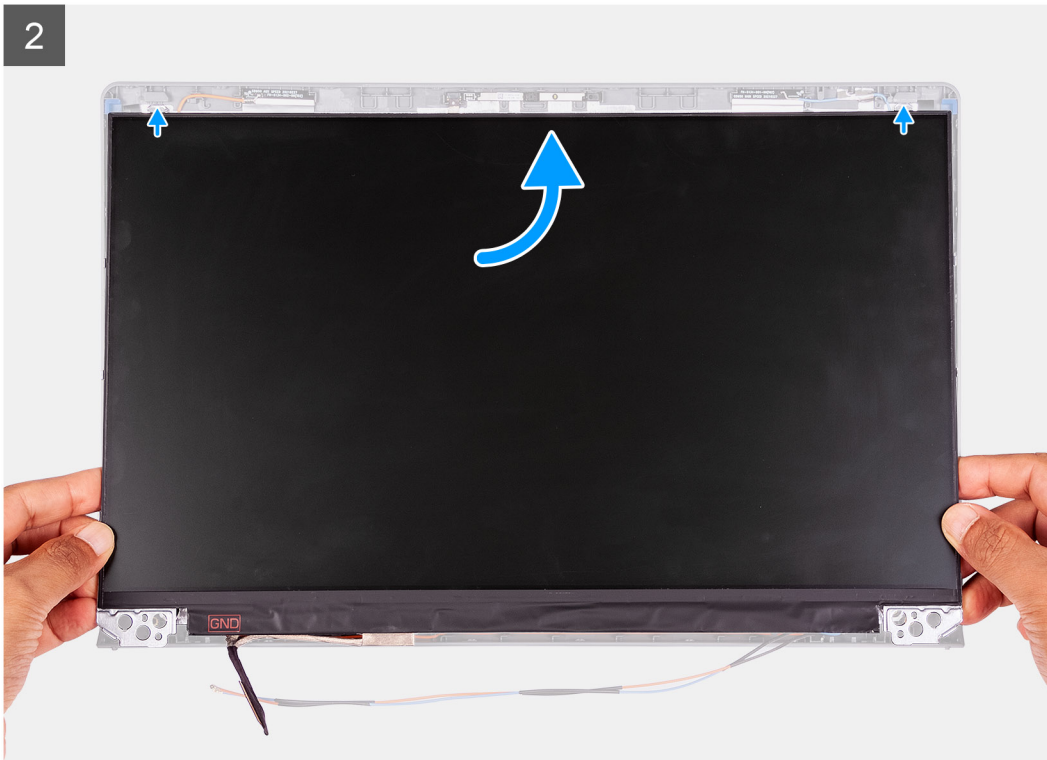

Steps

1. Place the display panel on a flat and clean surface .
2. Connect the display cable to the connector at the back of the display panel and close the latch to secure the cable .
3. Adhere the tape that secures the display cable to the back of the display panel .
4. Turn the display panel over and place it on the display back-cover.
5. Lift the bottom side of the display panel and slide the top side into the slots at the top of the display back-cover.
6. Gently push down on the edges of the display panel until it clicks into the tabs on the display back-cover.

Next steps

1. Install the [display bezel](#).
2. Install the [hinge caps](#).
3. Install the [display assembly](#).
4. Install the [WLAN card](#).
5. Install the [base cover](#).
6. Exit [service mode](#).
7. Install the [SD card](#).
8. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-98E37384-0A93-4074-9731-EEB0B81F914
Version	2
Status	Released

Camera




Identifier	GUID-72BF627C-C73E-4B5F-950B-5E3AE7E0D971
Version	2
Status	Released

Removing the camera

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).
6. Remove the [display assembly](#).
7. Remove the [hinge caps](#).
8. Remove the [display bezel](#).
9. Remove the [display panel](#).

About this task

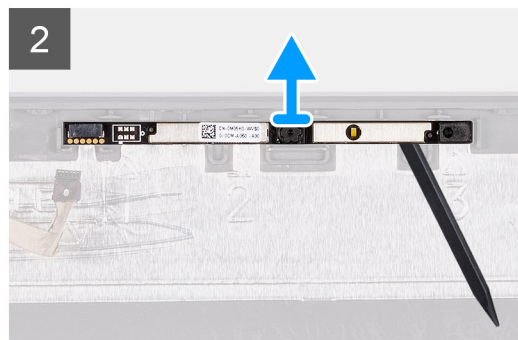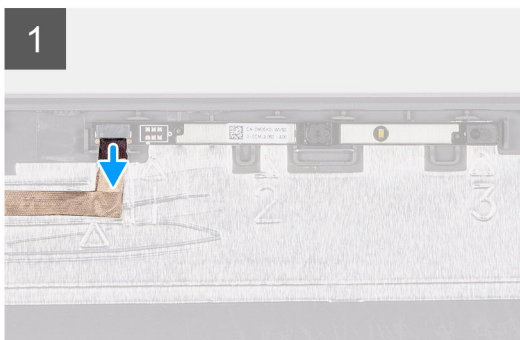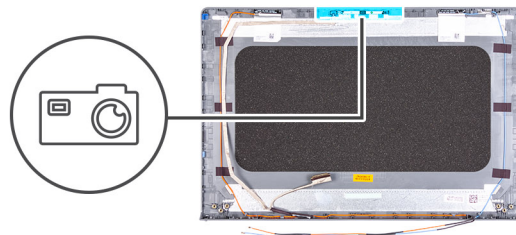

Steps

1. Disconnect the camera cable from the camera module.

- Using a plastic scribe, gently pry the camera off the display back-cover and antenna assembly.



Identifier	GUID-6CBEA3B7-E9A6-47F7-BDB2-0918A171D501
Version	2
Status	Released

Installing the camera

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

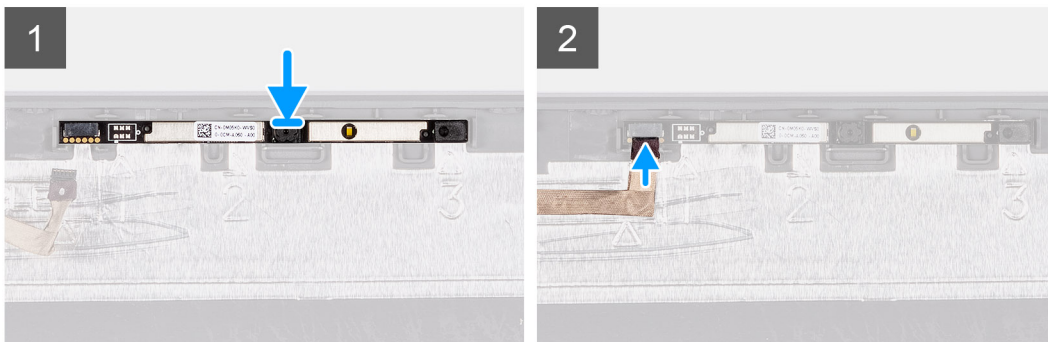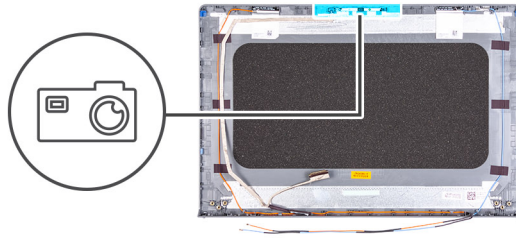

Steps

- Using the alignment post, adhere the camera module on the display back-cover and antenna assembly.
- Connect the camera cable to the camera module.

Next steps

- Install the [display panel](#).
- Install the [display bezel](#).
- Install the [hinge caps](#).
- Install the [display assembly](#).
- Install the [WLAN card](#).
- Install the [base cover](#).
- Exit [service mode](#).
- Install the [SD card](#).
- Follow the procedure in [after working inside your computer](#).

Identifier	GUID-DF5D29ED-D505-407A-BD50-1F3515389303
Version	2
Status	Released

Display eDP cable

Identifier	GUID-B6961B08-348E-473E-9CC0-983A7F10AA8B
Version	2
Status	Released



Removing the eDP cable

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).
6. Remove the [display assembly](#).
7. Remove the [hinge caps](#).
8. Remove the [display bezel](#).
9. Remove the [display panel](#).

About this task

The following images indicate the location of the eDP cable and provides a visual representation of the removal procedure.

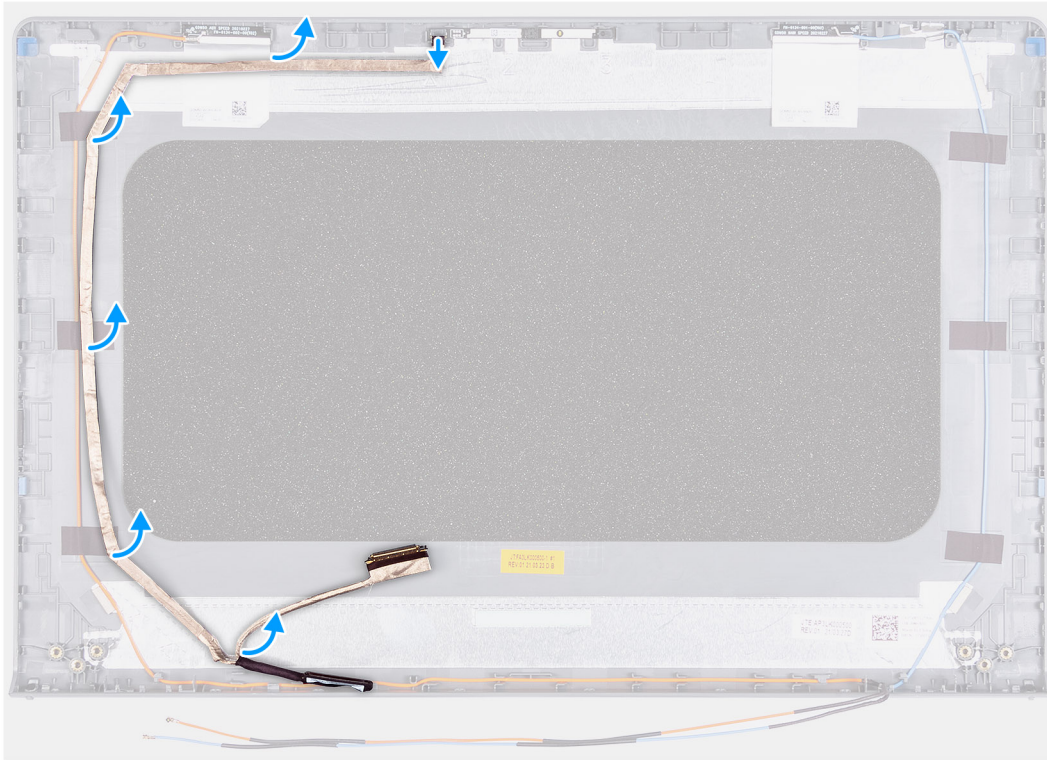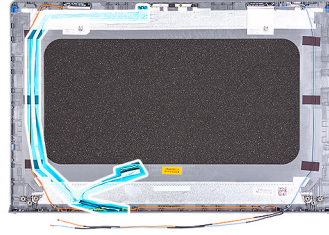

Steps

1. Disconnect the eDP cable from the camera module.
2. Carefully peel the eDP cable from the display back-cover.

Identifier	GUID-2629D2DF-0728-4258-B43E-E9A085D8CF91
Version	2
Status	Released



Installing the eDP cable

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the eDP cable and provides a visual representation of the installation procedure.

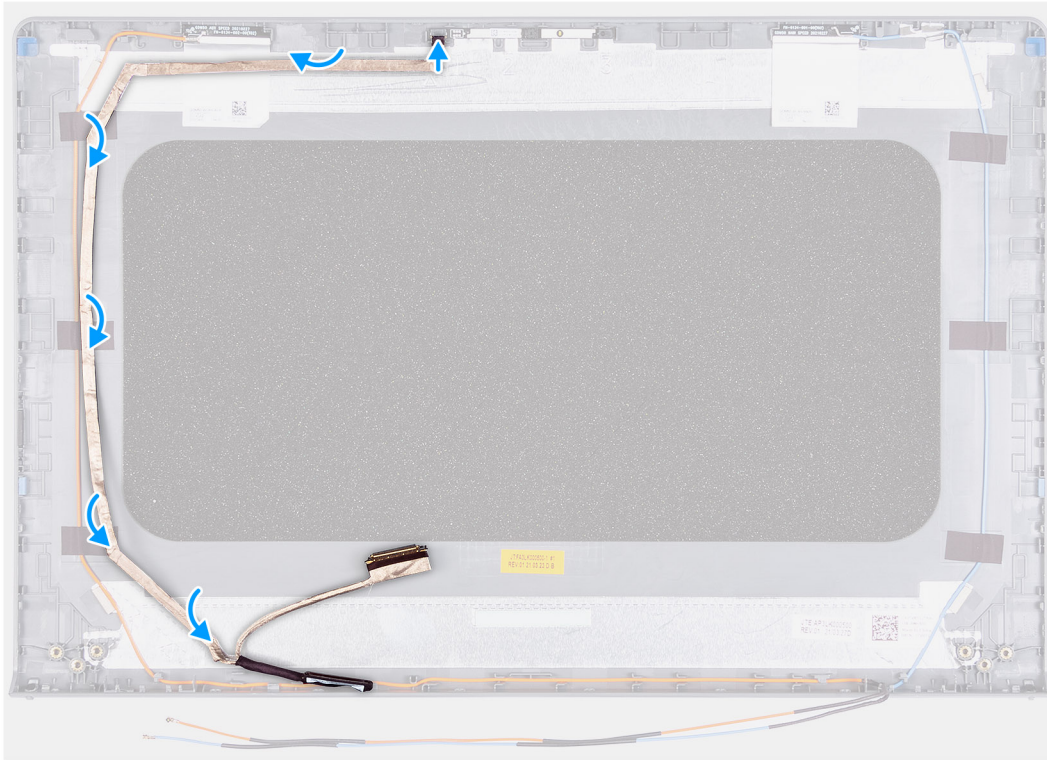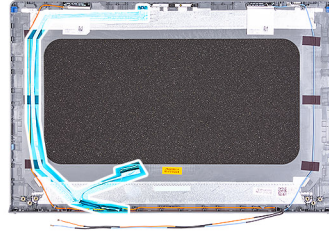

Steps

1. Adhere the eDP cable to the display back cover.
2. Connect the eDP cable to the camera module.

Next steps

1. Install the [display panel](#).
2. Install the [display bezel](#).
3. Install the [hinge caps](#).
4. Install the [display assembly](#).
5. Install the [WLAN card](#).
6. Install the [base cover](#).
7. Exit [service mode](#).
8. Install the [SD card](#).
9. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-9C88CC1C-B5E3-4440-A4C5-9BC4E1A5A27A
Version	1
Status	Released

Display back-cover

Identifier	GUID-8F6543A8-25BD-4DA3-AC1D-4A651CA9E52D
Version	2
Status	Released

Removing the display back-cover

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [WLAN card](#).
6. Remove the [display assembly](#).
7. Remove the [hinge caps](#).
8. Remove the [display bezel](#).
9. Remove the [display panel](#).
10. Remove the [camera](#).

About this task

The following images indicate the location of the display back-cover and provides a visual representation of the removal procedure.



Steps

After performing all the preceding steps, you are left with the display back-cover.

Identifier	GUID-01B769B6-556D-4B41-A29A-A31790720E9B
Version	2
Status	Released

Installing the display back-cover

About this task

The following images indicate the location of the display back-cover and provides a visual representation of the installation procedure.



Steps

Place the display back-cover on a clean surface and perform the post-requisites to install the display back-cover.

Next steps

1. Install the [camera](#).
2. Install the [display panel](#).
3. Install the [display bezel](#).
4. Install the [hinge caps](#).
5. Install the [display assembly](#).
6. Install the [WLAN card](#).
7. Install the [base cover](#).
8. Exit [service mode](#).
9. Install the [SD card](#).
10. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-E321A5CC-D2B7-43DD-AE2B-6520F1A4D253
Version	2
Status	Released

Power button

Identifier	GUID-8E0B1A32-F4CA-40DF-AFF5-7A315CA6A9BB
Version	2
Status	Released

Removing the power button

Prerequisites




1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [IO board](#).

About this task

The following images indicate the location of the power button and provides a visual representation of the removal procedure.



1x
M2x2

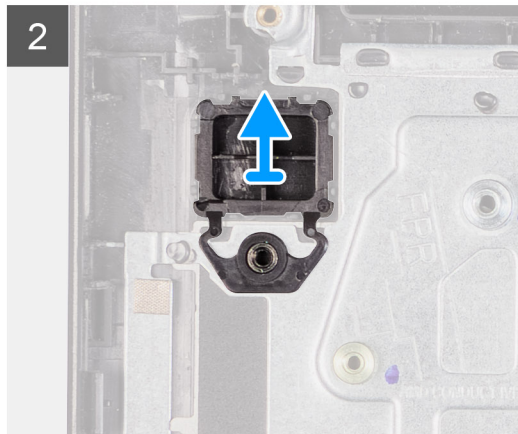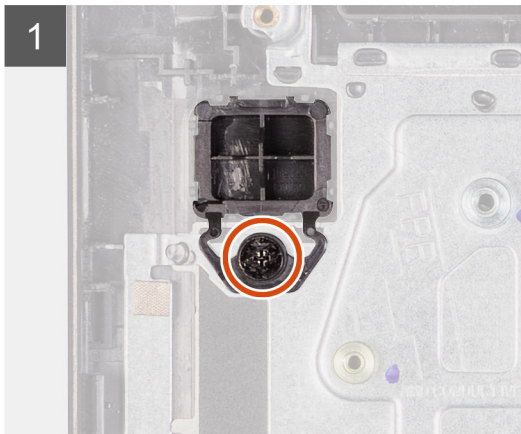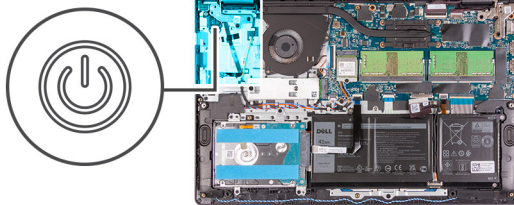

Steps

1. Remove the single (M2x2) screws securing the power button to the palm-rest and keyboard assembly.
2. Remove the power button from the computer.

Identifier	GUID-8F211227-8E39-41E1-90E9-46987EEAE1BC
Version	2
Status	Released

Installing the power button

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the power button and provides a visual representation of the installation procedure.



1x
M2x2

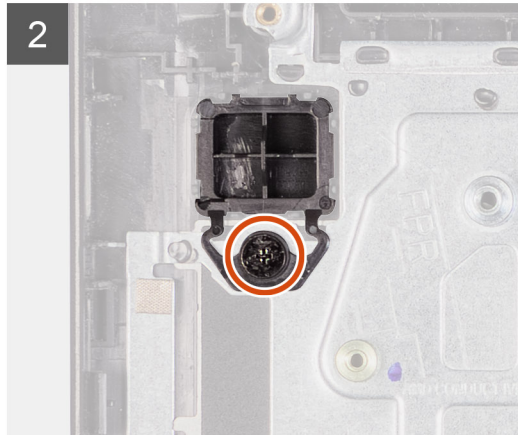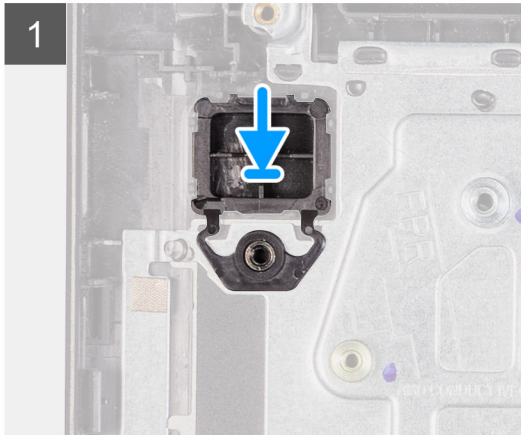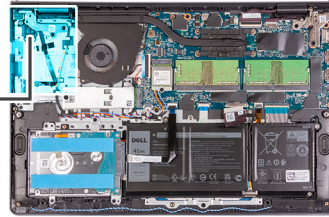

Steps

1. Place the power-button board into the slot on the palm-rest and keyboard assembly.
2. Install the single (M2x2) screws to secure the power button to the palm-rest and keyboard assembly.

Next steps

1. Install the [IO board](#).
2. Install the [base cover](#).
3. Exit [service mode](#).
4. Install the [SD card](#).
5. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-11E60957-8E30-4FF4-BCE8-2D0704097922
Version	1
Status	Released

Power button with fingerprint reader

Identifier	GUID-8A88368B-9BFE-4D50-AD33-FE226109042A
Version	1
Status	Released


Removing the power-button with fingerprint reader

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).
5. Remove the [IO board](#).

About this task

The following images indicate the location of the power-button with fingerprint reader and provides a visual representation of the removal procedure.

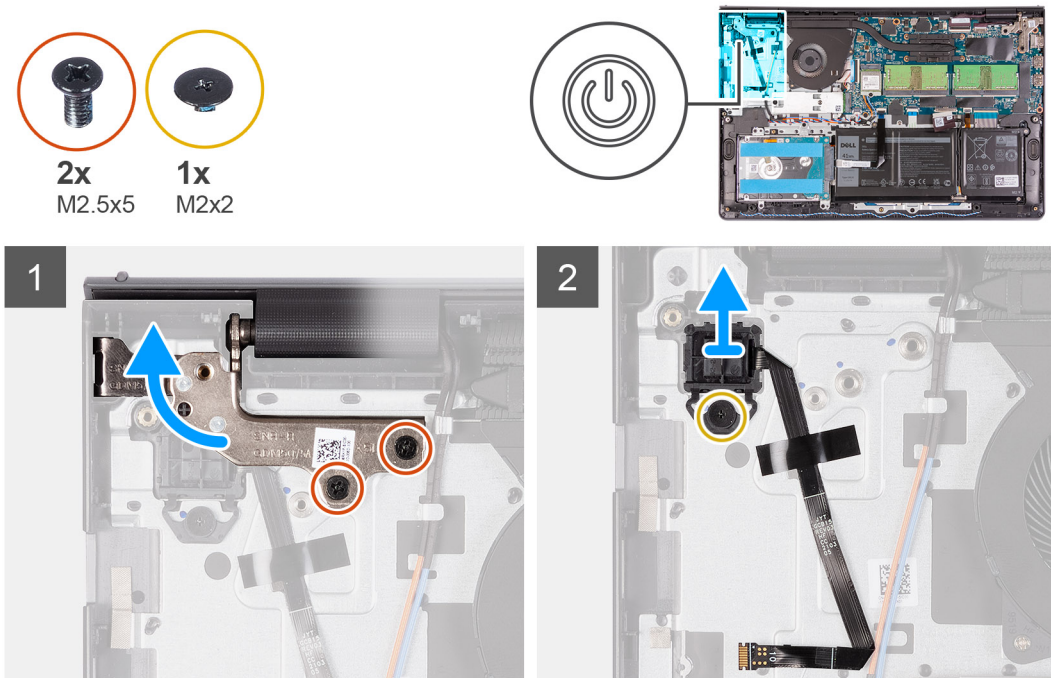

Steps

1. Remove the two (M2.5x5) screws securing the left hinge to the palm-rest and keyboard assembly.
2. Fold back the hinge to access the power-button with fingerprint reader.
3. Remove the single (M2x3) screw securing the power-button with fingerprint reader to the palm-rest and keyboard assembly.
4. Peel back the tape holding the fingerprint-reader FFC to the palm-rest and keyboard assembly.
5. Remove the power-button with fingerprint reader and FFC from the computer.

Identifier	GUID-F91E0F4B-273F-4FF2-BFAB-9AC0157DDD3C
Version	1
Status	Released




Installing the power-button with fingerprint reader

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the power-button with fingerprint reader and provides a visual representation of the installation procedure.

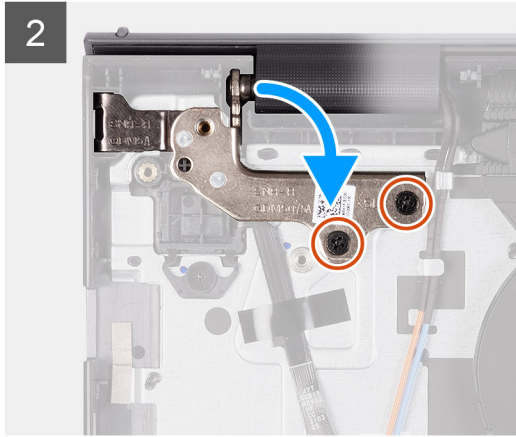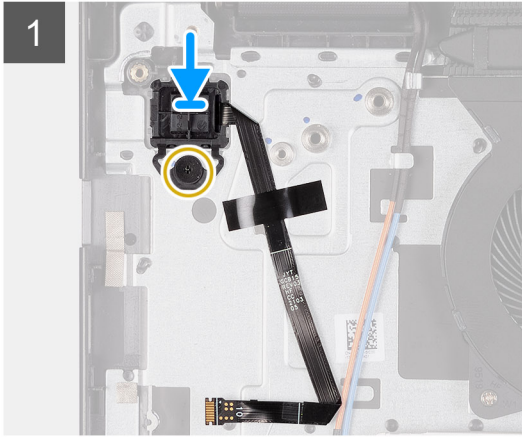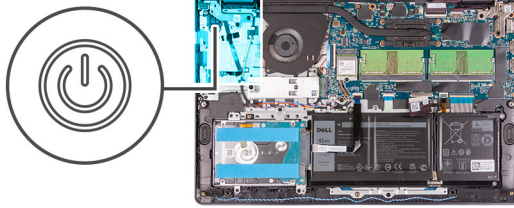


Steps

1. Place the power-button with fingerprint reader into the slot on the palm-rest and keyboard assembly.
2. Install the single (M2x2) screws to secure the power-button with fingerprint reader to the palm-rest and keyboard assembly.

i NOTE:

For models shipped with a fingerprint reader, when installing the power-button, fold and align the fingerprint-reader FPC to the mark at the right of the power button. Then align the white line on the FPC to the mark on the palm rest.

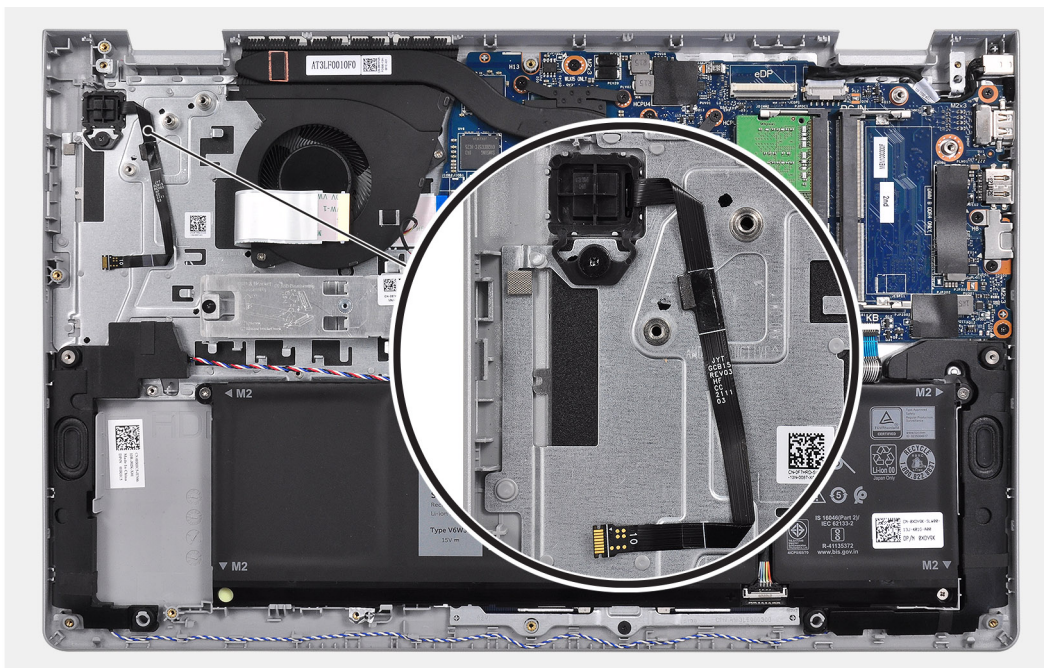

3. Re-adhere the tape to secure the fingerprint-reader FPC to the palm-rest and keyboard assembly.
4. Fold back the left hinge and install two single (M2.5x5) screws to secure the hinge to the palm-rest and keyboard assembly.

Next steps

1. Install the [IO board](#).
2. Install the [base cover](#).
3. Exit [service mode](#).
4. Install the [SD card](#).
5. Follow the procedure in [after working inside your computer](#).


Identifier	GUID-46B53388-5C4F-4861-92E0-6AE357EE9CBF
Version	3
Status	Released

System board

Identifier	GUID-B3A6995B-BEEB-4B07-9C5A-9B99F4511271
Version	1
Status	Released

System board connectors

The following image shows the different connectors on the system board.

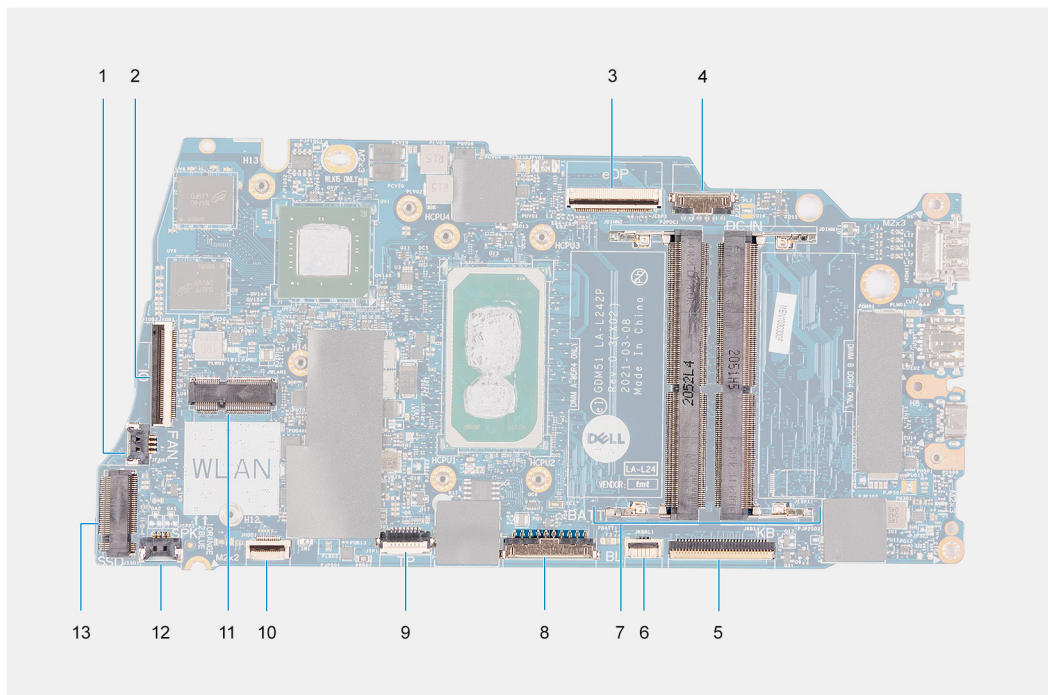


1. Fan connector
2. IO board FFC connector
3. eDP connector
4. DC-in port connector
5. Keyboard FFC connector
6. Backlit FFC connector
7. Memory module connectors
8. Battery connector
9. Touchpad FFC connector
10. Hard-drive FFC connector
11. WLAN connector
12. Speaker cable connector
13. SSD connector

Identifier	GUID-FED71875-D1AC-494D-812A-8CB7F8AA8C2B
Version	4
Status	Released

Removing the system board




Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [WLAN card](#).
6. Remove the [memory modules](#)
7. Remove the [display assembly](#).
8. Remove the [SSD](#).
9. Remove the [system fan](#).
10. Remove the [heatsink](#).

 **NOTE:** The system board can be removed along with the heat sink.

About this task

The following images indicate the location of the system board and provides a visual representation of the removal procedure.

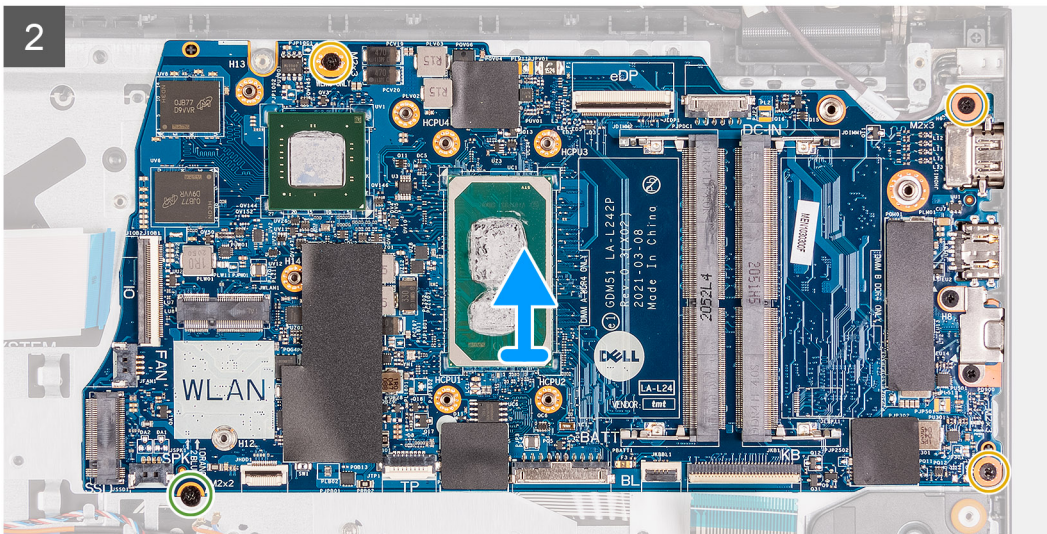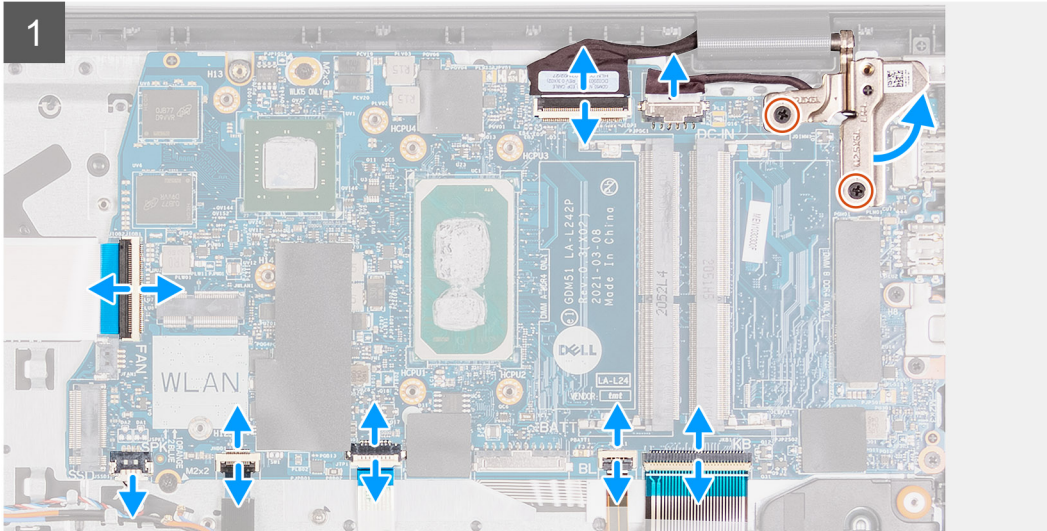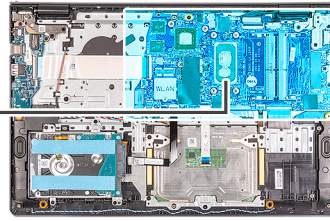

Steps

1. Remove the two (M2.5x5) screws from the right hinge and fold the right hinge up.
2. Disconnect the following cables from the system board:
 - a. Fan cable
 - b. IO board FFC
 - c. Power- adapter port cable
 - d. Fingerprint-reader cable, if applicable
 - e. Keyboard FFC
 - f. Keyboard backlight FFC, if applicable
 - g. Touchpad FFC
 - h. Hard drive FFC
 - i. Speaker cable
3. Remove the three (M2x3) screws and the single (M2x2) screw that secures the system board to the palm-rest and keyboard assembly.

4. Carefully lift the system board away from the palm-rest and keyboard assembly.

Identifier	GUID-823DF06B-62F1-42F5-B7AA-B3C1400B2E68
Version	3
Status	Released




Installing the system board

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the system board and provides a visual representation of the installation procedure.

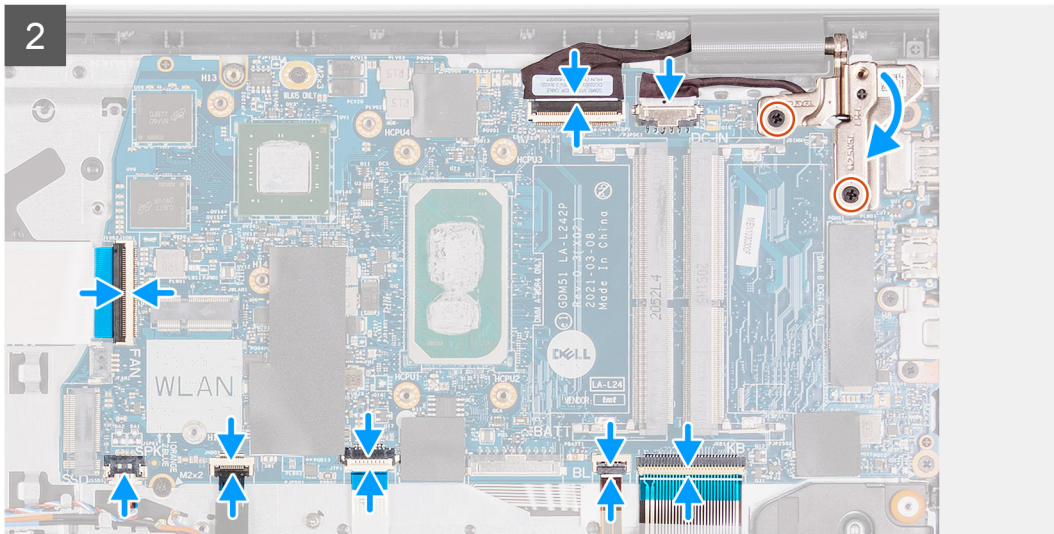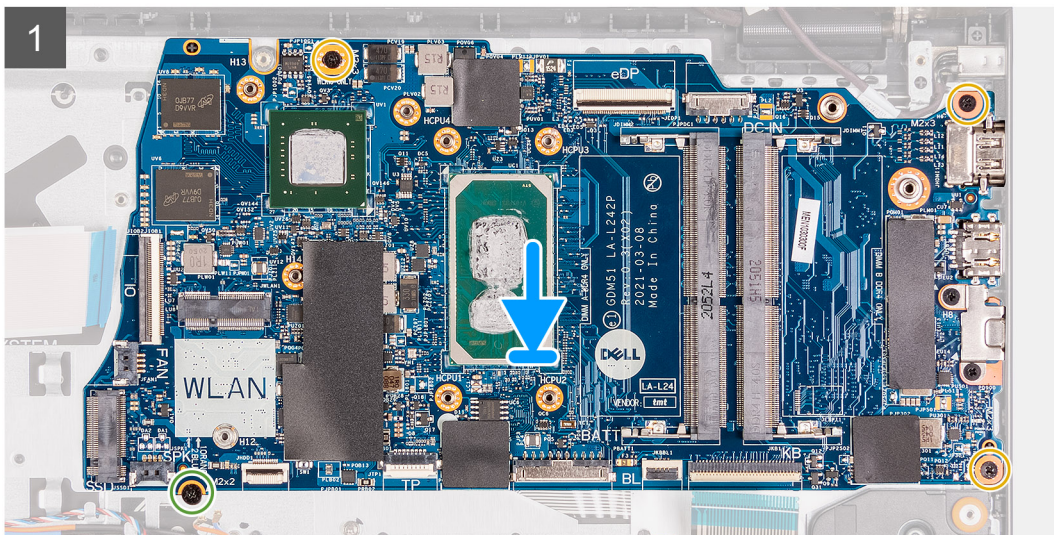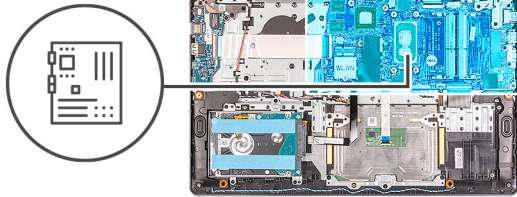

Steps

1. Align and place the system board on the palm-rest and keyboard assembly.
2. Replace the single (M2x4) screw that secures the system board to the palm-rest and keyboard assembly.
3. Connect the following cables to the system board:
 - a. Fan cable
 - b. IO board FFC
 - c. Power-adaptor port cable
 - d. Fingerprint-reader cable, if applicable
 - e. Keyboard FFC
 - f. Keyboard backlight FFC, if applicable
 - g. Touchpad FFC
 - h. Hard drive FFC
 - i. Speaker cable
4. Fold back the right hinge and install the two (M2.5x5) screws to secure it to the palm-rest and keyboard assembly.

Next steps

1. Install the [display assembly](#).
2. Install the [heatsink](#).
3. Install the [system fan](#).
4. Install the [memory modules](#).
5. Install the [SSD](#).
6. Install the [WLAN card](#).
7. Install the [battery](#).
8. Install the [base cover](#).
9. Install the [SD card](#).
10. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-FCFD0001-7CDA-44E5-ACBB-F3DB60FC0CFF
Version	1
Status	Translation approved

Puerto del adaptador de alimentación

Identifier	GUID-4AD1EC73-E8D2-4CDE-9F88-56E7FCC23720
Version	2
Status	Released

Removing the power-adaptor port

Prerequisites




1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Enter [service mode](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the power-adaptor port and provides a visual representation of the installation procedure.



2x
M2.5x5

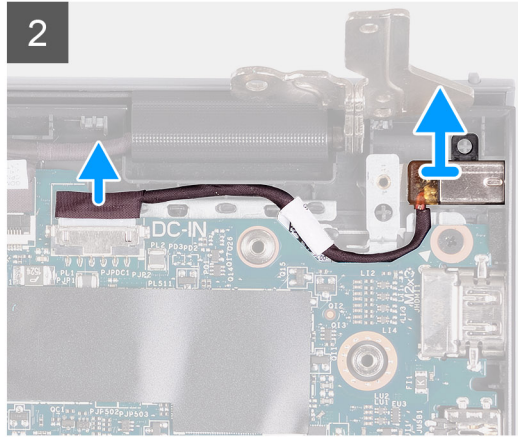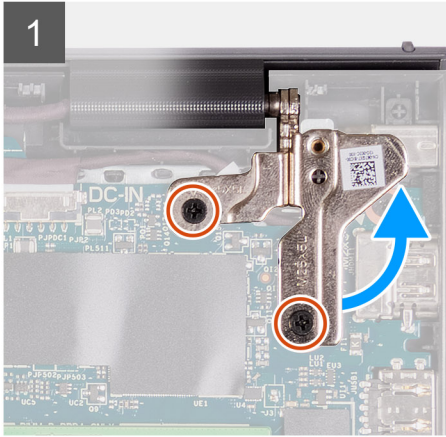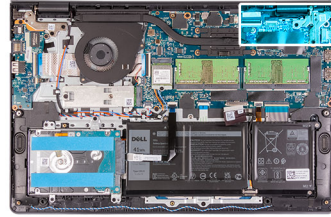

Steps

1. Remove the two (M2.5x5) screws from the right hinge and fold the hinge up.
2. Disconnect the power-adapter port cable from the system board.
3. Remove the power-adapter port module from the computer.

NOTE: The power-adapter port is secured in place only by the right display hinge. Ensure that the power-adapter port does not fall off from the slot after the right hinge is removed.

Identifier	GUID-62F0E44E-F849-4B22-B454-5F97E27B0580
Version	3
Status	Released

Installing the power-adapter port

Prerequisites




If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the power-adapter port and provides a visual representation of the installation procedure.



2x
M2.5x5

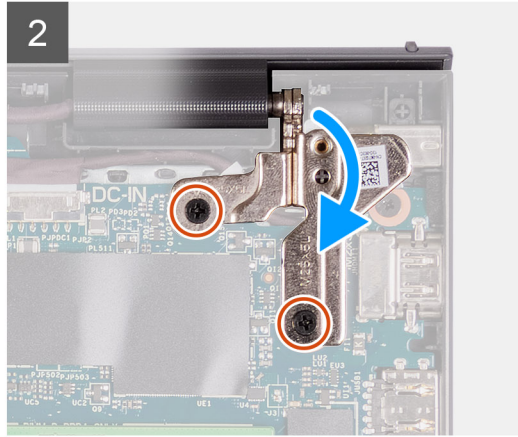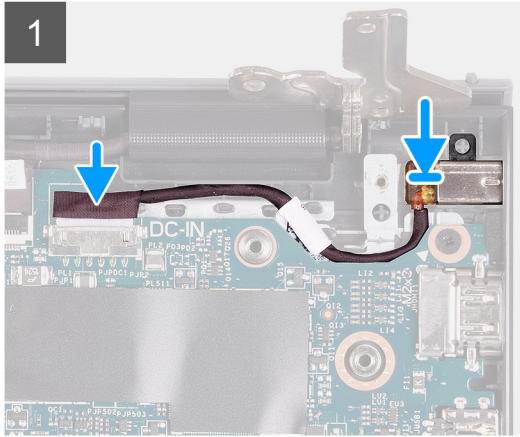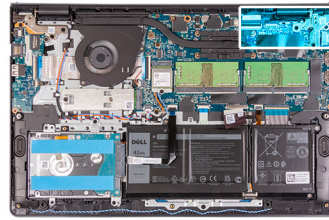

Steps

1. Place the power adapter port module into the slot provided on the palmrest.
2. Connect the power adapter cable to the connector on the system board.
3. Fold the right hinge back down and install the two (M2.5x5) screws to secure it.

Next steps

1. Install the [base cover](#).
2. Exit [service mode](#).
3. Install the [SD card](#).
4. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-4AAEA62D-3F30-4E6E-ADEC-AD46B79B8EA6
Version	2
Status	Released

Palm-rest and keyboard assembly

Identifier	GUID-A1545F69-50A9-4521-8BBC-A0B6FAF48B55
Version	5
Status	Released

Removing the palm-rest and keyboard assembly


Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [SD card](#).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [WLAN card](#).
6. Remove the [memory modules](#)
7. Remove the [display assembly](#).
8. Remove the [SSD](#).
9. Remove the [hard drive assembly](#).

10. Remove the [speakers](#).
 11. Remove the [system fan](#).
 12. Remove the [heatsink](#).
- i** **NOTE:** The system board can be removed along with the heat sink.
13. Remove the [IO board](#).
 14. Remove the [touchpad](#).
 15. Remove the [power adapter port](#).
 16. Remove the [system board](#).

About this task

The following images indicate the location of the palm-rest and keyboard assembly, and provides a visual representation of the installation procedure.

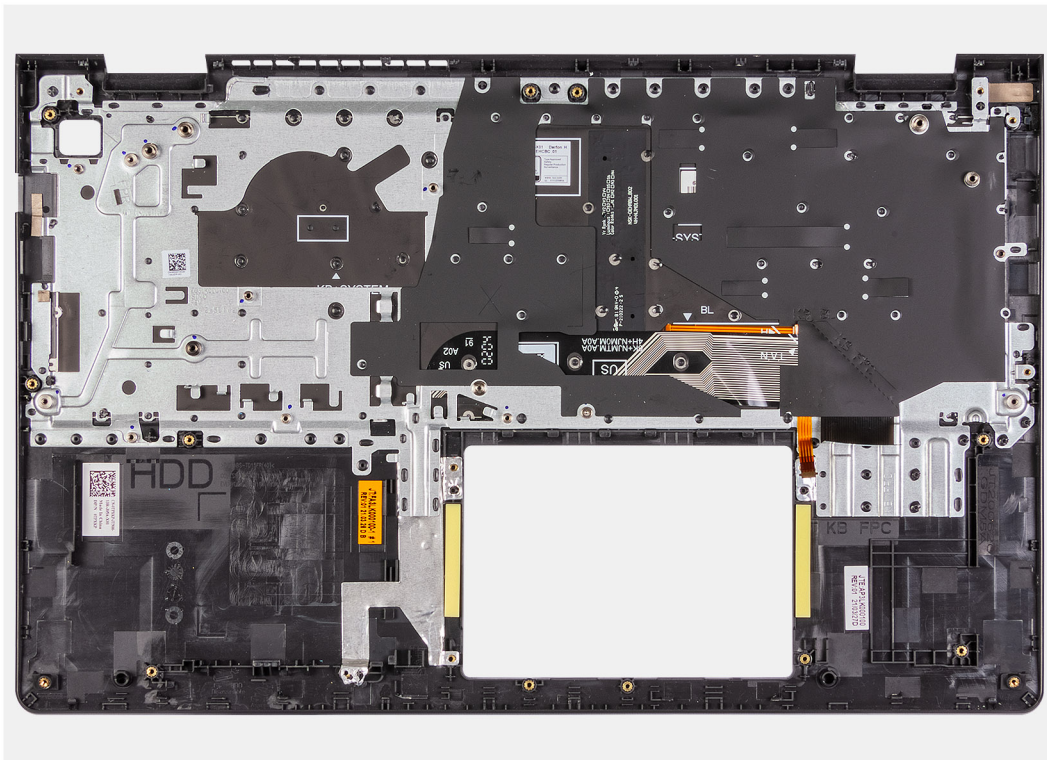

Steps

After performing the preceding steps, you are left with the palmrest and keyboard assembly.

Identifier	GUID-60074714-9B1D-41D7-8A0A-2A6CB8104C2F
Version	2
Status	Released


Installing the palm-rest and keyboard assembly

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the palm-rest and keyboard assembly and provides a visual representation of the installation procedure.

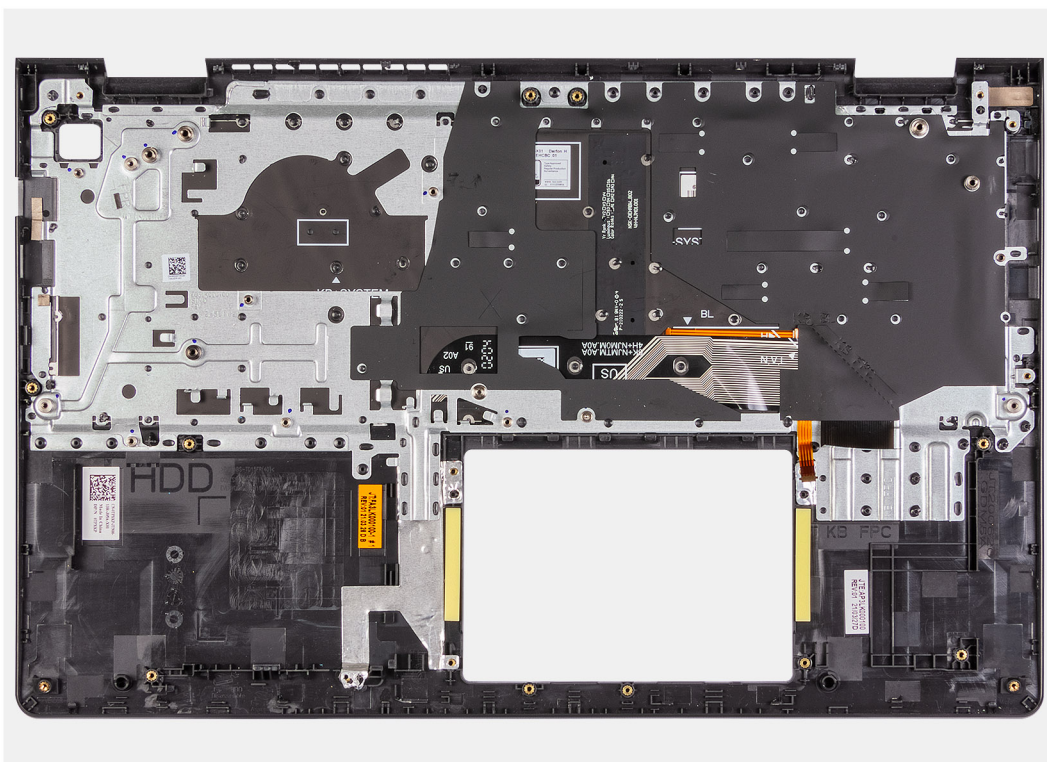

Steps

Place the palm-rest and keyboard assembly on a flat and clean surface, and perform the post-requisites to install the palm-rest and keyboard assembly.

Next steps

1. Install the [system board](#).
2. Install the [power adapter port](#).
3. Install the [touchpad](#).
4. Install the [IO board](#).
5. Install the [heatsink](#).
6. Install the [system fan](#).
7. Install the [speakers](#).
8. Install the [hard drive assembly](#).
9. Install the [SSD](#).
10. Install the [display assembly](#).
11. Install the [memory modules](#)
12. Install the [WLAN card](#).
13. Install the [battery](#).
14. Install the [base cover](#).
15. Install the [SD card](#).
16. Follow the procedure in [after working inside your computer](#).

Identifier	GUID-152952A6-25D8-48F6-BFF0-F3B919EC4DD4
Version	1
Status	Released

Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell knowledge base article, [Drivers and Downloads FAQs](#) .

Identifier	GUID-E4ECAEC1-C84B-4228-B42A-B0494DD7A52D
Version	1
Status	Released

System setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Identifier	GUID-DACDEF92-BD0F-40C4-B280-5E81EB67A4C5
Version	1
Status	Released

Entering BIOS setup program

Steps

1. Turn on your computer.
2. Press F2 immediately to enter the BIOS setup program.

NOTE: If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

Identifier	GUID-F448DD64-1B07-4857-A446-42E313A39CC8
Version	1
Status	Released


Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Table 3. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.


Table 3. Navigation keys (continued)

Keys	Navigation
	 NOTE: For the standard graphics browser only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.



Identifier	GUID-0D05909C-7482-417D-9DB5-D0428BE01738
Version	1
Status	Released

One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F2 immediately.

 **NOTE:** It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:


- Removable Drive (if available)
- STXXXX Drive (if available)
 **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics
 **NOTE:** Choosing **Diagnostics**, will display the **ePSA diagnostics** screen.

The boot sequence screen also displays the option to access the System Setup screen.


Identifier	GUID-71DA763A-3F2F-4021-8EF7-3E50DA009C74
Version	3
Status	Released

One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F12 immediately.

 **NOTE:** It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
 **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

Identifier	GUID-C50BED7F-226B-4768-AB61-9725153DF132
Version	4
Status	Released

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)
 - **NOTE:** XXX denotes the SATA drive number.
- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The boot sequence screen also displays the option to access the System Setup screen.

Identifier	GUID-7A7EB30A-4A48-422B-AE30-B8DC236A1790
Version	11
Status	To be translated

Navigation keys

NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Identifier	GUID-22F54611-5ECB-4255-BCBA-659103F7762D
Version	1
Status	Released

System setup options

NOTE: Depending on the laptop and its installed devices, the items listed in this section may or may not appear.

Identifier	GUID-A1626D23-95BC-4A0B-A660-C4537797F1AD
Version	1
Status	Released

Boot menu

Press <F12> when the Dell logo appears to initiate a one-time boot menu with a list of the valid boot devices for the system. Diagnostics and BIOS Setup options are also included in this menu. The devices that are listed on the boot menu depend on the

bootable devices in the system. This menu is useful when you are attempting to boot to a particular device or to bring up the diagnostics for the system. Using the boot menu does not make any changes to the boot order stored in the BIOS.

Table 4. UEFI Boot options

Options
Windows Boot Manager
UEFI hard drive

Table 5. Other Options

Options	Description
BIOS SETUP	Allows the user to configure the BIOS and control system functions
Diagnostics	Allows the user to run system tests to identify issues
BIOS Update	Allows the user to search and install the latest BIOS updates
SupportAssist OS Recovery	Used to analyze, repair, and restore the operating system on the system
BIOS Flash Update - Remote	
Device Configuration	

Identifier	GUID-9183956D-9BE6-40A4-9810-D41295C183F6
Version	1
Status	Released

Overview

This section provides hardware specification for the system and contains no modifiable settings.

Table 6. BIOS Overview Page

Options	Description
Series and system model number	<p>This field shows the following information:</p> <ul style="list-style-type: none"> • BIOS Version - The version of the BIOS installed on the computer. • Service tag - The unique 7 digit hexadecimal identification number for the computer. • Asset tag • Manufacture Date - The date for when the unit was manufactured. • Ownership Date - The date for when the unit's ownership was transferred to the end user. • Express Service Code - An alternative to Service Tag, 11-digit numerical identification number for the computer. • Ownership Tag • Signed Firmware Update - This helps to verify that only Dell Signed and released BIOS can be installed on the computer.
Battery	<p>The Battery field provides battery and adapter related information:</p> <ul style="list-style-type: none"> • Primary battery - This helps identify if the system is running on the primary battery. • Battery level - This gives the percentage of battery backup remaining for the computer.

Table 6. BIOS Overview Page (continued)

Options	Description
	<ul style="list-style-type: none"> ● Battery state - This helps identify if the battery is in charging or active use state. ● Health - This helps identify the health of the battery. It would show one of the following states based on the battery life remaining: <ul style="list-style-type: none"> ○ Excellent ○ Good ○ Fair ○ Poor ● AC Adapter - This helps identify if the charger is plugged in and mentions the wattage of the charger connected.
Processor	<p>The Processor field provides information related to the CPU on the computer:</p> <ul style="list-style-type: none"> ● Processor Type - This field mentions the CPU model and generation information. ● Maximum Clock Speed - This field mentions the maximum clock speed that the CPU is capable of reaching. ● Minimum Clock Speed - This field mentions the minimum clock speed that the CPU is capable of reaching. ● Current Clock Speed - This field mentions the clock speed that the CPU is running at currently. ● Core Count - This field gives the count of the physical cores on the CPU. ● Processor ID ● Processor L3 Cache - This field shows the amount of cache storage available on the CPU. ● Microcode Version ● Intel Hyper-Threading Capable - This field helps identify if the CPU is capable of Hyper-Threading. ● 64-bit Technology - This field helps identify the CPU architecture.
Memory	<p>The Memory field provides information related to the memory on the computer:</p> <ul style="list-style-type: none"> ● Memory Installed - This field gives the amount of memory installed on the computer. ● Memory Available - This field gives the amount of memory available for use on the computer. ● Memory Speed - This field mentions the speed at which the memory runs on the computer. ● Memory Channel Mode - This field helps us identify if the computer has Dual-Channel memory utilization capability. ● DIMM_SLOT 1 - This field shows the capacity of the memory installed in the first DIMM slot. ● DIMM_SLOT 2 - This field shows the capacity of the memory installed in the second DIMM slot.
Devices	<p>The Devices field provides information related to the memory on the computer:</p> <ul style="list-style-type: none"> ● Panel Type - This field mentions the type of display panel used on the computer. ● Video controller - This field mentions the type of video controller used on the computer. ● Video Memory - This field gives the capacity of the video memory available for use on the computer.

Table 6. BIOS Overview Page (continued)

Options	Description
	<ul style="list-style-type: none"> ● Wi-Fi Device - This field mentions the type of wireless device available for use on the computer. ● Native Resolution - This field mentions the native video resolution supported on the computer. ● Video BIOS Version - The version of the BIOS installed on the computer. ● Audio Controller - This field mentions the type of audio controller used on the computer. ● Bluetooth Device - This field mentions the type of Bluetooth device available for use on the computer. ● LOM MAC Address - This field provides the unique MAC address for the computer. ● Pass Through MAC Address - This field provides the MAC address used to override the dock or dongle MAC address every time it's connected to the network.

Identifier	GUID-9B9683CF-C7D1-4A7E-8C52-AC9A52E1FB1A
Version	1
Status	Released

Boot Configuration

This section provides Boot Configuration related details and settings.

Table 7. Boot Configuration:

Options	Description
Boot Sequence	
Boot Mode: UEFI only	<p>This section allows the user to choose the first bootable device that the computer should use to boot the system. It lists all potential bootable devices.</p> <ul style="list-style-type: none"> ● Windows Boot Manager (Enabled by default) ● UEFI Boot Drive (Enabled by default) ● ONBOARD NIC(IPV4) ● ONBOARD NIC(IPV5) ● Add Boot option - Allows the user to manually add a Boot path.
Secure Boot	
Enable Secure Boot	<p>This section contains a toggle switch that allows the user to enable or disable Secure Boot. (OFF by default)</p>
Secure Boot Mode	<p>This section allows the user to select one of the two Secure Boot options available on the computer:</p> <ul style="list-style-type: none"> ● Deployed Mode - This mode checks the integrity of UEFI drivers and bootloaders before allowing execution. This option allows for full Secure Boot protections (Enabled by default.) ● Audit Mode - This mode performs a signature check but never does a block execution of all UEFI drivers and bootloaders. This mode is only used when making changes to Secure Boot Keys.
Expert Key Management	

Table 7. Boot Configuration: (continued)

Options	Description
Enable Custom Mode	This section contains a toggle switch that allows the user to enable or disable Custom Mode. This mode allows the PK, KEK, db and dbx security key databases to be manipulated. (OFF by default)
Custom Mode Key Management	This section helps the user to select the Key Database to allow modification. The options available are as below: <ul style="list-style-type: none"> ● PK (Selected by default) ● KEK ● db ● dbx

Identifier	GUID-D0E7F9E8-E09E-4961-BA6B-B1DC634DE565
Version	1
Status	Released

Integrated Devices

This section provides Integrated Devices details and settings.

Table 8. Integrated Devices

Options	Description
Date/Time	
Date	This section allows the user to change the date which takes effect immediately. The format used is MM/DD/YYYY
Time	This section allows the user to change the time which takes effect immediately. The format used is HH/MM/SS in 24 hour format. The user also has an option to switch between 12-hours or 24-hours clock.
Camera	
Enable Camera	This section contains a toggle switch that allows the user to enables/disable the internal webcam (Enabled by default).
Audio	
Enable Audio	This section contains a toggle switch that allows the user to enable or disable the audio on the computer. It also allows the user to: <ul style="list-style-type: none"> ● Enable Microphone (Enabled by default.) ● Enable Internal Speakers (Enabled by default.)
USB Configuration	This section helps the user to make changes to the USB settings on the computer. The options available are as follows: <ul style="list-style-type: none"> ● Enable USB Boot Support - Allows the system to boot from an external USB device (Enabled by default.) ● Enable External USB Ports - Allows the user to enable or disable the USB ports on the computer (Enabled by default)

Identifier	GUID-48D13F19-3118-4653-85DA-6D56E4B377CB
Version	1
Status	Released

Storage

This section provides storage details and settings.

Table 9. Storage

Options	Description
SATA Operation	
SATA Operation	This section allows the user to select the operating mode of the integrated SATA hard drive controller. The following options are available: <ul style="list-style-type: none"> • Disabled - SATA controllers are disabled. • AHCI - SATA is configured in AHCI mode. • RAID On - SATA is setup to support RAID (Intel Rapid Storage Technology). (Selected by default)
Storage Interface	
Port Enablement	This section allows the user to enable or disable the onboard drives on the computer. The following options is available: <ul style="list-style-type: none"> • M.2 PCIe SSD-0 (ON by default) • SATA-0 (ON by default)
SMART Reporting	
Enable SMART Reporting	This section contains a toggle switch that allows the user to enable or disable the S.M.A.R.T(Self-Monitoring, Analysis, and Reporting Technology) option on the system (OFF by default).
Drive Information	This section provides information about the connected and active drives on the computer. The following options are available: <ul style="list-style-type: none"> • M.2 PCIe SSD-0 <ul style="list-style-type: none"> ○ Type ○ Device
Enable MediaCard	This section allows the user to switch all media cards On/Off, or enable/disable the media card in read-state only. The options are as follows: <ul style="list-style-type: none"> • Secure Digital (SD) Card (Enabled by default). • Secure Digital (SD) Card Read-Only Mode (Disabled by default).

Identifier	GUID-D5B39DD1-26EC-4ABB-A92E-5F430855F863
Version	1
Status	Released

Display

This section provides display details and settings.

Table 10. Display

Options	Description
Display Brightness	

Table 10. Display (continued)

Options	Description
Brightness on battery power	This section has a scroll bar which allows the user to set the brightness level on battery power (lowest setting by default).
Brightness on AC power	This section has a scroll bar which allows the user to set the brightness level when system is connected to the AC adapter (highest setting by default).
EcoPower	This section contains a toggle switch which allows the user to enable/disable EcoPower feature that can increase the battery life by reducing the display brightness when appropriate.
Full Screen Logo	
Full Screen Logo	This section contains a toggle switch which allows the user to enable/disable the option to view a full screen logo (disabled by default).

Identifier	GUID-2BBE8425-E973-4C17-8E90-7D4955B31439
Version	1
Status	Released

Connection

This section provides connection details and settings.

Table 11. Connection

Options	Description
Integrated NIC	This section contains options to enable/disable the UEFI networking protocols, allowing pre-OS and early OS networking features to use any enabled NICs. The options are as follows: <ul style="list-style-type: none"> • Disabled • Enabled • Enabled with PXE(Selected by default)
Wireless Device Enable	This section contains a toggle switch that allows the user to enable or disable WLAN and Bluetooth on the computer. The options are as follows: <ul style="list-style-type: none"> • WLAN (Enabled by default). • Bluetooth (Enabled by default).
Enable UEFI Network Stack	This section contains a toggle switch that allows the user to enable or disable installation of UEFI networking protocols. (ON by default)
Wireless Radio Control	This section contains a toggle switch that allows the user to enable or disable a feature where the system will sense a connection to a wired network and disable the WLAN or WWAN connection (OFF by default).

Identifier	GUID-78BBA38E-1FEF-456D-89AA-475138D02750
Version	1
Status	Released

Power

This section provides power details and settings.

Table 12. Power

Options	Description
Battery configuration	<p>This section provides options to enable different power modes on the computer. The options are as follows:</p> <ul style="list-style-type: none"> ● Adaptive - battery settings are adaptively optimized based on the users typical battery usage patterns (selected by default). ● Standard - Fully charge the battery at a standard rate. ● ExpressCharge - The battery may be charged over a shorter period using Dell's fast charging technology. ● Primarily AC use - The battery lifespan for users who primarily operate their system while plugged in to an external power source. ● Custom - Custom select when the battery starts and stops charging. <ul style="list-style-type: none"> ○ Custom Charge Start ○ Custom Charge Stop
Advanced Configuration	
Enable Advanced Battery Charge Configuration	<p>This feature maximizes battery health while still supporting heavy use during the work day. The section contains a toggle switch that allows the user to enable or disable this feature and set the daily times and work time periods (OFF by default).</p>
Peak Shift	<p>This feature allows the computer to run on battery during peak usage hours. The section contains a toggle switch that allows the user to enable or disable this feature and set the Peak Shift Start/End times and Peak Shift Charge Start/End (OFF by default).</p>
USB PowerShare	<p>This setting contains a toggle switch which allows the user to enable or disable this feature. It allows for any external USB devices to charge via the designated USB PowerShare port, even when the computer is on sleep mode (ON by default).</p>
Thermal Management	<p>This setting allows for cooling fan and processor heat management to adjust system performance, noise and temperature. The options available are as below:</p> <ul style="list-style-type: none"> ● Optimized - Standard setting for cooling fan and processor heat management (selected by default). ● Cool - Processor and cooling fan speed are adjusted for a cooler system surface temperature. ● Quiet - Processor and cooling fan speed are adjusted to reduce fan noise. ● Ultra Performance - Processor and cooling fan speed are increased for more performance.
USB Wake Support	
Block Sleep	

Table 12. Power (continued)

Options	Description
Block Sleep	This section contains a toggle switch to allow the user to enable or disable the system from entering Sleep(S3) mode in the operating system (OFF by default). NOTE: When enabled, it will not allow the system to go to sleep, IRST is disabled and power options in the operating system will be blank.
LID Switch	
Enable Lid Switch	This section contains a toggle switch to allow the user to enable or disable the lid switch (ON by default).
Power On Lid Open	This section contains a toggle switch to allow the user to enable or disable the system from powering on when the lid is open (ON by default).
Intel Speed Shift Technology	
Intel Speed Shift Technology	This section contains a toggle switch to allow the user to enable or disable Intel Speed Shift Technology support. This feature enables the operating system to select appropriate processor performance automatically (ON by default).

Identifier	GUID-2C76A2B8-E3C1-49E5-AA89-3924B86C1538
Version	1
Status	Released

Security

This section provides security details and settings.

Table 13. Security

Options	Description
TPM 2.0 Security	
TPM 2.0 Security On	This section contains a toggle switch to select whether Trusted Platform Module(TPM) is visible to the Operating System(OS). (ON by default)
Attestation Enable	This section contains a toggle switch which lets the user control whether the TPM Endorsement Hierarchy is available to the operating system (OFF by default).
Key Storage Enable	This section contains a toggle switch that allows the user to control whether TPM Storage Hierarchy is available to the operating system (ON by default).
SHA-256	This section contains a toggle switch that when enabled, allows the BIOS and the TPM to use the SHA-256 hash algorithm to extend measurements into the TPM PCRs during BIOS boot (ON by default).
Clear	This section contains a toggle switch which clears the TPM owner information, and returns the TPM to the default state (OFF by default).

Table 13. Security (continued)

Options	Description
PPI Bypass for Clear Commands	This section contains a toggle switch which controls the TPM Physical Presence Interface(PPI). When enabled, this setting will allow the OS to skip BIOS PPI user prompts when issuing the clear command (OFF by default).
TPM State	This section allows the user to enable or disable the TPM. This is the default operating state for the TPM when you want to use its complete arrays of capabilities (enabled by default).
Intel Total Memory Encryption	
Total Memory Encryption(TME)	This section allows the user to enable/disable TME to protect memory from physical attacks including freeze spray, probing DDR to read the cycles etc. All of the system memory is encrypted by the TME block attached to the memory controller
Chassis Intrusion	
Chassis Intrusion	<p>This field controls the chassis intrusion feature</p> <ul style="list-style-type: none"> ● Disabled - Will not report intrusions during POST ● Enabled - Will report intrusions during POST ● On-silent - Detects intrusions but does not display any detected intrusions during POST (Selected by default)
Clear Intrusion Warning	This section contains a toggle switch to enable/disable warnings on intrusion (OFF by default).
SMM Security Mitigation	This section allows the user to enable or disable UEFI SMM security Mitigation protections (ON by default).
Data Wipe on Next Boot	
Start Data Wipe	This section contains toggle switch which when enabled ensures that the BIOS will queue up a data wipe cycle for storage device(s) connected to the system board on the next reboot (OFF by default).
Absolute	
Absolute	<p>This section lets the user enable, disable or permanently disable the BIOS module interface of the optional Absolute Persistence Module service from Absolute Software. The options available are as follows:</p> <ul style="list-style-type: none"> ● Enable Absolute - Enables Absolute Persistence and load the firmware Persistence Module (Selected by default) ● Disable Absolute - Disables Absolute Persistence. The firmware Persistence Module is not installed. ● Permanently Disable Absolute - Permanently disables Absolute Persistence module interface from further use.
UEFI Boot Path Security	
UEFI Boot Path Security	<p>This section lets the user control whether the system will prompt the user to enter the admin password(if set) when booting to a UEFI boot path device from F12 boot menu. The options available are as below:</p> <ul style="list-style-type: none"> ● Never ● Always ● Always Except Internal HDD (Selected by default)

Table 13. Security (continued)

Options	Description
	<ul style="list-style-type: none"> Always Except Internal HDD&PXE
SafeShutter	
SafeShutter	<p>This section allows the user to choose between dynamic and manual shutter control:</p> <ul style="list-style-type: none"> Dynamic Shutter - Camera shutter will automatically open when user grants application permission and close when permission ends. Can be disabled by using the F9 camera mute key(LED on). This is the default selected option. Manual Shutter Control - Shutter opens when F9 key is pressed(LED off) and closes when F9 key is pressed(LED on)

Identifier	GUID-C0017239-C0FE-44FC-8D30-C4A5AC50F891
Version	1
Status	Released

Passwords

This section provides details on password settings.

Table 14. Passwords

Options	Description
Admin Password	This field allows the user to set, change, or delete the administrator password.
System Password	This field allows the user to set, change, or delete the system password.
NVMe SSD0	This field allows the user to set, change, or delete the storage drive password.
Password Configurator	
Upper Case Letter	Enable or disable reinforced use of upper case letters (OFF by default).
Lower Case Letter	Enable or disable reinforced use of lower case letters (OFF by default).
Digit	Enable or disable reinforced use of at least one digit (OFF by default).
Special Character	Enable or disable reinforced use of at least one special character (OFF by default).
Minimum Character	Allows the user to select the number of characters allowed for a password (4 is the default value).
Password Bypass	
Password Bypass	<p>When enabled, this always prompts for system and internal hard drive passwords when powered on from Off state. Options available are as below:</p> <ul style="list-style-type: none"> Disabled (selected by default) Reboot Bypass

Table 14. Passwords (continued)

Options	Description
Password Changes	
Enable Non-Admin Password Changes	This section contains a toggle switch which when on, user can change system and hard drive password without the need for admin password (OFF by default).
Admin Setup Lockout	
Enable Admin Setup Lockout	This section contains a toggle switch which allows the administrator to control how users can or cannot access BIOS setup (OFF by default).
Active Password Lockout	
Enable Active Password Lockout	This section contains a toggle switch which allows the user to disable active password support (OFF by default).

Identifier	GUID-4DB93BE8-55FC-45CD-AE0F-F919CEB311F9
Version	1
Status	Released

Update Recovery

This section provides details on Update Recovery settings.

Table 15. Update Recovery

Options	Description
UEFI capsule Firmware Updates	
Enable UEFI Capsule Firmware Updates	This field contains a toggle switch which allows the user to enable or disable BIOS updates through UEFI capsule update packages (ON by default).
BIOS Recovery from Hard Drive	
BIOS Recovery from Hard Drive	This field contains a toggle switch which allows the user to enable or disable recovery from certain corrupted BIOS conditions from a recovery file on the user's primary hard drive or an external USB key (ON by default).
BIOS Downgrade	
Allow BIOS Downgrade	This field contains a toggle switch which allows the user to enable or disable flashing of the system firmware to previous revisions.
SupportAssist OS Recovery	
SupportAssist OS Recovery	This field contains a toggle switch which allows the user to enable or disable the boot flow for SupportAssist OS Recovery tool in the events of certain system errors (ON by default).
BIOSConnect	
BIOSConnect	This field contains a toggle switch which allows the user to enable or disable BIOSConnect setup to attempt cloud Service OS recovery if the main operating system fails to boot with a set number of failures (ON by default).
Dell Auto OS Recovery Threshold	

Table 15. Update Recovery (continued)

Options	Description
Dell Auto OS Recovery Threshold	This field allows the user to select the number of failed boot attempts by the system before SupportAssist OS Recovery is triggered. The options here are as below: <ul style="list-style-type: none">• Off• 1• 2 (selected by default)• 3

Identifier	GUID-7F144F0A-904C-46F8-B37D-62C6D52CBC66
Version	1
Status	Released

System Management

This section provides System Management settings.

Table 16. System Management

Options	Description
Service Tag	
Service Tag	This field provides the unique Service Tag of the computer.
Asset Tag	
Asset Tag	This field provides the asset tag which is a unique and up to 64-character identification that can be set by the IT administrator.
AC Behavior	
Wake on AC	This field contains a toggle switch which allows the user to enable or disable the feature where the system boots when charger is detected (OFF by default).
Auto On Time	
Auto On Time	This field allows the user to set defined days/time when the system can automatically power on. The options here are as follows: <ul style="list-style-type: none">• Disabled (selected by default)• Everyday• Weekdays• Select Days
First Power On Date	This field contains a toggle switch which sets the ownership date when the system is powered on first (OFF by default).

Identifier	GUID-5FF4CFC5-AE2E-4993-AB92-FCF22F423F39
Version	1
Status	Released

Keyboard

This section provides keyboard settings.

Table 17. Keyboard

Options	Description
Numlock Enable	This field contains a toggle switch to enable Numlock function when the system boots (ON by default).
Fn Lock Options	
Fn Lock Options	This field contains a toggle switch to change the mode of the function keys (ON by default). The options are as follows: <ul style="list-style-type: none"> • Lock Mode Standard - Traditional F1-F12 functions • Lock Mode Secondary - Enables secondary functions on the Fn keys (selected by default)
Keyboard Illumination	
Keyboard Illumination	This field allows the user to set the keyboard illumination settings. The options available are as follows: <ul style="list-style-type: none"> • Disabled - The keyboard illumination will be off • Dim - Enable the keyboard illumination feature at 50% brightness level • Bright - Enable the keyboard illumination feature at 100% brightness level (selected by default)
Keyboard Backlight Timeout on AC	
Keyboard Backlight Timeout on AC	This field allows the user to define the timeout value for the backlight when the AC adapter is connected to the computer. The options here are as follows: <ul style="list-style-type: none"> • 5 seconds • 10 seconds (selected by default) • 15 seconds • 30 seconds • 1 minute • 5 minutes • 15 minutes • Never
Keyboard Backlight Timeout on Battery	
Keyboard Backlight Timeout on Battery	This field allows the user to define the timeout value for the backlight when the battery is powering to the computer. The options here are as follows: <ul style="list-style-type: none"> • 5 seconds • 10 seconds (selected by default) • 15 seconds • 30 seconds • 1 minute • 5 minutes • 15 minutes • Never

Identifier	GUID-9B75A5B5-B881-45F1-B56C-6DEE1D55DDCA
Version	1
Status	Released

Pre-boot Behavior

This section provides Pre-boot Behavior details and settings.

Table 18. Pre-boot Behavior

Options	Description
Adapter Warnings	
Enable Adapter Warnings	This field contains a toggle switch to enable or disable warning messages during boot when adapters with low power capacity are detected (enabled by default).
Warning and Errors	
Warning and Errors	<p>This field allows the user to enable or disable boot process to be paused only when warnings or errors are detected. The options are as follows:</p> <ul style="list-style-type: none"> ● Prompt on Warnings and Errors - Stop, prompt and wait for user input when warnings or errors are detected (selected by default) ● Continue on Warnings - Continue when warnings are detected but pause on errors ● Continue on Warnings and Errors - Continue when either warnings or errors are detected during POST
USB-C Warnings	
Enable Dock Warning Messages	This field contains a toggle switch to enable or disable dock warning messages (enabled by default).
Fastboot	
Fastboot	<p>This field allows the user to configure the speed of the UEFI boot process. The options here are as follows:</p> <ul style="list-style-type: none"> ● Minimal - reduces boot time by skipping certain hardware and configuration initialization during boot (selected by default) ● Thorough - Performs complete hardware and configuration initialization during boot ● Auto - Allows the BIOS to decide configuration initialization performed during boot
Extend BIOS POST Time	
Extend BIOS POST Time	<p>This field allows the user to configure the BIOS POST load time. The options are as follows:</p> <ul style="list-style-type: none"> ● 0 seconds (selected by default) ● 5 seconds ● 10 seconds
MAC Address Pass-Through	
MAC Address Pass-Through	<p>This field allows the user to configure the MAC address pass-through replacing the external NIC MAC address.:</p> <ul style="list-style-type: none"> ● System Unique MAC Address (selected by default) ● Integrated NIC 1 MAC Address ● Disabled

Identifier	GUID-9B3D21C4-7483-4D18-9C44-DBE9EB432172
Version	1
Status	Released

Virtualization

This section provides details on Virtualization settings.

Table 19. Virtualization

Options	Description
Intel Virtualization Technology	
Enable Intel Virtualization Technology(VT)	This field contains a toggle switch to enable or disable Virtualization to run Virtual machine monitor(VMM) (enabled by default).
VT for Direct I/O	
Enable Intel VT for Direct I/O	This field allows the user to enable or disable the system from being able to perform VT for Direct I/O (enabled by default).

Identifier	GUID-1BE5F421-CF8B-43EB-ADAA-DB901AB71A42
Version	1
Status	Released

Performance

This section provides Performance settings.

Table 20. Performance

Options	Description
Multi-Core Support	
Active Cores	This field allows the user to configure the number of active cores on the computer. The options are as follows: <ul style="list-style-type: none">• All Cores (selected by default)• 1• 2• 3
Intel SpeedStep	
Enable Intel SpeedStep Technology	This field contains a toggle switch to enable or disable Intel SpeedStep Technology which allows the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production (enabled by default).
C-States Control	
Enable C-States Control	This field contains a toggle switch to enable or disable C-States Control that configures the CPU's ability to enter and exit low power states. When off, it disables all C-States (enabled by default).
Intel Turbo Boost Technology	
Enable Intel Turbo Boost Technology	This field allows the user to enable or disable Intel Turbo Boost Technology (enabled by default). <ul style="list-style-type: none">• Disabled - Does not allow the Intel Turbo Boost Technology driver to increase the performance state of the processor above the standard performance.• Enabled - Allows the Intel Turbo Boost Technology to increase the performance of the CPU or graphics processor.
Intel Hyper-Threading Technology	

Table 20. Performance (continued)

Options	Description
Enable Intel Hyper-Threading Technology	This field allows the user to configure this feature where the processor resources are used more effectively, enabling multiple threads to run on each core (enabled by default).
Dynamic Tuning: Machine Learning	
Enable Dynamic Tuning: Machine Learning	This field allows the user to configure the OS' capability to enhance dynamic power tuning capabilities based on detected workloads (disabled by default)

Identifier	GUID-A461766C-D931-47E1-9FDC-6AB7647FEFAF
Version	1
Status	Released

System Logs

This section contains BIOS, Thermal and Power event logs.

Table 21. System Logs

Options	Description
BIOS Event Log	
Clear BIOS Event log	This field contains a toggle switch to Keep or Clear BIOS Event logs. It also lists all saved events(Date, Time, Message) - ("Keep" selected by default).
Thermal Event Log	
Clear Thermal Event Log	This field contains a toggle switch to Keep or Clear Thermal Event logs. It also lists all saved events(Date, Time, Message) - ("Keep" selected by default).
Power Event Log	
Clear Power Event Log	This field contains a toggle switch to Keep or Clear Power Event logs. It also lists all saved events(Date, Time, Message) - ("Keep" selected by default).


Identifier	GUID-4CCD8B4C-D5E5-464B-ADF1-EF776F371D9E
Version	3
Status	Released

Updating the BIOS in Windows

Prerequisites

It is recommended to update your BIOS (System Setup), when you replace the system board or if an update is available.

About this task

 **NOTE:** If BitLocker is enabled, it must be suspended before updating the system BIOS, and then re-enabled after the BIOS update is completed.

Steps

1. Restart the computer.
2. Go to www.dell.com/support.
 - Enter the **Service Tag** or **Express Service Code** and click **Search**.

- Click **Drivers & Downloads**.
 - Click **Detect Drivers** and follow the on-screen instructions.
3. If you are unable to detect or find the Service Tag, click **Browse all products**.
 4. Choose the appropriate category to reach the product page.
 5. Select your computer model, followed by its model number.

i **NOTE:** The **Product Support** page of your computer appears.
 6. Click **Drivers & Downloads**.

i **NOTE:** The Drivers & Downloads section is displayed.
 7. Click **Category**, and select **BIOS** from the drop-down list.
 8. Click the toggle button **Show downloads for only THIS PC XXXXXXXX**.

i **NOTE:** XXXXXXXX denotes the Service Tag.
 9. Select the latest BIOS file and click **Download**.
 10. After the download is complete, browse to the folder where you saved the system BIOS executable file.
 11. Double-click the system BIOS executable file.

i **NOTE:** Follow the on-screen instructions.

Identifier	GUID-FF16F9F9-DE03-4BB8-ABEA-583B0704A774
Version	1
Status	Released

Updating BIOS on systems with BitLocker enabled

⚠ CAUTION: If BitLocker is not suspended before updating the BIOS, the next time you reboot the system it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress and the system will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system re-install. For more information on this subject, see Knowledge Article: <https://www.dell.com/support/article/sln153694>

Identifier	GUID-43C1C370-5E1F-4C5E-9478-C68279DBEC6E
Version	2
Status	Released

Updating your system BIOS using a USB flash drive

About this task

If the computer cannot load into Windows but there is still a need to update the BIOS, download the BIOS file using another computer and save it to a bootable USB flash drive.

i **NOTE:** You must use a bootable USB flash drive. For more information, see the knowledge base article [SLN143196](https://www.dell.com/support/article/sln143196).

Steps

1. Download the BIOS update .exe file to another computer.
2. Copy the .exe file onto the bootable USB flash drive.
3. Insert the USB flash drive into the computer that requires the BIOS update.
4. Restart the computer and press F12 when the Dell logo appears to display the One Time Boot Menu.
5. Using arrow keys, select **USB Storage Device** and press Enter.
6. The computer restarts to a Diag C:\> prompt.
7. Run the file by typing the complete filename and press Enter.
8. The BIOS Update Utility is displayed. Follow the on-screen instructions.

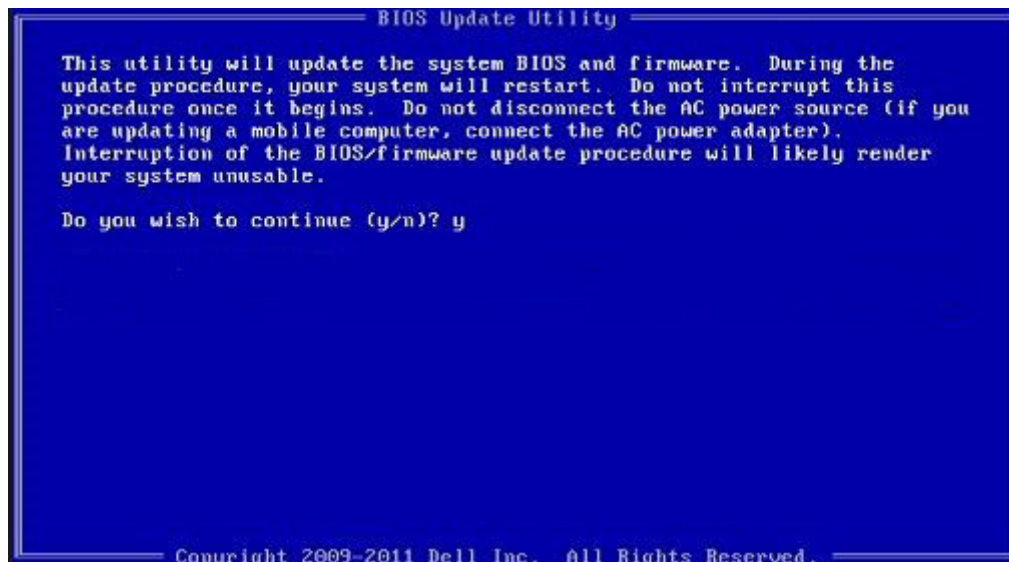


Figure 1. DOS BIOS Update Screen

Identifier	GUID-788E5D66-C463-49A4-AA6C-01C115A999F3
Version	3
Status	Released

Updating the BIOS in Linux and Ubuntu

To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](http://www.dell.com/support/000131486) at www.dell.com/support.

Identifier	GUID-EF53B1D0-4992-4404-A62A-195FFAEAB184
Version	5
Status	Released

Updating the BIOS from the F12 One-Time boot menu

Update your computer BIOS using the BIOS update.exe file that is copied to a FAT32 USB drive and booting from the F12 One-Time boot menu.

About this task

BIOS Update

You can run the BIOS update file from Windows using a bootable USB drive or you can also update the BIOS from the F12 One-Time boot menu on the computer.

Most of the Dell computers built after 2012 have this capability, and you can confirm by booting your computer to the F12 One-Time Boot Menu to see if BIOS FLASH UPDATE is listed as a boot option for your computer. If the option is listed, then the BIOS supports this BIOS update option.


NOTE: Only computers with BIOS Flash Update option in the F12 One-Time boot menu can use this function.

Updating from the One-Time boot menu

To update your BIOS from the F12 One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (key does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter that is connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS update flash process from the F12 menu:

 **CAUTION:** Do not turn off the computer during the BIOS update process. The computer may not boot if you turn off your computer.

Steps

1. From a turn off state, insert the USB drive where you copied the flash into a USB port of the computer.
2. Turn on the computer and press F12 to access the One-Time Boot Menu, select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS update is completed.

Identifier	GUID-70AC74A4-2716-4872-8F85-36CCA0E01771
Version	1
Status	Released

System and setup password

Table 22. System and setup password

Password type	Description
System password	Password that you must enter to log in to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data that is stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Identifier	GUID-84D45A70-0C01-4677-B066-55414B65F122
Version	2
Status	Released

Assigning a system setup password

Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

About this task

To enter the system setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:
 - A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not valid.

- Only the following special characters are valid: Space, ("), (+), (.), (-), (.), (/), (:), ([), (\), (]), (`).
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
 4. Press Esc and a message prompts you to save the changes.
 5. Press Y to save the changes.
The computer restarts.

Identifier	GUID-B6DB5E2C-98AB-4EF7-9BA7-42A0AEF1D985
Version	2
Status	Released

Deleting or changing an existing system setup password

Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

About this task

To enter the System Setup, press F12 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, update, or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**, update, or delete the existing setup password, and press Enter or Tab.

NOTE: If you change the System and/or Setup password, reenter the new password when prompted. If you delete the System and/or Setup password, confirm the deletion when prompted.
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Identifier	GUID-5941E06E-ABCB-4468-ACE5-D51EF6AAA083
Version	2
Status	Released

Clearing BIOS (System Setup) and System passwords

About this task

To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

- NOTE:** For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

Identifier	GUID-A27EB21E-BACD-423F-AC5C-DC2A051C2B48
Version	1
Status	Translation Validated

Solución de problemas

Identifier	GUID-2492FF0C-5409-4E99-9C6A-F40516F1A256
Version	3
Status	Released

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a standalone tool that is preinstalled in all Dell computers installed with Windows 10 operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into their primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at www.dell.com/support.

Identifier	GUID-47E6DAC8-8CC0-4866-9896-4BDCE786B64A
Version	3
Status	Released

SupportAssist diagnostics

About this task

The SupportAssist diagnostics (previously known as ePSA diagnostics) performs a complete check of your hardware. The SupportAssist diagnostics is embedded in the BIOS and is launched by it internally. The SupportAssist diagnostics provides a set of options for particular devices or device groups. It allows you to:

- Run tests automatically or in an interactive mode.
- Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options and provide extra information about the failed device(s)
- View status messages that indicate if the tests are completed successfully
- View error messages that indicate if problems were encountered during the test

NOTE: Some tests are meant for specific devices and require user interaction. Ensure that you are present in front of the computer when the diagnostic tests are performed.

For more information, see [SupportAssist Pre-Boot System Performance Check](#).

Identifier	GUID-E0A21EAB-EB3D-4F5D-822B-B45105A19F0E
Version	2
Status	Released

Locate the Service Tag or Express Service Code of your Dell computer

Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, we recommend entering the Service Tag or Express Service Code at www.dell.com/support.

For more information on how to find the Service Tag for your computer, see [Locate the Service Tag for your Dell Laptop](#).

Identifier	GUID-4C5B74A9-9219-40ED-AAD2-1B257B1FD6CB
Version	1
Status	Released

System diagnostic lights

Power and battery-status light

Indicates the power and battery-charge status.

Solid white—Power adapter is connected and the battery has more than 5% charge.

Amber—Computer is running on battery and the battery has less than 5% charge.

Off

- Power adapter is connected, and the battery is fully charged.
- Computer is running on battery, and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different power and battery-status light patterns and associated problems.

Table 23. LED codes

Diagnostic light codes	Problem description	Recommended solutions
1,1	TPM detection failure	Replace the system board.
1,3	Short in hinge cable tripped OCP1	Check if the display cable (EDP) is seated properly or pinched at the hinges. If problem persists, replace either display cable (EDP) or display assembly (LCD).
1,4	Short in hinge cable tripped OCP2	Check if the display cable (EDP) is seated properly or pinched at the hinges. If problem persists, replace either display cable (EDP) or display assembly (LCD).
2,1	Processor failure	Run the Intel CPU diagnostics tools. If problem persists, replace the system board.
2,2	System board: BIOS or ROM (Read-Only Memory) failure	Flash latest BIOS version. If problem persists, replace the system board.
2,3	No memory or RAM (Random-Access Memory) detected	Confirm that the memory module is installed properly. If problem persists, replace the memory module.
2,4	Memory or RAM (Random-Access Memory) failure	Reset and swap memory modules amongst the slots. If problem persists, replace the memory module.

Table 23. LED codes (continued)

Diagnostic light codes	Problem description	Recommended solutions
2,5	Invalid memory installed	Reset and swap memory modules among the slots. If problem persists, replace the memory module.
2,6	System-board or chipset error	Flash latest BIOS version. If problem persists, replace the system board.
2,7	LCD failure - SBIOS message	Replace display vable (EDP) if possible, otherwise replace the display assembly (LCD).
2,8	LCD failure - EC detection of power rail failure	Replace the system board.
3,1	Coin-cell battery failure	Reset the CMOS battery connection. If problem persists, replace the RTC battery.
3,2	PCI, video card/chip failure	Replace the system board.
3,3	Recovery image not found	Flash latest BIOS version. If problem persists, replace the system board.
3,4	Recovery image found but invalid	Flash latest BIOS version. If problem persists, replace the system board.
3,5	Power-rail failure	EC ran into power sequencing failure. If problem persists, replace the system board.
3,6	System BIOS Flash incomplete	Flash corruption detected by SBIOS. If problem persists, replace the system board.
3,7	Management Engine (ME) error	Timeout waiting on ME to reply to HECI message. If problem persists, replace the system board.
4,1	Memory DIMM power rail failure	Replace the system board.

Camera status light: Indicates whether the camera is in use.

- Solid white—Camera is in use.
- Off—Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- Solid white—Caps Lock enabled.
- Off—Caps Lock disabled.

Identifier	GUID-2DA79962-34FF-421B-8B91-39CBBB623CA0
Version	2
Status	Released

Drain residual flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.

For your safety, and to protect the sensitive electronic components in your computer, you are requested to drain residual flea power before removing or replacing any components in your computer.


Draining residual flea power, also known as a performing a "hard reset", is also a common troubleshooting step if your computer does not power on or boot into the operating system.

To drain residual flea power (perform a hard reset)

Steps

1. Turn off your computer.

2. Disconnect the power adapter from your computer.
3. Remove the base cover.
4. Remove the battery.
5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to your computer.
9. Turn on your computer.


 **NOTE:** For more information about performing a hard reset, see the knowledge base article [SLN85632](https://www.dell.com/support) at www.dell.com/support.

Identifier	GUID-B4DD52FB-C0FE-4818-9D7C-A0D2BF4491D7
Version	1
Status	In translation

WiFi power cycle

Sobre esta tarea

If your computer is unable to access the internet due to WiFi connectivity issues a WiFi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a WiFi power cycle:

 **NOTE:** Some ISPs (Internet Service Providers) provide a modem/router combo device.


Pasos

1. Turn off your computer.
2. Turn off the modem.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on your computer.


Identifier	GUID-B806B918-0DFE-445A-AAA3-B00F36BDF206
Version	1
Status	Released

M-BIST

M-BIST(Built In Self-Test) diagnostics tool, featuring improved accuracy in system board failures.

 **NOTE:** M-BIST can be manually initiated before POST(Power On Self Test).

How to run M-BIST

 **NOTE:** M-BIST must be initiated on the system from a power-off state that is either connected to AC power or with battery only.

1. Press and hold both the **M** key on the keyboard and the **power button** to initiate M-BIST.
2. With both the **M** key and the **power button** that is held down, the battery indicator LED may exhibit two states:
 - a. OFF: No fault detected with the system board
 - b. AMBER: Indicates a problem with the system board

Identifier	GUID-F43CA142-3465-4F38-8FBE-2AD251EA73FF
Version	1
Status	Released

Real Time Clock—RTC reset

The Real Time Clock (RTC) reset function allows you or the service technician to recover the recently launched model Dell Latitude and Precision systems from **No POST/No Boot/No Power** situations. You can initiate the RTC reset on the system from a power-off state only if it is connected to AC power. Press and hold the power button for 25 seconds. The system RTC reset occurs after you release the power button.

i NOTE: If AC power is disconnected from the system during the process or the power button is held longer than 40 seconds, the RTC reset process gets aborted.

The RTC reset will reset the BIOS to Defaults, un-provision Intel vPro and reset the system date and time. The following items are unaffected by the RTC reset:

- Service Tag
- Asset Tag
- Ownership Tag
- Admin Password
- System Password
- HDD Password
- Key Databases
- System Logs

i NOTE: The IT administrator's vPro account and password on the system will be un-provisioned. The system needs to go through the setup and configuration process again to reconnect it to the vPro server.

The below items may or may not reset based on your custom BIOS setting selections:

- Boot List
- Enable Legacy Option ROMs
- Secure Boot Enable
- Allow BIOS Downgrade

Identifier	GUID-E3342B2E-3097-42E7-A605-284FD4D652A4
Version	1
Status	Released

Handling swollen Lithium-ion batteries

Like most laptops, Dell laptops use lithium-ion batteries. One type of lithium-ion battery is the lithium-ion polymer battery. Lithium-ion polymer batteries have increased in popularity in recent years and have become standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to lithium-ion polymer battery technology is the potential for swelling of the battery cells.

Swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and should be replaced and disposed of properly. We recommend contacting Dell product support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing Lithium-ion batteries are as follows:

- Exercise caution when handling Lithium-ion batteries.
- Discharge the battery before removing it from the system.

To discharge the battery, unplug the AC adapter from the system and operate the system only on battery power. When the system will no longer power on when the power button is pressed, the battery is fully discharged.

- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.

- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries should be returned to Dell in an approved shipping container (provided by Dell), to comply with transportation regulations or disposed at an approved recycling center.

Contact Dell product support at <https://www.dell.com/support> for assistance and further instructions.

- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from <https://www.dell.com> or otherwise directly from Dell.

Lithium-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information on how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, see [Dell Laptop Battery - Frequently Asked Questions](#).



Identifier	GUID-39EA7331-A2B3-4040-BFCB-14E617C557D7
Version	9
Status	Released

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 24. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	www.dell.com
My Dell app	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at www.dell.com/support . For more information on how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles for a variety of computer concerns	<ol style="list-style-type: none"> 1. Go to www.dell.com/support. 2. On the menu bar at the top of the Support page, select Support > Knowledge Base. 3. In the Search field on the Knowledge Base page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.

 **NOTE:** Availability varies by country/region and product, and some services may not be available in your country/region.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.