

User Manual
Oven

EN

COD3S40X



electrolux.com/register

Electrolux


Welcome to Electrolux! Thank you for choosing our appliance.

In our drive to be sustainable, we are reducing paper assets and provide full user manuals online. Access your full user manual at **electrolux.com/manuals**

Get usage advice, brochures, trouble shooter, service and repair information at **electrolux.com/support**

1. PRODUCT DESCRIPTION

1.1 General overview

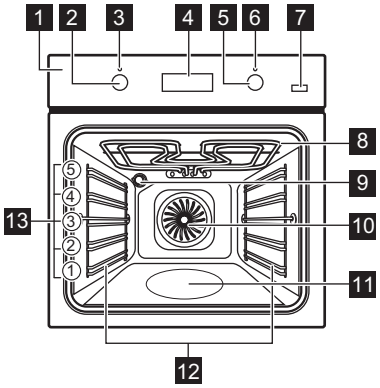


1. Control panel
2. Knob for the heating functions
3. Power lamp / symbol
4. Display
5. Control knob (for the temperature)
6. Temperature indicator / symbol
7. Plus Steam
8. Heating element
9. Lamp
10. Fan
11. Cavity embossment - Aqua cleaning container
12. Shelf support, removable
13. Shelf positions

2. CONTROL PANEL

2.1 Sensor fields / Buttons

—	To set the time.
	To set a clock function.
+	To set the time.
	To turn the True Fan Cooking PLUS function on and off.

2.2 Display

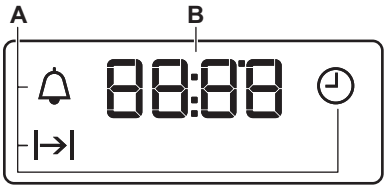

A. Clock functions
B. Timer

3. BEFORE FIRST USE

3.1 Before first use

The oven can emit an odour and smoke during preheating. Make sure that the room is ventilated.

Step 1	Step 2	Step 3
Set the clock	**Clean the oven**	**Preheat the empty oven**
1. +, − - press to set the time. After approximately 5 sec., the flashing stops and the display shows the time.	1. Remove all accessories and removable shelf supports from the oven. 2. Clean the oven and the accessories only with a microfibre cloth, warm water and a mild detergent.	1. Set the maximum temperature for the function: . Time: 1 h. 2. Set the maximum temperature for the function: . Time: 15 min. 3. Set the maximum temperature for the function: . Time: 15 min.

Turn off the oven and wait until it is cold. Place the accessories and the removable shelf supports in the oven.

4. DAILY USE


4.1 How to set: Heating function

Step 1	Turn the knob for the heating functions to select a heating function.
Step 2	Turn the control knob to select the temperature.
Step 3	When the cooking ends, turn the knobs to the off position to turn off the oven.

4.2 Setting the function: True Fan Cooking PLUS

WARNING!
Risk of burns and damage to the appliance.

Step 1	Make sure that the oven is cold.
Step 2	Fill the cavity embossment with tap water. ⓘ The maximum capacity of the cavity embossment is 250 ml. Do not refill the cavity embossment during cooking or when the oven is hot.
Step 3	Set the function: . Press: . The indicator turns on. It works only with the function: True Fan Cooking PLUS.
Step 4	Turn the control knob for the temperature to set temperature.
Step 5	Preheat the empty oven for 10 min to create humidity.
Step 6	Put food in the oven. Do not open the oven door during cooking.
Step 7	Turn the knob for the heating functions to the off position to turn off the oven. - press to turn off the oven. The indicator turns off.
Step 8	After the function ends, carefully open the door. Released humidity can cause burns.
Step 9	Make sure that the oven is cold. Remove the remaining water from the cavity embossment.

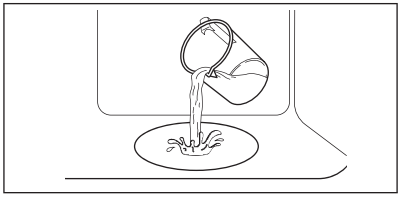

4.3 Heating functions

Heating function	Application
0 Off position	The oven is off.
Light	Oven lamp
True Fan Cooking / True Fan Cooking PLUS / Aqua Clean	Even baking, tenderness, drying, humidity during cooking Oven cleaning
Moist Fan Baking	Baking
Bottom Heat	Preserving food
Fast Grilling	Toasting, grilling
Turbo Grilling	Roasting meat, making gratin, browning
Pizza Function	Baking pizza
Conventional Cooking	Traditional baking, crispiness, crust gloss

4.4 Notes on: Moist Fan Baking

This function was used to comply with the energy efficiency class and ecodesign requirements (according to EU 65/2014 and EU 66/2014). Tests according to:

IEC/EN 60350-1

The oven door should be closed during cooking so that the function is not interrupted and the oven operates with the highest energy efficiency possible.

For general energy saving recommendations refer to "Energy Efficiency" chapter, Energy Saving.

This function is designed to save energy during cooking. When you use this function, the temperature in the cavity may differ from the set temperature. The heating power may be reduced.

5. CARE AND CLEANING

5.1 Notes on cleaning

 **Cleaning Agents**	Clean the front of the appliance only with a microfibre cloth with warm water and a mild detergent. Clean and check the door gasket around the frame of the cavity.
	Use a cleaning solution to clean metal surfaces.
	Clean stains with a mild detergent.
 **Everyday Use**	Clean the cavity after each use. Fat accumulation or other residue may cause fire.
	Moisture can condense in the appliance or on the door glass panels. To decrease the condensation, let the appliance work for 10 minutes before cooking. Do not store the food in the appliance for longer than 20 minutes. Dry the cavity only with a microfibre cloth after each use.
 **Accessories**	Clean all accessories after each use and let them dry. Use only a microfibre cloth with warm water and a mild detergent. Do not clean the accessories in a dishwasher.
	Do not clean the non-stick accessories using abrasive cleaner or sharp-edged objects.

6. TROUBLESHOOTING

6.1 What to do if...

In any cases not included in this table please contact with an Authorised Service Centre.

Problem	Check if...
The oven does not heat up.	The fuse is blown.
The door gasket is damaged.	Do not use the oven. Contact an Authorised Service Centre.
The display shows "12.00".	There was a power cut. Set the time of day.
The water leaks out of the cavity embossment.	There is too much water in the cavity embossment.
Unsatisfying cooking performance of the function: True Fan Cooking PLUS .	You filled the cavity embossment with water.
The lamp does not work.	The lamp is burnt out.

6.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the front frame of the appliance cavity. Do not remove the rating plate from the appliance cavity.

We recommend that you write the data here:	
Model (MOD.)	.....
Product number (PNC)	.....
Serial number (S.N.)	.....

7. ENERGY EFFICIENCY

7.1 Product Information and Product Information Sheet

Supplier's name	Electrolux
Model identification	COD3S40X 949499354
Energy Efficiency Index	95.3
Energy efficiency class	A
Energy consumption with a standard load, conventional mode	0.93 kWh/cycle
Energy consumption with a standard load, fan-forced mode	0.81 kWh/cycle
Number of cavities	1
Heat source	Electricity
Volume	72 l
Type of oven	Built-In Oven
Mass	28.0 kg

IEC/EN 60350-1 - Household electric cooking appliances - Part 1: Ranges, ovens, steam ovens and grills - Methods for measuring performance.

7.2 Energy saving

The appliance has features which help you save energy during everyday cooking.

Make sure that the appliance door is closed when the appliance operates. Do not open the appliance door too often during cooking. Keep the door gasket clean and make sure it is well fixed in its position.

Use metal cookware to improve energy saving.

When possible, do not preheat the appliance before cooking.

Keep breaks between baking as short as possible when you prepare a few dishes at one time.

Cooking with fan
When possible, use the cooking functions with fan to save energy.

Residual heat
When the cooking duration is longer than 30 min, reduce the appliance temperature to minimum 3 - 10 min before the end of cooking. The residual heat inside the appliance will continue to cook.

Use the residual heat to warm up other dishes.

Keep food warm
Choose the lowest possible temperature setting to use residual heat and keep a meal warm.

Moist Fan Baking
Function designed to save energy during cooking.

8. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

CE



867377033-A-472022

electrolux.com