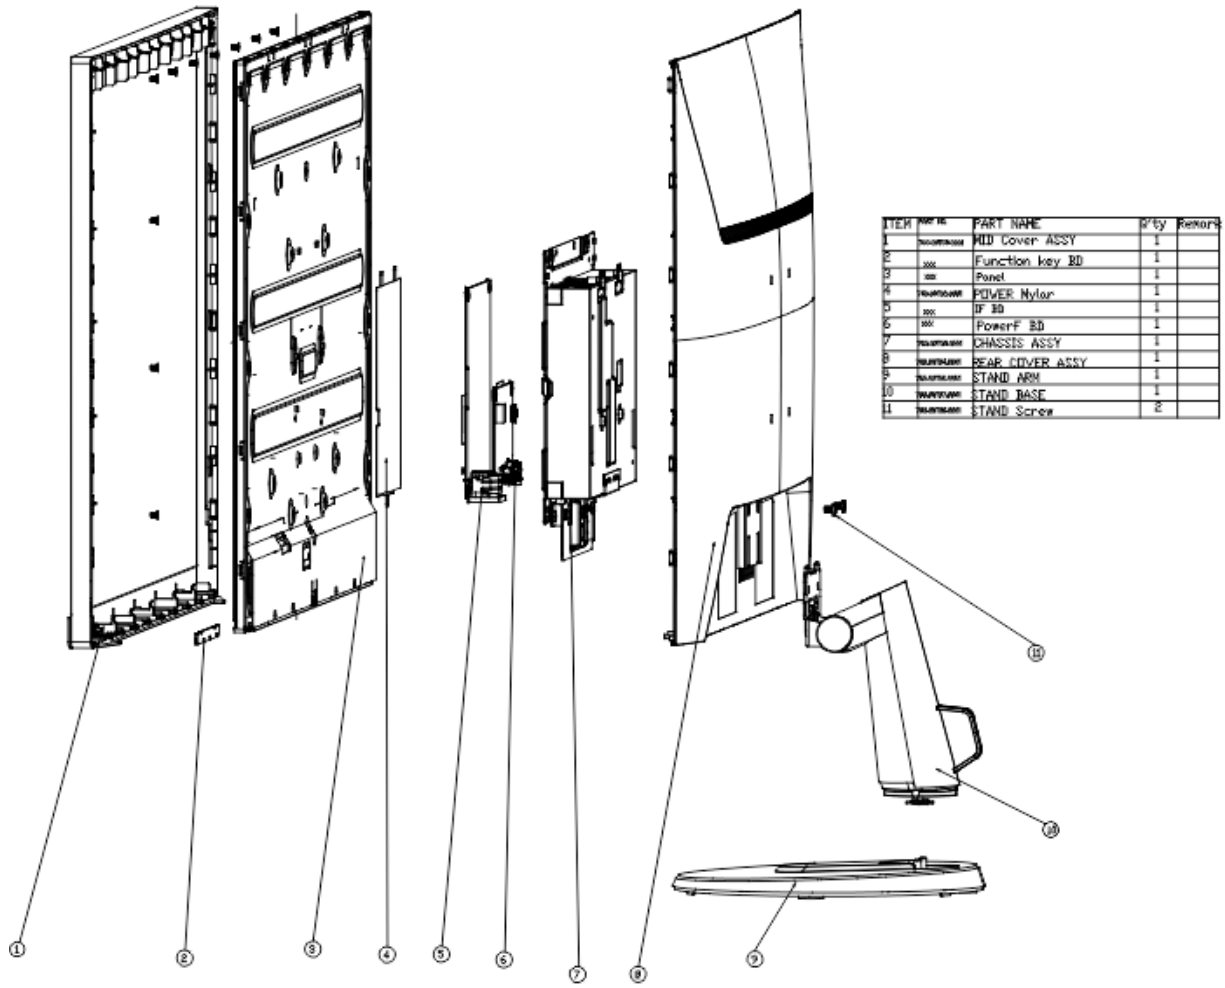
D32-40&D32-45 Simplified service manual for dismantling

Model Name: Lenovo D32-40&D32-45

Exploded Diagram



ITEM	PART NO.	PART NAME	Q'ty	Remark
1	[illegible]	MID Cover ASSY	1	
2	xxx	Function key BD	1	
3	xxx	Panel	1	
4	[illegible]	POWER Mylar	1	
5	xxx	IF BD	1	
6	xxx	PowerF BD	1	
7	[illegible]	CHASSIS ASSY	1	
8	[illegible]	REAR COVER ASSY	1	
9	[illegible]	STAND ARM	1	
10	[illegible]	STAND BASE	1	
11	[illegible]	STAND Screw	2	

1. Precaution

Please read the precaution as follows to prevent any damages to the LCD Monitor.
Make sure all power connector is removed. Be sure that the LCD Monitor is in power off status.

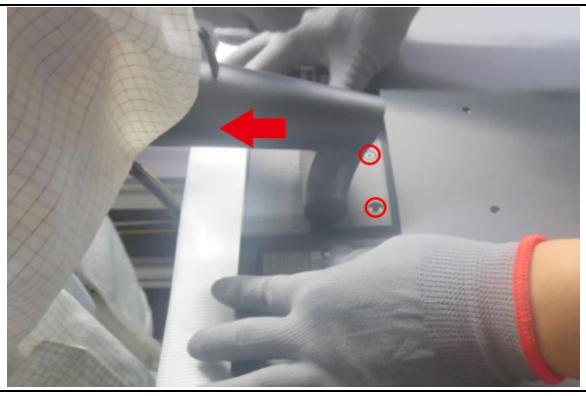
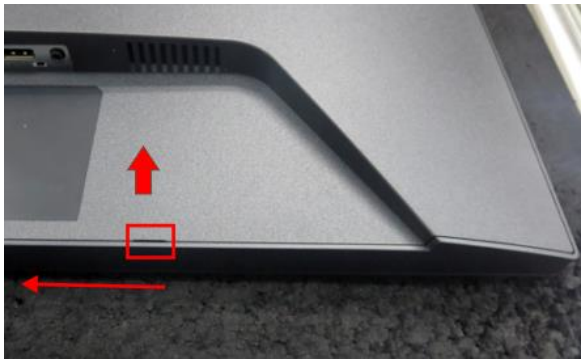
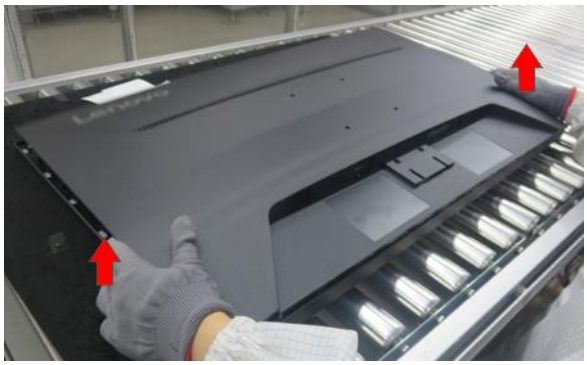
Prepare soft cloth and sponge as working platform to place LCD monitor horizontally.	
Hold LCD by the side carefully and DON'T touch or press panel directly.	

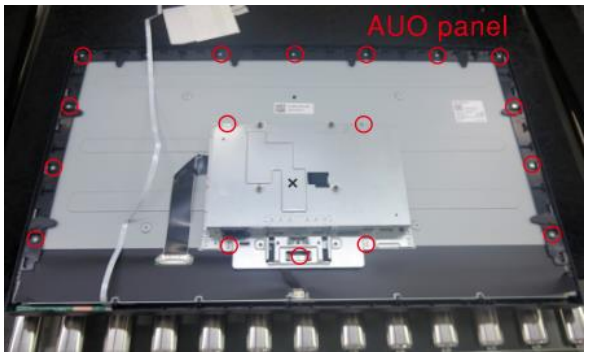
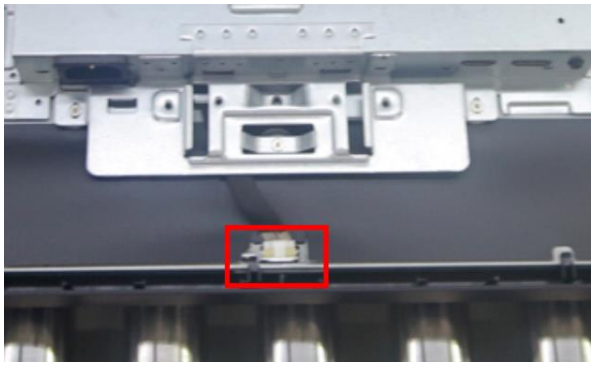
2. Appropriate tools

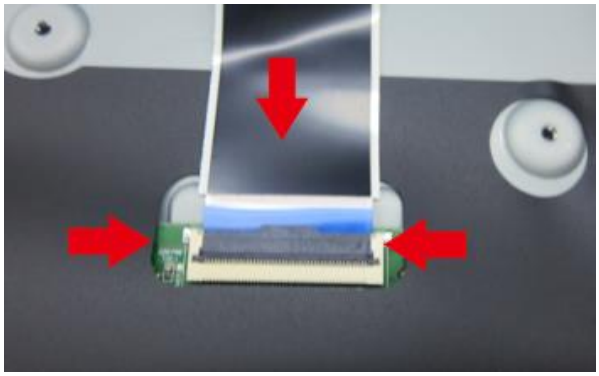
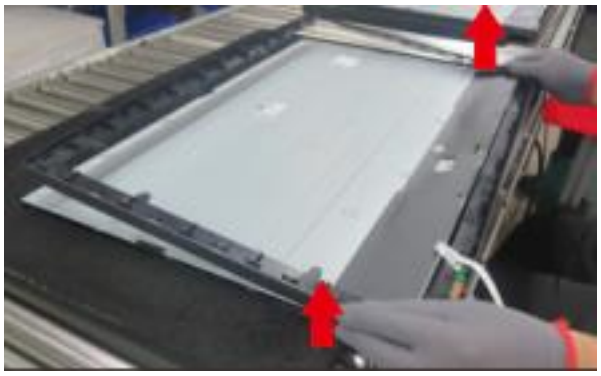
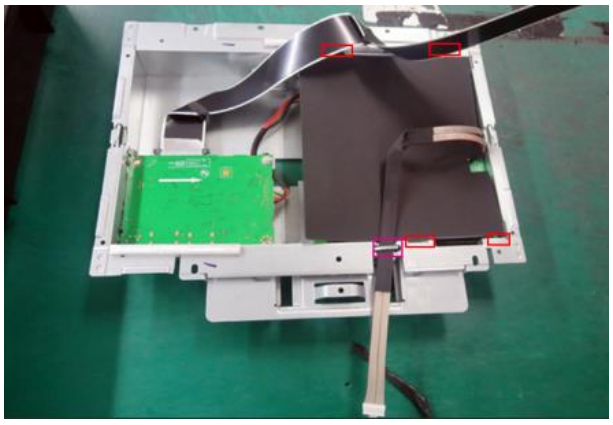
Select the Appropriate tools for disassembly and re-assembly.

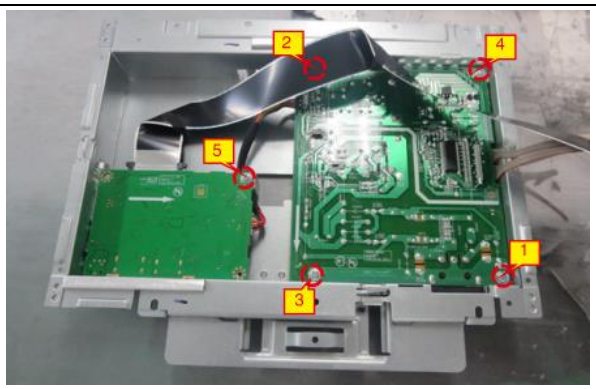
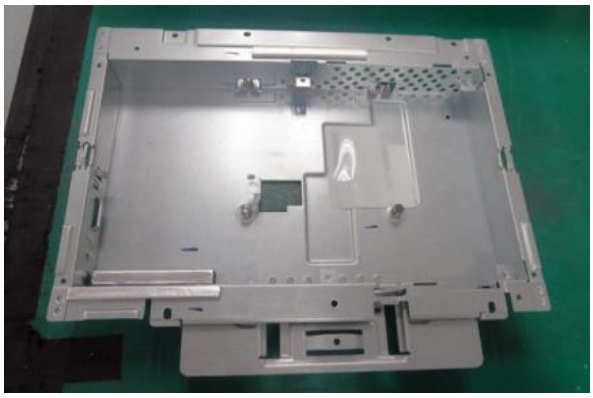
Phillips screwdriver (#2)	
C/D disassembly tool	
Gloves or soft cloth	

3. Disassembly SOP

Put the monitor on a flat surface (Put the EPE on under the monitor)	
Remove 2pcs screw to release the stand hinge Tool : Screwdriver #2	
Use the C/D disassembly tool to release Rear cover hook from disassemble hole on bottom	
Wedge your fingers between the rear cover and the middle frame on the corners of the top side of the monitor to release the rear cover Tool: Gloves	

Unplug OSD key cable and tear off the tape for releasing the cable	
Remove all screw for unlocking middle frame and main chassis. Tool : Screwdriver #2	 
Unplug the two panel lamp cables	

Disconnect LVDS cable from the panel, remove the main chassis	
Lift up the middle frame for releasing the middle frame with panel	
Release the keypad board from the middle frame	
Release lamp cable from the hooks of the main chassis Take out the mylar sheet from Main chassis	

Remove 5pcs screws. Tool : Screwdriver #2	
Take out PCB and peel off all mylar.	
Take out the Thermal pads from Power PCB	