

- Steker hanya boleh dicolokkan ke stopkontak dengan karakteristik teknis yang sama dengan steker.
- Cek kabel listriknya secara teratur kalau-kalau ada kerusakan.
- Alat harus digunakan dan diletakkan di atas permukaan yang rata, stabil, dan tahan panas. Jika Anda meletakkan setrika pada tumit atau dudukannya, pastikan setrika diletakkan di atas permukaan yang stabil.
- Ulurkan kabel listrik sepenuhnya sebelum Anda mencolokkan steker ke stopkontak.
- Tapak setrika dapat menjadi sangat panas dan menyebabkan luka bakar jika tersentuh.
- Apabila Anda sudah selesai menyetrica, ketika membersihkan alat dan juga saat Anda meninggalkan setrika meskipun hanya sebentar: berdirikan setrika pada tumitnya dan cabut steker listrik dari stopkontak dinding.
- Alat ini hanya ditujukan untuk keperluan rumah tangga.

### Medan elektromagnet (EMF)


Alat ini memenuhi standar dan peraturan yang berlaku terkait paparan medan elektromagnet.

### Daur ulang

- Simbol ini (Gbr. 2) menunjukkan bahwa produk ini dilarang dibuang bersama limbah rumah tangga biasa (2012/19/EU).
- Patuhi peraturan mengenai pengumpulan produk-produk elektrik dan elektronik secara terpisah di negara Anda. Pembuangan produk yang benar akan membantu mencegah dampak negatif terhadap lingkungan dan kesehatan manusia.

### Garansi dan dukungan

Versuni memberikan garansi dua tahun setelah pembelian produk ini. Garansi ini tidak berlaku jika cacat disebabkan oleh kesalahan penggunaan atau pemeliharaan yang buruk. Garansi kami tidak memengaruhi hak Anda sebagai konsumen berdasarkan hukum. Untuk informasi lebih lanjut atau untuk permohonan terkait garansi, silakan kunjungi situs web kami [www.philips.com/support](http://www.philips.com/support).

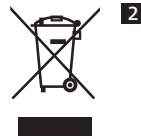

PHILIPS and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of Versuni Holding B.V., and Versuni Holding B.V. is the warrantor in relation to this product.

2025 © Versuni Holding B.V.  
642001029586 (29/07/2025)

100%   
[www.home.id](http://www.home.id)

## English

### Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Important

Read the separate important information leaflet and the user manual carefully before you use the appliance. Save both documents for future reference. This appliance has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.

### Danger

- Do not immerse the iron in water.

### Warning

- Check if the voltage indicated on the type plate corresponds to the local mains voltage before you connect the appliance.
- Do not use the appliance if the plug, the mains cord or the appliance itself shows visible damage, or if the appliance functions abnormally in any way, or if the appliance has been dropped.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Never leave the appliance unattended when it is connected to the mains.
- This appliance can be used by children aged 8 or above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given instructions in safe use of the appliance or supervision to establish safe use and if they have been made aware of the hazards involved.
- Do not allow children to play with the appliance.
- Keep the iron and its mains cord out of the reach of children aged 8 or under when the appliance is switched on or cooling down.
- Older Children aged 8 and above are only allowed to clean the appliance and perform the procedure under supervision.
- Do not let the mains cord come into contact with the hot soleplate of the iron.
- The appliance must not be stored until it has cooled.

### Caution

- Hot surface (Fig. 1)
  - Surfaces are liable to get hot during use (for irons with hot symbol marked on the appliance).
- Only connect the appliance to an earthed wall socket and do not use adaptors.
- The plug must only be connected to a socket with the same technical characteristics as plug.
- Check the mains cord regularly for possible damage.
- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on its heel or its stand, make sure that the surface on which you place it is stable.
- Fully unwind the mains cord before you plug it in the wall socket.
- The soleplate of the iron can become extremely hot and may cause burns if touched.
- When you have finished ironing, when you clean the appliance and also when you leave the iron even for a short while: put the iron on its heel and remove the mains plug from the wall socket.
- This appliance is intended for household use only.

### Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

### Recycling

- This symbol (Fig. 2) means that this product shall not be disposed of with normal household waste (2012/19/EU).
- Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

### Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website [www.philips.com/support](http://www.philips.com/support).

## Bahasa Indonesia

### Pendahuluan

Terima kasih telah membeli produk Philips! Untuk mendapatkan manfaat dukungan Philips secara penuh, daftarkan produk Anda di [www.philips.com/welcome](http://www.philips.com/welcome).

### Penting

Bacalah sebaran informasi penting terpisah dan panduan pengguna dengan saksama sebelum Anda menggunakan alat. Simpanlah kedua dokumen tersebut untuk digunakan sebagai referensi jika dibutuhkan kelak. Alat ini dirancang hanya untuk penggunaan rumah tangga. Produsen tidak bertanggung jawab dan garansi akan tidak berlaku atas penggunaan komersial, penggunaan yang tidak tepat, atau tidak mematuhi petunjuk.

### Bahaya

- Jangan merendam setrika di dalam air.

### Peringatan

- Pastikan tegangan pada alat sesuai dengan tegangan listrik di rumah Anda sebelum menggunakan alat.
- Jangan menggunakan alat jika steker, kabel listrik, atau alat itu sendiri menunjukkan kerusakan, tidak berfungsi secara normal, atau pernah terjatuh.
- Jika kabel listrik rusak, Anda harus membawanya ke Philips untuk diganti, pusat layanan yang ditunjuk resmi oleh Philips, atau orang yang mempunyai keahlian sejenis agar terhindar dari bahaya.
- Jangan sekali-kali meninggalkan alat tanpa pengawasan saat masih tersambung ke sumber listrik.
- Alat ini dapat digunakan oleh anak-anak berusia 8 tahun ke atas dan orang-orang yang memiliki keterbatasan fisik, keterbatasan indera atau kecakapan mental, atau orang-orang yang kurang pengalaman dan pengetahuan, selama mereka telah diberikan arahan tentang cara menggunakan alat ini dengan aman atau diawasi agar menggunakan alat dengan aman dan telah diberi tahu tentang bahaya yang bisa timbul.
- Jangan biarkan anak-anak bermain-main dengan alat ini.
- Jauhkan setrika dan kabel listriknya dari jangkauan anak-anak berusia di bawah 8 tahun saat alat masih dinyalakan atau sedang didinginkan.
- Anak-anak berusia 8 tahun ke atas hanya diperbolehkan membersihkan alat ini dan melakukan prosedur dalam pengawasan orang dewasa.
- Jangan sampai kabel listrik mengenai tapak setrika yang masih panas.
- Simpan alat setelah dingin.

### Perhatian

- Permukaan panas (Gbr. 1)
  - Permukaan bisa menjadi panas selama penggunaan (untuk setrika dengan simbol panas pada alat).
- Hanya colokkan alat ke stopkontak berarde dan jangan gunakan adaptor.