名称	订单说明书
首次使用型号	1B0600Z0138J
材料	70g双胶纸
页面规格/颜色	A5大小黑白印刷
技术要求	1. 印刷颜色应均匀，且无毛边，无脏点、划伤、折痕，在使用环境下不褪色，不变色，不起翘。 2. 图案和文字清晰完整，无错印、漏印、重影。 3.装订牢固，裁切整齐。 4. 制品应符合Q/HKB J 16001《零、部件及原材料中有害化学物质含量规定》要求。 5. 未注尺寸公差按企标 Q/HKB J01002 附录D中的 中等 m 执行。 6.首样经技术人员确认方可批量生产。
备注	1. BCD-600-大屏外接水，英语 2. 警示语部分字体高度不小于3.5mm 3. 防火标签高度至少为15mm高
升版原因	

Hisense	设计	梁国锐	审核	陈思萌	日期	2026-07-03
	批准	白莉	版本号	A	图号/物料号	N6020043095/20357126

Hisense

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference.
This is a short version of the User's Manual. For more information, please scan the QR code above to view the full version of the manual.

NOTE:

1. Please adjust your mobile or tablet device to portrait mode during the browsing of electronic manuals to achieve the best viewing experience. 2. To ensure a smooth experience with the download feature of the electronic manuals, we recommend using Google Chrome, Microsoft Edge, or the Safari browser.

EN

English

SAFETY AND WARNING INFORMATION

Before using the appliance for the first time

Before connecting the appliance to the power mains, please read carefully the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several appliance types/models; thus, settings or equipment may be described herein which is not available in your appliance. We recommend saving this instruction manual for future reference and attach it to the appliance if it is sold in the future.

Check for any damage or irregularities on your appliance. If you find your appliance is damaged, notify the retailer from which you have purchased the appliance.

Before connecting the appliance to the power mains, let the appliance rest in a vertical position for a minimum of 2 hours. This will reduce the possibility of operation faults due to the effect of transport on the cooling system.

Important safety instructions



WARNING
Risk of fire/flammable materials

The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.

⚠ WARNING

Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Before cleaning the appliance, unplug it from the power mains (unplug the power cord from the wall outlet).

⚠ WARNING

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ WARNING

When positioning the appliance, ensure the supply cord is not trapped or damaged.

⚠ WARNING

The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance.

⚠ WARNING

Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

⚠ WARNING

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

⚠ WARNING

To avoid any hazard resulting from poor stability of the appliance, make sure it is installed as instructed.

Freeze burn hazard

To avoid freeze burn, never put frozen food in your mouth and do not touch frozen food.

Safety of children and vulnerable persons

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Remove the packaging intended to protect the appliance or particular parts during transport and keep it outside the reach of children. It presents danger of injury or suffocation.

When removing a used appliance, disconnect the power cord, remove the door, and leave the shelves in the appliance. This will prevent children from locking themselves in the appliance.

For European markets only

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

Warning regarding the refrigerant

The appliance contains a small amount of an environmentally friendly yet flammable gas R600a. Make sure that no parts of the cooling system are damaged. A gas leak is not hazardous to the environment, but it could cause eye injury or fire.

In case of a gas leak, ventilate the room thoroughly, disconnect the appliance from the power mains, and call a service technician.

Important information on the use of appliance

⚠ WARNING

This appliance is intended to be used in residential household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

⚠ WARNING

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

The appliance may not be used outdoors and it may not be exposed to rain.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

If the appliance will be out of use for an extended period of time, switch it off using the relevant button, and unplug it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.

In case of an error or power supply failure, do not open the freezer compartment unless the freezer has not operated for over 16 hours. After this period, use the frozen food or provide sufficient cooling (e.g. a replacement appliance).

Technical information on the appliance

Rating plate can be found in the appliance interior. It indicates data on voltage, gross and net volume, type and amount of refrigerant, and information on the climate classes.

If the language on the rating plate is not the language of your choice or the language of your country, replace it with the one supplied.

⚠ WARNING

Do not damage the refrigerant circuit.

This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

In order to sense the temperature and humidity near the appliance and make the appliance run better, add temperature and humidity sensor outside the box of appliance.


There is also proximity sensor on the device.

INSTALLING YOUR NEW APPLIANCE


- Stand your appliance in a dry and well ventilated place. Keep the appliance out of direct sunlight, rain or frost.
- The diagram shows the temperature range of each climate class. The climate class of this appliance is specified on the rating plate. Use beyond this range may result in poor performance.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Sufficient clear space should be available around the appliance to facilitate ventilation and heat dissipation.
- Suggested space is indicated in the figure.

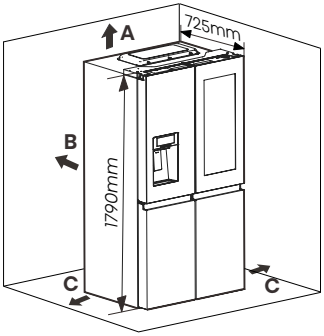


A > 1/2"(12mm)
B > 2"(50mm)
C > 1/2"(12mm)

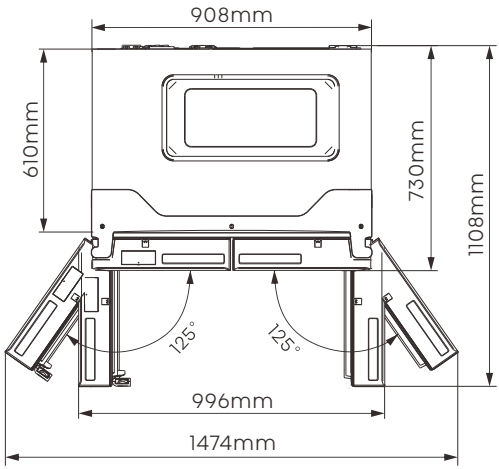


Leveling of appliance (if needed):

- The figure is for reference only.
- The appliance is fitted with adjustable feet that can be used to level the appliance.
- To allow the doors to self-close, tilt the top backwards by turning the adjustable feet.

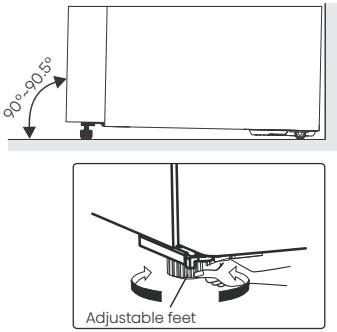


WARNING

- For proper installation, this appliance must be placed on a level surface of hard material that is the same height as the rest of the flooring. This surface should be strong enough to support a fully loaded appliance.
- The rollers should be only used for forward or backward movement. Moving the appliance sideways may damage your floor and the rollers.

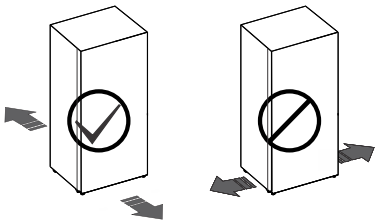

DESCRIPTION OF THE APPLIANCE

- Appliance interior equipment may change according to the appliance model.
- The diagram may slightly differ from the appliance you purchased, please get more information in the E-manual.

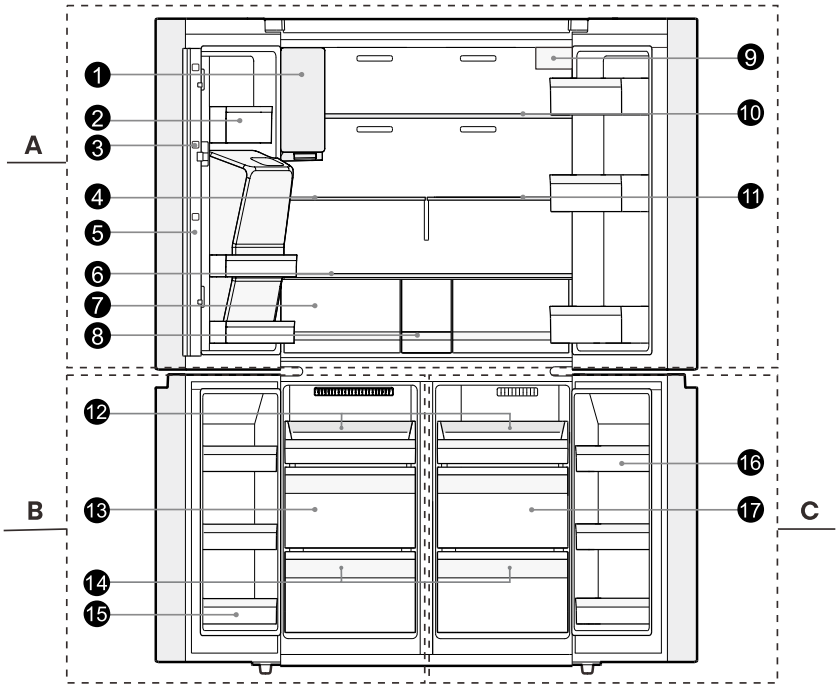

A: Fridge

1. Ice chamber
2. Door rack
3. Camera
4. Half-size glass shelf
5. Vertical baffle
6. Crisper cover
7. Crisper
8. Storage box
9. Water filter
10. Full-size glass shelf
11. Foldable glass shelf

B: Freezer

12. Upper trays
13. Middle drawer
14. Lower drawers
15. Door rack

C: MyFreshChoice

16. Door rack
17. Middle drawer

CONTROL PANEL

NOTE: The control panel may differ by model, so choose according to your appliance. Please refer to the E-manual for more information.



Child Lock

When child lock is on, the icon " " lits and water/ice can not be accessed. Tap the " " icon to turn off child lock, and the " " icon is extinguished.

Door Alarm

After any door has been continuously open for a certain period of time, the display will show a door-open prompt with a sound; both stop when the user clicks to know or closes all the doors.

Ice Maker

Press " " button to turn on ice maker, the icon " " will lit. To turn off it, press " " button until the " " icon extinguishs.

Fridge Temperature Control

Swipe the value of Fridge to adjust the fridge temperature from 8°C(46°F) to 2°C(36°F).

Tap the " " icon to activate Super Cool with a lit " " icon, and the fridge temperature will display 2°C (36°F), which auto-turns off after 6 hours or when " " icon is tapped.

Freezer Temperature Control

Swipe the value of Freezer to adjust the freezer temperature from -14°C(7°F) to -24°C(-11°F).

Tap the " " icon to activate Super Freeze with a lit " " icon, and the freezer temperature will display -24°C (-11°F), which auto-turns off after 52 hours or when " " icon is tapped.

NOTE: When selecting the Super Freeze function, ensure there are no bottles in the freezer compartment. Bottles and cans may explode.

MyFreshChoice Temperature Control

Swipe the value of MyFreshChoice to adjust the myfreshchoice temperature from 5°C(41°F) to -20°C(-4°F).

ECO

Press " " icon to switch on the energy-saving mode, the icon " " lits, which sets fridge to 6°C(43°F) and freezer to -17°C(1°F). Turning it off reverts to previous settings.

NOTE: Switching to ECO will turn off Super Cool/Freeze.

Dispenser Control

With Child Lock off, select "Cubed" or "Crushed" for ice type, or "Water" for drinking mode, each with a corresponding illuminated icon.

Filter Reset

Generally, change the water filter every 6 months to ensure the highest possible water quality. When the filter icon lits, change the water filter, then press "RESET" button to reset the water filter state.

UV Tech

The UV sterilization is default on with a lit " " icon. It sterilize the water for water

dispenser. Tap the " " icon to turn it on or off.

Demo Mode

This mode, indicated by "OF", stops making cool air but appears working. Cancel it by tapping the "Freezer" in the small display's freezer temperature adjustment page 10 times continuously.

High Temperature Alarm

If the freezer temperature is too high for a period of time, an alarm is triggered with a prompt. Tap the "OK" button to cancle it and the " ⓘ " icon will appear.


Power Outage Alarm

If the freezer temperature exceeds a certain temperature after restarting from power loss, it is normal that the screen will show a prompt "Power outage alarm: Freezer temperature too high."

Tap the "OK" button to cancle it and the " ⓘ " icon will appear.

Using the 21-inch display

The settings of the 21-inch display and the small display are synchronize.

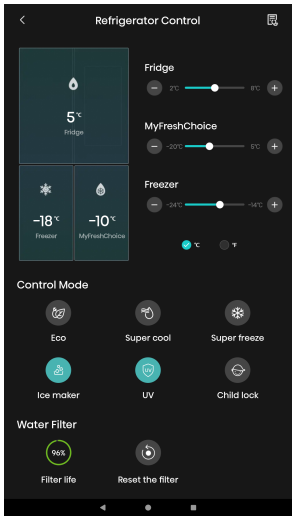


°F /°C Switch

Select "°C" or "°F" button to switch between Celsius and Fahrenheit units.

The Food Management

The Food management function displays the list of ingredients and ingredient status in each room, and the user can manually edit part of the ingredient information.

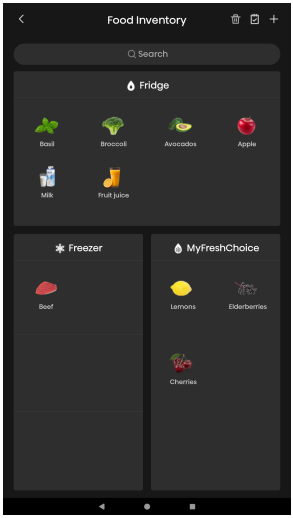


Camera Shooting

Three cameras are installed on the vertical baffle part. Each time the fridge door is opened and closed, the cameras automatically take photos after a certain delay and update the displayed images. Tap the camera icon adjacent to "Food Inventory" on the home screen to view photos of the interior of the refrigerator.

The photos are securely uploaded to the cloud and synced to the mobile app. Images stored in the cloud for more than 31 days are automatically deleted. You can turn the camera function on or off using the camera switch on the display.

When turned off, no photos will be taken or collected.

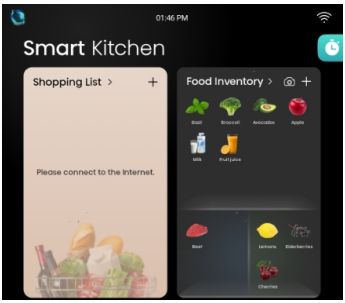

Voice Interaction

Say "Hi, VIDAA" to activate the voice assistant. Click "Confirm" in the prompt for the first use to go to voice settings.



Keep 1-2m distance in front of the refrigerator. High ambient noise may affect the voice accuracy.

NOTE:

The appliance has a built-in microphone for hands-free control. Voice commands are securely uploaded to the cloud for real-time recognition and are not stored. You can enable or disable the Voice Assistant in the Settings menu. When disabled, or when the voice interface is closed, the microphone stops collecting voice input.

Proximity Sensor

The device is also equipped with proximity sensor. When it is turned on, the large display will automatically light up when a person approaches.


ConnectLife App

The ConnectLife App can be downloaded for free from the Apple App Store or Google Play Store.

Mobile Phone Binding:

You need to connect to the network first, and then find "App Pairing" in the settings.

1. If you have installed the mobile app, then proceed to the next step.
2. After logging in to the mobile app, click the "+" in the lower right corner, select the scan function, and scan the QR code information displayed on the screen.
3. According to the prompts on the display interface,the binding is successful or continue to scan the barcode of the device in the refrigerator.

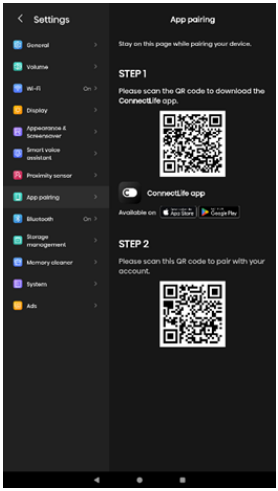

NOTE:

The Wi-Fi interface of the device is enabled by default, which is used for the device to configure the network and connect to the Internet.

The device is restricted to indoor use when operation in the 5150-5350MHz frequency range.

Remote Control

After successful binding, if you want to control the temperature or mode of the refrigerator through your mobile phone, you need to turn on the "Remote Control" icon in the dropdown menu on the large display.

AI Energy Saving

After the ConnectLife app is connected to the display, turn on the "AI Energy" switch in the app to enable AI energy-saving mode, and a green leaf icon appears on the small display status bar. When turned off in the app, the icon disappears and the mode is disabled.


NOTE:

- AI energy saving may reduce cooling speed.
- It is not recommended when the refrigerator is overfilled or hot food is put in.
- The function won't work if Wi-Fi is disconnected.
- It will be suspended when very low temperatures are set or when Super Cool/Super Freeze is activated.
- This function is supported by some models. please refer to the mobile APP function display for details.


To switch on/off the 21-inch display

The button is located at the top of the left door.

1. You can press "ON" to switch on the display.



2. You can press "OFF" to switch off the display.



If the screen freezes or has other problems, switch it off and restart it.

NOTE:


- Avoid powering it off during normal use, as this disables some functions.
- As the application continues to be upgraded, please refer to the actual display interface. The user's data can be deleted through the Factory reset function in the settings.

- For the first use, or reuse after a long period of non-use, follow the instructions:

1. Ice storage box: clean with clean water.
2. Water dispenser: take 1L of water (about 1 minute) continuously and discard it.
3. Ice maker: discard the first 3 batches of ice cubes(about 20-30 ice cubes).

Water Dispenser

The Water Dispenser is located at the left fridge door. Fetch water by pressing the dispenser lever.

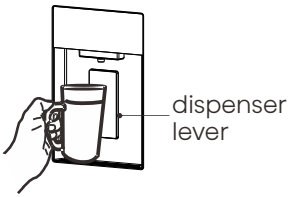

Making ice

1. Allow your refrigerator to operate and cool down for 24 hours.
2. Switch on the ice maker and securing water source.
3. Refrigerator should have ice production within 8 hours.

⚠ WARNING

Don't store food in the ice bucket to avoid damaging the ice maker and spilling ice.


- In case of power failure, ice may melt and refreeze.

NOTE:

- Don't press the water dispenser lever without a cup underneath to prevent spills.
- Keep the dispenser installed even when not in use to prevent cold air leakage.

Turn off the ice maker

When turning off the ice maker, empty the ice bucket to prevent clumping. Open the door fully, lift and pull out the ice bucket in the direction indicated. If it doesn't fit, rotate the helix 90° and try again.

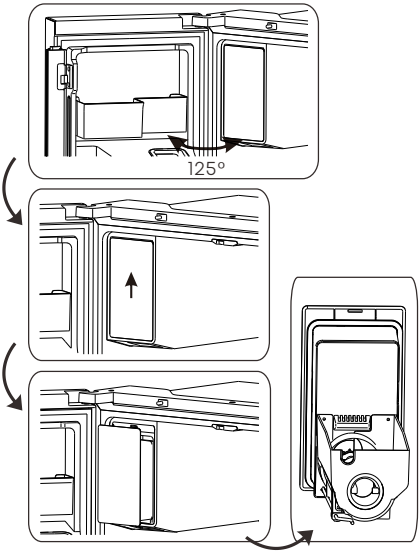


Changing the water filter


NOTE: This feature is only available on models with water filter.

To drink the freshest and cleanest water from your refrigerator, change the filter on time, follow these steps:


1. Shut off the water supply. Then pull the handle under the cover outwards to open the cover.

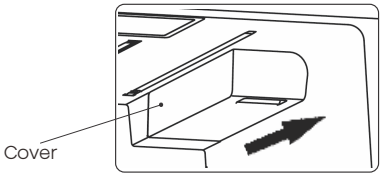

2. Pull the water filter downwards and turn it about 90° counter-clockwise to take it out.

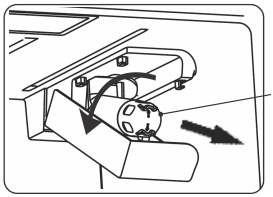

3. Insert the new water filter into the hole, and at the same time turn it about 90° clockwise until it stops.
4. Push the water filter up, and move the cover up to horizontal and push it until it locks. Turn the water supply back on.

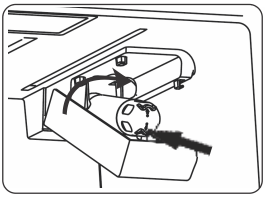


NOTE:

- When the filter is disassembled, pay attention to keep the filter head upward tilted to avoid water leaking from the front filter part, and the dropped water in the cover should be cleaned immediately.
- After turning on the water supply, you should check the leaks. If leaks occurs, repeat the above operation steps 1-4. If leaks persist, discontinue use and call you supporting dealer.
- Flush filter for 5 minutes before use.

CLEANING AND CARE

- For hygiene, clean the appliance (exterior and interior accessories) regularly at least every two months.
- Ensure the appliance is completely dry before switching back on and plugging back into the mains socket.
- Wipe the inside of the appliance with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth.
- Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet. Wash the seals with a mild detergent and warm water. Rinse and dry them thoroughly after cleaning.
- This product contains a light source of energy efficiency class G in the Fridge.

- For more cleaning details, please refer to the E-manual.

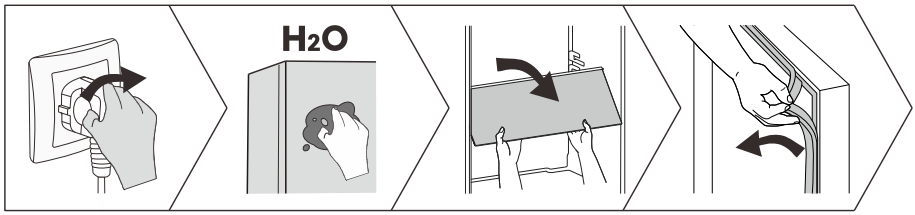

HELPFUL HINTS AND TIPS

Energy saving tips

We recommend that you follow the tips to save energy.

- Try to avoid keeping the door open for long periods.
- Ensure the appliance is away from any sources of heat.
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

- Please refer to the E-manual for more information.

TROUBLESHOOTING

- If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out the following easy checks before calling for service.
- **NOTE:** You can find more relevant information in the E-manual.

⚠ WARNING

Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that the door can be fully closed.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top.
Unable to connect appliance to Wi-Fi network	The Wi-Fi password was entered incorrectly, or the network could not be found. For specific network configuration operations, please refer to the electronic manual.

DISPOSAL OF THE APPLIANCE

It is prohibited to dispose of this appliance as household waste.

Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug.

⚠ DANGER

Risk of child entrapment. Before you throw away your old refrigerator or freezer:


- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

	Frequency range	Maximum output power
2.4G Wi-Fi	2400-2483.5MHz	≤20 dBm(@19.96 dBm)
5G Wi-Fi	5150-5250MHz	≤23 dBm(@20.83 dBm)
Bluetooth	2400-2483.05MHz	≤20 dBm(@8.23 dBm)
24G proximity sensor	24.00-24.25GHz	≤20 dBm(11.55 dBm Max EIRP)

Hereby, Hisense Ronshen (Guangdong) Refrigerator Co.,Ltd declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://auid.connectlife.io.

⚠ WARNING

Appliances contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

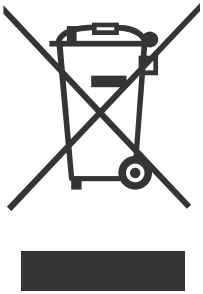

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

SUGGESTION OF USING THE APPLIANCE

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Clean water tanks if they have not been used for 48h; flush the water system connected to a water supply if water has not been drawn for 5 days.(Special for models with water tanks)
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- **NOTE:** The information below is for reference only, as functions may vary by models. Please get more details in the E-manual.

Order	Compartments type	Target storage temp.[°C]	Appropriate food	Storage life
1	Fridge	+2~+8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods which are not suitable for freezing.	/
2	Four-star	≤-18	Seafood, freshwater aquatic products and meats.	≤3 months
3	Three-star	≤-18		
4	Two-star	≤-12		≤2 months
5	One-star	≤-6		≤1 month
6	Zero-star	-6~0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc.. Partially packed/wrapped up encapsulated processed foods (non-freezable foods)	≤3 days
7	Chill	-3~+3	Seafood, pork, beef, chicken, freshwater aquatic products, etc..	2~7 days
8	Fresh Food	0~+4	Fresh pork, beef, fish, chicken, cooked food, etc..	≤3 days
9	Wine	+5~+20	Red wine, white wine, sparkling wine etc.	/

Hisense

life reimagined

Hisense UK LTD
Ground floor Munroe Court
White Rose Office Park
Millshaw Park Lane
Leeds LS11 0EA

Customer support line (for UK mainland and Northern Ireland only): 0191 387 0804, Southern Ireland customers please contact your Retailer.