




Thinking of you
Electrolux

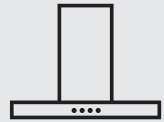

EFB60566BX
EFB70566BX
EFB90566BX
EFB60566DX
EFB90566DX

EN Cooker Hood
AR مدخنة

WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.

Welcome to Electrolux

ACCESSORIES AND CONSUMABLES

In the Electrolux webshop, you'll find everything you need to keep all your Electrolux appliances looking spotless and working perfectly. Along with a wide range of accessories designed and built to the high quality standards you would expect, from specialist cookware to cutlery baskets, from bottle holders to delicate laundry bags...



Visit the webshop at:
www.electrolux.com/shop

ENVIRONMENT CONCERNS

Recycle the materials with the symbol ♻ Put the packaging in applicable containers to recycle it.

Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

CUSTOMER CARE AND SERVICE

We recommend the use of original spare parts.
 When contacting Service, ensure that you have the following data available.
 The information can be found on the rating plate.

Model _____

PNC _____

Serial Number _____

RECOMMENDATIONS AND SUGGESTIONS

- The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.
- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.
- Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. The kitchen must have an opening communicating directly with the open air in order to guarantee the entry of clean air. When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.
- If the supply cord is damaged, it must be replaced from the manufacturer or its service agent.

USE


- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the

bottom of the pan only, making sure that it does not engulf the sides.


- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.
- Do not flambé under the range hood; risk of fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- "CAUTION: Accessible parts may become hot when used with cooking appliances".

MAINTENANCE

- 1. Switch off or unplug the appliance from the mains supply before carrying out any maintenance work.
- Clean and/or replace the Filters after the specified time period (Fire hazard).
 - Activated charcoal filter **W** These filters are not washable and cannot be regenerated, and must be replaced approximately every 4 months of operation, or more frequently with heavy usage.

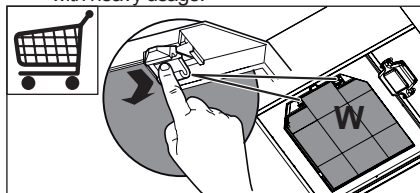


- Grease filters **Z** The filters must be cleaned every 2 months of operation, or more frequently for particularly heavy usage, and can be washed in a dishwasher.

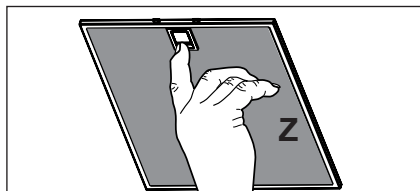


- Control lights, if present.
- Clean the hood using a damp cloth and a neutral liquid detergent.

CONTROLS

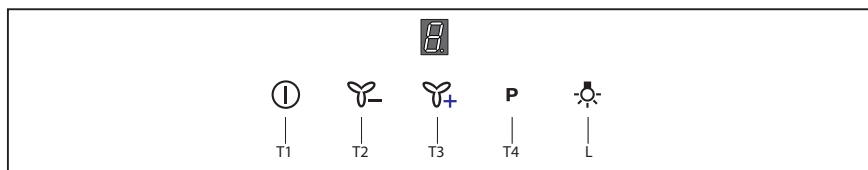

Button	Function	Display
T1	Turns the suction motor on and off at speed one.	Displays the set speed
	Press and hold the button for approximately 5 seconds, with all the loads turned off (Motor and Lights), to turn the Activated Charcoal Filter alarm on/off.	- C flashes once, A.C. Filter alarm Activated - C flashes twice, A.C. Filter alarm Deactivated
T2	Decreases the working speed.	Displays the set speed
	When the filters alarm is triggered, the alarm can be reset by pressing and holding this button for approximately 3 seconds. These indications are only visible when the motor is turned off.	F indicates the need to wash the metal grease filters. The alarm is triggered after the Hood has been in operation for 100 working hours. C indicates the need to change the activated charcoal filters, and also to wash the metal grease filters. The alarm is triggered after the Hood has been in operation for 200 working hours.
T3	Increases the working speed.	Displays the set speed
T4	Activates Power speed from any other speed, including motor off. This speed is set to operate for 10 minutes, after which the system returns to the speed that was set before. Suitable to deal with maximum levels of cooking fumes.	Displays P .
L	Turns the lighting system on and off at maximum intensity.	

LIGHTING

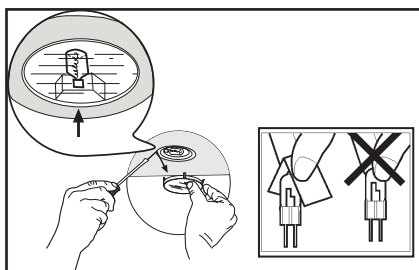

فيك نفكر نحن

الإحترافية والخبرة الابتكار من عقوداً معه يحمل منتجاً اخترت لقد. Electrolux جهاز لشراء شكرًا
ذهننا في نضعك ونحن صممناه، وأنيق رائع
الأوقات كل في رائعة نتائج على ستحصل أنك تطمئن أن يجب، تستخدمه حينما، لذا

Electrolux في بكم مرحبًا

الملحقات والأجزاء المستهلكة

Electrolux أجهزة على للمحافظة إليه تحتاجون ما كل الإنترنت على Electrolux معرض في تجدون سوف
تصميمها تم التي الملحقة الأجهزة من كبيرة سلسلة إلى بالإضافة، فانقة بكفاءة وتشغيلها لديكم
سلة وحتى المتخصصة الطهي أجهزة من عهد، باستحسانكم تحظى عالية جودة لمعايير وفقاً وتصنيعها
... الناعمة الغسيل أكياس حتى الزجاجات حمل وحدات ومن، المائدة أدوات



زوروا معرضنا على الإنترنت على الرابط:

www.electrolux.com

المخاوف البيئية

أعد تصنيع المواد التي تحمل الرمز ٨٠. ضع مواد التعبئة والحزم في الحاويات المناسبة لإعادة تصنيعها.
ساعد في حماية البيئة وصحة الإنسان والعمل على إعادة تصنيع مخلفات الأجهزة الكهربائية والإلكترونية. ومن ثم فلا تتخلص من
الأجهزة التي يوجد عليها علامة إعادة التصني ٨٠ مع باقي المخلفات المنزلية. وقم بإعادة المنتج إلى جهة إعادة التصنيع المحلية
لديكم أو اتصل بمكتب البلدية التابع له.

رعاية وخدمة العملاء

ننصح باستخدام قطع الغيار الأصلية.

عند الاتصال بالصيانة، تحقق من توافر البيانات التالية لديكم.
يمكنكم العثور على هذه المعلومات على لوحة المعايير.

الموديل
رقم المنتج
الرقم التسلسلي

ارشادات و اقتراحات


- وقد تجد فيه تفاصيل ومميزات لاتخص الجهاز الذي قمت بشرائه.
- 1 المصنع غير مسئول عن اي ضرر او تلف ناتج عن عدم اتباع تعليمات التركيب .
- اقل مسافة مسموحة بين سطح البوتاجاز و جسم الشفاط هي 65سم (بعض الموديلات يمكن تركيبها على ارتفاع أقل، يرجى الرجوع الى فقرة الأبعاد والتركيب).
- تاكد من ان عدد وحدات الفولت الرئيسية مطابقة لعدد الوحدات الموجودة علي لوحة المواصفات القياسية داخل الشفاط .
- بالنسبة للأجهزة المستوي (I) تاكد من تغطية جميع وحدات الطاقة الرئيسية داخل الحائط .
- قم بتوصيل الشفاط بالممدخنة من خلال ماسورة بطول 120سم علي ان تكون مع مراعاة تقليل طول الماسورة لاقصي درجة ممكنة .
- لا يجب توصيل الشفاط باي مداخن اخري مثل التي تستخدم مع (سخان المياه او المدفئة الخ) .
- اذا كان الشفاط يعمل في وجود اجهزة اخري غير كهربائية مثل (اجهزة البوتاجاز التي تعمل بالغاز) يجب ضمان وجود درجة كافية من التهوية داخل الغرفة وذلك لمنع انتشار رائحة الغاز . لذا يجب ان يكون داخل الغرفة منفذ تهوية مباشر لضمان دخول هواء نظيف .
- عن والبيد الصحيح الاستعمال منخفض ضغط أعلى يكون عندما المخاطرة
- بار م0400 الجاوزيت لا الغرفة في
- التيار تغذية كابل تلف حال في
- قبل من تبديله يتم أن يجب ، الكهربائي وذلك ، الفنيصة الخدمة قبل من أو المصنع لتجنب أي مخاطر .
- الاستخدام :-
- الشفاط مصمم للاستخدام المنزلي لطرد روائح و ابخرة الطهي من المطبخ .
- عدم استخدام الشفاط لاي اغراض اخري غير التي صمم من اجلها .
- عدم ترك شعلة البوتاجاز عارية اسفل الشفاط اثناء عملية الطهي .
- مرعاة ضبط الشعلة كي تكون موجه مباشرة لمنتصف قاعدة الاناء مع التاكد من عدم وصول النار الي حواف قاعدة الاناء .
- عند طهي مواد دهنية يجب وضع اناء الطهي تحت المراقبة المستمرة اثناء القلي تحت درجة حرارة عالية حيث من الممكن تدفق قطرات الزيت عي الشعلة .
- لا تقوم بتحضير المأكولات بطريقة (الفلامبيه) أسفل مدخنة المطبخ؛ فقد يحدث حريق

- يجب عدم استعمال هذا الجهاز من قبل أشخاص يملكون مشاكل نفسية، قاصرين عقليا أو معاقين (بما فيهم الأطفال)، أو من قبل أشخاص لا يمتلكون الخبرة أو الإدراك، إلا في الحالات التي يكون فيها إشراف من قبل أشخاص مدركين وحريصين على سلامتهم.
- يجب الإشراف على الأطفال والتأكد من عدم اللعب أو العبث من قبلهم بالجهاز.
- “تحذير : المناطق المكشوفة والتي يمكن الوصول اليها عند استعمال جهاز الطبخ قد تكون شديدة الحرارة”.


الصيانة :

- انزع فيشة الجهاز من مصدر التيار الكهربائي قبل اجراء اي نوع من عملية الصيانة .
- نظف او استبدل الفلاتر بعد انتهاء فترة صلاحية الاستخدام . (خطر الحريق).

4 أشهر لفلاتر الكربون النشط.

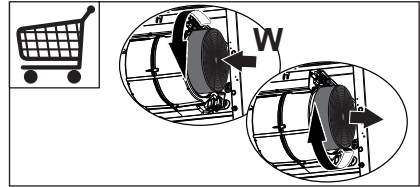

2شهرين للفلاتر المعدنية المضادة للشحوم.

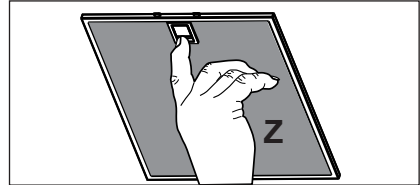


مؤشرات التحكم الضوئية حيث توجد

- يتم تنظيف الشفاط بقطعة قماش مرطبة مع سائل التنظيف المنزلي .

الاستخدام

التحكم لوحة



الزر	الوظيفة	الشاشة
T1	إشعال وإطفاء موتور الشفط على السرعة الأولى. اضغط بشكل مستمر لمدة 5 ثوان، عندما تكون كل الوظائف مطفأة) (للموتور+إنارة)، ينشط/لا ينشط تحذير فلاتر الكربون النشط.	مشاهدة السرعة التي تم ضبطها 1- يومض C دلالة على تفعيل تحذير فلاتر الكربون النشط 2- يومض C دلالة على اطفاء تحذير فلاتر الكربون النشط
T2	خفض سرعة التشغيل. مع تفعيل تحذير الفلتر وبالضغط على الزر لمدة 3 ثوان يتم إعادة ضبط التحذير . هذه المؤشرات يمكن رؤيتها فقط عندما يكون الموتور منطفئ.	مشاهدة السرعة التي تم ضبطها
T3	زيادة سرعة التشغيل.	مشاهدة السرعة التي تم ضبطها
T4	تشغيل السرعة Power من أية سرعة كانت حتى لو كان الموتور مطفأ، [إوتك السرعة تدوم 10 دقائق، في نهاية المدة يعود النظام الى السرعة السابقة. ملائمة لمواجهة انبعاث دخان الطبخ القوي.	مشاهدة P.
L	يشعل ويطفى جهاز الإنارة بأقصى طاقة.	

تحكم

