

ASUS® GK2000 Keyboard

English

A Package Contents


- ASUS GK2000 keyboard x1
- Mobile device holder x1
- Quick Start Guide x1
- Wrist rest x1
- Carry sleeve x1
- Spare parts kit: key cap puller x1, extra ML~M4 key caps, and extra M6~M12 key caps.

B Specifications Summary

- Product name: GK2000 Gaming Keyboard
- Model: GK2000 Keyboard
- Dimensions: 51 x 22.5 x 4.5 cm(L x W x H)
- Rating: 5V/500ma x2
- Weight: 1.68kg

C Installing your GK2000 Keyboard


- Connect your keyboard to the USB port on your computer.
- Connect your microphone and headphone to the Mic and Headphone ports on your keyboard.

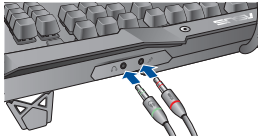

NOTE: We recommend that you connect an external HDD and a mouse to the USB ports on your keyboard.


D Installing the Wrist Rest

- Align the wrist rest to the notches at the back of your keyboard.
- Press both sides inward to secure the wrist rest in place.

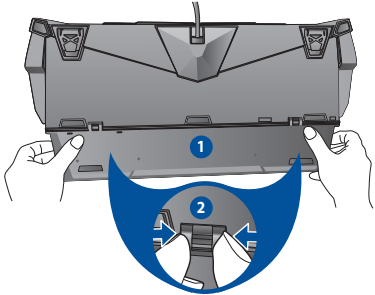


E Installing the Mobile Device Stand

- Align the mobile device stand to the wing at the upper right corner of your keyboard.
- Push the mobile device stand forward to fix it.

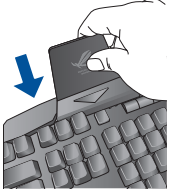


F Replacing the Key Caps

- Use a key cap puller to take out the ML~M4 or M6~M12 keys.
- Replace with extra key caps.

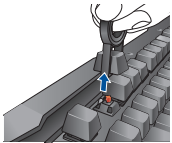

G Hotkeys

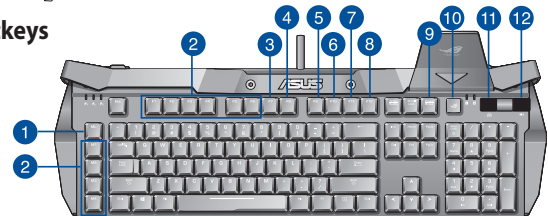

1.	Programmable keys: After the keyboard driver installation, you can define functions for these keys through the keyboard setup program.	ML	Default: Macro Key Level Switch Press this key to switch among Level 1 to Level 3. Each level provides different programmable functions for M1~M4. Macro Key Level indicator  Flash 1: Level 1, Flash 2: Level 2, Flash 3: Level 3
2.		M1~M4, M5(Fn+F1), M6(Fn+F2), M7(Fn+F3), M8(Fn+F4), M9(Fn+F5), M10(Fn+F6)	Default: No function
3.		M11(Fn+F7)	Default: LED display mode switch
4.		M12(Fn+F8)	Default: Launches the default multimedia player.
5.		M13(Fn+F9)	Default: Play & Pause
6.		M14(Fn+F10)	Default: Stop
7.		M15(Fn+F11)	Default: Previous track
8.		M16(Fn+F12)	Default: Next track
9.	Fn+Pause		Press this combo key to enable/disable N-Key Rollover. The Pause key flashes twice to indicate that N-Key Rollover is ON, and it flashes thrice to indicate that N-Key Rollover is OFF. N-Key Rollover is OFF by default.
10.	ROG Key (Windows Key Lock/ Caps lock indicator)		Press this key to enable/disable the Windows Key. The Windows Key flashes twice to indicate the Windows Key is disabled, and it flashes thrice to indicate the Windows Key is enabled. The ROG Key lights up to indicate Caps lock is ON.
11.	Lighting knob		Adjusts the brightness of the keyboard backlight.
12.	Volume up/down/mute		Push the knob leftward to mute the volume.
13.	Fn+1/2/3/4/5/6/7/8/9/0 (Profile switch)		Press these hotkeys to switch among the 10 preset profiles from 1 to 0.

H Customizing your Keyboard (Macro commands, Button functions, Lighting and others)

Go to the ASUS website at www.asus.com to download and install the latest keyboard driver to customize your keyboard's macro commands, button functions, lighting, and other functions.

ITALIANO

Contenuto della confezione

- Tastiera ASUS GK2000 x1
- Poggiapolsi x1
- Supporto per dispositivo mobile x1
- Custodia per trasporto x1
- Guida rapida x1
- Kit ricambi: estrattore tasti x1, tasti aggiuntivi extra ML~M4 e tasti aggiuntivi extra M6~M12.

Indice delle specifiche

- Nome prodotto: Tastiera gaming GK2000
- Modello: Tastiera GK2000
- Dimensioni 51 x 22.5 x 4.5 cm(L x P x A)
- Specifiche elettriche: 5V/500ma x2
- Peso: 1.68kg

Installazione della tastiera GK2000

- Collegate tastiera alla porta USB del computer.
- Collegate microfono e cuffie alle porte relative sulla tastiera.

NOTA: Raccomandiamo di collegare un hard disk esterno e un mouse alle porte USB della vostra tastiera.

Installazione del poggiapolsi

- Allineate il poggiapolsi agli incavi presenti sul retro della tastiera.
- Premete entrambi i lati verso l'interno per fissare il poggiapolsi.

Installazione del supporto per dispositivo mobile

- Allineate il supporto per dispositivo mobile all'ala nell'angolo superiore destro della tastiera.
- Spingete in avanti il supporto per fissarlo.

Sostituzione dei tasti

- Usate l'estrattore tasti per estrarre i tasti ML~M4 o M6~M12.
- Sostituite i tasti.

Tasti speciali

Tasti programmabili: Dopo l'installazione dei driver della tastiera potete definire le funzioni di questi tasti tramite il programma di configurazione.

1. ML Predefinito: Tasto macro di selezione livello.

Premete questo tasto per passare tra i livello 1 e 3. Ogni livello fornisce diverse funzioni programmabili per i tasti M1~M4.

Indicatore livello macro

LED 1: Livello 1, LED 2: Livello 2, LED 3: Livello 3.

2. M1~M4, M5(Fn+F1), M6(Fn+F2), M7(Fn+F3), M8(Fn+F4), M9(Fn+F5), M10(Fn+F6) Predefinito: Nessuna funzione.

3. M11(Fn+F7) Predefinito: LED visualizzazione modalità.

Controlli multimediali

4. M12(Fn+F8) Predefinito: Avvia il lettore multimediale predefinito.

5. M13(Fn+F9) Predefinito: Riproduci & Pausa.

6. M14(Fn+F10) Predefinito: Interrompi.

7. M15(Fn+F11) Predefinito: Traccia precedente.

8. M16(Fn+F12) Predefinito: Traccia successiva.

9. Fn+Pausa Premete questa combinazione di tasti per abilitare/disabilitare il rollover dell'N-Key. Il tasto Pausa lampeggia due volte per indicare che il rollover dell'N-Key è abilitato e lampeggia tre volte per indicare che il rollover dell'N-Key è disabilitato. Il rollover dell'N-Key è OFF come impostazione standard.

10. Tasto ROG (Tasto Windows / Tasto blocco maiuscole) Premete questo tasto per abilitare/disabilitare il tasto Windows. Il tasto Windows lampeggia due volte per indicare che il tasto Windows è disabilitato e lampeggia tre volte per indicare che il tasto Windows è abilitato.

Il LED del tasto ROG indica che il blocco maiuscole è attivo.

11. Manopola illuminazione Regola la luminosità della retroilluminazione.

12. Manopola volume +/- Spingete la manopola verso sinistra per silenziare il volume.

13. Fn+1/2/3/4/5/6/7/8/9/0 (Cambio profilo) Premete i tasti speciali per selezionate tra i 10 profili preimpostato, da 1 a 0.

Personalizzare la tastiera (Comandi macro, pulsanti funzione, illuminazione e altro)

Visitate il sito web ASUS all'indirizzo www.asus.com per scaricare e installare i driver aggiornati per personalizzare i comandi macro, le funzioni dei pulsanti, l'illuminazione e altro.