www.trust.com

Trust | SMART Home

SECURITY PLUS-LINE
ALMST-2000




USER MANUAL
MULTI LANGUAGE


Item 71113 Version 1.0
Visit www.trust.com
for the latest instructions

ALMST-2000 WIRELESS MAGNETIC SENSOR


1

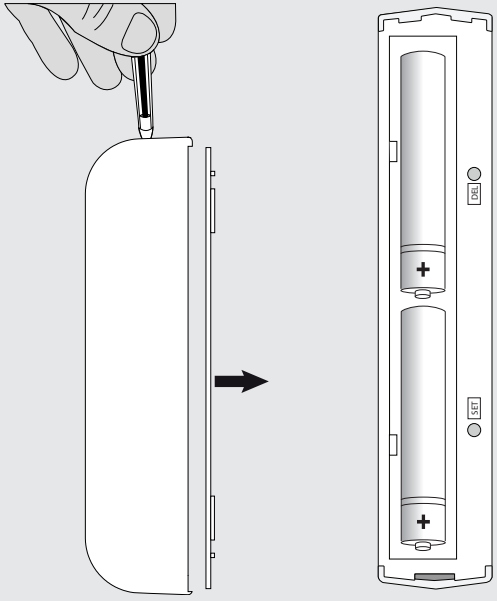


2

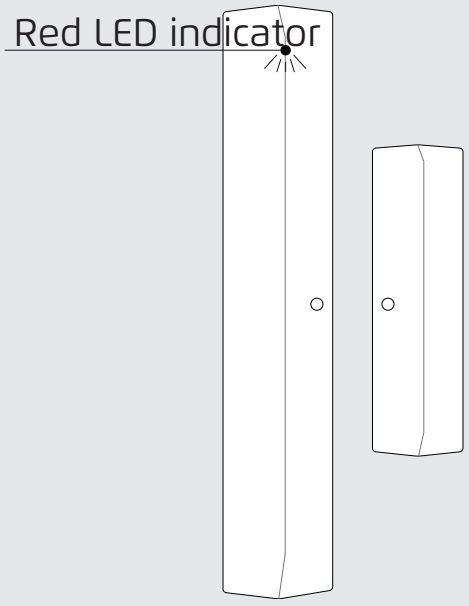


3

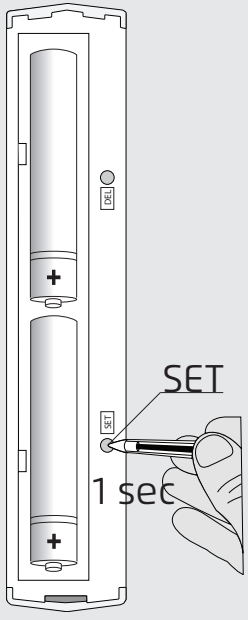


4

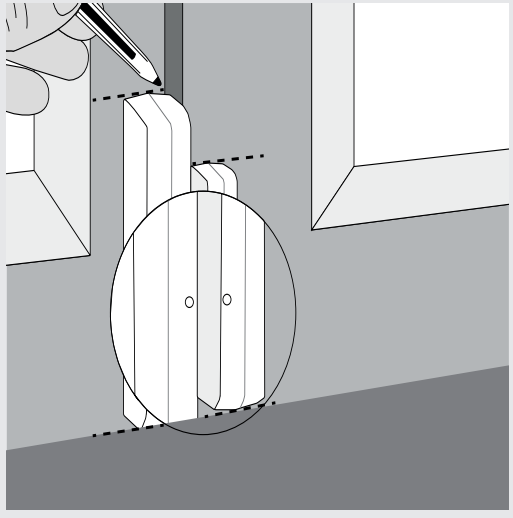


5

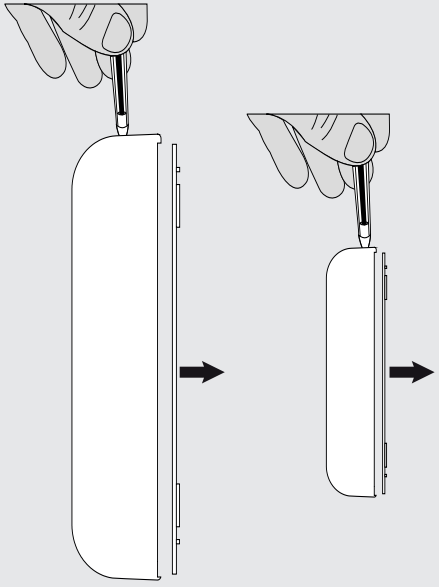


6

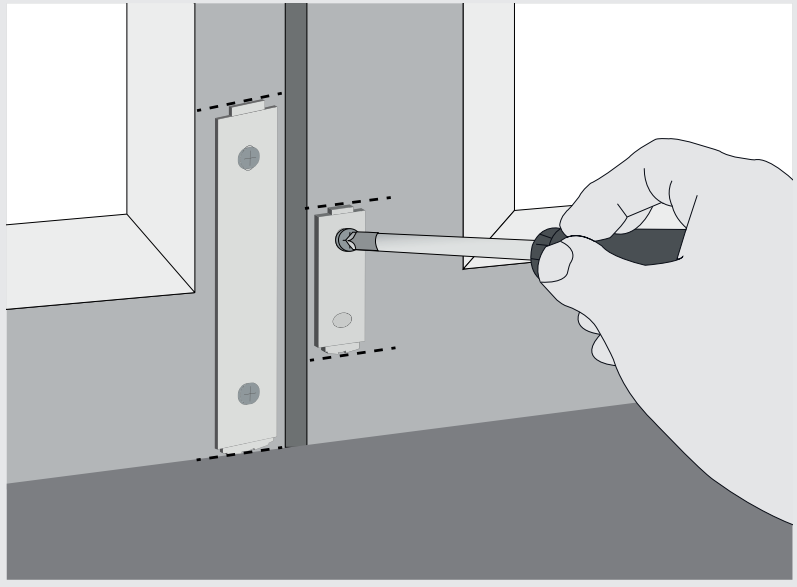


7

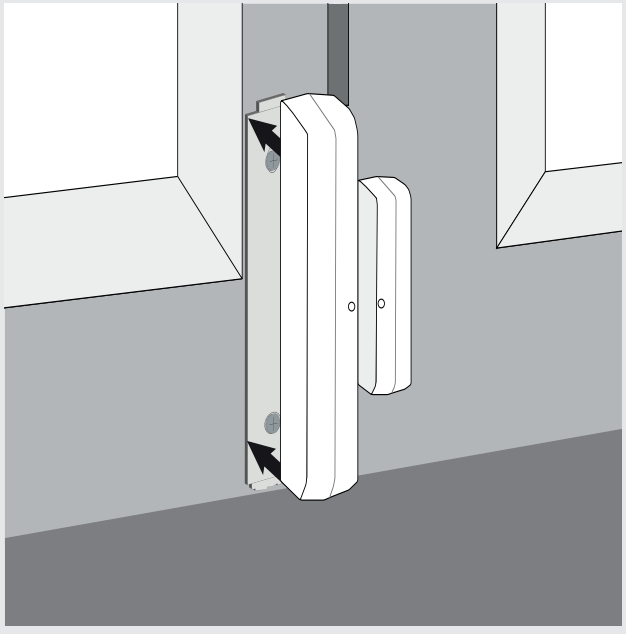


8

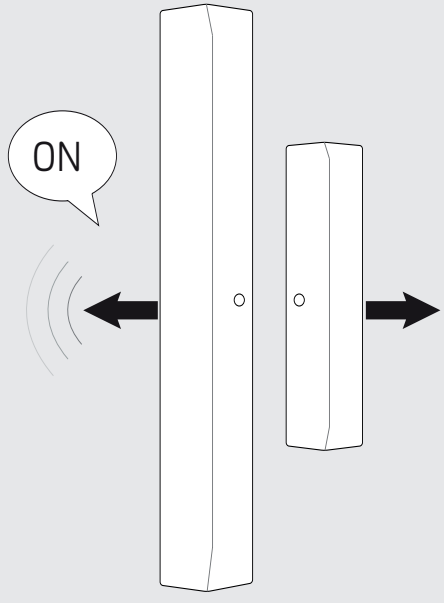

9

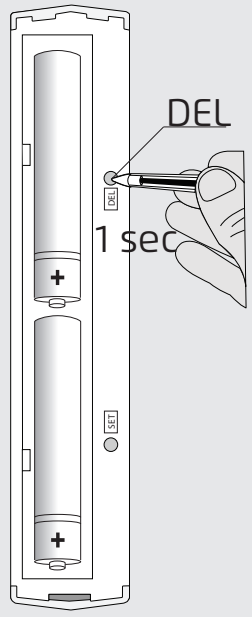
DEL
DEL
1 sec
SET

10

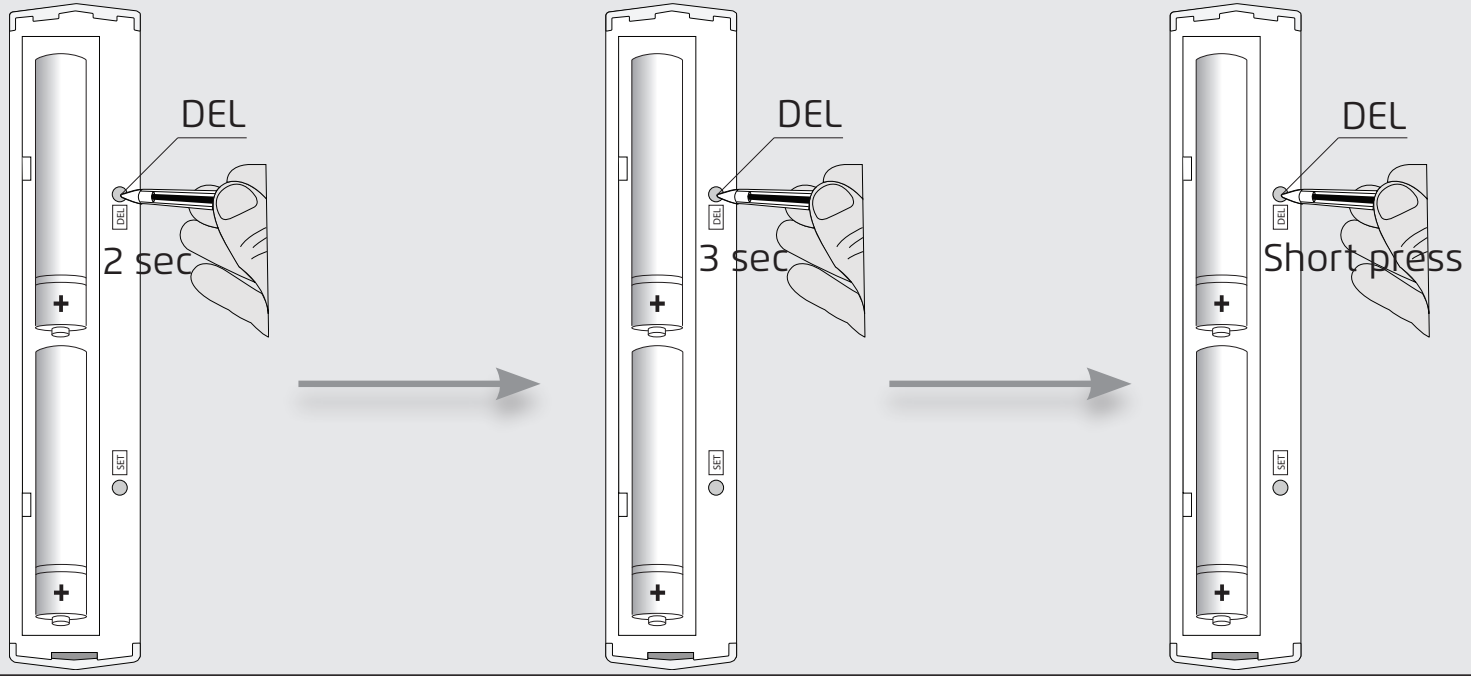
DEL
DEL
2 sec
SET
DEL
DEL
3 sec
SET
DEL
DEL
Short press
SET

EN

1. Place batteries
Push with a sharp object on top of the magnetic sensor and pull off the backside. Insert two 1,5V AAA Alkaline batteries in the slot. Observe the correct polarity of the batteries (place plus and minus on the correct side).

2. LED indicator
The magnetic sensor has a LED indicator in the housing. The LED behaviour is as followed.
Low battery: LED will blink 3x every 6 sec
Confirm pair: LED will blink 5x
Confirm unpair: LED will blink 5x

3. Pair the ALMST
Consult the manual of the Siren to activate the learn mode. Send (while the learn mode of the Siren is active) a pair-signal by pressing the SET button with a sharp object next to the battery slot of the magnetic sensor. The LED indicator will flash 5x to confirm that the pairing has been done successfully.

4. Mount the ALMST
Place the magnetic sensor on the window or door and make sure that both points on the two parts are in line with each other. Mark the top and bottom of both parts. After marking the positions remove the sensor.

5. Remove backplate from the ALMST
Open the magnetic sensor by pushing with a sharp object on top of both parts and pull off the backplate.

6. Fasten the ALMST
Screw or tape both backplates of the magnetic sensor on the window or door according to the made markings. When securing the backplates make sure both parts are mounted with as little space between as possible (max. 15mm).

7. Close the ALMST
Place both parts of the magnetic sensor back on the mounted backplates. Again make sure both points on the two parts are in line with each other.

8. Operation of the ALMST
ON-signal: Once the two parts are separated more than 15mm from each other, the sensor sends an ON-signal to the Siren.
Note: After arming the ALSIR-2000 there is a 75 sec walk-out time. 4 sec after arming the alarm windows and doors can be opened for max 1 min. After 75 sec the sensor is active. **Tip**: Arm the Siren from the outside.

9. Unpair the ALMST
Consult the manual of the Siren to activate the learn mode. Send (while the learn mode of the Siren is active) a disconnect-signal by pressing the DEL button with a sharp object next to the battery slot of the magnetic sensor. The LED indicator will flash 5x to confirm that the unpairing has been done successfully.
Note: When the sensor is not used unpair it from the Siren first before removing it.

10. Delete ALMST memory
To delete the memory of the ALMST press the DEL button for 2 seconds with a sharp object (untill the LED starts to blink). Release the button and press the DEL button again for 3 seconds. (untill the LED starts to blink fast). Press the DEL button shortly to delete the memory of the ALMDT. The LED will blink 5x to confirm the memory has been deleted.

DE

DE

FR

FR

NL

NL

IT

ES

ES

PT

PT

NO

NO

SV

FI

DA

DA

PL

1. Podłącz lampę/urządzenie i umieść odbiornik

Najpierw sprawdź, czy lampa lub urządzenie jest włączone. Następnie podłącz lampę lub urządzenie do odbiornika i włącz odbiornik do gniazda zasilania. Nie należy przekraczać maksymalnego obciążenia: 1000 W.

SK

SK

HU

HU

RO

RO

BG

1. Свържете лампата/устройството и сложете приемателя

Първо проверете дали лампата или устройството е включено. След това включете щепсела на лампата или устройството в приемателя и включете приемателя в контакт. Не надвишавайте максималната мощност: 1000 W.

EL

EL

TR

TR

RU

RU

SL

HR

HR

UA

UA

AR

AR