

Dell-Webverwaltung für Monitore

Dieser Monitor ist mit Netzwerkfunktionen ausgestattet, über die Sie Einstellungen wie die Wahl der Eingangsquelle, Helligkeit und Lautstärke ortsfern abrufen und ändern können.

Vor dem Aufruf der Webverwaltungsfunktion für den Dell-Monitor muss gewährleistet sein, dass ein betriebsfähiges Ethernet-Kabel mit dem RJ45-Anschluss an der Rückseite des Monitors angeschlossen ist.



- **Ethernet aktivieren**


Halten Sie die Tasten 1 und 3 an der Frontblende zum Einschalten 3 Sekunden lang gedrückt. Ein Netzwerksymbol  blendet sich oben links 5 Sekunden lang ein.

- **Ethernet deaktivieren**


Halten Sie die Tasten 1 und 3 an der Frontblende zum Ausschalten 3 Sekunden lang gedrückt. Ein Netzwerksymbol  blendet sich oben links 5 Sekunden lang ein.

Für den Zugriff auf das Tool Dell-Webverwaltung für Monitore müssen Sie die IP-Adressen für Ihren Computer und den Monitor festlegen.

1. Zeigen Sie die IP-Adresse des Monitors durch Drücken der Menütaste auf der Fernbedienung oder Navigation im OSD zu **Menü > Sonstiges** an. Die IP-Adresse ist standardmäßig auf 10.0.50.100 eingestellt.

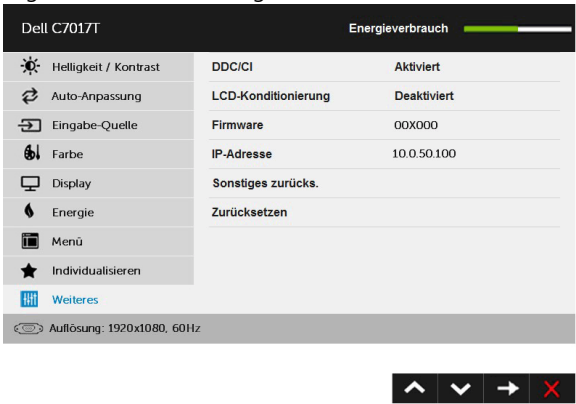


2. Legen Sie im Register IP-Eigenschaften am Computer durch Wahl von Folgende IP-Adresse verwenden und Eingabe der folgenden Werte die IP-Adresse fest: Für die IP-Adresse: 10.0.50.101, und für die Subnetzmaske: 255.0.0.0 (geben Sie in allen anderen Eintragsfeldern nichts ein).

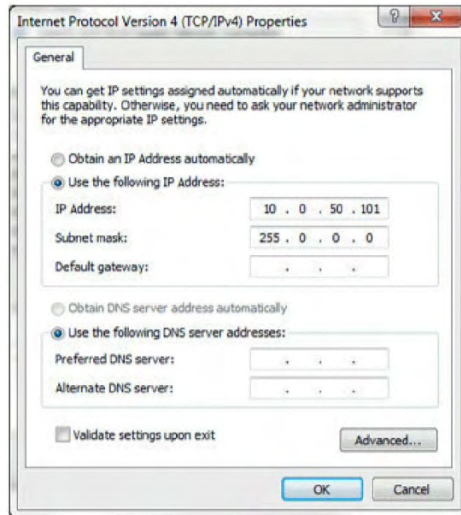

3. Die IP-Adressenkonfiguration sieht jetzt folgendermaßen aus:




Configure notebook IP Address to
10.0.50.101

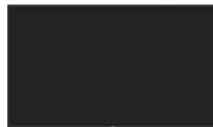


Monitor IP Address
10.0.50.100

Folgen Sie für den Zugriff auf und die Verwendung des Tools Webverwaltung die nachstehenden Anweisungen:

1. Öffnen Sie einen Webbrowser und geben Sie die IP-Adresse (10.0.50.100) des Monitors in die Adresszeile ein.

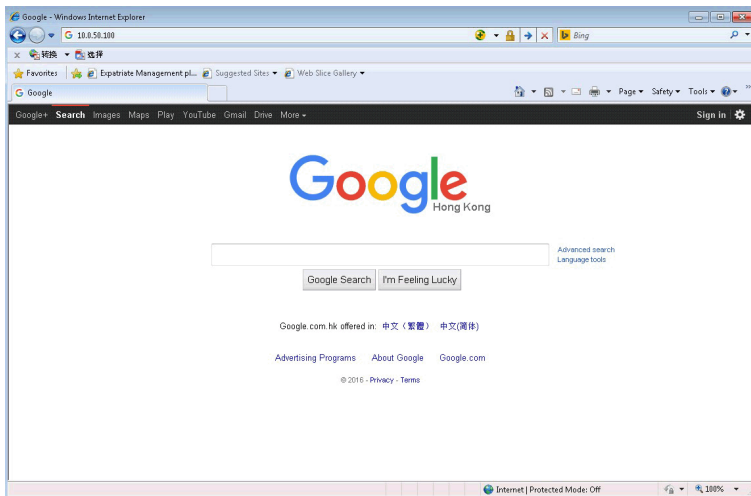

2. Die Anmeldeseite blendet sich ein. Geben Sie das Administrator-Kennwort ein, um den Vorgang fortzusetzen.

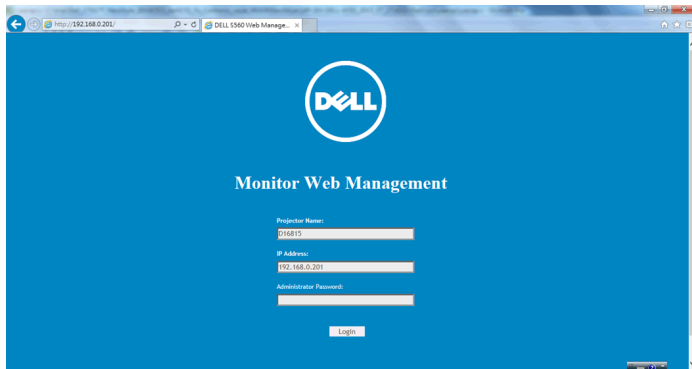

3. Die **Startseite** öffnet sich:

The screenshot shows the Dell Monitor Web Management interface. The top header includes the Dell logo and the text 'Monitor Web Management' with an 'English' language dropdown. A left sidebar contains navigation links: Home, Network Settings, Monitor Control, Firmware Update, and Security. The main content area is titled 'Home' and displays a welcome message: 'Welcome to DELL C7017T Web Management.' Below this, the 'Monitor Information' section lists the following details:

Model Name	DELL C7017T
Monitor Name	D57645
Location	no setting
Contact	no setting
Network FW Version	A52
IP Address	10.0.50.100
MAC Address	00:40:E9:1A:E1:2D
Monitor Status	ON

4. Klicken Sie das Register **Netzwerkeinstellungen** an, um die Netzwerkeinstellungen anzuzeigen.

The screenshot shows the 'Network Settings' page in the Dell Monitor Web Management interface. The left sidebar is the same as in the previous screenshot. The main content area is titled 'Network Settings' and contains two sections:

Network Adapter Properties

Model Name:	DELL C7017T
Monitor Name:	D57645
Location:	
Contact:	

Below the table is an 'Apply' button.

IP Settings

Obtain IP address automatically: ☐ Use the following IP address: ☒

IP Address	10	0	50	100
Subnet Mask	255	255	0	0
Gateway	10	0	0	254
DNS Server	255	255	255	255

Below the table is an 'Apply' button.

Reset Network Settings

5. Klicken Sie **Monitorkontrolle** an, um den Monitorstatus anzuzeigen.
Es dauert etwa 3 bis 5 Minuten, bis die Monitordaten in der Webverwaltung aktiviert sind.

The screenshot shows the Dell Monitor Web Management interface. The top bar includes the Dell logo and the text "Monitor Web Management" with a language dropdown set to "English". A left sidebar contains navigation links: Home, Network Settings, Monitor Control (highlighted), Firmware Update, and Security. The main content area is titled "Monitor Control" and contains several sections: "Monitor Status" with radio buttons for "Power ON" (selected) and "Power OFF"; "Image Control" with dropdown menus for "Source Select", "Preset Mode", and "Aspect Ratio", and sliders for "Brightness" (75), "Contrast" (75), and "Sharpness" (50), each with an "Apply" button; "Audio Control" with a "Volume" slider (100) and "Apply" button, and "Speaker" options "Enable" (selected) and "Disable"; "Keypad Control" with "Keypad" options "Lock" and "Unlock" (selected); and a "Reset Monitor Control Settings" button. A note at the bottom states: "**Some of Monitor status will be updated between 3~5 mins".

6. Klicken Sie auf **Sicherheit**, um ein Kennwort einzurichten.

The screenshot shows the Dell Monitor Web Management interface with the "Security" section selected in the sidebar. The main content area is titled "Security" and contains the "Web Management Login Option" section. It includes a "Password Login" section with radio buttons for "Enable" and "Disable" (selected). Below this are three input fields: "Current Password", "New Password", and "Confirm Password". A "Save" button is located at the bottom right of the form.

7. Aktualisieren Sie die **Firmware** für die Netzwerkkarte Ihres Monitors. Sie können die aktuellste Netzwerk-Firmware, sofern verfügbar, von der Dell-Support-Website **www.dell.com/support** herunterladen.

