
SALORA

32″ HD LED TV

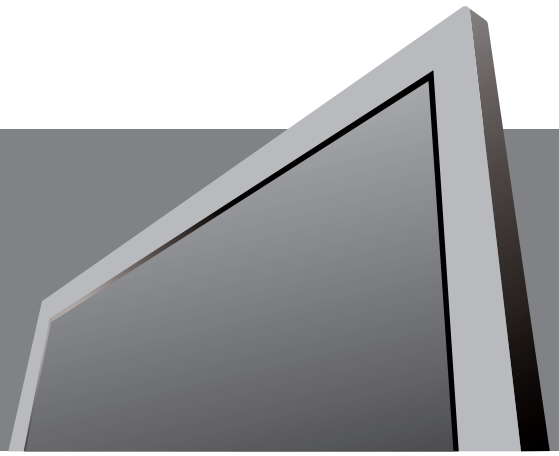

USER MANUAL

MODEL NO.:32LTC2100

IMPORTANT
Please read this manual carefully before installing and operating the TV.
Keep this manual handy for further reference

Index

Preparations Guide
Safety Information 2
Important Safety Precautions 3
Installation and Connection of the TV
TV Mount 4
TV Buttons and Interface 5
External Device connection Diagram 6
TV Installation and connection 7
Installation Instructions TV Stand 7
TV Menu
First Time Installation 8
Channel Menu 10
Picture Menu 15
Sound Menu 17
Time Menu 18
Lock Menu 20
Hotel Mode 22
Setup Menu 23
PC Menu
Screen Menu 26
Media Menu
Media Operation 27
Photo Menu 28
Music Menu 29
Movie Menu 30
Text Menu 31
Other Information
Help 32
Specifications 33
Remote Control 34



High voltages are used during the operation of this device. To reduce the risk of an electric shock, do not remove or open the cabinet , please refer to qualified personnel for servicing.

Opening or modifying the TV could lead to personal damage, caused by an electric shock, do not attempt to open the cabinet, contact the customer service for assistance.

	**The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating information in the enclosed manual of the appliance.**
	**Warning** **The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.**


Important Safety Precautions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety, If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments /accessories specified by the manufacturer
12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time. Caution:
14. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
15. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
16. The socket-out shall be installed near the equipment and shall be easily accessible.
17. This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instructions have been adhered to.
18. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
19. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
20. Wall or Ceiling Mount - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
21.  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
22. The USB terminal should be loaded with 0.5 A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions. unless you are qualified to do so.
23. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
24.  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth
25. The maximum using environment temperature is 45 degrees. The Maximum using altitude is 2000 meters.

TV Mount

Fixing the TV on the wall

1. Place a soft cloth on a table to avoid scratching the screen, then gently place the TV on the table.
2. Remove the screws which are fixed on the bottom of the stand (Photo 1) by using a screwdriver. Take of the bottom stands and screws carefully.
3. Choose a VESA standard TV mount that fits the dimensions of the TV.
4. Fix the side brackets to the TV and the main wall bracket on the wall, following the instructions of the TV mount you've bought. (Photo 2 and 3).
5. Fix the TV to the wall mount.

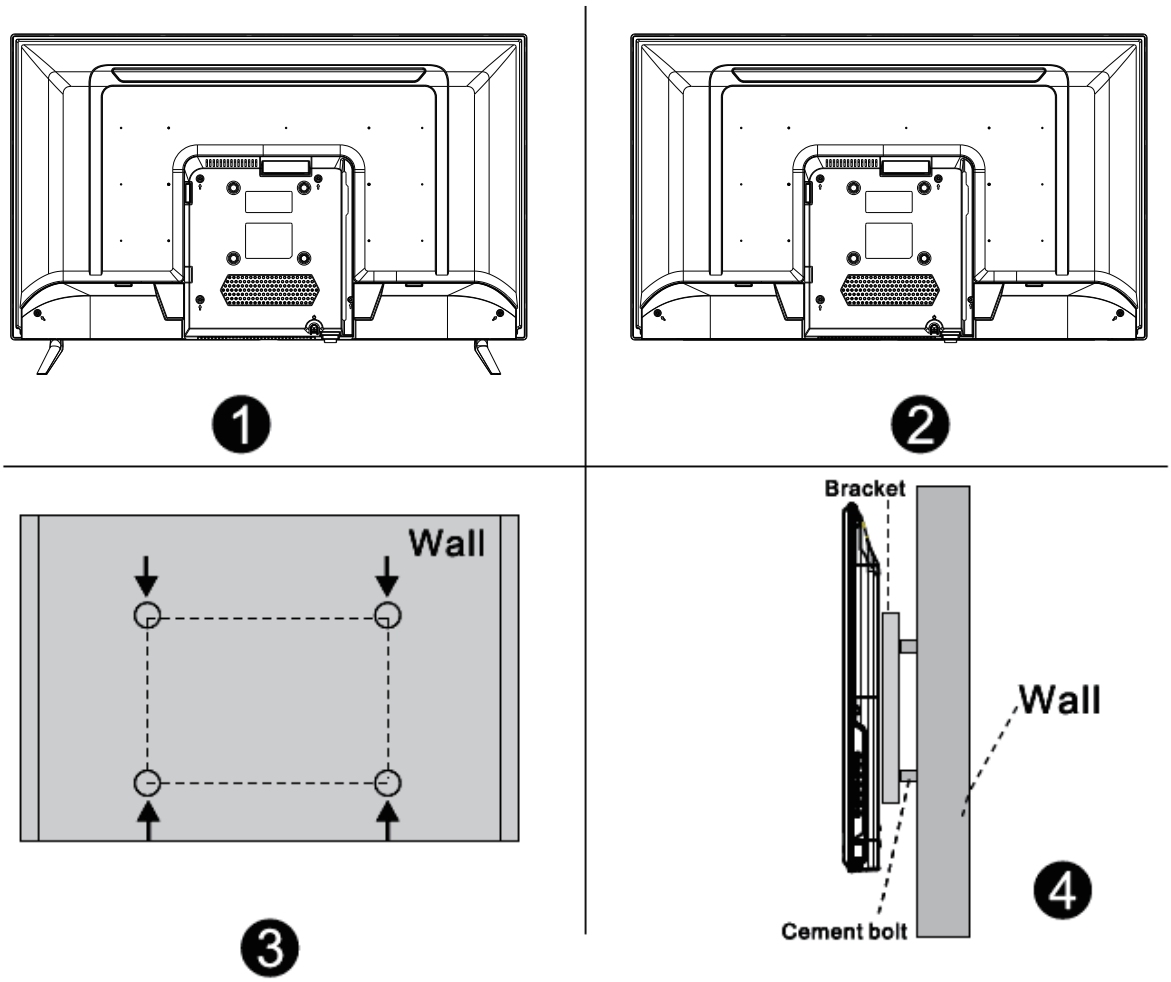

Note:

1. The wall mount is not included and optional .
2. Please take care there are no objects around the TV when you fix the wall mount. Remove any items away from the TV.
3. You could hire a professional technician to install the wall mount.
4. The picture shown is only for reference.
5. Please follow the instructions in the manual of the mount bracket.
6. Always use a VESA compliant wall mount.

TV Buttons and Interface

TV Buttons

Note: The key instructions are subject to below.



Display \ Hide key icon : When there is no button icon popping up, press the key, the key icon will pop up like the picture shows above, the key icon will automatically turn off after 5 seconds of inactivity.

Icon selection : Short press the button, move the loop to the right, select the icon.

Icon function selection : Long press the key to achieve the function of the selected icon.

Icon Description :

: **Power off Icon** : Corresponding to the "POWER" button of remote .

: **Menu Icon** : Corresponding to the "MENU" button of remote.

: **Source Icon** : Corresponding to the "SOURCE" button of remote.

: **CH+ Icon** : Corresponding to the "CH+" button of remote.


: **CH- Icon** : Corresponding to the "CH-" button of remote.

: **Volume+ Icon** : Corresponding to the "VOL+" button of remote.


: **Volume- Icon** : Corresponding to the "VOL-" button of remote.


Interface


Note: The following table provides indicative information about the interface. The actual position and arrangement may vary per model.


	AV input External AV Signal Input And Relevant Right/Left Sound Channel		ANT 75 Connect the antennal/cable TV input (75/VHF/UHF)
	CI SLOT The card reader input CI (common interface) this requires CAM (conditional access module) used for pay TV.		USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	COAXIAL Connect the SPDIF receiver.		HDMI input Digital signal input from HDMI video connector.


External Device Connection Diagram

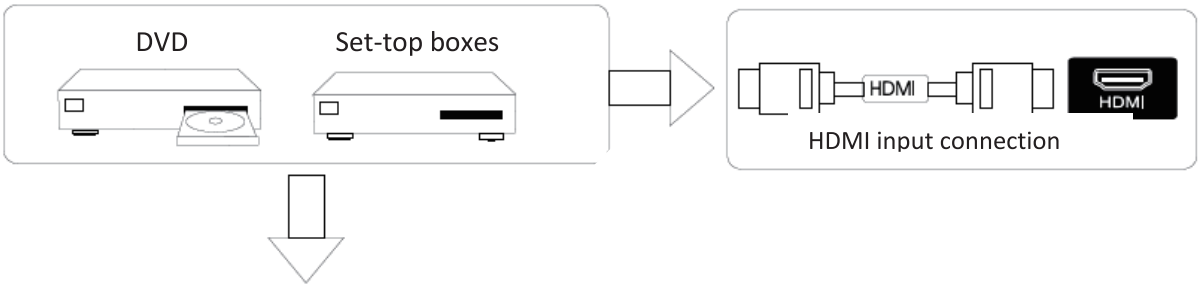

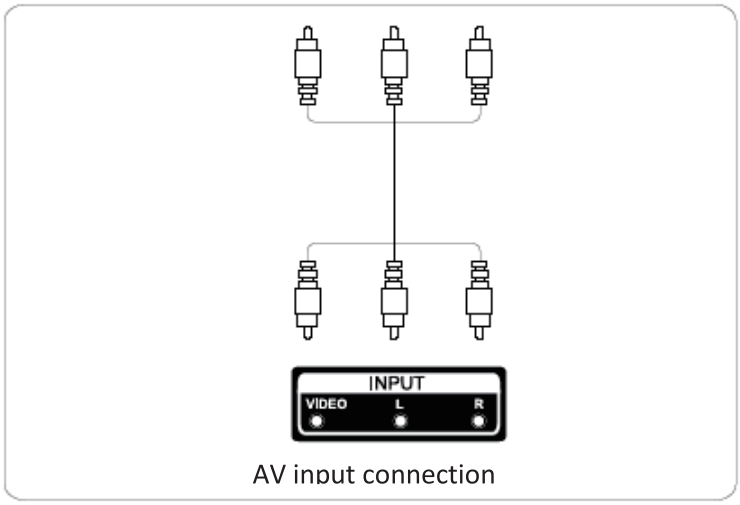


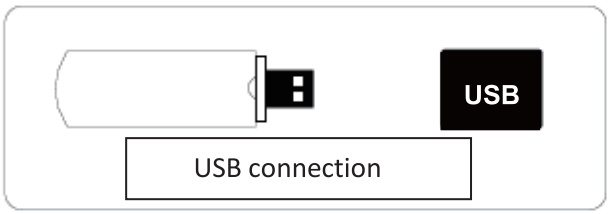

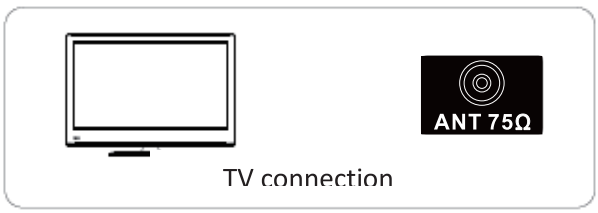

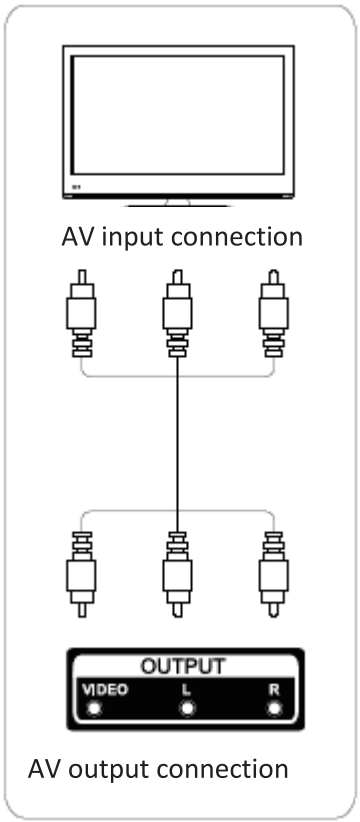


Installation and Connection TV

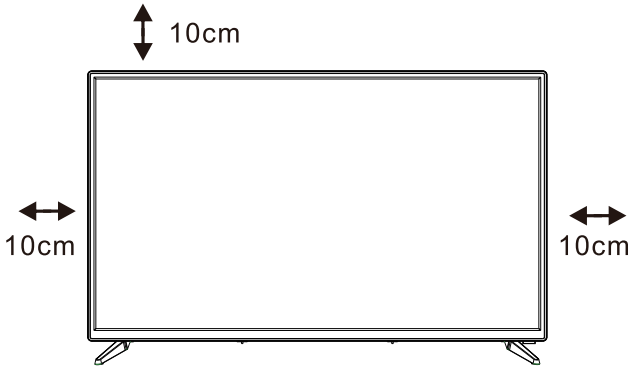

Installation of the TV

Place the TV on a flat and level surface, which can bear the weight of the device. To avoid any danger, please do not expose the TV to water or heat (such as direct sunlight, candles, heating devices, etc.). Do not block the ventilation openings at the back of the TV. Leave at least a 10cm space around the TV set.

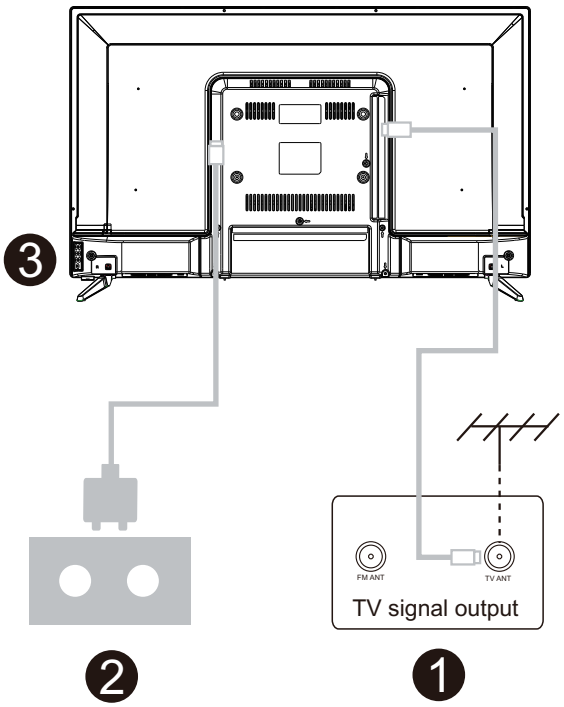

Connecting the antenna and power supply

1. Connect the antenna cable to the antenna socket on the back of the TV.
2. Plug the power cord of the TV (AC 100 – 240V~50/60 Hz) into the wall socket.

Turn on the TV

3. Press the power button of the TV, the indication light will turn green. If the indication light is red, the TV is in standby mode. Press the power button of the remote control to turn on the TV.

Note:

The picture shown is for reference purposes only.

Installation Instructions TV Stand

1.Open the carton and remove the TV and scattered accessories and base (some models without base).

2.In order to avoid damaging the TV,please cover it with soft mattress,put it on the table, face down on the soft material and screw the neck of the base to the TV.


3.screw the base and connected to the TV.

4. the installation is complete.


Note:

Picture for reference purposes only.

Please prevail in kind

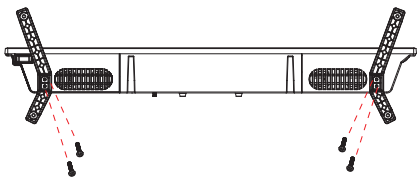

Suggestion:
To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

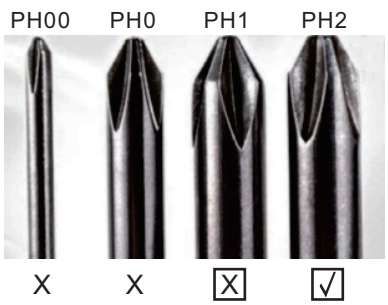

First Time Installation

Connect an RF cable from the TV's input "RF-in" to your TV Aerial socket.


Select Language

Press the a / d button to select the language for the display of the menu's and messages.

Select Country

Press the w / s button to highlight the country menu.

Press the a / d button to select the country of your choice.

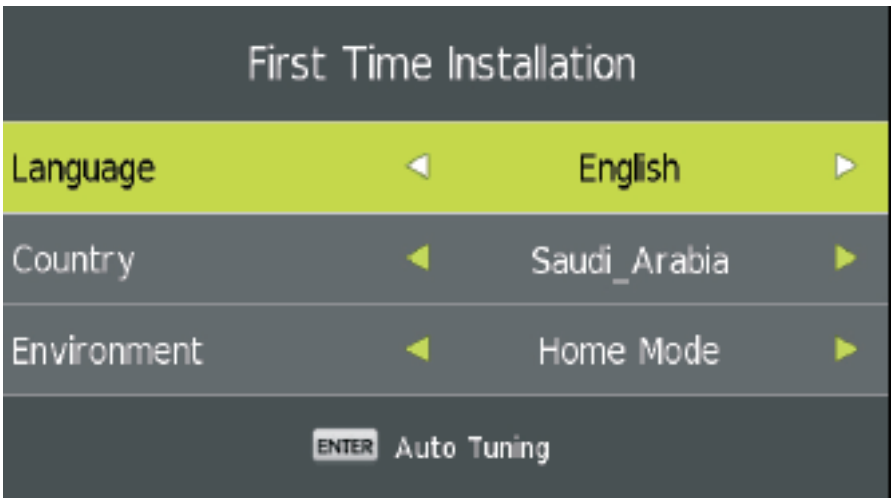



First Time Installation


Auto Tuning

Automatic Tuning of ATV and DTV. If you would like to skip the auto-tuning, press the MENU button first, and then the left arrow button to confirm.







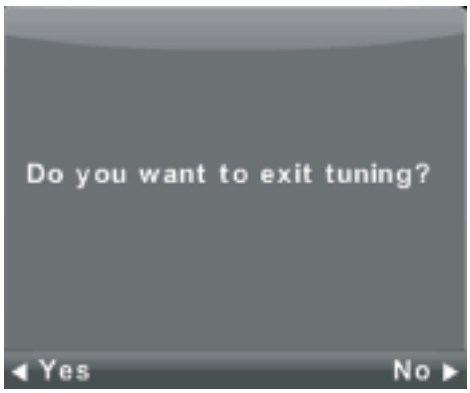

Main Menu Operation

Channel Menu

Press the **MENU** button to display the main menu.

Press the a / d button to select **CHANNEL** in the main menu.




1. Press w / s button to select the option that you wish to adjust in the **CHANNEL** menu.
2. Press **ENTER** to adjust.
3. After finishing the adjustment, press **Enter** to confirm and save and return to the previous menu.

Auto tuning


Press the w / s button to select Auto Tuning, then press **Enter** to enter.





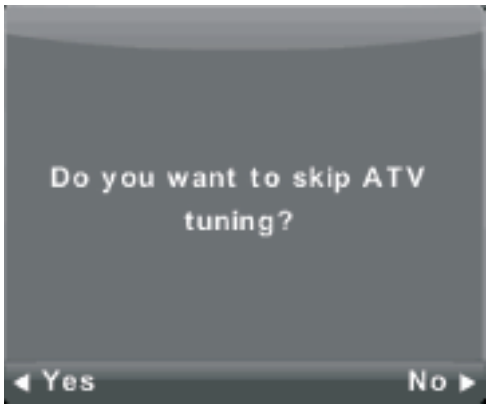



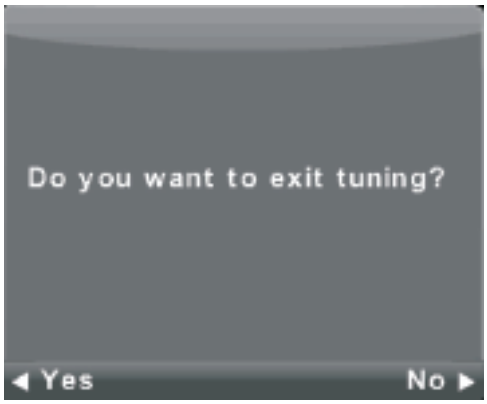

ATV Manual Tuning



Current CH	Set the channel number
Color System	Select the color system (AUTO, PAL, SECAM)
Sound System	Select the sound system
Fine-tune	Fine-tune the frequency of the channel
Search	Start searching the channel

DTV Manual Tuning

Press the w / s button to select DTV Manual Tuning, then press the **Enter** button to enter the sub-menu.

Press the a / d button to select channel, then press the **Enter** button to search the program.



Program Edit

Press the w / s button to select Program Edit, then press the **Enter** button to enter the sub-menu.





The three colored keys are the shortcut keys for programming the channels.

First press the w / s button to highlight the channel you want to select, then:

Press the Red button to delete the program in the list.

Pres the Yellow button to move the channel in the favourite list.


Press the blue button to skip the selected channel.

Press the Fav. button to add or remove the channel to/from your favourite list.

(Your TV set will skip the channel automatically when you use the CH+/- button to view the channels)

Schedule List

Press the ｗ / ｓ button to select Schedule List, then press the **Enter** button to enter the sub-menu (if available in the actual source).

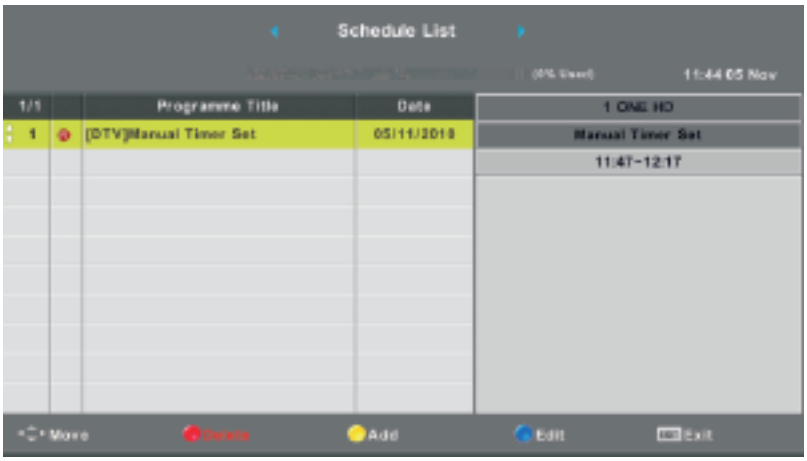

Press the YELLOW button to enter the interface below



If the scheduled recording time doesn't correspond, it will display a warning message



Signal Information

Press the ｗ / ｓ button to select **Signal Information**, then press the **Enter** button to see the detailed signal information. Only available with a DTV signal.



CI Information (TV must support the CI function)


Press the ｗ / ｓ button to select CI Information, then press the Enter button to display the information once you have inserted the CI card.

The channel List in Satellite Source (Needs to support the DVB-S2 function)



Auto Tuning

Press the **w / s** button to select Auto Tuning, then press **Enter/ d** to enter.

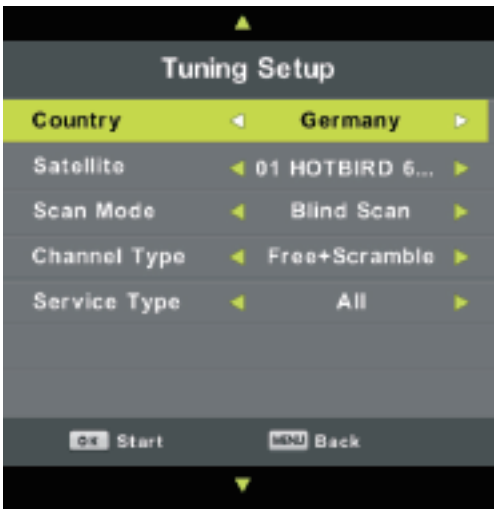



Dish Setup

Press the **w / s** button to select Dish Setup, then press **Enter/ d** to enter.



Picture Menu

Press the **MENU** button to display the main menu.

Press the a / d button to select **PICTURE** in the main menu.




Note: 120Hz MODE Function is only supported with an UHD TV

1. Press w / s button to select the option that you wish to adjust in the **PICTURE** menu.
2. Press **OK** to adjust.
3. After finishing the adjustment, press **Enter** to confirm and save and return to the previous menu.

Picture mode

Press w / s button to select Picture Mode, then press the **OK** button to enter sub-menu. You can personalize the values of contrast, brightness, colour, sharpness and tint when Picture is in **Personal** mode.

TIP: Press **PMODE** on the remote control to access the Picture Mode directly.

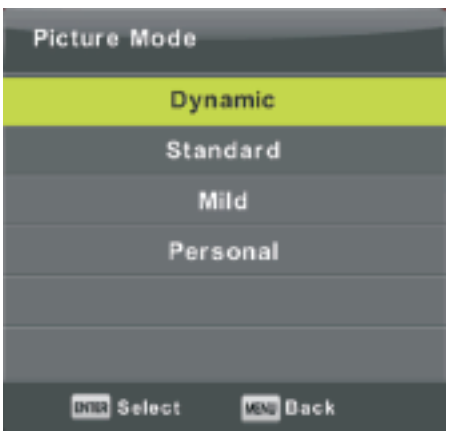

Contrast/Brightness/Colour/Tint/Sharpness

Press w / s button to select the option, then press OK button to adjust.

Contrast	Adjust the highlight intensity of the picture, the shadow of the picture will be invariable.
Brightness	Adjust the light output of the entire picture, this will affect the dark region of the picture.
Color	Adjust the saturation of the colour based upon you own preference.

Tint Adjust the image colour density.
Sharpness Adjust the image edge sharpness.

Colour Temp



Adjust the overall colour of the image.
Press **w / s** button to select **Colour Temp**, then press OK to enter sub-menu.
Press **a / d** to select (Cool/Medium/Warm). Temperature is in **User** mode.

Cool	Produces a gentle blue-hued image.
Normal	Produces a vivid image.
Warm	Produces a red-hued image.

Noise reduction



Adjust the image noise. Press **w / s** button to select **Noise reduction**, then press **OK** to enter sub-menu.
(Off/Low/Medium/High).


Off	Turn off noise reduction
Low	Detect and reduce low video noise.
Middle	Detect and reduce moderate video noise.
High	Detect and reduce enhanced video noise.
Default	Set as default.

120Hz MODE (only with UHD TV)



Adjust the motion compensation.
Higher setting may improve the motion performance when watching sports or images with high motions.
Press **a / d** to select (Off/Low/Medium/High)

HDMI Mode

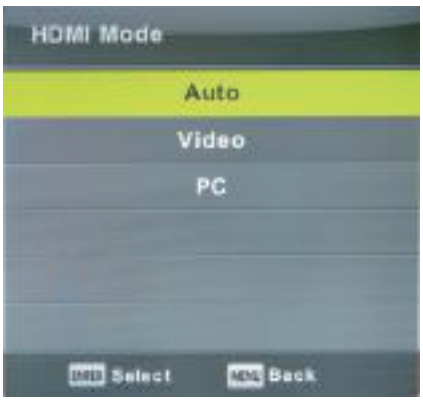

Press **w / s** button to select **HDMI Mode**, then press **OK** to enter sub-menu.
Press **a / d** to select (Auto, Video, PC)

Sound Menu

Press the **MENU** button to display the main menu.

Press the a / d button to select **SOUND** in the main menu.



1. Press w / s button to select the option that you wish to adjust in the **SOUND** menu.
2. Press **Enter** to adjust.
3. After finishing the adjustment, press **Enter** to confirm and save and return to the previous menu.

Sound Mode



Press w / s button to select **Sound Mode**, then press **Enter** to enter sub-menu.

Press a / d to select.

You can change the Treble and Bass values when the sound is in Personal mode.

Note: Press **SMODE** on the remote control to access the Sound Mode directly.

Standard	Produces a balanced sound in all environments.
Music	Preserves the original sound. Good for musical programs.
Movie	Enhances treble and bass for a rich sound experience.
Sports	Enhances vocals during sports programs.
User	Select to customize sound settings.

Balance

Press w / s to select the option, then press a / d to adjust.

Auto Volume Level

Press w / s to select Auto Volume Level, then press a / d to select On/Off.

SPDIF Mode

Press w / s to select SPDIF Mode, then press a / d to select Off/PCM/Auto.

AD Switch

Press w / s to select AD Switch, then press a / d to select On/Off. Audio Description, a voice guide will describe the display on the screen. Only for the models which support this function.

Note:

Balance: Adjust the left and right channel output balance.

Auto Volume: This option reduces the difference between the volume of different programs automatically.

Time Menu

Press the **MENU** button to display the main menu.



Press the a / d button to select **TIME** in the main menu.

1. Press w / s button to select the option that you wish to adjust in the **Time** menu.
2. Press **Enter** to adjust.
3. After finishing the adjustment, press **Enter** to confirm and save and return to the previous menu.


Time Zone

Press w / s button to select **Time Zone**, then press **Enter** to enter sub-menu.



Press w / s a / d to select the time zone.

Sleep Timer

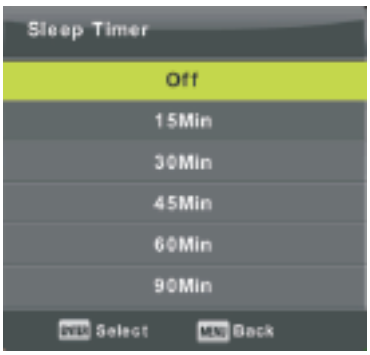

Press w / s button to select **Sleep Timer,** then press Enter to enter sub-menu.

Press w / s to select.
(0ff/15min/30min/45min/60min/90min/120min/240min).

Auto Stand-by



Press w / s button to select **Auto Standby,** then press **Enter** to enter sub-menu.

Press w / s to select.

The TV will go in Standby mode if the TV is not operated for the set time.

OSD Timer




Press w / s button to select **OSD Timer,** then press **Enter** to enter sub-menu.

Press a / d to select.

Lock Menu

Press the **MENU** button to display the main menu.

Press the a / d button to select **LOCK** in the main menu.

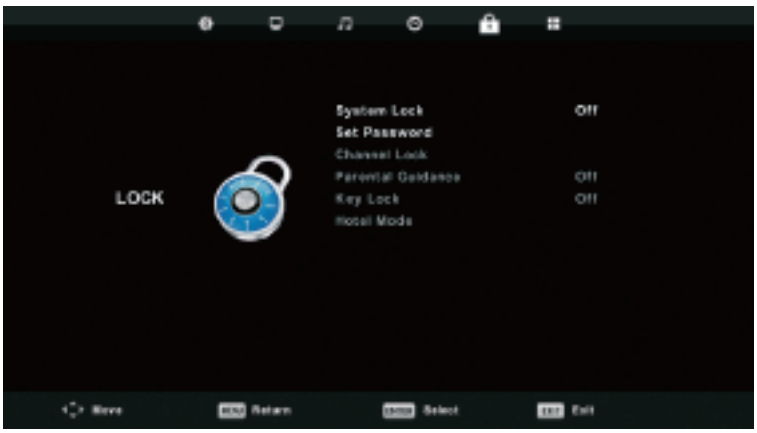

1. Press w / s button to select the option that you wish to adjust in the **LOCK SYSTEM** menu.
2. Press **Enter/** a / d to adjust.
3. After finishing the adjustment, press **Menu** to confirm and save and return to the previous menu.

Lock System



Press w / s button to select **Lock System,** then press **Enter** to select the password.


The default password is 0000/8888 , if you have forgotten your password, contact our customer service.

Set password




Press w / s button to select **Set Password.** Then press Enter to enter the sub-menu to set a new password.

Channel Lock

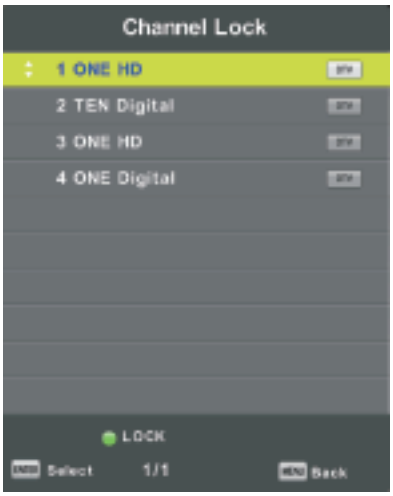

Press w / s button to select **Channel Lock.** Then press Enter to enter the sub-menu to select.
Press the Green button to lock or unlock the channel.

Parental Guidance

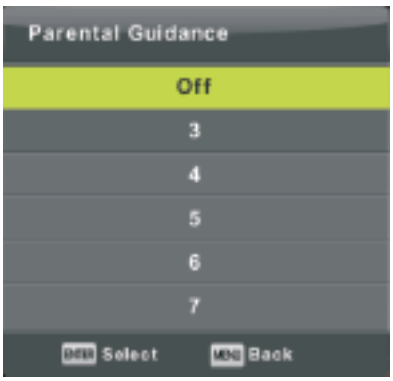

Press w / s button to select **Parental Guidance.** Then press Enter to enter the sub-menu to select the age suitable for your children.

Key Lock

Press w / s to select Key Lock, then press a / d to select On/Off.
When you have activated the key lock function, it is not possible to use the key panel buttons.

Hotel Mode (If supported by your TV model)



1. Press **w / s** button on the remote control to select Hotel Mode in the **LOCK** menu.
2. Press **Enter** on the remote control to enter the sub-menu.
3. After finishing the adjustment, press **Menu** to confirm and save and return to the previous menu.

Hotel Mode

Press **w / s** to select Hotel Mode, then press **a / d** to select On/Off.

Source Lock

Press **w / s** to select Source Lock, then press **Enter** to enter the sub-menu to select.

Default Source

Press **w / s** to select Default Source, then press **Enter** to enter the sub-menu to select.

Default Prog

Press **w / s** to select Default Prog, then press **a / d** to adjust. This function is only available when the default source is TV.

Max Volume

Press **w / s** to select Max Volume, then press **a / d** to adjust.

Clear Lock

Press **w / s** to select Clear Lock, then press **Enter** to delete all the Lock setting you have set.

Setup Menu

Press the **MENU** button to display the main menu.

Press the a / d button to select **SETUP** in the main menu.



1. Press w / s button to select the option that you wish to adjust in the **SETUP** menu.
2. Press **Enter/** a / d to adjust.
3. After finishing the adjustment, press **Enter** to confirm and save and return to the previous menu.

OSD Language

Select the OSD menu language you wish to be displayed. The default OSD menu language is English.


Press w / s a / d to select the OSD menu language.



TT Language

Press w / s to select TT Language, then press **Enter** to enter the sub-menu.

Press w / s a / d to select the TT Language.

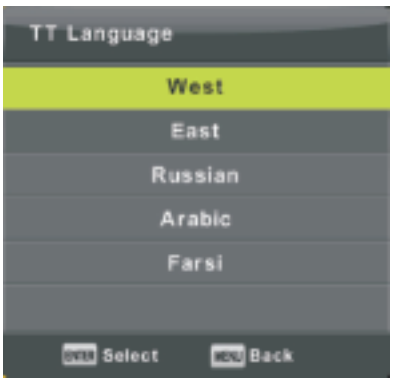

Audio Languages

Press w / s to select Audio Language, then press **Enter** to enter the sub-menu.
Press a / d to select the Primary Audio Language.
Press w / s a / d to select the Audio Language.



Subtitle Language

Press w / s to select Subtitle Language, then press **Enter** to enter the sub-menu.
Press a / d to select the Primary Subtitle Language.
Press w / s a / d to select the Subtitle Language.




Hearing Impaired

Press w / s to select Hearing Impaired, then press **Enter** to select On/Off.

PVR File System

Press w / s to select PVR File System, then press **Enter** to enter the sub-menu.
Press w / s to select the Check PVR File System, then press Enter to enter and the USB speed will be checked.

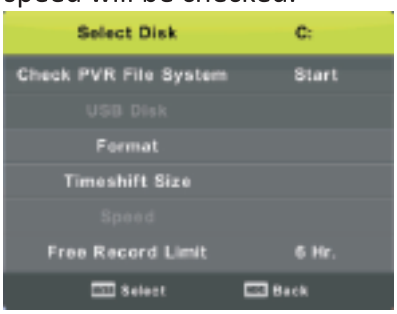

Aspect Ratio

Press **w / s** to select Aspect Ratio, then press **Enter** to enter the sub-menu.

Press **w / s** to select Aspect Ratio (Auto, 4:3, 16:9, Zoom1, Zoom2).



Blue Screen

Press **w / s** to select Blue Screen, then press **Enter** to select On/Off.

First Time Installation

Press **w / s** to select First Time Installation, then press **Enter** to enter.

Reset


Press **w / s** to select Reset, then press **Enter** to enter the sub-menu.

Software Update (USB)

Press **w / s** to select Software Update (USB), plug your USB device in the USB slot, then press **Enter** to start the update.

HDMI CEC (Only models which support HDMI CEC/ARC function)

Press **w / s** to select HDMI CEC, then press **Enter** to enter the sub-menu.

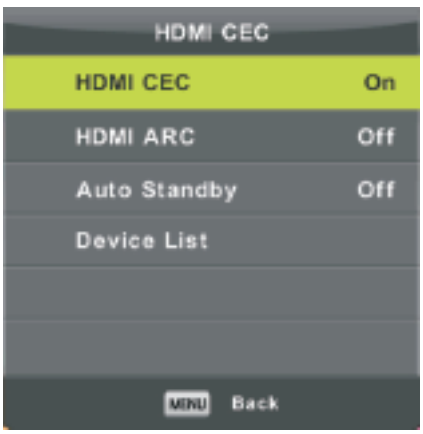

HDMI CEC	Press **a / d** to turn HDMI CEC On/Off
HDMI ARC	Press **a / d** to turn HDMI ARC On/Off
Auto Standby	Press **a / d** to turn Auto Standby On/Off
Device List	Press Enter to open the main menu of the device.

Screen Menu

Press the **MENU** button to display the main menu.

Press the a / d button to select **SCREEN** in the main menu.



1. Press the w / s button to select the option that you wish to adjust in the **SCREEN** menu.
2. Press **Enter/** a / d to adjust.
3. After finishing the adjustment, press **Enter** to confirm and save and return to the previous menu.

Auto Adjust

Press **Enter** to start adjusting **H-Offset/V-Offset/Size/Phase** automatically.

H-Offset

Adjust the horizontal position of the picture

Press the w / s button to select **H-Offset**, then press the Enter button to enter the sub-menu.

V-Offset

Adjust the vertical position of the picture

Press the w / s button to select **V-Offset**, then press the Enter button to enter the sub-menu.

Size

Adjust the display size

Press the w / s button to select **Size**, then press the Enter button to enter the sub-menu.

Phase

Adjust the horizontal interference lines

Press the w / s button to select **Phase**, then press the Enter button to enter the sub-menu.

Position Reset

Press the w / s button to select **Position Reset**, then press the Enter button to enter.

Media Operation

Note: Before operating the **Media** menu, plug in your USB device, press the SOURCE button on the remote control and set it on **Media**.




Press the w / s button to select **Media**, then press the Enter button to enter.

Press the a / d button to select the option you wish to adjust in the main **Media** menu, then press **Enter** to enter.


Photo Menu

Press the **w / s** button to select **PHOTO**, then press the **Enter** button to enter.
Press **EXIT** to return to the previous menu and exit.

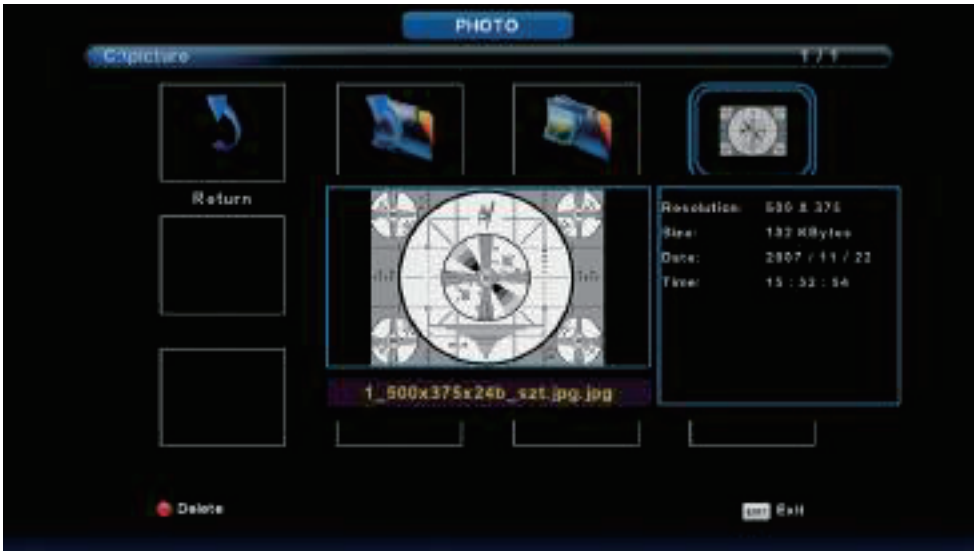

Press the **a / d** button to select the file you want to watch in the file selecting menu, then press **Media** to display the file.

When you highlight the selected option, the file information will appear on the right of the screen and a preview of the picture will appear in the centre.

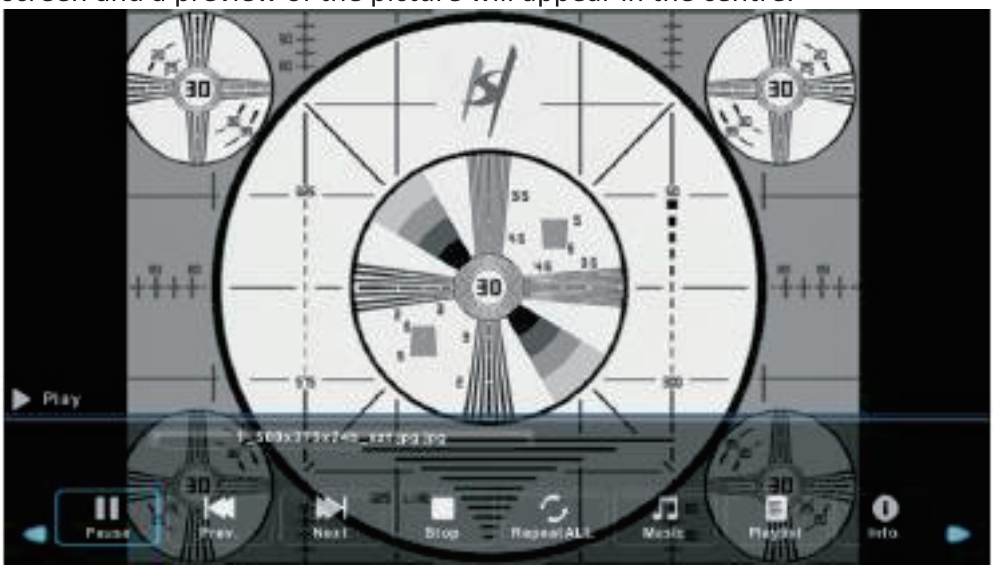

Music Menu

Press the w / s button to select **MUSIC**, then press the **Enter** button to enter.
Press **EXIT** to return to the previous menu and exit.





Press the a / d button to select the drive disk you want to watch, then press Enter to enter.
Press the a / d button to select the previous/next file.



Movie Menu

Press the **w / s** button to select **MOVIE**, then press the **Enter** button to enter.

Press **EXIT** to return to the previous menu and exit.




Press the **a / d** button to select the drive disk you want to watch, then press Enter to enter.

Press **Media** to display the selected movie.

Press the display button to display the menu you want to run at the bottom of the screen, then press **Enter** to operate.

Press **EXIT** to return to the previous menu and exit.

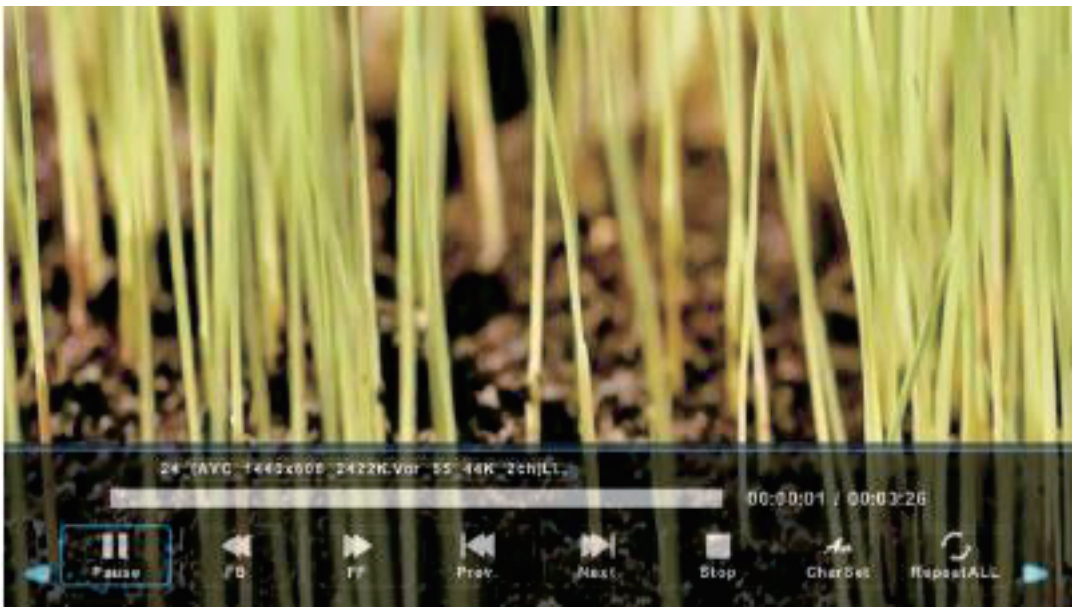


Text Menu

Press the w / s button to select **TEXT**, then press the **Enter** button to enter.
Press **EXIT** to return to the previous menu and exit.



Press the a / d button to select the drive disk you want to watch, then press **Enter** to enter.
Press the a / d button to return to the previous menu.

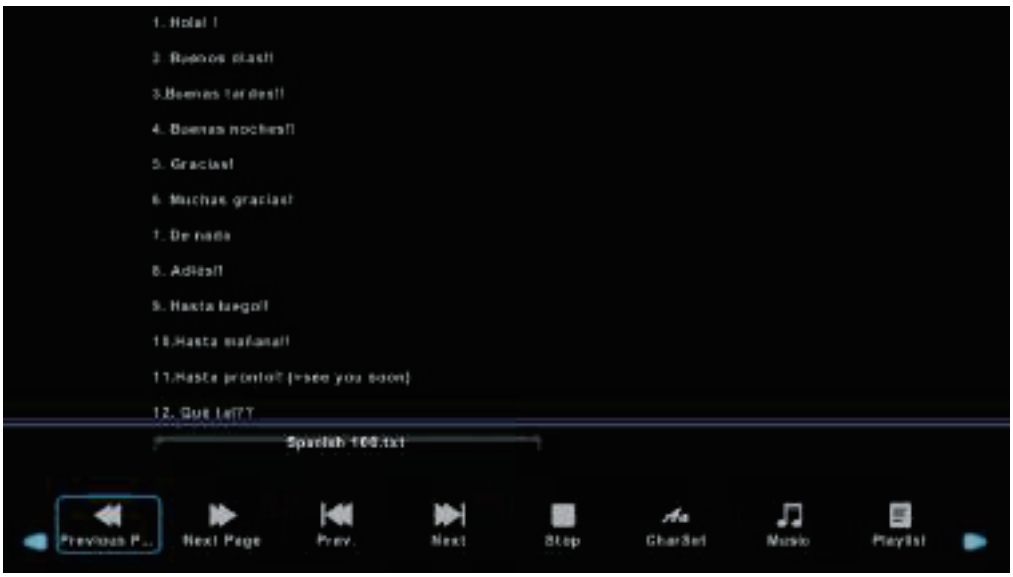

Help

No power	Check if the AC power cord of the TV is plugged in. if the power cord is plugged in, remove it and plug it in again after 60 seconds and switch the TV on again.
No proper signal reception	• Reception of the TV signal may be interfered due to high buildings or mountains in the vicinity. You can try to adjust the reception by tuning manually or change the direction of the outdoor antenna. • If you use an indoor antenna, sometimes the reception can be of poor quality. Try to redirect the antenna or use an outdoor antenna instead.
No picture	• Check if the cable of the antenna at the back of the TV set is plugged in correctly • Try different channels to check if it is a general reception problem or of a specific channel.
Video but no audio	• Increase the volume. • Check if the mute function is activated or not. Press the mute button on the remote control to resume the sound.
Audio but color error or no picture	• Adjust contrast and brightness of the picture.
Display of “snow” and noise	• Check if the antenna cable is plugged in correctly.
Power line interference	• Some electrical devices, such as vacuum cleaners or hair dryers, can cause an interference of the image. Turn off these devices.
Poor image quality TV doesn’t respond to remote control	• If you use an antenna, you need to reposition it. • When using the remote control, direct it towards the sensor on the TV. Make sure the plastic label has been removed from the remote control. Check if the batteries are placed in the remote control correctly. If necessary, change the batteries. • The TV will turn into Standby mode if the remote control hasn’t been used for some time.
No video in PC mode	• Check if the HDMI cable is plugged in correctly. • Check if the HDMI cable is not damaged or pinched.
Screen too bright or too dark in PC mode	• Adjust the contrast ratio or brightness in the main menu.
No response PC functions	• Check the computer settings and the compatible display resolution.
Tearing lines with RCA connection	• The cable can be of poor quality, try good quality connecting cables.
Problem persists	• Unplug the TV set and wait 30 seconds, then reconnect. If the problem persists do not try to repair it yourself, but contact our customer service center.

Note: When you are not using the TV, turn it off. Do not leave the TV on while displaying a static bright image (photo or teletext page, etc.), as this may burn into the screen permanently. Try to lower the brightness of the screen and turn off the TV when not in use.


Specifications

Screen Size	power Consumption	Main accessories
16″	24W	User's manual x1 Remote control x1 AAA Batteries x2
19″	36W	
22″	36W	
24″	36W	
28″	36W	
32″	56W/65W	
39″/40″	60W/70W/76W	
42″	67W/70W/95W	
43″	70W/80W	
50″	100W/108W/135W	
55″	100W/135W/140W/160W	
65″	159W/165W/195W	

HDMI®
HIGH-DEFINITION MULTIMEDIA INTERFACE

Remote Control

1. **POWER**: Power on or Standby mode
2. **MUTE**: press to mute sound, press again or press VOL+ to unmute
3. **0-9**: press to select the TV channel you want to watch. The channel will change after 2 seconds. Press to select page number of teletext
4. **DTV/ATV**: switch between analog and digital TV
5. ⟲ : Return to the previous viewed program
6. **S.MODE**: press to scroll through the different sound settings
7. **SLEEP**: set the time before the TV will turn itself automatically off
8. **MTS**: press to search the NICAM modes
9. **P.MODE**: press to scroll through the different picture settings
10. **MENU**: allows you to navigate the on-screen menus
11. **SOURCE**: opens the main menu and press to view the source list
12. w s a d **ENTER**: allows you to navigate the on-screen menus and adjust the system settings to your preference.
13. **EXIT**: exit from the menus or sub-menus and cancel the function in progress (if applicable)
14. **DISPLAY**: press to display the source and channel's info

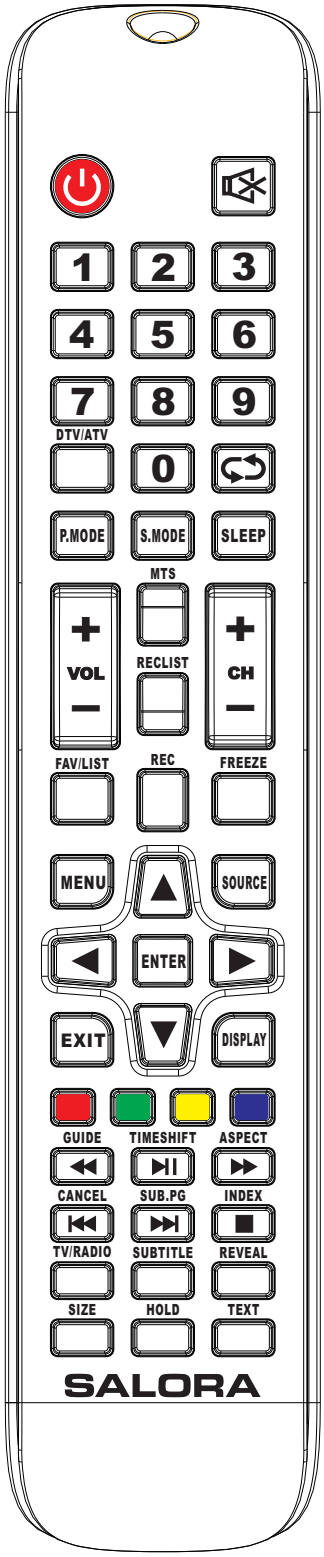

Battery Installation:
Remove the battery compartment cover at the rear of the remote control by sliding it downward and take it off. Put the two AAA batteries in the compartment with their + and – ends aligned as indicated. Do not mix old and new batteries or different type of batteries. Place back the cover by sliding it until you hear a click.
Using the remote control:
Unless states otherwise, the remote control can operate all features of the TV. Always point the remote control directly at the sensor at the front of the TV. Don't expose batteries to excessive heat sources.

15. **VOL+/VOL-:** press to increase/decrease the sound level
16. **TV/RADIO**: when watching this allows you to switch between radio and TV
17. **GUIDE**: 1. Launches the EPG (Electronic Program Guide) 2. Fast reverse in PVR or Media Player mode
18. **TIME SHIFT**: 1. DTV channel time shift function 2. Playback in PVR or Media Player mode
19. **CANCEL**: 1. When you have selected a teletext page you can press CANCEL and while searching for the page it will return to the TV mode. When the page has been found, it will appear at the top of the screen, press cancel again and you can view the requested page 2. Previous chapter in the PVR and Media Player mode.
20. **INDEX**: 1. Request the index page of Teletext mode 2. Exit the playing function in PVR or Media Player mode
21. **SIZE**: change the size of the screen in Teletext mode
22. **REVEAL**: reveal or hide the hidden words
23. **COLOR BUTTONS**: Colors correspond to the items in Teletext mode and of MHEG-5 in DVB menu
24. **CH+/CH-:** press to search channels
25. **FAV/LIST**: open the favorite list and select favorite channel
26. **ASPECT**: 1. Select aspect ratio of the screen 2. Fast forward in PVR or Media Player mode
27. **FREEZE**: freeze the picture
28. **SUB.PG**: 1.access the sub page 2. Next chapter in PVR or Media Player mode
29. **SUBTITLE**: display and setting of the language of current DTV
30. **HOLD**: activate/deactivate hold of current display
31. **TEXT**: switch Teletext ON/OFF
32. **RECLIST**: show the recorded list
33. **REC**: start recording in PVR mode

