

# Rowenta®



EN

IT




## Inicio Grillt Adjust


[www.rowenta.com](http://www.rowenta.com)

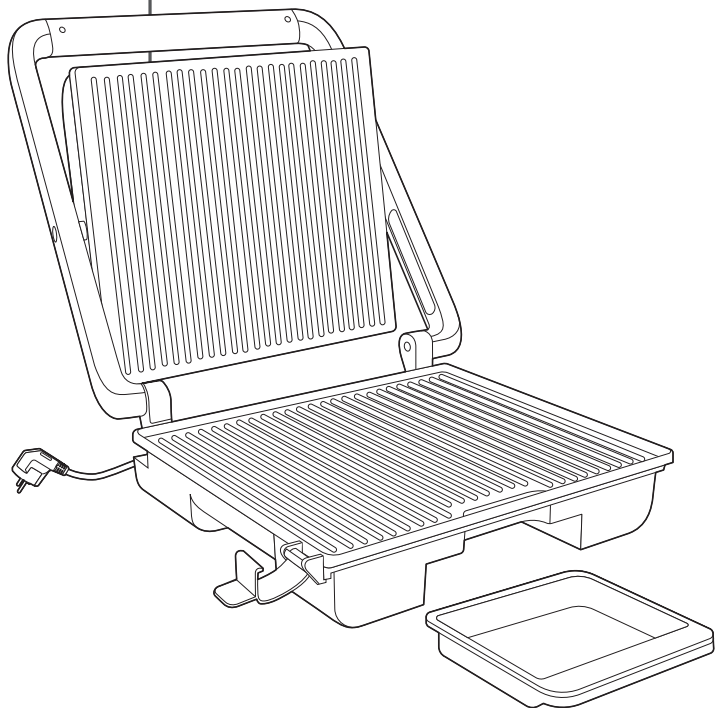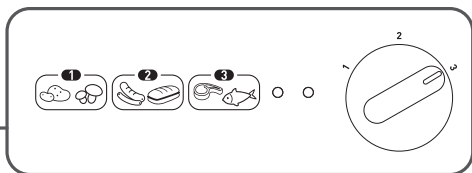


1

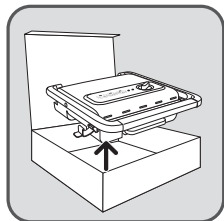

1

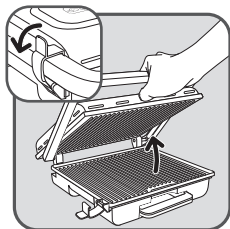


2

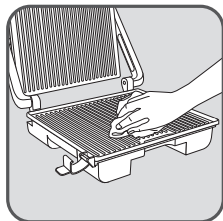


3


2

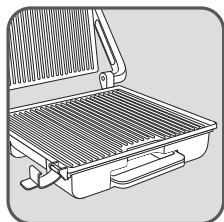


4

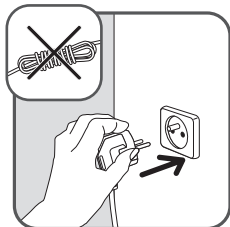


5

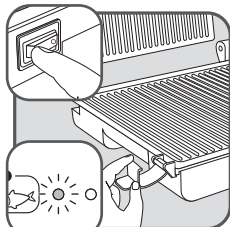


6

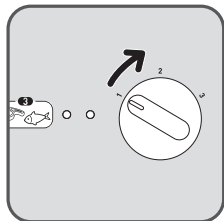


7

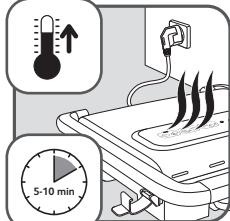


8

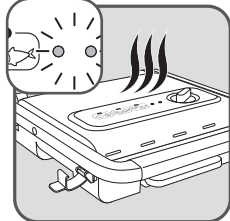

9

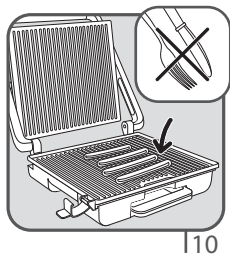


I10

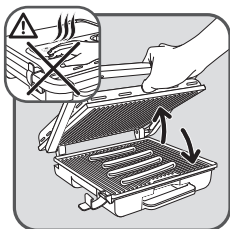


I11


---

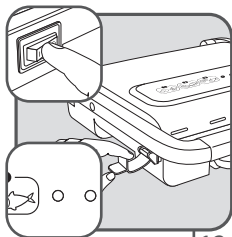**3**


I12

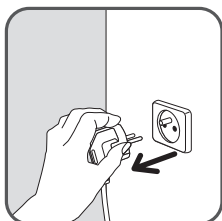


I13

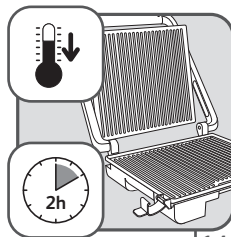


I14

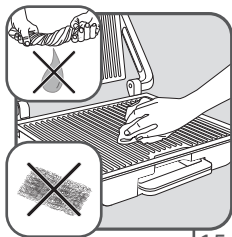


I15

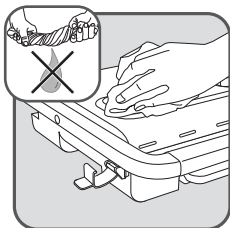


I16

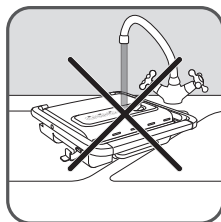


I17

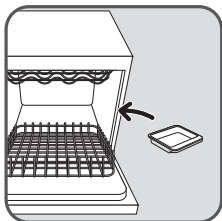


118

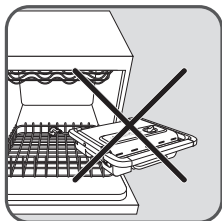

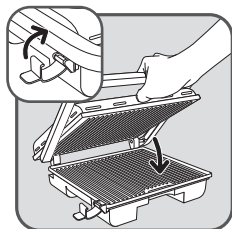









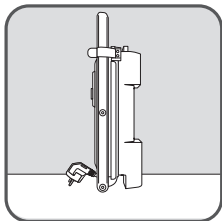
















119



120



121

		 *		
		5 - 11 min		
		3-4 min		
		3-4 min		
		5-9 min		
		17-25 min		
		7-9 min		
		4-6 min		
		4-10 min		
		1-2 min		
		3-7 min		
		15-25 min		
		5-8 min		
		3-5 min		

\* Depending on thickness / In base allo spessore

SAFETY INSTRUCTIONS



CONSIGLI DI SICUREZZA



---



## **SAFETY INSTRUCTIONS**

### **IMPORTANT SAFEGUARDS**

---

- Read the instructions for use carefully before using your appliance for the first time: Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- This appliance is intended for indoor, domestic household use only.
- It is not intended to be used in the following applications, and the guarantee will not apply for:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by an adult responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
-  The symbol means: Caution, hot surface.
-  Accessible surface temperatures can be high when the appliance is operating. Do not touch the hot surfaces of the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- If the power supply cord is damaged, it must be replaced by the manufacturer or its after sales service in order to avoid any danger.
- Wash the plates with a damp sponge. Use a cloth to clean the body of the appliance.
- This appliance can be used up to an altitude below 4000 metres.

---

## DO

---

- Before first use, remove all packaging materials, stickers and accessories from the inside and the outside of the appliance.
- CAUTION: the safety precautions, common to different versions depending on the accessories supplied with your appliance, are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.
- Always plug the appliance into an earthed socket.
- Any intervention other than normal cleaning and maintenance by the customer must be performed by an Approved Service Centre.
- Make sure that the electric power supply is compatible with the power rating and voltage indicated on the bottom of the appliance.
- Do not use an extension lead. If you accept liability for doing so, only use an extension lead which is in good condition, has a plug with an earth connection and is suited to the power rating of the appliance.
- Position the power cord carefully, whether an extension is used or not, so that guests can move freely around the table without tripping over it.
- Cooking fumes may be dangerous for animals which have a particularly sensitive respiratory system, such as birds. We advise bird owners to keep them away from the cooking area.
- Always use on a flat, stable, heat-resistant work surface away from water splashes and other sources of heat.
- If parts of the appliance should catch fire, never try to extinguish flames with water. Disconnect the appliance and smother the flames with a damp cloth.
- If the appliance is used in the centre of the table, keep it out of the reach of children.

- If an accident occurs, rinse the burn immediately with cold water and call a doctor if necessary.
- Fully unwind the power cord before plugging in the appliance.
- Always unplug the appliance prior to any cleaning or maintenance.

EN

---


## DO NOT

---

- Never disconnect the plug by pulling on the cord.
- Never leave the appliance plugged in when not in use.
- Never run the appliance empty.
- Do not heat the appliance in a vertical position.
- Never leave the appliance unattended when in use.
- To prevent the appliance from overheating, do not place it in a corner or below a wall cupboard.
- Never place the appliance directly on a fragile surface (glass table, tablecloth, varnished furniture, etc.) or on a soft surface such as a tea-towel.
- Never place the appliance on or near hot or slippery surfaces; the power cord must never be close to or in contact with hot parts of the appliance, close to a source of heat or resting on sharp edges.
- Do not place cooking utensils on the cooking surfaces of the appliance.
- To preserve the cooking surface do not use metallic utensils.
- Never handle the grease collection tray when the appliance is hot. If the grease collection tray becomes full during cooking, allow the appliance to cool before emptying it (depending on model).
- Never cut food directly on the plates.
- Do not use metal scourers or scouring powders to avoid damaging the cooking surface (non-stick coating).
- Never immerse the appliance, power cord or plug in water or any other liquid. They are not dishwasher safe.
- Do not put the grill under running water.

- Do not use a wet cloth or wet sponge to clean the outside of the grill, wipe with a warm, damp sponge and dry with a soft, dry cloth.
- To avoid spoiling your appliance, do not use flambé recipes in connection with it at any time.
- Do not use aluminium foil or other objects between the plate and the food being cooked. Do not cook food in aluminium foil.

### **Advice/information**

- Thank you for buying this appliance, which is intended for domestic use only.
- For your safety, this appliance conforms to applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environment, Materials in contact with food...).
- On first use, there may be a slight odour and a little smoke during the first few minutes.
- Our company has an ongoing policy of research and development and may modify these products without prior notice.
- Any solid or liquid foods that come into contact with parts marked with the symbol  are unfit for consumption.
- Only use accessories supplied with the appliance or acquired from an approved service centre.

### **Environment**

Before discarding your appliance, the battery from the timer has to be removed and disposed at a local civic waste collection centre or an approved service centre. (According model).



#### **Environment protection first!**

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

---



## CONSIGLI DI SICUREZZA

### PRECAUZIONI IMPORTANTI

---

- Prima di utilizzare l'apparecchio per la prima volta, leggere attentamente le istruzioni per l'uso. In caso di uso commerciale od improprio o di mancato rispetto delle istruzioni, il produttore non si assume nessuna responsabilità e la garanzia decade.
- Questo apparecchio è stato concepito per uso unicamente domestico.
- Non è stato ideato per essere utilizzato nei seguenti casi, che restano esclusi dalla garanzia:
  - in angoli cottura riservati al personale nei negozi, negli uffici e in altri ambienti professionali,
  - nelle fabbriche,
  - dai clienti di alberghi, motel e altre strutture ricettive residenziali,
  - in ambienti tipo camere per vacanze.
- Questo apparecchio non dovrebbe essere utilizzato da persone (compresi i bambini) le cui capacità fisiche, sensoriali o mentali sono ridotte, o da persone prive di esperienza o di conoscenza, tranne se hanno potuto beneficiare, tramite una persona responsabile della loro sicurezza, di una supervisione o di istruzioni

IT

- preliminari relative all'utilizzo dell'apparecchio.
- È opportuno sorvegliare i bambini per assicurarsi che non giochino con l'apparecchio.
  - Questo apparecchio può essere utilizzato da bambini dagli 8 anni in su e da persone le cui capacità fisiche, sensoriali o mentali sono ridotte o da persone prive di esperienza o di conoscenza, purché possano beneficiare di sorveglianza o di istruzioni preliminari relative all'uso dell'apparecchio e comprendano i pericoli implicati. Evitare che i bambini giochino con l'apparecchio. Le operazioni di pulizia e manutenzione devono essere svolte unicamente da bambini dagli 8 anni in su.
  - Tenere l'apparecchio e il relativo cavo di alimentazione fuori della portata dei bambini di età inferiore agli 8 anni.
  -  Il simbolo significa: attenzione, superficie calda.
  -  La temperatura delle superfici accessibili può essere elevata quando l'apparecchio è in funzione. Non toccare mai le superfici calde dell'elettrodomestico.
  - Questo apparecchio non è destinato a essere messo in funzione per mezzo di un timer esterno o di un sistema di comando a distanza separato.
  - Se il cavo di alimentazione è danneggiato, esso deve essere sostituito dal costruttore o dal suo

servizio assistenza tecnica o comunque da una persona con qualifica simile, in modo da prevenire ogni rischio.

- Pulire le piastre con una spugna umida. Per il corpo dell'apparecchio, utilizzare un panno morbido umido.
- Questo apparecchio può essere usato per altezze non superiori a 4000 metri.

IT

## Cosa fare

- Togliere tutti gli imballi, adesivi o vari accessori sia all'interno che all'esterno dell'apparecchio.
- Leggere attentamente e tenere a portata di mano le istruzioni del presente foglietto illustrativo; esse fanno parte delle diverse versioni di accessori forniti insieme al vostro apparecchio.
- Collegare l'apparecchio solamente ad una presa con messa a terra incorporata.
- Verificare che l'impianto elettrico sia compatibile con la potenza e la tensione indicate sotto l'apparecchio.
- Se viene utilizzata una prolunga, quest'ultima deve presentare almeno una sezione equivalente ed essere dotata di messa a terra integrata.
- Fare attenzione a non intralciare le persone che camminano con il cavo o con la prolunga.
- I fumi di cottura possono essere pericolosi per gli animali con un sistema di respirazione particolarmente sensibile, come gli uccelli. Consigliamo di allontanare gli uccelli dal luogo di cottura.
- Se l'apparecchio è usato al centro del tavolo, metterlo fuori dalla portata dei bambini.
- Nel caso di incidente, sciacquare immediatamente la scottatura

con acqua fredda e chiamare un medico se necessario.

- Srotolare completamente il cavo prima di collegare l'apparecchio.
- Scollegare l'apparecchio dalla rete elettrica prima di pulirlo o sottoporlo a manutenzione.

---

## Cosa non fare

---


- Non staccare mai la spina, tirando il cavo.
- Non collegare mai l'apparecchio quando non viene utilizzato.
- Non usare mai l'apparecchio a vuoto.
- Non riscaldare mai l'apparecchio in posizione verticale.
- Non utilizzare mai l'apparecchio senza sorvegliarlo.
- Per evitare il surriscaldamento dell'apparecchio, non metterlo in un angolo o contro il muro.
- Non mettere mai direttamente l'apparecchio su un supporto fragile (tavolo di vetro, mobile verniciato...) o su un supporto morbido, come per esempio una tovaglia di gomma.
- Non appoggiare l'apparecchio su di una superficie scivolosa o calda, o vicino ad essa. Non lasciare mai il cavo pendente sopra una fonte di calore (piastre di cottura, fornelli a gas ecc.).
- Non posare utensili di cottura sulle superfici di cottura dell'apparecchio.
- Per preservare il rivestimento della piastra di cottura, non utilizzare strumenti in metallo.
- Non toccare il vassoio di raccolta dei grassi quando l'apparecchio è caldo. Se il vassoio di raccolta dei grassi si riempie durante la cottura, lasciare raffreddare l'apparecchio prima di svuotarlo. (a seconda del modello)
- Non tagliare gli alimenti direttamente sulle piastre.
- Piastre removibili: Non usare mai spugnette metalliche, né polveri abrasive per non danneggiare la superficie di cottura (es.: rivestimento antiaderente, ...).
- Non immergere in nessun caso l'apparecchio e il cavo elettrico



in acqua. Non possono essere lavati in lavastoviglie.

- Non mettere la griglia sotto l'acqua corrente.
- Non pulire custodia e coperchio della griglia con panno o spugna bagnati. Strizzare molto bene il panno o la spugna prima di usarli.
- Per evitare l'usura del vostro apparecchio non utilizzarlo per realizzare ricette flambé.
- Non interporre mai un foglio di alluminio né qualsiasi altro oggetto tra la piastra e gli alimenti da cuocere. Non cuocete al cartoccio.

## Consigli/informazioni

- Grazie per aver acquistato questo apparecchio, destinato al solo uso domestico.
- Per la vostra sicurezza, questo prodotto è conforme alle norme in vigore (Direttiva Basso Voltaggio, Compatibilità elettromagnetica, Materiali compatibili con il cibo, Ambiente,...).
- Al primo utilizzo, si può produrre un leggero odore o fumo per i primi minuti.
- La nostra società si riserva il diritto di modificare in qualsiasi momento, nell'interesse del consumatore, caratteristiche o componenti di questo prodotto.
- Gli alimenti solidi o liquidi venuti a contatto con le parti contrassegnate dal logo  non possono essere consumati.
- Utilizzare esclusivamente gli accessori forniti da o acquistati presso un centro di assistenza approvato.

## Ambiente

Prima dello smaltimento dell'apparecchio, estrarre la pila del timer e consegnarla presso un centro di raccolta specializzato o presso un centro di assistenza autorizzato (a seconda del modello).



### Partecipiamo alla protezione dell'ambiente !

- ① Il vostro apparecchio è composto da diversi materiali che possono essere riciclati.
- ➡ Lasciatelo in un punto di raccolta o presso un Centro Assistenza Autorizzato.

EN p. 8 – 12

IT p. 13 – 17