


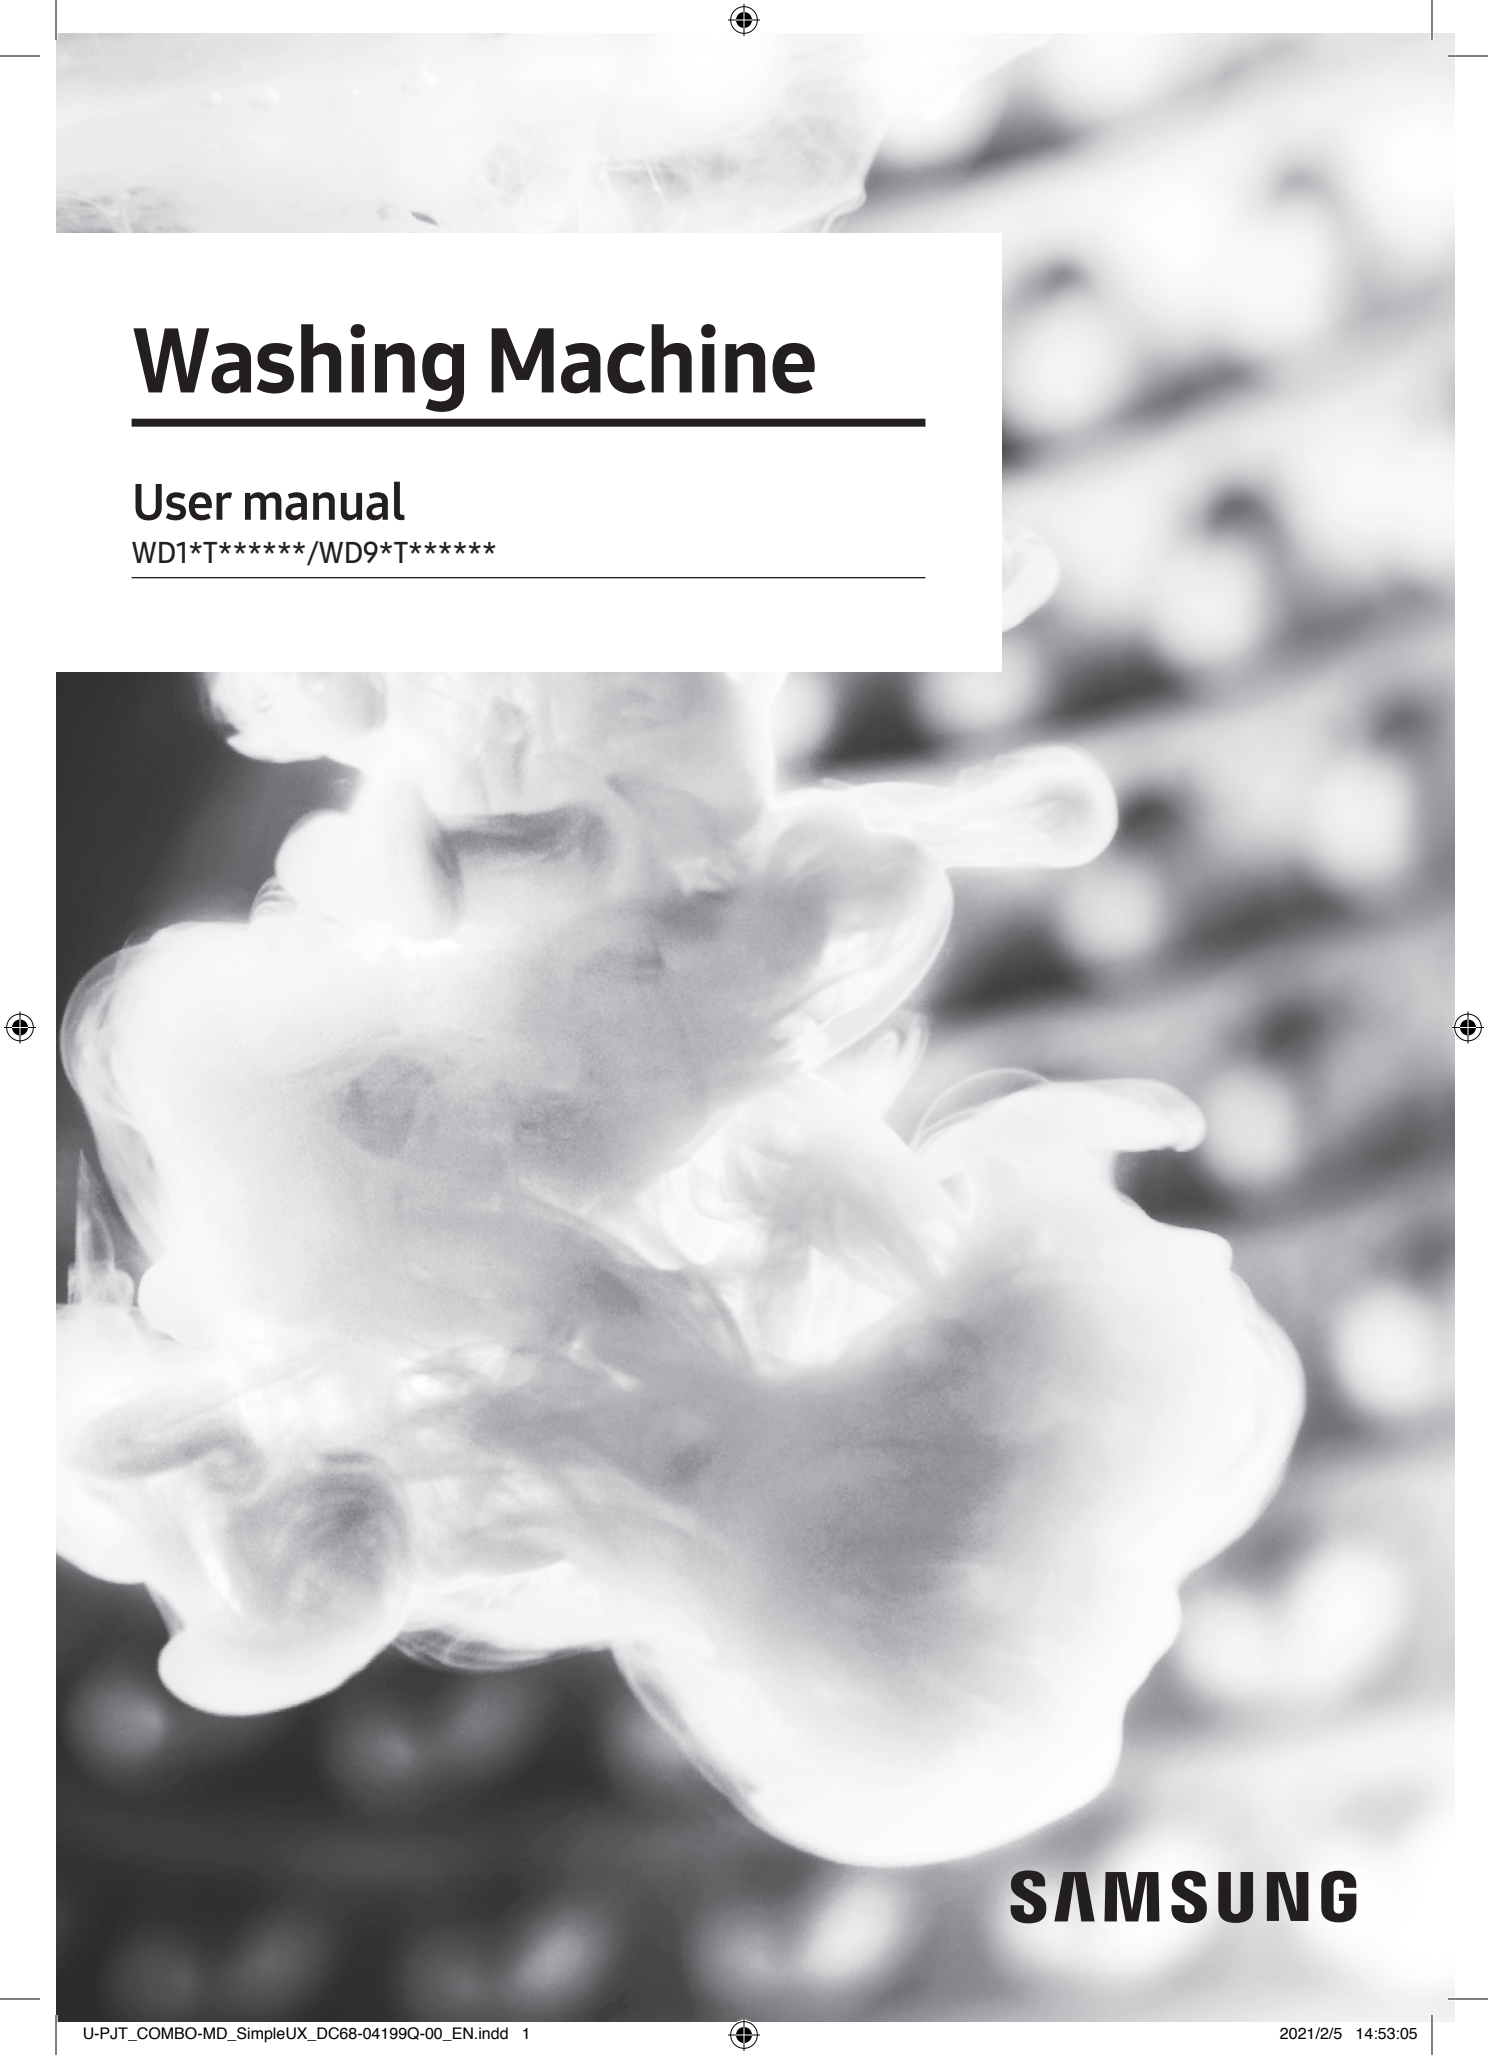

Washing Machine

User manual

WD1*T*****/WD9*T*****

SAMSUNG

Contents

Safety information	4
What you need to know about the safety instructions	4
Important safety symbols	4
Important safety precautions	5
Critical installation warnings	7
Installation cautions	8
Critical usage warnings	9
Usage cautions	10
Critical cleaning warnings	13
Installation	14
What's included	14
Installation requirements	16
Step-by-step installation	18
Before you start	28
Initial setup	28
Laundry guidelines	29
Detergent drawer guidelines	32
Operations	35
Control panel	35
Operating a cycle	36
Cycle overview	37
Additional functions	40
System functions	43
Special features	45
SmartThings (applicable models only)	48
Open Source Announcement	49

Maintenance	50
Drum Clean+	50
Emergency drain	51
Cleaning	52
Defrosting your washing machine	56
Care against an extended time of disuse	56
Troubleshooting	57
Checkpoints	57
Information codes	61
Specifications	64
Fabric care chart	64
Protecting the environment	64
Spare parts guarantee	65
Specification sheet	65

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.

Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**

CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage.**

NOTE

Indicates that a risk of personal injury or material damage exists.

Read the instructions

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. **For use in Europe:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Children should be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
6. For appliances with ventilation openings in the base, that a carpet must not obstruct the openings;
7. **For use in Europe:** Children of less than 3 years should be kept away unless continuously supervised.
8. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
9. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.

Safety information

10. The lint trap has to be cleaned frequently, if applicable.
11. Lint must not be allowed to accumulate around the tumble dryer. (not applicable for appliances intended to be vented to the exterior of the building)
12. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
13. Do not dry unwashed items in the tumble dryer.
14. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
15. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
16. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
17. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
18. Remove all objects from pockets such as lighters and matches.
19. **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
20. Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
21. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
22. **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

23. This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

Critical installation warnings

WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the appliance, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord firmly into a wall socket that meets local electrical specifications. Use the socket for this appliance only, and do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket so that the cord is running towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

- If a child places a bag over its head, it may suffocate.

When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the appliance.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Safety information

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

Following the repair by a non-authorized service provider, self-repair or non-professional repair of the product, Samsung is not liable for any damage to the product, any injury or any other product safety issue caused by any attempt to repair the product which does not carefully follow these repair and maintenance instructions. Any damage to the product caused by an attempt to repair the product by any person other than a Samsung certified service provider will not be covered by the warranty.

Installation cautions

CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.

- Failure to do so may result in abnormal vibrations, movement, noise, or problems with the appliance.

Critical usage warnings

WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power cord immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Remove the washing machine door lever before disposing the appliance.

- If trapped inside the appliance, children may suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Do not open the washing machine door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the appliance or injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power cord while an operation is in progress.

- Plugging the power cord into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children climb in or onto the appliance.

- This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

- Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Safety information

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

- Failure to do so may result in electric shock or fire.

Unplug the power cord when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power cord and contact your nearest Samsung Customer Service.

- This may result in electric shock or fire.

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

Usage cautions

CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power cord and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

- If the glass is broken, it may result in injury.

Open the water tap slowly after a long period of non-use, water supply failure, or when reconnecting the water supply hose.

- The air pressure in the water supply hose or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

- If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

- Ensure that the screws on the water supply hose connector are properly tightened.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the appliance.

- If the screws on the water supply hose connector are loose, it may result in a water leak.

The appliance you have purchased is designed for domestic use only.

Using the appliance for business purposes qualifies as an appliance misuse. In this case, the appliance will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the appliance, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, this may result in electric shock, fire or problems with the appliance.

Do not place objects that generate electromagnetic fields near the washing machine.

- This may result in injury due to a malfunction.

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.

- This may result in burns or injury.

Draining time may vary depending on the water temperature. If the water temperature is too high, the draining process starts after the water cools down.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.

(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.

- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come off and stick to inside the drum, and this may result in malfunction such as a drainage error.

Do not operate the washing machine when the detergent drawer is removed.

- This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.

- This may result in burns.

The door glass becomes hot during washing and drying. Therefore, do not touch the door glass.

Safety information

Also, do not allow children to play around the washing machine or touch the door glass.

- This may result in burns.

Do not insert your hand into the detergent drawer.

- This may result in injury as your hand may be caught by the detergent input device.

Remove the liquid detergent guide (applicable models only) when using powdered detergent.

- If not, water may leak through the front of the detergent drawer.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.

- This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.

- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.

- This may result in problems with the washing machine.

Do not use natural hand-washing soap for the washing machine.

- If it hardens and accumulates inside the washing machine, it may result in problems with the appliance, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washing machine, it may result in a water leak.

Make sure that the pockets of all the clothing items to be washed are empty.

- Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by colour on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

- This may result in discolouration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

- Failure to do so may result in injury.

To prevent odours and mould, leave the door open after a wash cycle to allow the drum to dry.

To prevent limescale build up, leave the detergent drawer open after a wash cycle and dry inside it.

Critical cleaning warnings

WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.


- Failure to do so may result in electric shock or fire.

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

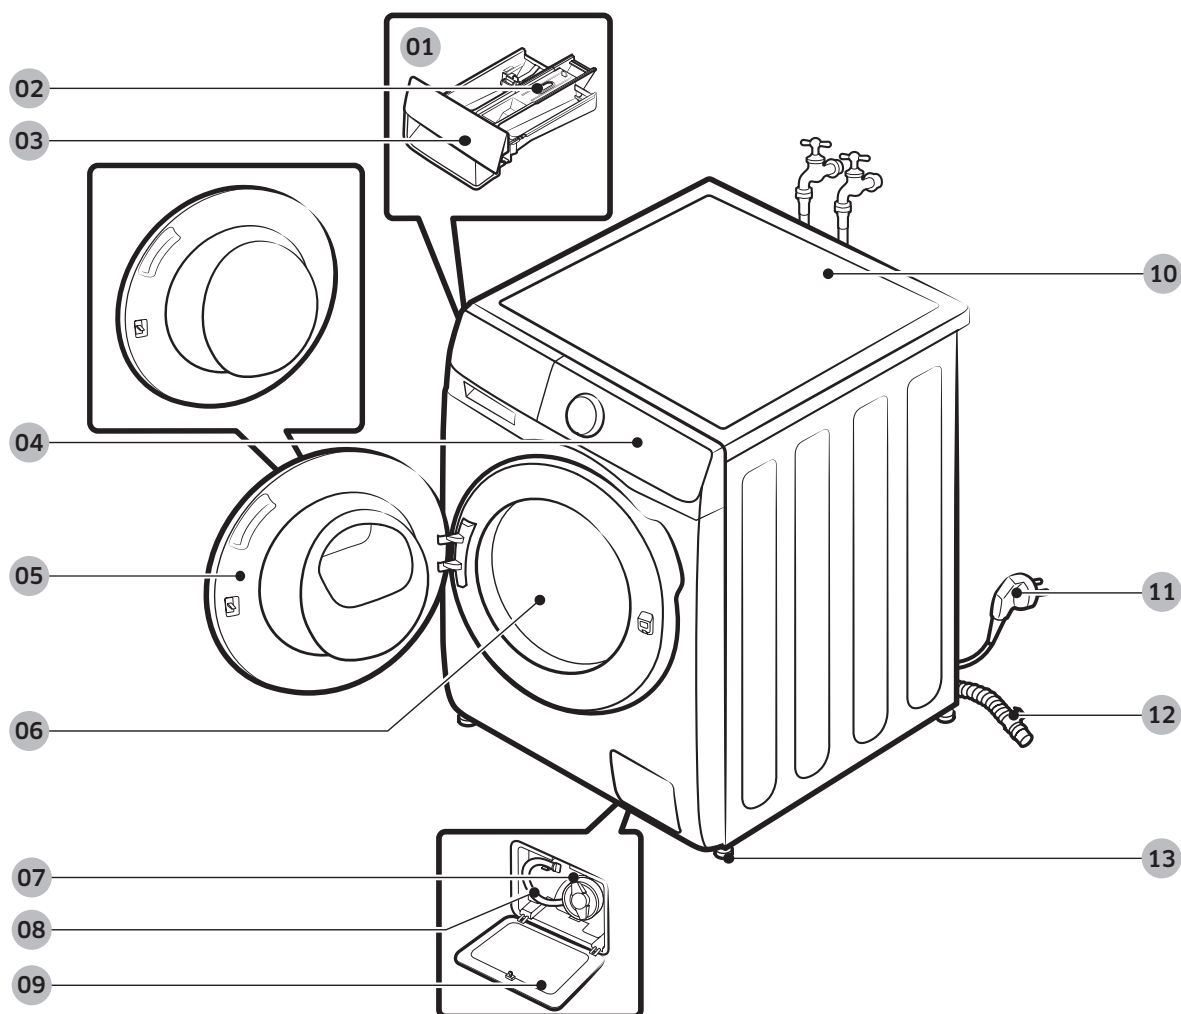

01 Manual dispenser

02 Release lever

03 Detergent drawer

04 Control panel

05 Door

06 Drum

07 Debris filter

08 Emergency drain tube

09 Filter cover

10 Worktop

11 Power plug

12 Drain hose

13 Levelling feet


* The design of the drawer and/or the lever differs with the model.



Spanner



Bolt caps





Hose guide



Cold water hose



Hot water hose

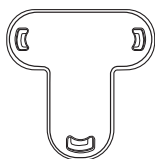Liquid detergent guide
(applicable models only)Cap Fixer
(applicable models only)

Accessories (not supplied)

- Stacking kit: SK-DH
 - Staking kit is required to stack a dryer on a washing machine.

NOTE

- Spanner: For removing the shipping bolts and levelling the washing machine.
- Bolt caps: For covering the holes after removing the shipping bolts. The provided number of bolt caps (3 to 6) depends on the model.
- Hose guide: For hanging the drain hose in the drainpipe or wash-basin.
- Cold/Hot water hose: For supplying water to the washing machine. (Hot water hoses is for applicable models only.)
- Liquid detergent guide: Insert it in the detergent compartment to use liquid detergent.

Installation

Installation requirements

Electrical supply and grounding

- AC 220-240 V / 50 Hz fuse or circuit breaker is required.
- Use an individual branch circuit specific to the washing machine.

To ensure proper grounding, the washing machine comes with a power cord featuring a three-prong grounding plug for use in a properly installed and grounded outlet.

Check with a qualified electrician or service person if you are not sure about the grounding.

Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician to install a suitable outlet.

WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Improperly connected grounding conductors may cause electric shock.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressure less than 50 kPa may cause the water valve to not close completely, or it may take longer to fill the drum, causing the washing machine to turn off. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce the risk of leaks:

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water inlet hose fittings on a regular basis.

CAUTION

Before using the washing machine for the first time, check all connections at the water valve and taps for any leaks.

Drain

Samsung recommends a standpipe 60-90 cm high. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.

Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimise vibration and/or unbalanced loads. Carpeting and soft tile surfaces do not resist vibration well and may cause the washing machine to move slightly during the spin cycle.

CAUTION

Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove installation

Minimum clearance for stable operation:

Sides	25 mm
Top	25 mm
Rear	50 mm
Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the alcove must have at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

Installation

Step-by-step installation

STEP 1 Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 °C)
- Away from a heat source

NOTE

- To prevent excessive vibration while operating the washing machine, consider stability before anything else.
- Install your washing machine on a solid and level floor.
- Do not install your washing machine on soft floors or floor coverings.
- If you install your washing machine on a wood floor, install a water-resistance wooden panel (min 1.18 in. / 30 mm thick) to the floor. Also, we recommend installing your washing machine on the corner of the wood floor.

STEP 2 Remove the shipping bolts


Unpack the product package and remove all shipping bolts.

NOTE

Number of shipping bolts may differ depending on the model.

WARNING

- Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.
- To avoid injury, cover the holes with bolt caps after removing the shipping bolts. Do not move the washing machine without the shipping bolts in place. Assemble the shipping bolts before moving the washing machine to another location. Keep the shipping bolts in a safe place for future use.

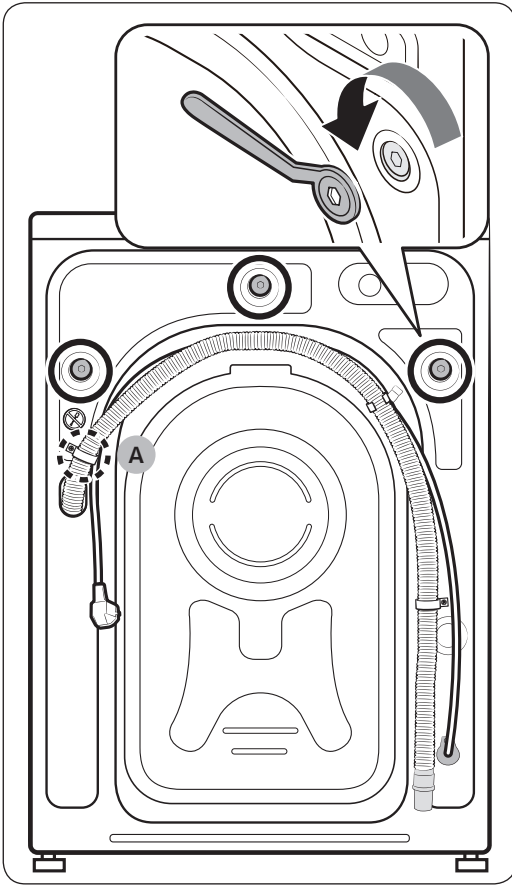

1. Locate the shipping bolts (marked with circle in the figure) on the rear side of the washing machine.

⚠ CAUTION


Do not remove the **screw (A)** that fixes the hose clip.

2. Using the supplied spanner, loosen all the shipping bolts by turning them anticlockwise.

📄 NOTE




You must keep the shipping bolts for future use.

Installation

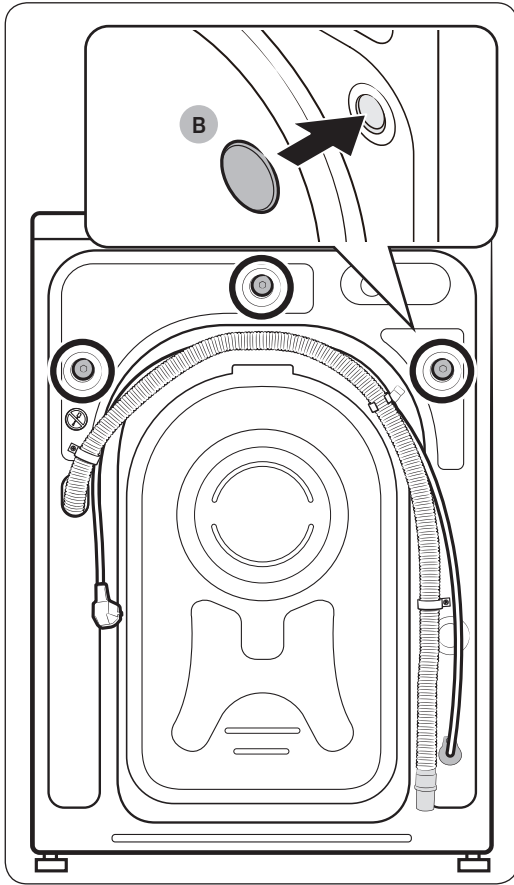

3. Insert the **bolt caps (B)** to the holes (marked with circle in the figure).

STEP 3 Adjust the levelling feet

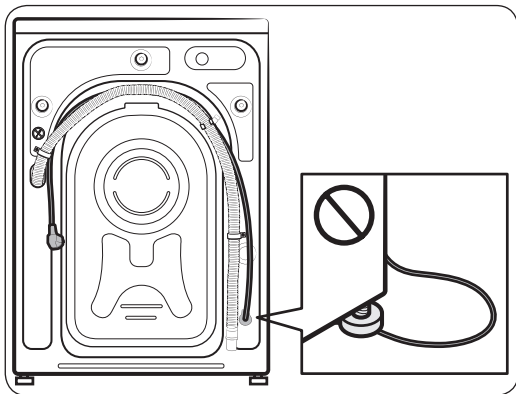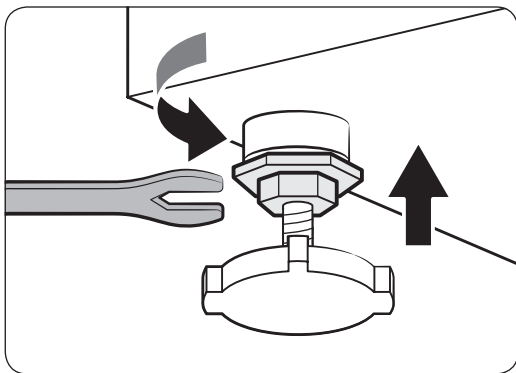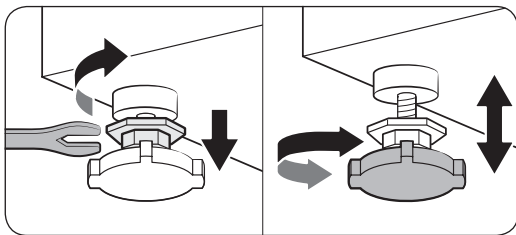

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet.
2. Level the washing machine by manually adjusting the levelling feet.
3. When levelling is complete, tighten the nuts using the spanner.

⚠ CAUTION

When installing the product make sure the levelling feet is not pressing the power cord.

⚠ CAUTION


Make sure all the levelling feet are seating on the floor surface to avoid the washing machine from moving or generating noise due to vibration. Then, check if the washing machine is not rocking. If the washing machine is not rocking, tighten the nuts.

Installation

STEP 4 Connect the water hose

The provided water hose may differ depending on the model. Please follow the instruction according to the provided water hose.


Connecting to a threaded water tap

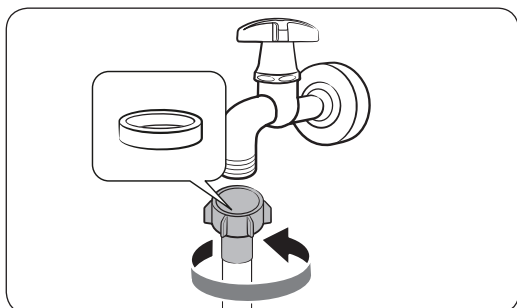


1. Connect the water hose to the water tap, and then turn it to the right to tighten.

⚠ CAUTION

Before connecting the water hose, make sure there is a rubber washer in the hose connector. Do not use the hose if the washer is damaged or missing.

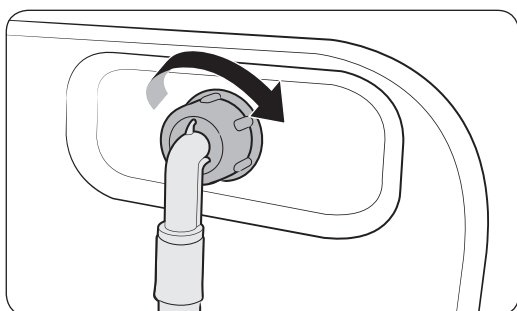

2. Connect the other end of the water hose to the inlet valve on the back of the washing machine, and then turn it to the right to tighten.

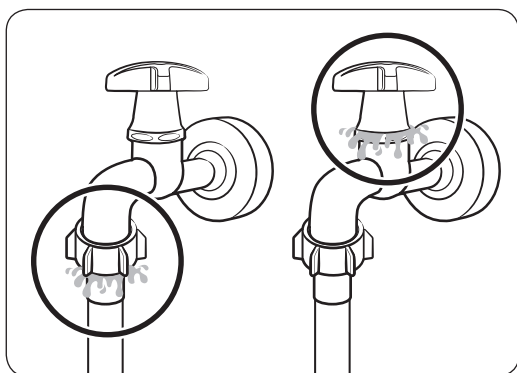

3. Slowly open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat step 1 and 2.


⚠ WARNING

If there is a water leak, stop operating the washing machine and disconnect it from the electrical supply. Then, contact a local Samsung service centre in case of a leak from the water hose, or contact a plumbing technician in case of a leak from the water tap. Otherwise, this may cause electric shock.


⚠ CAUTION

Do not stretch the water hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.


Connecting to a non-threaded water tap

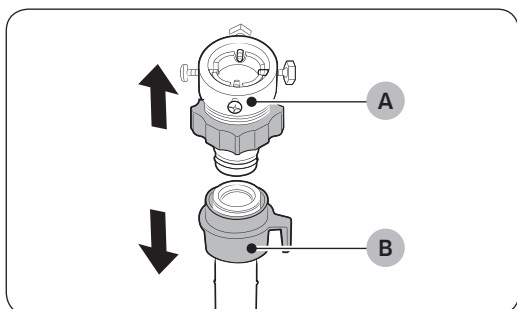


1. Remove the **adaptor (A)** from the water **hose (B)**.

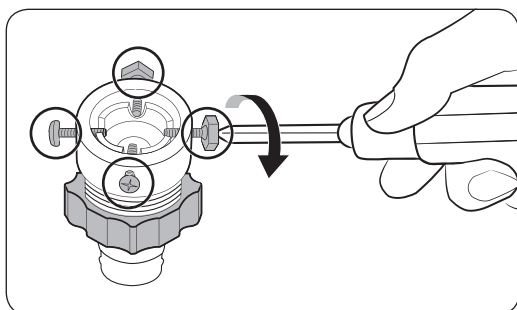

2. Use a Phillips screwdriver to loosen four screws on the adaptor.

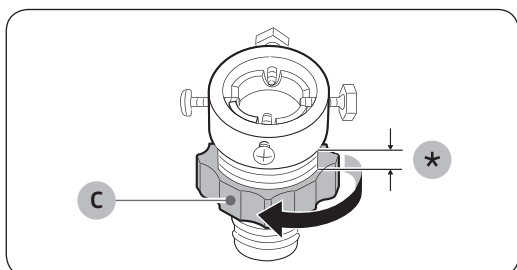


3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

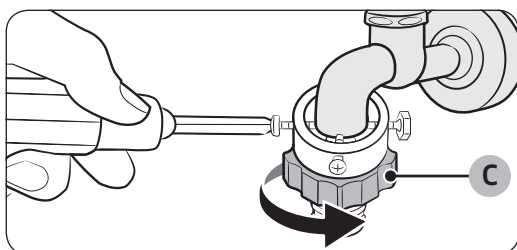

4. Insert the adaptor onto the water tap, and then tighten the screws while lifting the adaptor.
5. Turn **part (C)** in the arrow direction to tighten it.

Installation

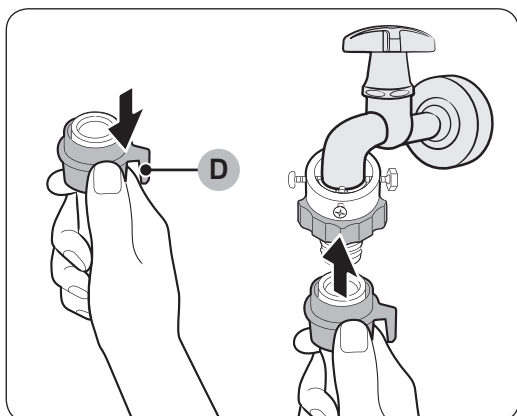


6. While pulling down **part (D)** on the water hose, connect the water hose to the adaptor. Then, release **part (D)**. The hose fits into the adaptor with a clicking sound.

7. To complete connecting the water hose, see 2 and 3 on the “**Connecting to a threaded water tap**” section.

NOTE


- After connecting the water hose to the adaptor, pull the water hose down to check if it is connected properly.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

For models with an additional hot water inlet:

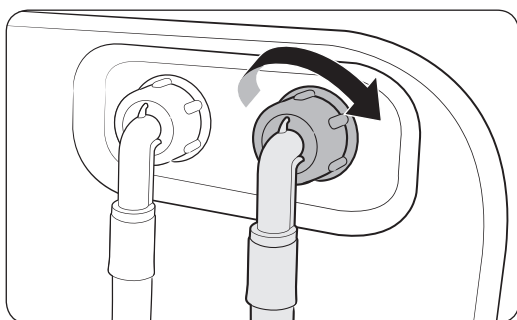

1. Connect the red end of the hot water hose to the hot water inlet on the back of the machine.
2. Connect the other end of the hot water hose to the hot water tap.

Aqua stop hose (applicable models only)

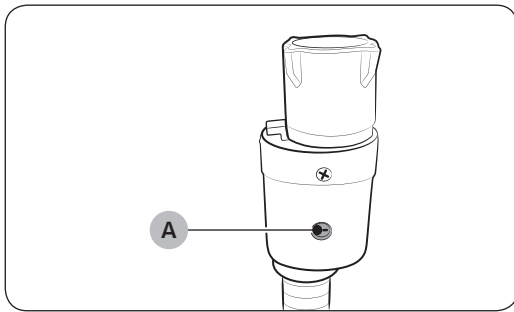

The aqua stop hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator (A)** in case of a leak.


NOTE

The end of the aqua stop hose must be fitted to the water tap and not the machine.

Installation


STEP 5 Position the drain hose

The drain hose can be positioned in three ways:

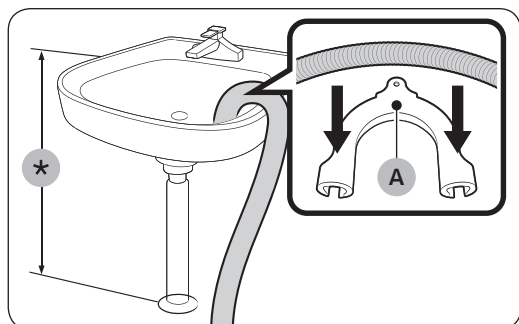

Over the edge of a wash basin

The drain hose must be placed between 60 cm and 90 cm (*) above from the floor. To keep the spout of the drain hose bent, use the supplied **plastic hose guide (A)**. Secure the guide to the wall using a hook to ensure stable drainage.

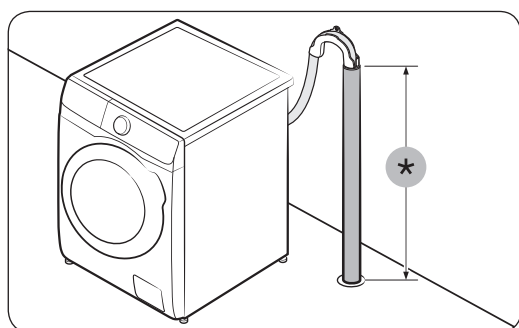


In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe.

- To ensure the drain hose stays in position, use the plastic hose guide provided (see the figure).
- To prevent the siphoning of water flow during drainage, make sure to insert the drain hose 15 cm in the drain pipe.
- To prevent the drain hose from moving around, secure the hose guide to the wall.

Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute

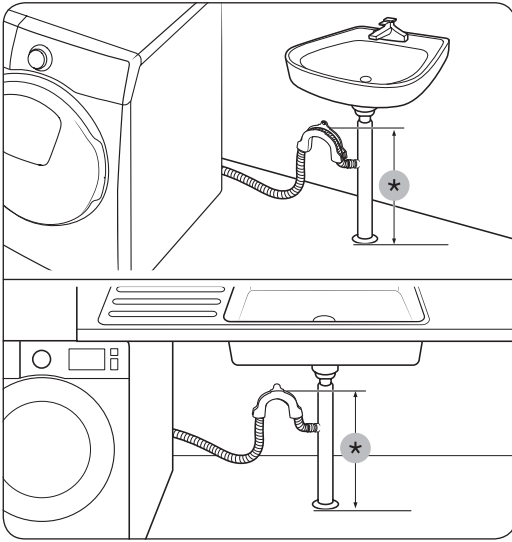

In a sink drain pipe branch

The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.

(*) : 60 cm

⚠ CAUTION

Remove the lid on the sink drain pipe branch before connecting the drain pipe to it.

STEP 6 Power on

Plug the power cord into a wall socket that is correctly rated, grounded, and protected by a fuse or circuit breaker. Then, tap and hold  for 3 seconds to turn on the washing machine.









Before you start

Initial setup

- When you turn on the washing machine for the first time, the screen shows the initial setup process. Follow the on-screen instructions to complete it.
- Initial setup will not repeat after you've completed it.
- The initial setup includes language selection, calibration, and a brief tutorial.
- Tap  or turn the **Navigation dial** to skip to the next screen.

Run Calibration

- Initial setup includes the calibration process which comes after the language selection. You must proceed calibration before using the washing machine.
- Empty the drum, and then tap and hold  to start calibration.
- When calibration is complete, power turns off and then turns on automatically.
- If you want to proceed calibration again, tap and hold  for 3 seconds to enter the system function and select **Calibration**.

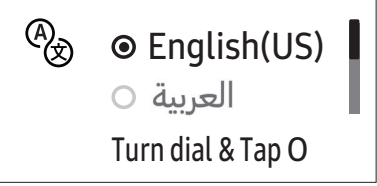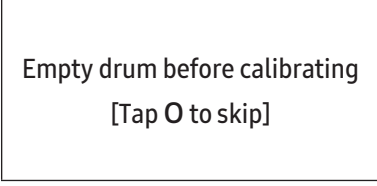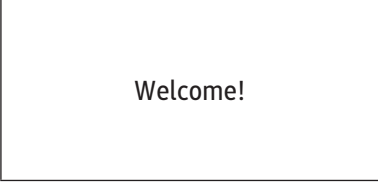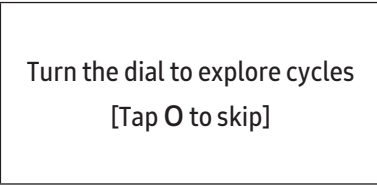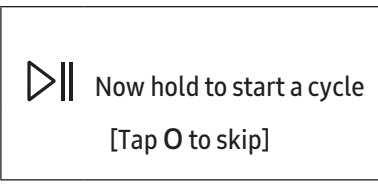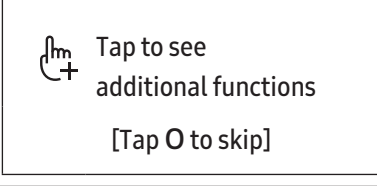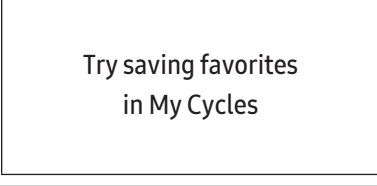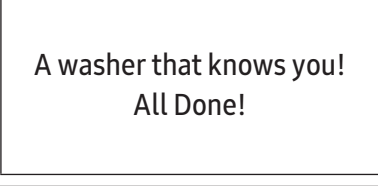01 Language selection	02 Calibration	03 Welcome screen
		
04 Tutorial		
		
		

Laundry guidelines

STEP 1 Sort

Sort the laundry according to these criteria:

- Care Label: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- colour: Separate whites from colours.
- Size: Mixing different sized items together in the drum improves the washing performance.
- Sensitivity: Wash delicate items separately using an Easy Iron option for pure, new woollen items, curtains, and silk items. Check the labels on the items.



NOTE

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 Empty pockets

Empty all the pockets of your laundry items

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroideries inside out

- If trousers or jacket zippers are open while washing, the drum may be damaged. Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before starting the wash.

STEP 3 Use a laundry net

- Brassieres (machine washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Small, light clothing such as socks, gloves, stockings, and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

STEP 4 Prewash (if necessary)

Select the Prewash option for the selected cycle if the laundry is heavily soiled. Do not use the Prewash option when detergent is manually added into the drum.

Before you start

STEP 5 Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly. For the load capacity for the type of clothing, see page 37.

NOTE

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum spin cycle speed is 800 rpm, and the load capacity is 2.0 kg or less.

CAUTION

- Unbalanced laundry may reduce the spinning performance.
- Make sure the laundry is fully inserted in the drum and not caught in the door.
- Do not slam the door. Close the door gently. Otherwise, the door may not be closed properly.

STEP 6 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Make sure to use the laundry detergent that is designed for automatic washing machines.

NOTE


- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.

CAUTION


When washing wool using the Wool cycle, use a detergent dedicated to wool items. If used with the Wool cycle, powder detergent may remain on the laundry and discolour the laundry.

Laundry capsules

To get the best results from using laundry capsules, please follow these instructions.

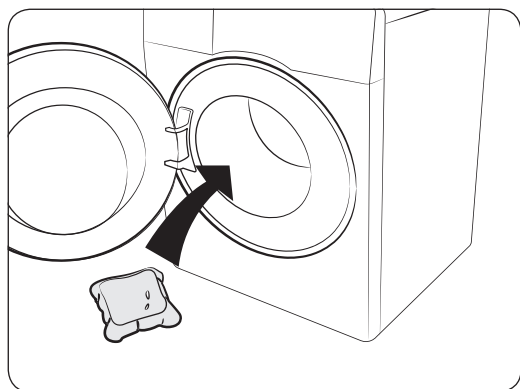

1. Put the capsule in the bottom of the empty drum towards the rear.

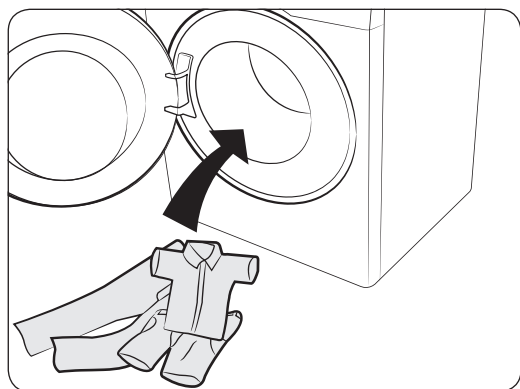

2. Put the laundry in the drum on top of the capsule.


CAUTION

For cycles using cold water or cycles that complete in less than one hour, the capsule may not dissolve completely.

Before you start

Detergent drawer guidelines

The manual dispenser models provide a three-compartment dispenser: the left compartment for the main wash, the centre for fabric softeners, and the right for the preliminary wash.

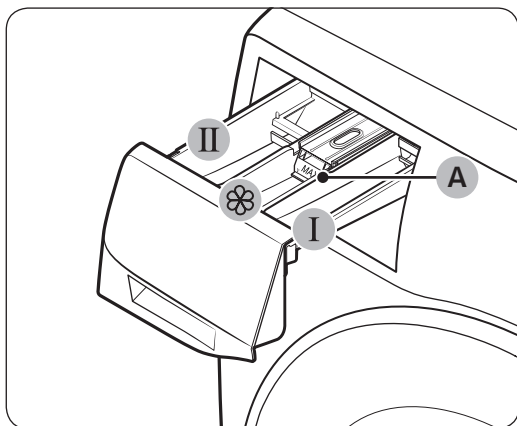


1. **I Prewash compartment:** Apply prewash detergent.
2. **II Main-wash compartment:** Apply main-wash detergent, water softener, soaking detergent, bleach, and/or stain removers.
3. **Softener compartment:** Apply additives such as fabric softener. Do not exceed the **max line (A)**.

⚠ CAUTION


Do not use the following types of detergent in the drawer:

- Tablet, capsule, ball, or net types.


To apply washing agents to the manual dispenser

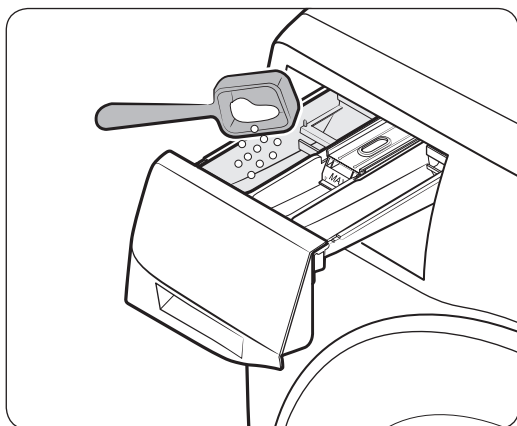


1. Slide open the detergent drawer.
2. Apply laundry detergent to the **II main-wash compartment** as instructed or recommended by the manufacturer. To use liquid detergent, see page 34.

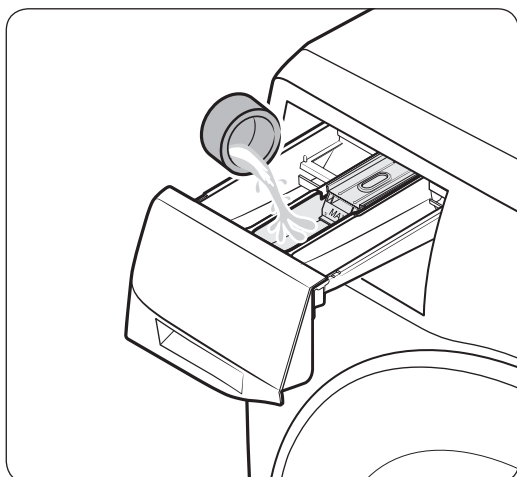

3. Apply fabric softener to the  **softener compartment**. Do not exceed the **max line**.

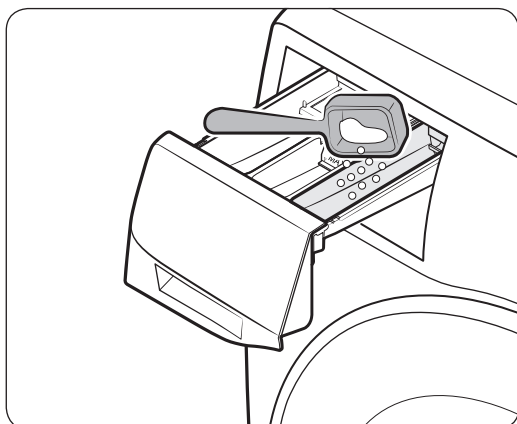

4. If you want prewash, apply prewash detergent to the **I prewash compartment** as instructed or recommended by the manufacturer.
5. Close the detergent drawer.

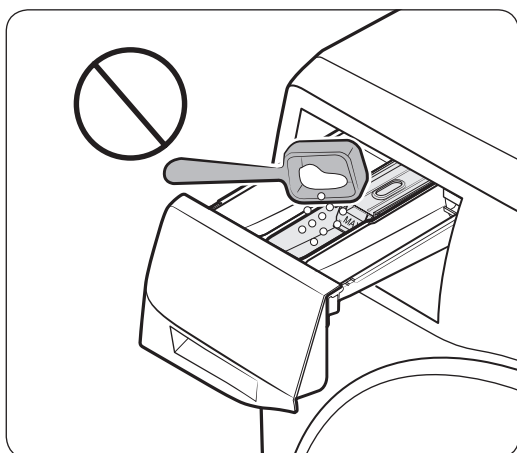


 CAUTION

- Do not apply powder detergent to the liquid detergent container.
- Concentrated fabric softener must be diluted with water before applied.
- Do not apply main-wash detergent to the  **softener compartment**.

Before you start


To use liquid detergent manually (applicable models only)

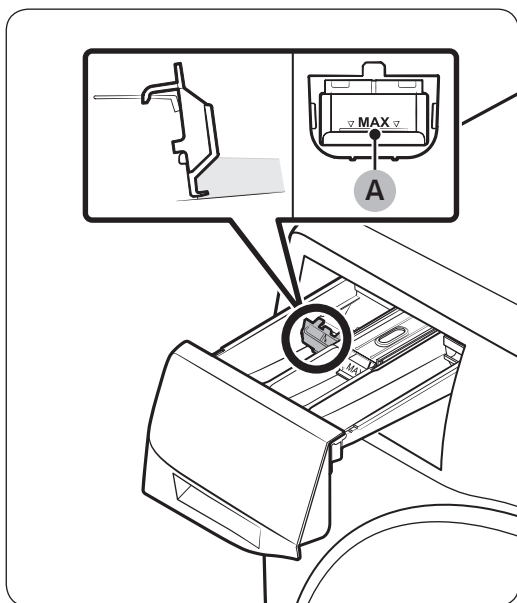

First insert the provided liquid detergent container in the **II main-wash compartment**. Then, apply liquid detergent to the container below the marked **max line (A)**.

Operations

Control panel

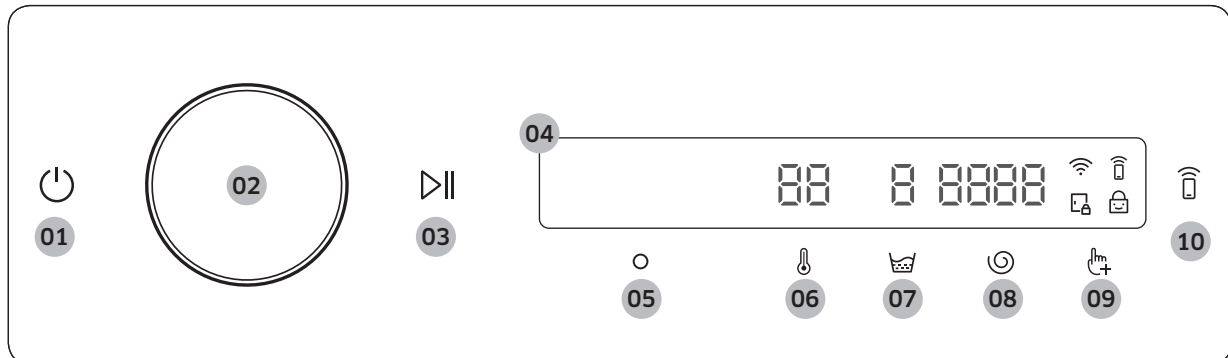


01 Power	Tap to turn the washing machine on or off. - If you do not manipulate the control panel for 10 minutes after the washing machine is turned on, the washing machine automatically turns off. - The washing machine automatically turns off when the cycle completes. CAUTION Do not tap to turn the washing machine off while the wash cycle is in progress. Tap and hold to pause the cycle first, and then tap to turn the washing machine off.
02 Navigation dial	Turn the navigation dial left or right to navigate through cycles and functions. When you turn the navigation dial, LCD displays your selection (such as cycle, additional functions, and system functions).
03 Start/Pause	Tap and hold to start or pause an operation.
04 Display	The display shows current cycle information and estimated time remaining, or an information message when a problem occurs.
05 OK	Tap to confirm your selection of function or setting.
06 Temp.	Tap to change the water temperature for the selected cycle. The indicator above the button indicates the default or selected setting.
07 Rinse	Tap to change the rinse count for the selected cycle. The indicator above the button indicates the default or selected setting.
08 Spin	Tap to change the spin speed for the selected cycle. The indicator above the button indicates the default or selected setting.
09 Additional function	Tap to enter the additional functions menu. Tap and hold for 3 seconds to enter the system functions menu.
10 Smart Control	Tap to activate or deactivate the Smart Control function. Tap and hold to enter pairing mode to connect to the SmartThings app. When the Smart Control function is activated, you can control your washing machine remotely using the SmartThings app on your smartphone or tablet (Android or iOS).

Operations

Icon descriptions

	Wi-Fi	This icon indicates that the washing machine is connected to Wi-Fi.
	Smart Control	- This icon indicates that Smart Control is on. - For more information on Smart Control, see page 46.
	Door Lock	- This icon indicates the door is locked and cannot be opened. - The door locks automatically during a cycle and this indicator turns on. - You can open the door when this icon disappears.
	Child Lock	- This icon indicates that Child Lock is on. - For more information on Child Lock, see page 42.

Operating a cycle

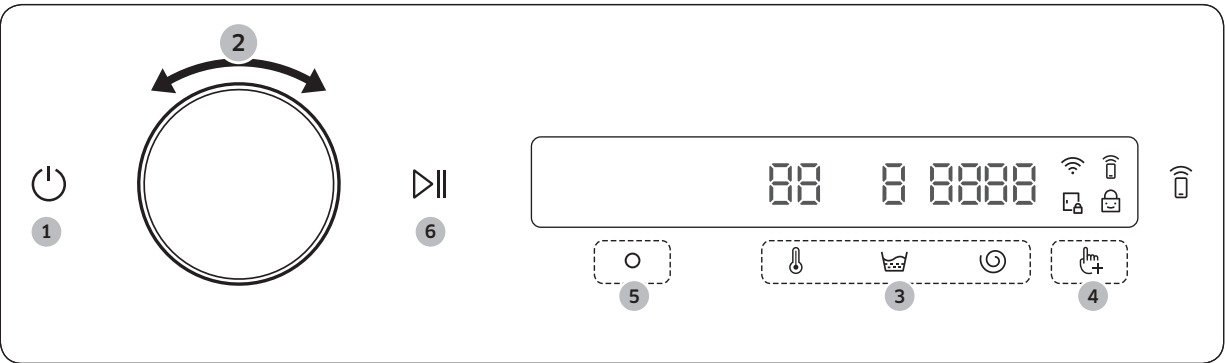

1. Tap  to turn on the washing machine.
2. Turn the **Navigation dial** to select the cycle you want.
 - For more information on **Cycle overview**, see page 37.
3. Tap , , or  to change the default cycle settings.
4. Tap , and then turn the **Navigation dial** to select additional function.
 - For more information on **Additional functions**, see page 40.
5. Tap  to change the settings for selected additional function.
 - Not all cycles have additional functions available.
6. Tap and hold  to start operation.
 - Once you set the cycle you want, the screen displays a brief cycle description, maximum laundry load, and cycle time. You can also check the cycle progress, remaining cycle time, and information codes.

Cycle overview

Cycle descriptions

Cycle	Description	Max load (kg)	
		WD1*T*****	WD9*T*****
Cotton	- For cottons, bed linens, table linens, underwear, towels, or shirts. The washing time and the rinse count are automatically adjusted according to the load. - For cleaning lightly soiled cotton items at a nominal temperature of 20 °C.	Max	
AI Wash (WD**T98****, WD**T93**** models only)	Adjusts the amount of detergent and the cycle according to the load and the soil severity. This cycle is best used with the Auto Dispense function.	Max	
15' Quick Wash	For lightly soiled items in less than 2.0 kg that you want to wash quickly. - Use less than 20 g of detergent. Using more than 20 g of detergent may leave detergent residue. - For liquid detergent, use a max of 20 ml of liquid detergent.	2.0	
Super Speed (WD**T9*****, WD**T7*****, WD**T6***** models only)	- Fast completion within 39 minutes for everyday items such as underwear and shirts. - The cycle time will differ depending on the water supply conditions, load, and type of laundry.	5.0	
Super Eco Wash	Low temperature ecobubble cycle helps reduce power consumption.	4.0	
E Cotton	- Optimal performance with lower energy for cotton fabrics, bed linens, table linens, underwear, towels, or shirts. - For energy saving, the actual washing temperature may be lower than specified.	Max	
Synthetics	For fabrics that are made of polyester (diolen, trevira), polyamide (perlon, nylon), or the like.	4.0	
Delicates	- For sheer fabrics, bras, lingerie (silk), and other handwash-only fabrics. - For best performance, use liquid detergent.	2.0	

Operations

Cycle	Description	Max load (kg)	
		WD1*T*****	WD9*T*****
Towels	For bath towels, washcloths, and mats.	4.0	
Bedding	- For bed spreads, bed sheets, bedding covers, etc. - For best results, wash only 1 type of bedding and make sure the load weighs less than 2.0 kg.	2.0	
Shirts	For shirts, blouses that are made of cotton, synthetic fiber.	2.0	
Hygiene Steam	- Cotton and linen fabric which have been in direct contact with the skin, such as underwear. - For optimum hygiene results select a temperature of 60 °C or above. - Steam cycles feature allergy care and bacteria elimination (sterilize).	4.0	
Wool	- Specific for machine-washable wool for loads less than 2.0 kg. - The Wool cycle features fine pulsating and soaking to protect the wool fibres from shrinkage/distortion. - A neutral detergent is recommended.	2.0	
Outdoor	For outdoor clothes, skiwear, and sportswear that are made of functional materials such as spandex, stretch, and micro-fibre.	2.0	
Activewear	For exercise wear such as sports jerseys, training pants, shirts/tops and other performance clothing. This cycle provides effective soil removal with controlled drum rotation for special fabric care.	2.0	
Colors	Featuring additional rinses and reduced spinning to ensure that the laundry is washed gently and rinsed thoroughly.	4.0	
Silent Wash	For reducing operating noise and vibration.	4.0	
Daily Wash (WD**T5***** models only)	For everyday items such as underwear and shirts.	4.0	
Cloudy Day	For optimum spin drying at high humid condition.	Max	
Rinse+Spin	Featuring an additional rinse process after applying fabric softener to the laundry.	Max	
Drain/Spin	For draining the water inside the drum and running an additional spin process to effectively remove moisture from laundry.	Max	

Cycle	Description	Max load (kg)	
		WD1*T*****	WD9*T*****
Drum Clean+ (WD**T9*****, WD**T7*****, WD**T6***** models only)	• Cleans the drum by removing dirt and bacteria from it. • Cleans the rubber door gasket by removing dirt from the gasket. • Perform once every 40 washes with no detergent or bleach applied. Notification message appears after every 40 washes. • Make sure the drum is empty. • Do not use any cleaning agents for cleaning the drum.	-	-
Drum Clean (WD**T5***** models only)	• Cleans the drum by removing dirt and bacteria from it. • Perform once every 40 washes with no detergent or bleach applied. Notification message appears after every 40 washes. • Make sure the drum is empty. • Do not use any cleaning agents for cleaning the drum.	-	-

Dry cycle

Wash+Dry	• For cleaning normally soiled cotton items which are declared to be washable at 40 °C or 60 °C, together in the same cycle, and to dry them in such a way that it can be immediately stored in a cupboard. This cycle is used to assess the compliance with the EU Ecodesign legislation for wash and dry.	7.0	6.0
Cotton Dry	• For general drying.	7.0	6.0
Synthetics Dry	• A low temperature drying cycle for heat-sensitive garments.	3.0	
Air Wash	• This cycle is useful for removing bad odours.	1.0	

Operations

Additional functions

Using Additional Functions

1. Tap .
2. Turn the **Navigation dial** to select the desired additional function.
3. Tap  to change the selected function's settings or start the function.

NOTE

- To return to the main screen, tap  again or turn the **Navigation dial** to select **Back** and tap .
- If the selected function is not supported, the "This function is currently not supported" message is displayed, and the  button is not activated.
- When you select an additional function, a brief help message appears for the first ten times of use.

Dry

You can add a drying process at the end of a wash cycle.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Dry**, and then tap .
4. Turn the **Navigation dial** or tap  repeatedly to select the desired drying time.
 - You can select from **Off**, **Auto**, **30min**, **1hr 00min**, **1hr 30min**, **2hr 00min**, **3hr 00min**, or **4hr 00min**.
5. Tap and hold .

Quick Drive (WD**T7***** models only)

You can reduce the overall washing time of the selected cycle settings.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Quick Drive**, and then tap .
4. Tap and hold .

Prewash

You can add a preliminary washing cycle before the main wash cycle.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Prewash**, and then tap .
4. Tap and hold .

Intensive

For badly soiled laundry. The operation time for each cycle is longer than normal.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Intensive**, and then tap .
4. Tap and hold .

Bubble Soak

This function helps remove a wide variety of stubborn stains. With Bubble Soak selected, laundry is thoroughly soaked in water bubbles for effective washing.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Bubble Soak**, and then tap .
 - Bubble Soak is available with and adds up to 30 minutes to these cycles: Cotton, Synthetics, Bedding, and Super Speed.
4. Tap and hold .

My Cycles

Add or remove cycles to create a personal cycle list.

1. Tap .
2. Turn the **Navigation dial** to select **My Cycles**, and then tap .
 - You can only edit a cycle to create a personal cycle when the washing machine is not operating.
3. Turn the **Navigation dial** to select a desired cycle.
4. Tap  to add or remove the selected cycle.
 - Addition and removal of the course is saved automatically.
5. Once you finish creating My Cycles, tap  to return to the cycles screen.

NOTE

- The **E cotton** and **Drum Clean+** cycles cannot be removed from the cycles list.
- You can also edit My Cycles in the SmartThings app.

Operations

Delay End

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 1 to 24 hours (in 1 hour increments). The hour displayed indicates the time the wash will finish.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Delay End**, and then tap .
4. Turn the **Navigation dial** to select the desired time, and then tap .
5. Tap and hold .
 - Status shows in the display and the washing machine tumbles the drum to sense the weight of the load (if load sensing is preset for the selected cycle). When load sensing is complete, the display shows the remaining time until the end of the wash cycle.
 - To cancel Delay End, tap  to restart the washing machine.

Child Lock

To prevent children or infants from accidentally starting or setting the washing machine, Child Lock locks all buttons except for  and .

1. Tap .
2. Turn the **Navigation dial** to select **Child Lock**, and then tap .
3. Tap  to select **On** or **Off**.
 - The Child Lock  icon turns on when the function is on.

NOTE

- When Child Lock is on, all buttons are disabled except for  and . The washing machine door also locks.
- Tapping a button while Child Lock is on triggers an alarm with the “**Child Lock On**” message.
- You cannot open the door after a wash cycle when the Child Lock is on. Turn the function off before opening the door to take out the laundry.

System functions

Using System Functions

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** and select the desired system function, and then tap .
3. Tap  to change the selected function's settings or start the function.

NOTE

To return to the main screen, tap  again or turn the **Navigation dial** to select **Back** and tap .

AI Pattern

This function saves frequently used cycles and settings. When you turn the function on, the washing machine remembers the cycles you use most and their settings (Temp., Rinse, Spin) and displays them in frequency order.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **AI Pattern**, and then tap .
3. Tap  to select **On** or **Off**.
 - The default setting is On. Set it to Off if you do not want to use this function.
 - When you turn off the function, all the saved data resets.

Alarm

You can turn on or off the sound from the washing machine. When this function is set to Off, the AddWash alarm, the melody of cycle completion, and the power-off beep does not sound. However, the other sounds stay active.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Alarm**, and then tap .
3. Tap  to select **On** or **Off**.
 - The default setting is On.

NOTE

The setting remains unchanged even if you restart the washing machine.

Calibration

You can run calibration again for accurate weight detection.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Calibration**, and then tap .
 - Calibration does not start if the door is not closed properly.
 - The drum rotates clockwise and anticlockwise for about 3 minutes.
3. When calibration is complete, the "Calibration complete" message appears on the display and the washing machine turns off automatically.

Operations

Wi-Fi

You can turn the washing machine's Wi-Fi on or off.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Wi-Fi**, and then tap .
3. Tap  to select **On** or **Off**.
 - The washing machine's Wi-Fi is off as a factory default setting. However, the washing machine's Wi-Fi turns on automatically when you turn on the washing machine for the first time. Then, the final Wi-Fi setting maintains regardless of the washing machine power status.
 - Once you turn on the washing machine's Wi-Fi and connect to a network, the washing machine remains connected to the network even when you turn off the power.
 - The Wi-Fi  indicates that the washing machine is connected to the router through the Wi-Fi connection.

Language

You can change the system language.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Language**, and then tap .
3. Turn the **Navigation dial** to select the desired language, and then tap .

Factory Reset



You can reset the washing machine.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Factory Reset**, and then tap 
 - Your washing machine resets to the factory setting.

Special features

AddWash (applicable models only)

To add laundry after the wash starts, use the AddWash door.

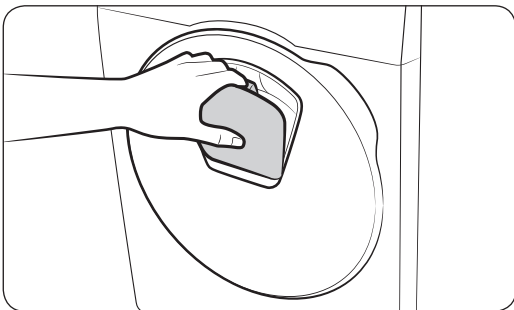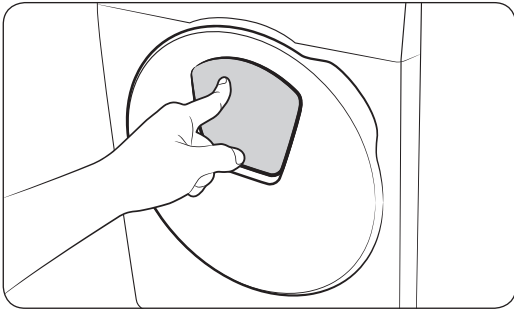

1. Tap and hold ▷|| to stop the wash cycle.
2. Press the upper area of the AddWash door to unlock the door. The door will move inward slightly when you press it and then open.
3. Open the AddWash door fully, and then insert additional laundry through the AddWash door into the drum.
4. Lift the AddWash door back into position, and then lock the door by pushing the upper area of the door until you hear a click. Then, tap and hold ▷|| again to resume the wash cycle.

⚠ CAUTION

Do not put excessive force on the AddWash door. It may break.

📄 NOTE

The water inside the drum does not leak if the AddWash door is closed properly. Water drops may form around the AddWash door, but water will not leak from inside the drum. This is normal.

⚠ CAUTION

- Do not open the AddWash door if suds have formed inside the drum that rise above the level of the AddWash door.
- Do not attempt to open the AddWash door while the machine is operating without first tapping and holding ▷||. Please note that the AddWash door can be opened unintentionally (without tapping and holding ▷||) when the wash is complete.
- Do not add an excessive load through the AddWash door. Performance may be degraded.
- Do not use the lower area of the AddWash door as a handle. Your fingers may be caught.
- Make sure that no laundry is caught in the AddWash door.
- Keep your pets out of the washing machine, especially the AddWash door.
- When using hot water for the wash, the AddWash door may appear to leak water after opening and closing the AddWash door. This is normal, simply because steam emerging from the open AddWash door has cooled and formed water drops on the surface.

Operations

- When the AddWash door closes, the door seals up and no water can leak. However, you may encounter what appears to be water leak around the door - some residual water remaining around the AddWash door may form water drops. This is normal.
- Neither the main door nor the AddWash door can be opened when the water temperature is over 50 °C. If the water level inside the drum is over a certain point, the main door cannot be opened.
- If an information code of '**AddWash door is open**' appears on the display, see the **Information codes** section for further actions.
- Keep the AddWash door and its surroundings clean at all times. Debris or detergent on or around the seals of the AddWash door may cause a leak.

Adding laundry for non-AddWash models (applicable models only)

1. Tap and hold  to stop the wash cycle.
2. Open the door and add the laundry into the drum.
3. Close the door, and then tap and hold  again to resume the wash cycle.

Smart control (applicable models only)

You can connect to the SmartThings app and control your washing machine remotely.

Connecting your washing machine

1. Download and open the SmartThings app on your smartphone or tablet (Android & iOS).
2. Tap  to turn on the washing machine.
3. Tap and hold .
 - a. The washing machine enters AP mode and connects to your smartphone or tablet.
 - b. Tap  to authenticate your washing machine.
 - c. Once the authentication process is complete, your washing machine is successfully connected to the app.
 - You can use various features available in the SmartThings app.

NOTE

- If your washing machine fails to connect with the SmartThings app, try again.
- Check your router if you experience any Internet connection problem after connecting your washing machine with the SmartThings app.
- If the Wi-Fi is off, tap and hold  for 3 seconds to enter the System functions menu, and select Wi-Fi to turn it on.
- Turning the washing machine's Wi-Fi on allows you connect to the washing machine via SmartThings app on your smartphone or tablet, regardless of the power status of the washing machine. However, the washing machine appears offline on the SmartThings app if the washing machine's Wi-Fi is off.
- Close the door before starting the Smart Control function.
- If you use your washing machine for a while without connecting it to the SmartThings app, a pop-up message about Smart Control will show for 3 seconds.
- If the washing machine's Wi-Fi is not connected to an AP (access point), the Wi-Fi will turn off when you turn off the power.

Stay Connect

Set up the Stay Connect function in your SmartThings app to keep Smart Control turned on at the end of a cycle. Your washing machine stays connected to the app so you can send additional instructions, whether you are at home or away.

1. If you turn on the Stay Connect function on the SmartThings app, the washing machine will stay in standby power saving mode after completing a cycle.
 - The Stay Connect function will remain active for up to 7 days if the door remains closed.
2. When the Stay Connect function is active, the Smart Control, Door Lock, and Wi-Fi icons are illuminated on your washing machine display.
3. You can conveniently control your washing machine, adding rinse, spin or dry cycles using the SmartThings app.



NOTE

- The washing machine switches to standby power saving mode when operation is paused even if the machine is not connected to the SmartThings app.
- In some circumstances, only the Door Lock icon may be illuminated.

Operations

SmartThings (applicable models only)

Wi-Fi connection

On your smartphone or tablet, go to **Settings** and turn on the wireless connection and select an AP (Access Point).

- This appliance supports the Wi-Fi 2.4 GHz protocols.

Download

On an app market (Google Play Store, Apple App Store, Samsung Galaxy Apps), find the SmartThings app with a search term of "SmartThings". Download and install the app on your device.

NOTE

The app is subject to change without notice for improved performance.

Log in

You must first log into SmartThings with your Samsung account. To create a new Samsung account, follow the instructions on the app. You don't need a separate app to create your account.

NOTE

If you have a Samsung account, use the account to log in. A registered Samsung smartphone or tablet user automatically logs in.

To register your appliance to SmartThings

1. Make sure your smartphone or tablet is connected to a wireless network. If not, go to **Settings** and turn on the wireless connection and select an AP (Access Point).
2. Open **SmartThings** on your smartphone or tablet.
3. If a message of "A new device is found.", select **Add**.
4. If no message appears, select **+** and select your appliance in a list of devices available. If your appliance is not listed, select **Device Type** > **Specific Device Model**, and then add your appliance manually.
5. Register your appliance to the SmartThings app as follows.
 - a. Add your appliance to SmartThings. Make sure your appliance is connected to SmartThings.
 - b. When registration is complete, your appliance appears on your smartphone or tablet.

Open Source Announcement

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by contacting our support team via <http://opensource.samsung.com> (Please use the “Inquiry” menu.)

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/SMART_AT_051/seq/0 leads to the open source license information as related to this product. This offer is valid to anyone in receipt of this information.



NOTE

Hereby, Samsung Electronics, declares that the radio equipment type appliance is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: The official Declaration of conformity may be found at <http://www.samsung.com>, go to Support > Search Product Support and enter the model name.

Wi-Fi max transmitter power : 20 dBm at 2.412GHz – 2.472GHz

Maintenance

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Drum Clean+

Perform this cycle regularly to clean the drum by removing bacteria from it. This cycle heats the water between 60 °C and 70 °C, and it also removes accumulated dirt from the rubber door gasket.

1. Tap .
2. Turn the **Navigation dial** to select **Drum Clean+**.
3. Tap and hold .

CAUTION

- Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum may cause damage to the laundry or the drum of the washing machine.
- To prevent limescale, add the proper amount of detergent according to your local water hardness or add a water softener additive together with the detergent.

Drum Clean+ reminder

Depending on the model, the **Drum Clean+** reminder is either an icon or an LED.


For icons, the icon lights up on the control panel.

For LEDs, the LED lights up next to **Drum Clean+**, or on the option area of the control panel.


- The **Drum Clean+** reminder blinks on the control panel once every 40 washes. It is advisable to perform **Drum Clean+** regularly.
- When you first see this reminder blinking, you can ignore the reminder for 6 consecutive washes. From the 7th wash, the reminder no longer appears. However, it appears again on the second 40th wash.
- Even after the last process is terminated, the "0" message may remain.
- You can record the running count of the **Drum Clean+** cycle by tapping . This does not stop or turn off the machine but marks your cycle count.
- Even if "0" does not disappear, the machine operates normally.
- It is recommended to run the cycle regularly for hygienic purposes.

Emergency drain


In case of a power failure, drain the water inside the drum before taking out the laundry.

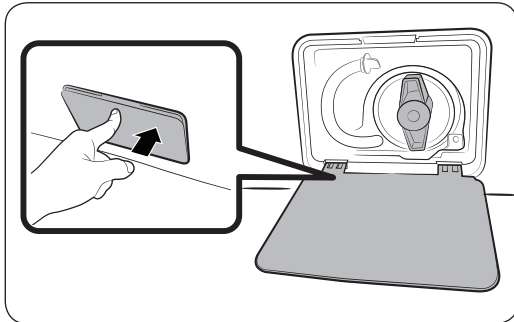

1. Power off and unplug the washing machine from the electrical outlet.
2. Gently press the top area of the **filter cover** to open.

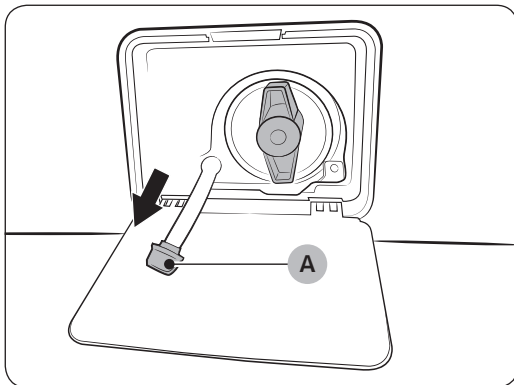

3. Put an empty, spacious container around the cover, and stretch the emergency drain tube to the container while holding the **tube cap (A)**.

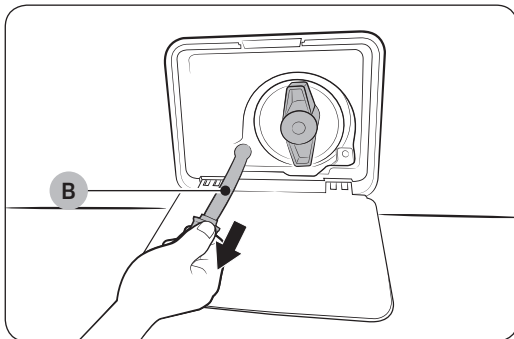

4. Open the tube cap and let water in the **emergency drain tube (B)** flow into the container.
5. When done, close the tube cap, and reinsert the tube. Then, close the filter cover.

NOTE

Use a spacious container because the water in the drum may be more than expected.


Maintenance

Cleaning

Surface of the washing machine

Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

AddWash door

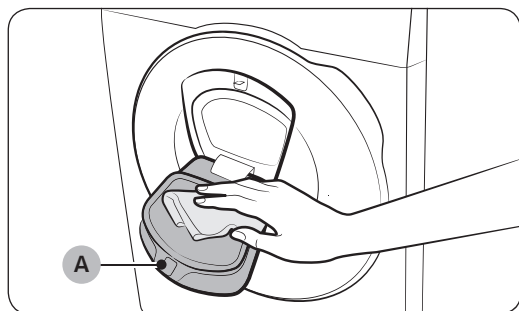



1. Open the AddWash door.
2. Use a wet cloth to clean the AddWash door.
 - Do not use cleaning agents. Discolouration may occur.
 - Use caution when cleaning the rubber packing and the **locking mechanism (A)**.
 - Dust off the door area regularly.
3. Wipe up and close the AddWash door until you hear a clicking sound.

⚠ CAUTION

- Do not apply force on the AddWash door. It may break.
- Do not leave the AddWash door open while the machine is operating.
- Do not put heavy objects on the AddWash door at any time.
- To prevent physical injury, do not touch the AddWash door while the drum is rotating.
- Do not open the AddWash door while the machine is operating. This may cause physical injury.
- Do not manipulate the feature panel while the AddWash door is open. This may cause physical injury or system failure.
- Do not input objects other than laundry.
- Do not input bulky items to the drum through the AddWash door.
- Do not pull out the rubber packing of the AddWash door when cleaning. This may cause damage.

Mesh filter

Clean the mesh filter of the water hose once or twice a year.

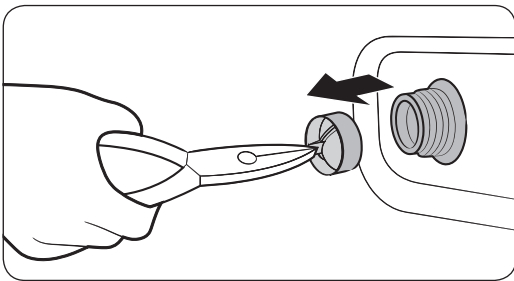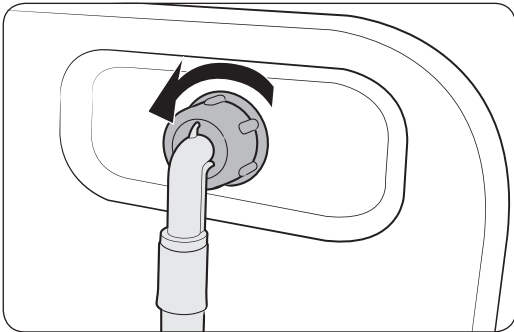

1. Turn off the washing machine, and unplug the power cord.
2. Close the water tap.
3. Loosen and disconnect the water hose from the back of the washing machine. Cover the hose with a cloth to prevent water from gushing out.
4. Use pliers to pull out the mesh filter from the inlet valve.
5. Submerge the mesh filter deeply in water so that the threaded connector is also submerged.
6. Dry the mesh filter completely in the shade.
7. Reinsert the mesh filter into the inlet valve, and reconnect the water hose to the inlet valve.
8. Open the water tap.




NOTE

If the mesh filter is clogged, an information code of **“Check water supply”** appears on the screen.

Maintenance

Debris filter

It is advisable to clean the debris filter every 2 months to prevent its clogging. A clogged debris filter may reduce the bubble effect.

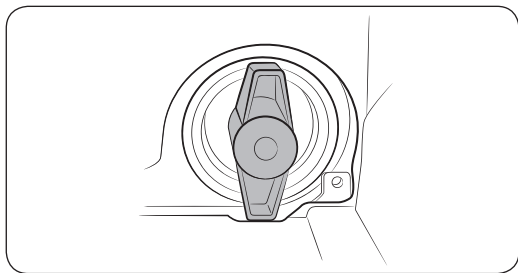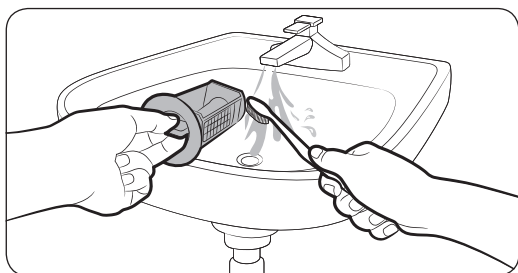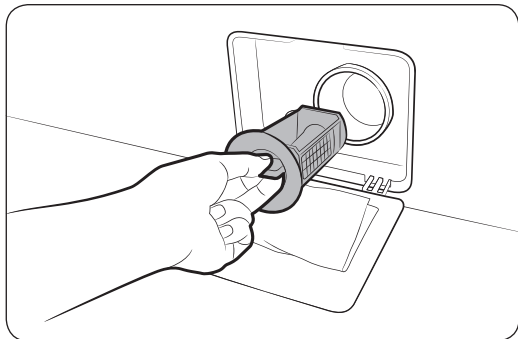

1. Turn off the washing machine, and unplug the power cord.
2. Drain the remaining water inside the drum. See the **Emergency drain** section.
3. Gently press the top area of the **filter cover** to open.
4. Turn the debris filter knob to the left, and drain off the remaining water.
5. Clean the debris filter using soft brushes. Make sure the drain pump propeller inside the filter is unclogged.
6. Reinsert the debris filter, and turn the filter knob to the right.

NOTE

- Some debris filters feature a safety knob that is designed to prevent accidents by children. To open the safety knob of the debris filter, push in and turn it anticlockwise. The spring mechanism of the safety knob helps open the filter.
- To close the safety knob of the debris filter, turn it clockwise. The spring makes a rattling sound, which is normal.


NOTE

If the pump filter is clogged, an information code of **"Check drainage"** appears on the screen.


CAUTION

- Make sure the filter knob is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.


Detergent drawer

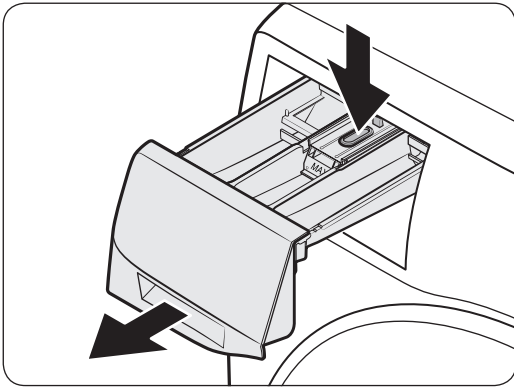

1. While holding down the **release lever** inside the drawer, slide open the drawer.

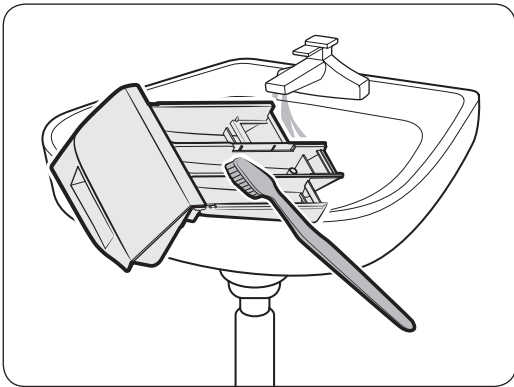

2. Clean the drawer components in flowing water using a soft brush.

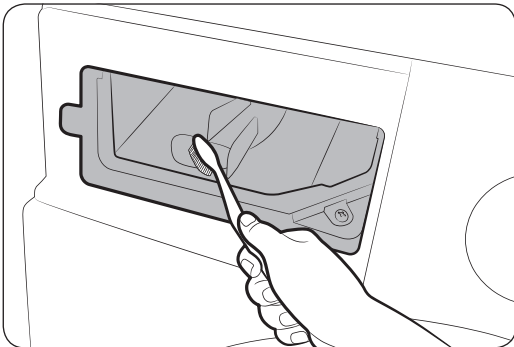

3. Clean the drawer recess using a bottle brush to remove detergent residues and limescale on the drawer recess.
4. Reinsert the liquid detergent container to the drawer.
5. Slide the drawer inward to close it.

NOTE

Make sure the drawer recess is completely dry before inserting the detergent drawer.

NOTE

To remove remaining detergent, perform the **Rinse+Spin** cycle with the drum being empty.

Maintenance

Defrosting your washing machine

The washing machine may freeze when it drops below 0 °C.

1. Turn off the washing machine, and unplug the power cord.
2. Pour warm water over the water tap to loosen the water hose.
3. Disconnect the water hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water hose to the water tap.

NOTE

If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time. If this is the case, drain the washing machine and unplug the power cord.

1. Turn the **Navigation dial** to select **Rinse+Spin**.
2. Empty the drum, and then tap and hold ▷||.
3. When the cycle is complete, close the water tap and disconnect the water hose.
4. Turn off the washing machine, and unplug the power cord.
5. Open the door to let air circulate through the drum.

Troubleshooting

If there is any problem, check the information message on the LCD screen and follow the on-screen instructions.

If the problem persists, please contact the service center.

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try these suggestions.

Problem	Action
Does not start.	• Make sure the washing machine is plugged in. • Make sure the door is properly closed. • Make sure the water taps are open. • Tap and hold ▷ to start the washing machine. • Make sure Child Lock is not activated. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and will do quick drain. • Check the fuse or reset the circuit breaker. • Check if power is supplied properly. • Low voltage detected. - Check if the power cord is plugged in. • Make sure laundry is not caught in the door. • The “AddWash door is open” message appears when you open the AddWash door without tapping and holding ▷ . If this happens, do one of the following: • Press the AddWash door to close properly. Then, tap and hold ▷ and try again. • To add laundry, open the AddWash door and put in laundry. close the AddWash door completely. Then, tap and hold ▷ to resume operation.
Water supply is insufficient, or no water is supplied.	• Fully open the water tap. • Make sure the door is properly closed. • Make sure the water supply hose is not frozen. • Make sure the water supply hose is not kinked or clogged. • Make sure there is sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged.
After a cycle, detergent remains in the detergent drawer.	• Make sure the washing machine is running with sufficient water pressure. • Make sure the detergent is added to the centre of the detergent drawer. • Make sure the rinse cap is inserted properly. • If using granular detergent, make sure the detergent selector is in the upper position. • Remove the rinse cap and clean the detergent drawer.

Troubleshooting

Problem	Action
Excessive vibrations or makes noise.	• Make sure the washing machine is installed on a level, solid floor that is not slippery. If the floor is not level, use the levelling feet to adjust the height of the washing machine. • Make sure the shipping bolts are removed. • Make sure the washing machine is not in contact with any other object. • Make sure the laundry load is balanced. • The motor can cause noise during normal operation. • Overalls or clothes with metallic decorations can cause noise while being washed. This is normal. • Metal objects such as coins can cause noise. After washing, remove these objects from the drum or filter case. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and a "Unbalanced laundry detected" check message will be shown in the display.
Does not drain and/or spin.	• Make sure the drain hose is straightened all the way to the drain system. If you encounter a drain problem, call for service. • Make sure the debris filter is not clogged. • Close the door and tap and hold ▷ . For your safety, the washing machine will not tumble or spin unless the door is closed. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is connected to a drain system that is not clogged. • If the washing machine is not supplied with sufficient power, the washing machine will temporarily not drain or spin. As soon as the washing machine regains sufficient power, it will operate normally. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged.
The door does not open.	• Tap and hold ▷ to stop the washing machine. • It may take a few moments for the door lock mechanism to disengage. • The door will not open until 3 minutes after the washing machine has stopped or the power has been off. • Make sure all the water in the drum is drained. • The door may not open if water remains in the drum. Drain the drum and open the door manually. • Make sure the door lock light is off. The door lock light turns off after the washing machine has drained.

Problem	Action
Excessive suds.	• Make sure you use the recommended types of detergent as appropriate. • Use high efficiency (HE) detergent to prevent oversudsing. • Reduce the detergent amount for soft water, small loads, or lightly soiled loads. • Non-HE detergent is not recommended.
Cannot add additional detergent.	• Make sure the remaining amount of detergent and fabric softener is not over the limit.
Stops.	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door, and tap and hold ▷ to start the washing machine. For your safety, the washing machine will not tumble or spin unless the door is closed. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and will do quick drain. • There may be a pause or soak period in the cycle. Wait briefly, and the washing machine may start. • Make sure the mesh filter of the water supply hose at the water taps is not clogged. Periodically clean the mesh filter. • If the washing machine is not supplied with sufficient power, the washing machine will temporarily not drain or spin. As soon as the washing machine regains sufficient power, it will operate normally.
Fills with the wrong water temperature.	• Fully open both taps. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct taps. Flush water lines. • Make sure the water heater is set to supply a minimum of 49 °C hot water at the tap. Also, check the water heater capacity and recovery rate. • Disconnect the hoses and clean the mesh filter. The mesh filter may be clogged. • While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature.
Load is wet at the end of a cycle.	• Use the High or Extra High spin speed. • Use high efficiency (HE) detergent to reduce oversudsing. • Load is too small. Small loads (one or two items) may become unbalanced and not spin completely. • Make sure the drain hose is not kinked or clogged.

Troubleshooting

Problem	Action
Leaks water.	• Make sure the door is properly closed. • Make sure all hose connections are tight. • Make sure the end of the drain hose is correctly inserted and secured to the drain system. • Avoid overloading. • Use high efficiency (HE) detergent to prevent oversudsing. • Check the drain hose. - Make sure the end of the drain hose is not placed on the floor. - Make sure the drain hose is not clogged.
Has odours.	• Excessive suds collect in recesses and can cause foul odours. • Run cleansing cycles to sanitise periodically. • Clean the door seal (diaphragm). • Dry the washing machine interior after a cycle has finished.
No bubbles are seen (Bubble models only).	• You may not be able to see bubbles if there is too much items in the drum. • Severely contaminated laundry may not generate bubbles.
Can I open the AddWash door at any time?	• The AddWash door can be opened only when the  indicator appears. However, it does not open in the following cases: - When the boiling or drying process is running and the internal temperature becomes high - If you set the Child Lock for safety reasons - When the drum wash or drum drying cycle that does not involve additional laundry is running.
A message appears on the display to alert that dispenser is open.	• Check if the detergent drawer is closed properly. - Open the detergent drawer and close it again. Make sure it's closed properly.

If a problem persists, contact a service center. The number of the service center is on the label attached to the product.

Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

Code	Action
Check drainage	Water is not draining. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged. • Make sure the drain hose is straightened all the way to the drain system. • If the information code remains, contact a customer service centre
Check water supply	Water is not supplied. • Make sure the water taps are open. • Make sure the water hoses are not clogged. • Make sure the water taps are not frozen. • Make sure the washing machine is operating with sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged. • All buttons will be disabled for 3 minutes after the information code appears. • When the "Check water supply" message appears, the machine drains water for 3 minutes. In the meantime, the Power button will be disabled.
Check water lines	• Make sure the cold water supply hose is firmly connected to the cold water tap. If it is connected to the hot water tap, the laundry may be deformed with some cycles.
Unbalanced laundry detected	Spinning does not work. • Make sure laundry is spread out evenly. • Make sure the washing machine is on a flat, stable surface. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and an "Unbalanced laundry detected" check message will be shown in the display.
Door is open	Operating the washing machine with the door open. • Make sure the door is properly closed. • Make sure laundry is not caught in the door.

Troubleshooting

Code	Action
AddWash door is open (applicable models only)	This message appears when you open the AddWash door without tapping and holding ▷ . If this happens, do one of the following: - Press the AddWash door to close properly. Then, tap and hold ▷ and try again. - To add laundry, open the AddWash door and input laundry. Close the AddWash door properly. Then, tap and hold ▷ to resume operation.
OC	Water has overflowed. - Restart after spinning. - If the information code remains on the display, contact a local Samsung service centre.
LC, LC1	Check the drain hose. - Make sure the end of the drain hose is not placed on the floor. - Make sure the drain hose is not clogged. - If the information code remains, contact a customer service centre.
3C	Check the drum motor for operation. - Try restarting the cycle. - If the information code remains, contact a customer service centre.
3CP	The electronic control needs to be checked. - Try restarting the cycle. - If the information code remains, contact a customer service centre.
UC	Check the pulsator motor for operation. - Check if power is supplied properly. - If the information code remains, contact a customer service centre.
	Low voltage detected. - Check if the power cord is plugged in. - If the information code remains, contact a customer service centre.
HC	High temperature heating check. If the information code remains, contact a customer service centre.
1C	The Water Level sensor is not working properly. - Turn the machine off, and restart the cycle. - If the information code remains, contact a customer service centre.
AC	Check communications between main and sub PBAs. - Turn the machine off, and restart the cycle. - If the information code remains, contact a customer service centre.
8C	The MEMS sensor is not working properly. - Turn the machine off, and restart the cycle. - If the information code remains, contact a customer service centre.



Code	Action
AC6	Check communications between the main and the inverter PBAs. - Depending on the state, the machine may automatically returns to normal operation. - Turn the machine off, and restart the cycle. - If the information code remains, contact a customer service centre.
DC1	The Main Door lock/unlock is not working properly. - Turn the machine off, and restart the cycle. - If the information code remains, contact a customer service centre.
DC3	The AddWash door lock/unlock is not working properly. - Turn the machine off, and restart the cycle. - If the information code remains, contact a customer service centre.
FC	The drying fan motor is not working properly. - Turn the machine off, and restart the cycle. - If the information code remains, contact a local Samsung service centre.
HC2	The drying heater is not working properly. - Turn the machine off, and restart the cycle. - If the information code remains, contact a local Samsung service centre.

If any information code keeps appearing on the screen, contact a local Samsung service centre.

Specifications

Fabric care chart

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing (and dry cleaning when necessary). The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximise garment life and reduce laundry problems.

	Resistant material		Do not iron
	Delicate fabric		Can be dry cleaned using any solvent
	Item can be washed at 95 °C		Dry clean
	Item can be washed at 60 °C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item can be washed at 40 °C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item can be washed at 30 °C		Do not dry clean
	Hand wash only		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 °C max		Tumble dry, reduced heat
	Can be ironed at 150 °C max		Do not tumble dry
	Can be ironed at 100 °C max		

Protecting the environment

- This appliance is manufactured from recyclable materials. If you decide to dispose of it, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the lid so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).


Spare parts guarantee

We guarantee that the following spare parts will be available to professional repairers and end-users for a minimum period of 10 years after placing the last unit of the model on the market.

- Door, door hinges and seals, other seals, door locking assembly, and plastic peripherals such as detergent dispensers.

Specification sheet

"*" Asterisk(s) means variant model and can be varied (0-9) or (A-Z).

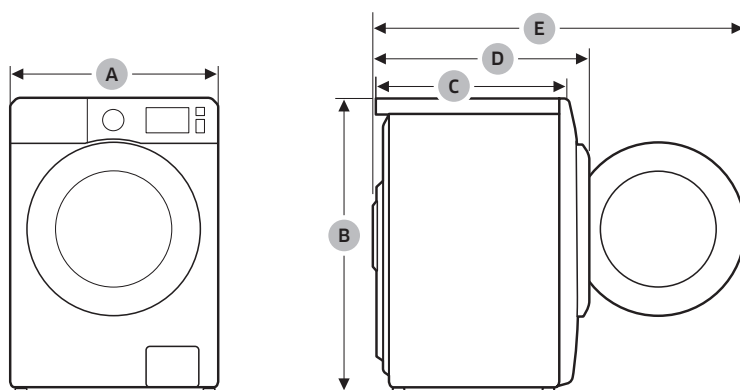

Specifications

Type		Front loading washing machine
Model name		WD1*T*****
Dimensions	A (Width)	600 mm
	B (Height)	850 mm
	C (Depth)	600 mm
	D	680 mm (WD1*T*3****, WD1*T*0****) 690 mm (WD1*T*8****, WD1*T*5****)
	E	1120 mm
Water pressure		50-800 kPa
Net weight		80 kg
Maximum load capacity		Washing and spinning
		10.0 kg
		Drying
		7.0 kg
Power consumption	Washing and heating	AC 220-240 V / 50 Hz
	Dry	
		1900-2300 W
		1600-1900 W
Spin revolutions		1400 RPM
Spin-Drying Efficiency		5 stars

NOTE

The design and specifications are subject to change without notice for quality improvement purposes.

The energy label specifications have been determined by using the following program according to UAE.S 5010-2.(Only for U.A.E models)

The program is Cotton 60 °C + Intensive.

The drying energy consumption data has been measured under the conditions specified in Standard UAE.S 5010-2. (Only for U.A.E models)

- First drying should be performed with 7 kg load (the load consist : 2 sheets, 12 pillowcases and 34 towels) by selecting Cotton Dry + Spin; (1 or 2 towels can be added or removed for setting weight.)
- Second drying should be performed with 3 kg load (the load consist : 2 sheets, 4 pillowcases and 0 towels) by selecting Cotton Dry + Spin; (1 or 2 towels can be added or removed for setting weight.)

Type		Front loading washing machine	
Model name		WD9*T7***** WD9*T6***** WD9*T5*****	
Dimensions	A (Width)	600 mm	
	B (Height)	850 mm	
	C (Depth)	650 mm	
	D	730 mm (WD9*T*3****, WD9*T*0****) 740 mm (WD9*T*8****, WD9*T*5****)	
	E	1170 mm	
Water pressure		50-800 kPa	
Net weight		68 kg	
Maximum load capacity		Washing and spinning	9.0 kg
		Drying	6.0 kg
Power consumption	Washing and heating	AC 220-240 V / 50 Hz	1900-2300 W
	Dry		1600-1900 W
Spin revolutions		1400 RPM	
Spin-Drying Efficiency		5 stars	

NOTE

The design and specifications are subject to change without notice for quality improvement purposes.

The energy label specifications have been determined by using the following program according to UAE.S 5010-2.(Only for U.A.E models)

The program is Cotton 60 °C + Intensive.

The drying energy consumption data has been measured under the conditions specified in Standard UAE.S 5010-2. (Only for U.A.E models)

- First drying should be performed with 6 kg load (the load consist : 2 sheets, 8 pillowcases and 24 towels) by selecting Cotton Dry + Spin; (1 or 2 towels can be added or removed for setting weight.)
- Second drying should be performed with 3 kg load (the load consist : 2 sheets, 6 pillowcases and 1 towels) by selecting Cotton Dry + Spin; (1 or 2 towels can be added or removed for setting weight.)

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAM CS (800-72627)	
KUWAIT	183-CALL (183-2255)	
BAHRAIN	8000-GSAM (8000-4726)	
QATAR	800-CALL (800-2255)	



DC68-04199Q-00

الغسالة

دليل المستخدم

WD1*T*****/WD9*T*****

SAMSUNG



DC68-04199Q-00

٤	معلومات السلامة
٤	ما يجب أن تعرفه حول إرشادات السلامة
٤	رموز السلامة الهامة
٥	احتياطات السلامة الهامة
٧	تحذيرات هامة عند التركيب
٨	تنبيهات خاصة بالتركيب
٨	تحذيرات هامة عند استعمال هذا الجهاز
١٠	تنبيهات الاستعمال
١٣	تحذيرات هامة عند التنظيف
١٤	التركيب
١٤	ما المحتويات المشمولة
١٦	متطلبات التركيب
١٨	التركيب خطوة بخطوة
٢٨	ما قبل بدء التشغيل
٢٨	الضبط الأولي
٢٩	دليل غسل الملابس
٣٢	إرشادات خاصة بدرجة التنظيف
٣٥	العمليات
٣٥	لوحة التحكم
٣٦	تشغيل دورة
٣٧	رؤية عامة للدورة
٤٠	الوظائف الإضافية
٤٣	وظائف النظام
٤٥	ميزات خاصة
٤٨	تطبيق SmartThings (الطرز المزودة به فقط)
٤٩	إعلان المصدر المفتوح



الصيانة

٥٠

٥٠

٥١

٥٢

٥٦

٥٦

تنظيف الأسطوانة +

التصريف عند الطوارئ

التنظيف

إزالة الصقيع عن الغسالة

يجب الحذر رجاء بشأن الفترات الزمنية من سوء الاستخدام

٥٧

استكشاف الأخطاء وإصلاحها

٥٧

٦١

نقاط التحقق والفحص

أكواد المعلومات

٦٤

المواصفات

٦٤

٦٤

٦٥

٦٥

جدول العناية بالأقمشة

حماية البيئة

ضمان قطع الغيار

قائمة المواصفات الفنية



معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوي هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

الرجاء قراءة هذا الدليل قراءة شاملة للتأكد من أنك تعرف كيفية تشغيل الميزات والوظائف المتنوعة في جهازك الجديد بشكل آمن وفعال. الرجاء الاحتفاظ بهذا الدليل في مكان آمن بالقرب من الجهاز من أجل الرجوع إليه في المستقبل. يستخدم هذا الجهاز للغرض المخصص له فقط كما هو مذكور في دليل المالك هذا.

إن التحذيرات وإرشادات السلامة الواردة في هذا الدليل لا تشمل بالضرورة جميع الظروف والمواقف المحتملة التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها.

نظرًا لأن إرشادات التشغيل التالية تنطبق على طرازات متعددة، فإن خصائص الغسالة الخاصة بك قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل، كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو تساؤلات، اتصل بأقرب مركز خدمة أو اعثر على التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

رموز السلامة الهامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

⚠️ تحذير

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات خطيرة للأفراد أو الموت و/أو تلف الجهاز.

⚠️ تنبيه

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى إصابات للأفراد و/أو تلف الجهاز.

📖 ملاحظة

يُشير ذلك إلى خطر التعرض لإصابة أو التسبب بضرر بالغ بالجهاز.

📖 اقرأ التعليمات

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا يُرجى اتباعها بعناية.

احتفظ بهذا الدليل بعد قراءته في مكان آمن من أجل الرجوع إليه في المستقبل.

اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال للتعرض للمخاطر كما هو الحال مع جميع الأجهزة الكهربائية وأجزائها المتحركة. تعرف بنفسك على تشغيل هذا الجهاز وتوخّ الحذر عند استعماله حتى تتمكن من تشغيله بشكل آمن.



لتقليل إمكانية نشوب حريق أو التعرض للصعق بالكهرباء أو إصابة الأشخاص في أثناء استخدام الجهاز، اتبع احتياطات الأمان الأساسية؛ بما في ذلك ما يلي:

١. لم يُصمم هذا الجهاز للاستخدام من قبل أشخاص لديهم مشكلات جسدية وعقلية وحسية (بما فيهم الأطفال) أو من تنقصهم المعرفة والخبرة إلا أن يتولى شخص مسؤول عن سلامتهم الإشراف عليهم أو توفير الإرشادات بشأن استخدام الجهاز.
٢. **بالنسبة للاستخدام في أوروبا:** يمكن للأطفال الذين بلغوا سن ٨ سنوات أو أكبر والأشخاص الذين يعانون قصوراً في القدرات الجسدية أو الحسية أو العقلية أو من تنقصهم الخبرة والمعرفة استخدام هذا الجهاز شريطة خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة للاستخدام الآمن للجهاز وأن يتفهموا المخاطر المحتملة الكامنة. يجب منع الأطفال من اللعب بالجهاز. كذلك لا يُسمح للأطفال بتنفيذ عملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم أدائها دون إشراف عليهم.
٣. يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
٤. في حالة تلف سلك التيار الكهربائي، فإنه يتعين تغييره من قبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو بمعرفة فني مؤهل لتفادي التعرض لمخاطر.
٥. يجب استخدام مجموعات الخراطيم الجديدة التي يجري توفيرها مع الجهاز وعدم استخدام مجموعة الخراطيم القديمة.
٦. بالنسبة للأجهزة ذات فتحات التهوية في قاعدتها، يتعين عدم إعاقة أو سد هذه الفتحات بالسجادة.
٧. **بالنسبة للاستخدام في أوروبا:** يجب إبعاد الأطفال الأقل من ٣ سنوات عن الجهاز مالم يكونوا تحت المراقبة والإشراف الدائمين.
٨. **تنبيه:** لتجنب المخاطر الناجمة عن إعادة الضبط غير القصدي للفاصل الحراري، فإنه يتعين عدم تزويد الجهاز بالطاقة عبر جهاز تبديل خارجي، أو ما يُعرف باسم جهاز فصل ووصل خارجي، مثل المؤقت أو توصيله بدائرة كهربية يجري تشغيلها وإيقاف تشغيلها بشكل منتظم بخاصية ما.
٩. لا يجري استخدام التجفيف بالتدوير عند استخدام كيماويات صناعية في أثناء التنظيف.
١٠. يتعين تنظيف مصيدة النسالة بشكل دائم، إن أمكن.
١١. يتعين عدم السماح بتراكم النسالة حول المجفف الدوار. (وهذا أمر غير متوفر للأجهزة المصممة لتكون تهويتها خارج المبنى)
١٢. يجب توفير قدر كافٍ من التهوية لتجنب التدفق الخلفي للغازات في الغرفة من أجهزة تحرق أنواع أخرى من الوقود، بما في ذلك الحرائق المشتعلة.



١٣. لا تُجفف الأشياء غير المغسولة في المجفف الدوار.

١٤. في حالة الملابس والأغراض المتسخة بمواد مثل زيت الطهي والأسيتون والكحول والبتروول والكيروسين ومزيلات البقع والترينتين والشمع ومزيلات الشمع فإنه يجب غسلها بماء ساخن مع إضافة كمية إضافية من المنظفات قبل تجفيفها بالمجفف الدوار.

١٥. في حالة الملابس والأغراض على غرار المطاط (رغوة مطاط) وأغطية الغسلة والأقمشة المقاومة للماء والمواد المبطن بالمطاط والملابس أو الوسائد المحشوة بالمطاط فإنه لا يجب تجفيفها باستخدام المجفف الدوار.

١٦. يجب استخدام منعومات الأقمشة أو المنتجات المماثلة وفق تعليمات الاستخدام.

١٧. يجري الجزء الأخير من عمل بدون تسخين (دورة على البارد) وذلك لضمان الحفاظ على الملابس والأغراض في درجة حرارة لا تعرضها للتلف.

١٨. أفرغ الجيوب من جميع الأغراض مثل الولاعات وعلب الثقاب.

١٩. **تحذير:** لا توقف المجفف الدوار قبل نهاية دورة التجفيف أبدًا إلا إذا كنت ستزيل جميع الأغراض وبسطها بسرعة حتى يجري تشتيت الحرارة.

٢٠. يتعين عدم تصريف عادم الهواء في المدخنة التي تُستخدم لطرد الأبخرة من الأجهزة التي تحرق الغاز أو غير ذلك من أنواع الوقود.

٢١. يتعين ألا يجري تركيب الجهاز خلف باب قابل للغلق أو باب منزلق أو باب له مفصلة توجد على الجهة المقابلة للمجفف الدوار على نحو من شأنه إعاقة الفتح الكامل لباب المجفف الدوار.

٢٢. **تحذير:** يتعين عدم تزويد الجهاز بالطاقة خلال جهاز تبديل خارجي، أو ما يُعرف باسم جهاز فصل ووصل، مثل مؤقت أو الاتصال بدائرة يجري تشغيلها وإيقاف تشغيلها بشكل منتظم بواسطة خاصية ما.

٢٣. هذا الجهاز مصمم للاستخدامات المنزلية فقط وغير مصمم لاستخدامات مثل:

- مناطق مطابخ الموظفين بالمحلات التجارية والمكاتب وغيرها من بيئات العمل؛
- المنازل الريفية؛
- أو من جانب العملاء في الفنادق والاستراحات وغيرها من البيئات السكنية؛
- الوحدات الفندقية للمبيت مع الإفطار؛
- مناطق الاستخدام الجماعي في تكتلات الشقق أو في المغاسل.



تحذيرات هامة عند التركيب

⚠ تحذير

يجب أن يتولى فني مؤهل أو شركة صيانة متخصصة تركيب هذا الجهاز.

- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربائية أو نشوب حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل.

ركب كابل الطاقة في المقبس على أن يكون يتحقق فيه المواصفات الكهربائية المحددة. استخدم القابس لهذا الجهاز فقط ولا تستخدم كابل إطالة.

- قد يؤدي تشارك مقبس الحائط مع أجهزة أخرى باستخدام سلك طاقة أو تمديد سلك الطاقة إلى حدوث صدمة كهربائية أو نشوب حريق.
- تأكد أن الجهد الكهربائي للطاقة والتردد والتيار مطابقة للقياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربائية أو نشوب حريق.

أزل جميع المواد الخارجية مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربائي ونقاط الاتصال بانتظام واستخدم لذلك قطعة قماش جافة.

- انزع قابس التيار الكهربائي من المقبس ونظفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربائية أو نشوب حريق.

قم بتوصيل القابس الكهربائي "الفيشة" في مقبس التيار الكهربائي بالحائط بحيث يتم تمديد سلك التيار الكهربائي نحو الأرضية.

- إذا قمت بتوصيل سلك الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربائية أو حريق.

احتفظ بجميع مواد التغليف بعيدًا عن متناول الأطفال لأنها قد تمثل خطرًا عليهم.

- قد يؤدي وضع الطفل لكيس فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو سلك الطاقة أو موصل الطاقة، اتصل بأقرب مركز صيانة إليك.

يتعين تثبيت هذا الجهاز على الأرض بشكل سليم.

لا تثبت الجهاز على الأرض بجانب أنبوب غاز أو أنبوب ماء بلاستيكي أو خط تليفون.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو نشوب حريق أو انفجار أو مشاكل بالمنتج.
- لا تقم بتوصيل سلك التيار الكهربائي في مقبس غير مؤرض بشكل صحيح وتأكد من توافق هذا المقبس مع القوانين المحلية والوطنية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.

يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).

يجب عدم تركيب هذا الجهاز في موقع تكون درجة حرارته منخفضة.

- قد يؤدي الجليد إلى انفجار الأنابيب.

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو نشوب حريق.

لا تستخدم محول كهربائي.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو نشوب حريق.



لا تستخدم قابس تيار كهربائي أو سلك طاقة تالف أو مقبس حائط غير محكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يتعين عدم جذب سلك الطاقة أو ثنيه بقوة.

يجب عدم لف سلك الطاقة أو طيه.

يجب عدم تعليق سلك الطاقة فوق غرض معدني أو وضع غرض ثقيل فوق سلك الطاقة أو وضع أغراض بين سلك الطاقة أو دفع سلك الطاقة في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك الطاقة في أثناء عدم توصيل قابس التيار الكهربائي.

- افصل قابس التيار الكهربائي ممسكًا بالموصل.
- يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق.

يجب وضع الجهاز بالقرب من قابس التيار الكهربائي، وصنابير توريد الماء وخرطوم صرف الماء ليسهل الوصول إليها.

على إثر عملية تصليح لدى مزود خدمة غير معتمد أو التصليح الذاتي أو التصليح غير الاحترافي للمنتج، فإن Samsung لا تكون مسؤولة عن أي تلفيات تصيب المنتج أو إصابة أو غير ذلك من مشاكل سلامة المنتج ناجمة عن أي محاولة لإصلاح للمنتج لا تتبع تعليمات الإصلاح والصيانة اتباعًا دقيقًا. وكل ضرر يلحق المنتج على إثر محاولة لإصلاح المنتج من قبل شخص خلاف مزود خدمة معتمد من Samsung لن كون مشمولاً بالضمان.

تنبيهات خاصة بالتركيب

⚠ تنبيه

ينبغي وضع هذا الجهاز بطريقة يمكن من خلالها الوصول بسهولة إلى قابس التيار الكهربائي.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق نتيجة لتسريب الكهرباء.

يجب تركيب جهازك على أرضية مستوية وصلبة تتحمل وزن الجهاز.

- قد ينتج عن الفشل في اتباع هذه التعليمات وجود اهتزازات أو تحركات أو ضوضاء أو مشاكل غير طبيعية تتعلق بالمنتج.

تحذيرات هامة عند استعمال هذا الجهاز

⚠ تحذير

في حالة تعرض الجهاز لكمية زائدة من الماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري، واتصل بأقرب مركز صيانة.

- لا تلمس قابس التيار الكهربائي بيدين مبتلئين.
- قد ينتج عن هذا الأمر وجود صدمة كهربية.

في حالة إصدار الجهاز لضوضاء غير طبيعية، أو رائحة اشتعال أو دخان، قم بإلغاء توصيل سلك الطاقة فورًا واتصل بأقرب مركز للصيانة.

- يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق.

في حالة وجود تسريب للغاز (كغاز البروبان، والغاز النفطي المسال، وما شابه ذلك)، يجب تهوية المكان فورًا بدون لمس سلك الطاقة. لا تقم بلمس الجهاز أو سلك الطاقة.

- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو حريق.

أزل ذراع باب الغسالة قبل التخلص من الجهاز.

- قد يموت الأطفال اختناقًا في حالة احتباسهم داخل هذه الغسالة.



تأكد من إزالة الغلاف (الإسفنج، الفوم) المرفق بأسفل الغسالة قبل الاستخدام.

يجب عدم غسل العناصر العالق بها الجاز أو الكيروسين أو البنزين أو تتر الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسل/التجفيف/التنشيف عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة حدوث الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة. قد ينتج عن هذا الأمر إصابات شخصية.

- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو الإصابة.

لا تلمس قابس التيار الكهربائي بيدين مبتلئين.

- قد يُسبب ذلك إلى حدوث صدمة كهربائية.

يجب عدم إيقاف تشغيل الجهاز عن طريق قطع اتصال سلك الطاقة أثناء تشغيل الجهاز.

- قد يؤدي توصيل سلك الطاقة مرة أخرى بالمقبس إلى حدوث شرارة ينتج عنها صدمة كهربية أو حريق.

لا تسمح للأطفال بالتسلق داخل هذا الجهاز أو فوقه.

- قد يؤدي ذلك إلى التعرض لصدمة كهربية، أو الإصابة بالحروق أو وقوع إصابات أخرى.

لا تضع يديك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تنزع قابس الجهاز عن طريق سحب سلك التيار الكهربائي نفسه. أمسك القابس "الفيشة" دائماً بإحكام واسحبها في خط مستقيم إلى خارج مقبس التيار الكهربائي.

- قد يؤدي تلف السلك إلى حدوث ماس كهربائي أو حريق و/أو صدمة كهربية.

لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني وما إلى ذلك) خلاف المنصهر القياسي.

- اتصل بأقرب مركز خدمة لك عندما يكون من الضروري إصلاح هذا الجهاز أو إعادة تركيبه.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق أو وقوع مشكلات متعلقة بالمنتج أو وقوع إصابات.

عندما يصبح خرطوم التزود بالماء غير محكم وينتج عنه تسريب للماء في الجهاز، يجب فصل سلك الطاقة من مأخذ الكهرباء.

- يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/العاصفة البرقية.

- يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق.

انزع قابس التيار الكهربائي "الفيشة" واتصل بأقرب مركز لخدمة عملاء Samsung في حالة دخول أي مواد غريبة إلى هذا الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.



تنبيهات الاستعمال

⚠ تنبيه

- عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بإلغاء توصيل سلك الطاقة وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.
 - قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. يجب الحرص عند استخدام الغسالة.
 - عندما ينكسر الزجاج قد تحدث إصابة.
 - افتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة، أو مشكلة في توريد الماء أو عند إعادة توصيل خرطوم مصدر المياه.
 - قد يؤدي وجود ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسريب للماء.
 - في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.
 - إذا تم استخدام الغسالة أثناء انسياب الماء خارجها بسبب مشكلة في الصرف، فإن ذلك قد يؤدي إلى التعرض لصدمة كهربائية أو نشوب حريق.
 - يجب إدخال غسيل في الغسالة بالكامل بحيث لا يتم تعلق الغسيل بالباب.
 - في حالة تعلق الغسيل بالباب، قد يؤدي ذلك إلى تلف الغسيل أو الغسالة، كما قد ينتج عنه حدوث تسريب للماء.
 - أغلق خطوط إمداد المياه عند عدم استعمال الغسالة.
 - تأكد من إحكام مسمار توصيل خرطوم توريد الماء.
 - تأكد من عدم اتساخ السدادة المطاطية وزجاج الباب الأمامي بأي مواد غريبة (كالنفايات أو الخيوط، أو الشعر، أو غير ذلك).
 - إذا علقت أي مادة غريبة في الباب أو لم يتم غلق الباب تمامًا، فإن ذلك قد يتسبب في تسرب المياه.
 - يجب فتح الصنبور والتحقق من إحكام موصل خرطوم الماء وعدم وجود تسريب للماء قبل استخدام المنتج.
 - في حالة عدم إحكام المسامير أو موصل خرطوم توريد الماء، قد يحدث تسريب للماء.
 - تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.
 - يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أية مسؤولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.
 - يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل الغسيل أو الشمعدان المشتعل أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الكائنات المعدنية وما إلى ذلك).
 - قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو الإصابة.
 - يجب عدم رش مواد متطايرة مثل المبيدات الحشرية فوق سطح الجهاز.
 - فبالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا وجود صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج.
 - لا تضع أية أجسام تبعث منها مجالات كهرومغناطيسية بالقرب من هذه الغسالة.
 - قد ينتج عن هذا الأمر إصابات شخصية نتيجة وجود خطأ يتعلق بالتشغيل.



تصبح مياه الصرف ساخنة عندما يتم تصريفها أثناء الغسيل في درجات حرارة عالية أو دورة التجفيف. لا تلمس مياه الصرف الساخنة.

- قد يؤدي ذلك إلى الإصابة بالحروق أو وقوع إصابات أخرى.

قد يختلف وقت التصريف اعتمادًا على درجة حرارة المياه. إذا كانت درجة حرارة المياه مرتفعة جدًا، فإن عملية التصريف تبدأ بعد انخفاض درجة حرارة المياه.

يجب عدم غسل المقاعد أو السجاد أو القماش (*) المضاد للماء أو تنشيفها أو تجفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسل هذه العناصر.

(*) المفروشات الصوفية أو الأغذية الواقية من الأمطار أو سترات الصيد أو بنطال التزلج أو حقائب النوم أو الحفاضات أو البدل الرياضية وأغطية الدراجات والدراجات البخارية والسيارات وما إلى ذلك.

- يجب عدم غسل السجاد السميك أو الصلب حتى في حالة وجود علامة الغسالة على علامة العناية. قد يؤدي هذا الأمر إلى وجود إصابة أو تلف الغسالة أو الحوائط أو الأرضية أو الملابس نتيجة للاهتزازات غير الطبيعية.
- لا تغسل أطقم المشايات أو ممسحات الأرجل التي تشتمل على دعامة خلفية مطاطية. قد تنفك هذه الدعامة الخلفية المطاطية وتلتصق داخل حلة الغسالة وقد يؤدي ذلك إلى قصور في الأداء الوظيفي كأن يحدث مثلاً عطل في التصريف.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر وجود صدمة كهربية أو إصابة نتيجة لتسريب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التنشيف أو بعدها مباشرة حيث إنه يكون ساخنًا.

- قد يُسبب ذلك الإصابة بحروق.

يصبح الباب الزجاجي ساخنًا أثناء عمليتي الغسيل والتجفيف. لذلك احذر لمس الباب الزجاجي.

لا تسمح أيضًا للأطفال باللعب في المنطقة المحيطة بالغسالة أو لمس الباب الزجاجي.

- قد يُسبب ذلك الإصابة بحروق.

لا تضع يدك داخل درج مسحوق التنظيف.

- قد ينتج عن هذا إصابات شخصية حيث يمكن إصابة يديك بواسطة جهاز إدخال المسحوق.

أزل دليل التنظيف السائل في حالة استخدام المسحوق المنظف (وذلك في الموديلات التي تدعم هذه الخاصية فقط).

- فإذا لم يكن الأمر كذلك، قد يكون تسرب المياه عبر الواجهة درج التنظيف.

تجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس بداخل الغسالة.

- قد يؤدي هذا الأمر إلى تلف الغسالة أو الإصابة والموت في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام كائنات حادة مثل المسامير أو السكاكين أو الأظافر وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة.

يحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو مستحضرات العناية بالجسم، والتي تكون في الغالب موجودة في متاجر مستحضرات العناية بالبشرة أو عيادات التجميل.

- قد يتسبب ذلك في تشوه السدادة المطاطية ويؤدي إلى تسرب المياه.



- يجب عدم ترك أي كائنات معدنية مثل الدبابيس أو بنس الشعر أو مواد التبييض في الحوض لفترات طويلة من الوقت.
- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة ظهور الصدأ على سطح الأنبوب، يُفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (عادي) وإسفنجة في تنظيفه. يجب عدم استخدام فرشاة معدنية نهائياً.
- يجب عدم استخدام سائل التنظيف بشكل مباشر، كما يجب عدم غسل الغسيل أو شطفه أو تنشيفه إذا كان يتضمن مسحوق للتنظيف الجاف.
- قد يؤدي هذا الأمر إلى وجود اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.
- لا تستخدم المياه المناسبة من أجهزة التبريد/التسخين.
- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.
- يجب عدم استخدام صابون غسل اليدين الطبيعي مع الغسالة.
- ففي حالة التراكم والتصلب داخل الغسالة، قد تحدث مشاكل تتعلق بالمنتج مثل تغيير اللون أو الصدأ أو وجود رائحة سيئة.
- يجب وضع الجوارب والصدرية في شبكة الغسيل وغسلها مع غسيل آخر.
- يجب عدم غسل أنواع من الغسيل من المفروشات في شبكة الغسيل.
- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود إصابة نتيجة للاهتزازات غير الطبيعية.
- لا تستخدم مسحوق غسيل صلب.
- فقد يحدث تسريب للماء في حالة تراكمه داخل الغسالة.
- تأكد من تفريغ جيوب الملابس التي سيتم غسلها.
- قد تسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.
- لا تقم بغسل الملابس المزودة بإبريمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.
- قم بفرز ملابس الغسيل وتصنيفها حسب لونها على أساس قدرتها على الاحتفاظ باللون وعدم البهتان وحدد الدورة الموصى بها، ودرجة حرارة المياه، والوظائف الإضافية.
- قد يؤدي ذلك إلى تشوه الألوان أو تلف المنسوجات.
- توخَّ الحذر حتى لا تغلق باب الغسالة على أصابع الأطفال العالقة به.
- قد يتسبب عدم الالتزام بذلك في وقوع إصابة.
- للوقاية من الروائح والتراكمات، دع الباب مفتوحاً بعد دورة غسيل للسماح بتجفيف الحاوية.
- لمنع تراكم الكلس، دع درج المنظف مفتوحاً بعد دورة غسيل والتجفيف فيها.



تحذيرات هامة عند التنظيف

⚠ تحذير

- يجب عدم تنظيف الجهاز عن طريق رش الماء فوق الجهاز مباشرةً.
- لا تقم باستخدام منظف يحتوي على حمض قوي.
- يجب عدم استخدام البنزين أو مُخفف الطلاء أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر وجود تغيير في اللون أو تشويه أو صدمة كهربية أو حريق.
- افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية أو نشوب حريق.




التركيب

اتبع هذه التعليمات بعناية لضمان تركيب الغسالة بشكل صحيح ومنع وقوع حوادث عند الغسيل.

ما المحتويات المشمولة

تأكد أن كل الأجزاء موجودة في علبة المنتج. إذا كانت تعاني مشكلة ما في الغسالة أو الأجزاء، اتصل بالمركز المحلي لخدمة عملاء سامسونج Samsung أو تاجر التجزئة.

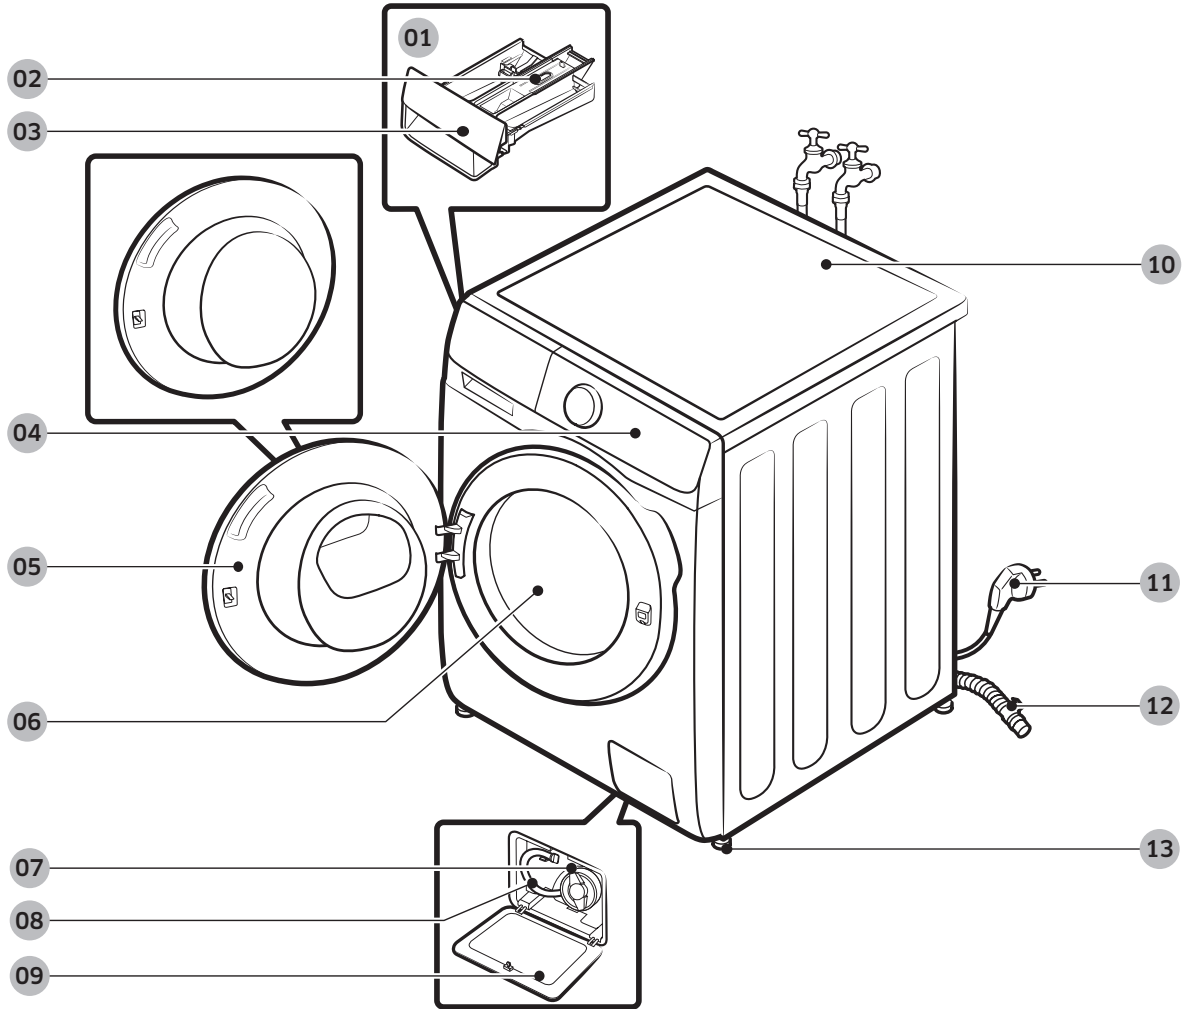

٣. درج مسحوق الغسيل

٦. الحاوية

٩. غطاء المصفاة

١٢. خرطوم التصريف

٢. زراع الإرخاء

٥. الباب

٨. أنبوب التصريف عند الطوارئ

١١. قابس الكهرباء

١. الموزع اليدوي


٤. لوحة التحكم

٧. مصفاة المخلفات

١٠. سطح الغسالة

١٣. استواء أرجل الغسالة

* تصميم الدُرج و / أو الذراع يختلف باختلاف الطراز.





حامل الخرطوم




مسامير الأغطية




مفاتيح الربط

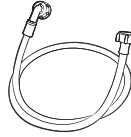دليل التنظيف السائل
(الطرز المزودة به محددة فقط)

خرطوم توريد الماء الساخن

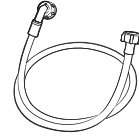

خرطوم توريد الماء البارد

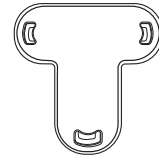مثبت الغطاء
(الطرز المزودة به محددة فقط)

الملحقات (غير متوفرة)

- مجموعة التخزين: SK-DH
- مجموعة التخزين مطلوبة لتركيب المجفف على الغسالة.

ملاحظة

- مفتاح الربط: لإزالة مسامير الشحن وضبط مستوى الغسالة.
- أغطية المسامير: لتغطية الفتحات بعد إزالة مسامير الشحن. الرقم المقدم لأغطية المسامير (٣ إلى ٦) يعتمد على الطراز.
- حامل الخرطوم: لتعليق خرطوم التصريف في أنبوب التصريف أو حوض الغسيل.
- خرطوم توريد الماء الساخن/ البارد: لتوريد الماء إلى الغسالة. (خراطيم توريد الماء الساخن متوفرة في طرازات معينة فقط).
- دليل حجرة التنظيف السائل: يجري إدخاله في حجرة التنظيف لاستخدام التنظيف السائل.

الإمداد بالمياه

إن ضغط المياه المناسب لهذه الغسالة يكون بين ٥٠ كيلو باسكال إلى ٨٠٠ كيلو باسكال. إذا كان ضغط المياه أقل من ٥٠ كيلو باسكال فإن ذلك قد يسبب عدم إحكام إغلاق صمام المياه. قد يحتاج ملء الحاوية وقتاً أطول من المتوقع مما يؤدي إلى توقف الغسالة عن العمل. يتعين أن تكون صنادير المياه ضمن مسافة ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل وصول خرطوم صنادير المياه المرفقة إلى الغسالة.

لتقليل مخاطر التسرب، يتعين تنفيذ التالي:

- تيسر وصول الخرطوم إلى صنادير المياه.
- إغلاق الصنادير في حالة عدم تشغيل الغسالة.
- فحص بشكل منتظم للكشف عن وجود أي تسرب في وصلات خرطوم إدخال الماء.

⚠ تنبيه

قم بفحص كافة التوصيلات الموجودة في صمام وصنادير الماء للتحقق مما إذا كانت هناك أي تسريبات قبل استخدام الغسالة للمرة الأولى.

التصريف

توصي Samsung باستخدام ماسورة رأسية يبلغ ارتفاعها ٦٠-٩٠ سم. يتعين توصيل خرطوم التصريف خلال مشبك الخرطوم إلى الماسورة الرأسية ويتعين أن تغطي الماسورة الرأسية أنبوب التصريف.

مصدر الطاقة الكهربائية والتوصيل الأرضي

- قاطع دائرة كهربائية أو منصهر بقدرة ١٢٠ - ٢٤٠ فولت تيار متردد ٥٠ / هرتز.
- دائرة كهربائية فرعية لتشغيل الغسالة فقط.

لضمان التأريض المناسب، يجري تزويد الغسالة بسلك تيار كهربائي به قابس ذي ثلاث شوكات تأريض لاستخدامها بشكل صحيح في مقبس أرضي مُركب بشكل صحيح.

تحقق من الأمر مستعيناً بفني كهرباء أو فني خدمة إذا كنت غير متأكد بشأن سلامة التأريض.

لا تجري أي تعديلات على القابس المزود بالغسالة. وفي حالة عدم ملائحته مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

⚠ تحذير

- لا تستخدم كبل تمديد.
- استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.
- لا تصل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير المياه الساخن.
- إن موصلات التأريض المتصلة بشكل غير مناسب قد تُسبب حدوث صدمات كهربية.

تركيب القنطرة

الخلوص الأدنى للتشغيل المستقر:

الجوانب	٢٥ مم
الجزء العلوي	٢٥ مم
الجانب الخلفي	٥٠ مم
الواجهة	٥٥٠ مم

في حالة تركيب الغسالة والجفف في الموضع نفسه، فإنه يجب تأمين فتحات هواء بمسافة ٥٥٠ مم علي الأقل أمام القنطرة. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة التنشيف.

⚠ تنبيه

لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة حرارة المياه

لا تتركب الغسالة في مناطق يتعرض فيها المياه للتجمد ذلك أن الغسالة تحتفظ دوماً ببعض المياه في صمام المياه والمضخة و/أو الخراطيم. قد يسبب المياه المتجمد المتبقي في أجزاء التوصيل تلف السيور أو المضخة أو غير ذلك من مكونات الغسالة.

التركيب خطوة بخطوة

الخطوة ١ اختيار المكان

متطلبات المكان:

- سطح صلب مستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- بعيدًا عن أشعة الشمس المباشرة
- مساحة كافية للتهوية وتوصيل الأسلاك
- يتعين أن تكون درجة الحرارة أعلى من نقطة التجمد (٠ سلزيوس)
- بعيدًا عن مصادر الحرارة

ملاحظة

- لتوقي الاهتزاز الزائد في أثناء تشغيل الغسالة، راعي الاستقرار قبل غيره من العناصر.
- ركب الغسالة على أرضية صلبة مستوية.
- لا تُركب الغسالة على أسطح رخوة أو لينة أو على تغطيات على الأرضية.
- إذا ثبتت الغسالة على أرضية خشبية، ركب لوحة خشبي مُقاوم للماء (يكون سمكه بحد أدنى ١,١٨ بوصة / ٣٠ مم) على الأرضية. علاوة على ذلك، فإننا نوصي بتركيب الغسالة على زاوية الأرضية الخشب.

الخطوة ٢ إزالة مسامير الشحن

فرغ محتويات عبوة المنتج وأزل كل مسامير الشحن.

ملاحظة

قد يختلف عدد مسامير الشحن حسب الطراز.

تحذير

- قد تشكّل مواد التغليف خطرًا على الأطفال. تخلص من تلك المواد (الأكياس البلاستيكية والبوليستيرين وما إلى ذلك) بعيدًا عن متناول الأطفال.
- لتجنب الإصابة، غط الفتحات بأغطية المسامير بعد إزالة مسامير الشحن. لا تحرك الغسالة دون أن تكون مسامير الشحن في مكانها.
- ركب مسامير الشحن قبل تحريك الغسالة إلى موضع آخر. حافظ على مسامير الشحن في موضع آمن لاستخدامها مستقبلاً عند الحاجة.

١. حدد موضع مسامير الشحن (المميزة بدوائر في الشكل) على الجانب الخلفي من الغسالة.


⚠ تنبيه

لا تفك البرغي (A) الذي يثبت مشبك الخرطوم.


٢. استخدم مفتاح الربط المرفق لفك جميع مسامير الشحن من خلال تدويرها عكس اتجاه عقارب الساعة.

📖 ملاحظة

يجب الاحتفاظ بمسامير الشحن لاستخدامها في المستقبل.

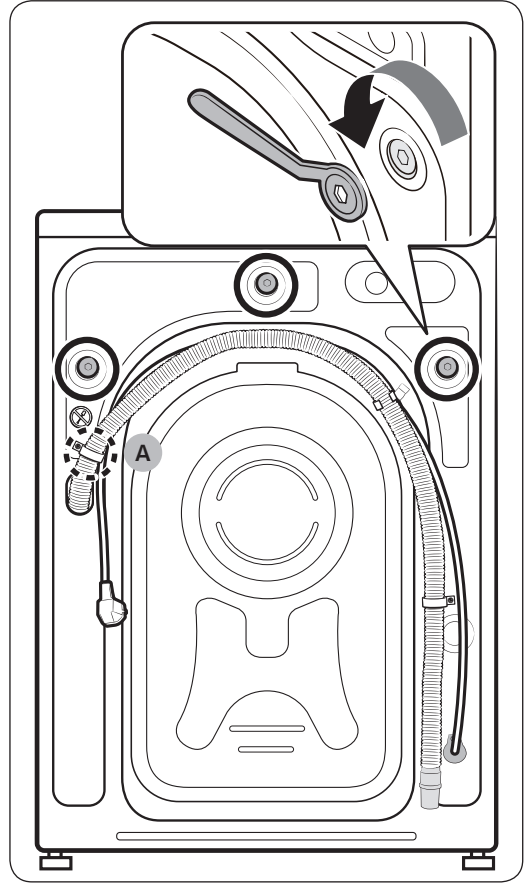


٣. أدخل أغطية المسامير (B) في الفتحات (المميزة بدائرة في الشكل).

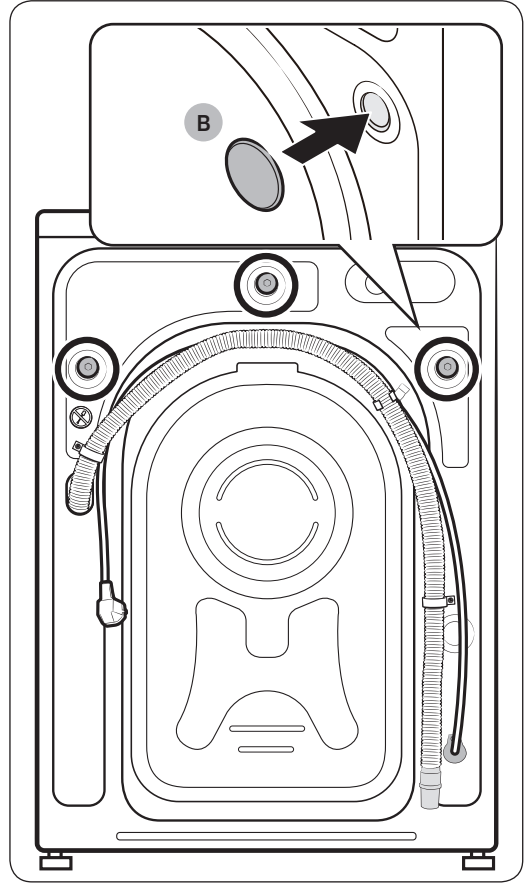


الخطوة ٣ ضبط أرجل الاستواء

١. ضع الغسالة في المكان المحدد برفق. إن القوة المفرطة أو الزائدة قد تؤدي إلى تلف أرجل استواء الغسالة.
٢. اضبط استواء الغسالة يدويًا عن طريق ضبط أرجل الاستواء.

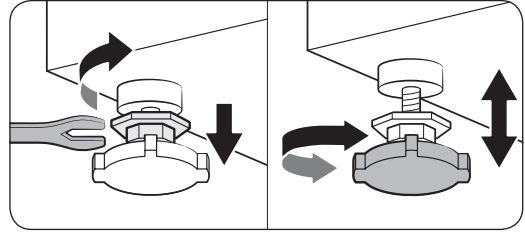


٣. بإتمام عملية الاستواء، أحكم الصواميل باستخدام مفتاح الربط.

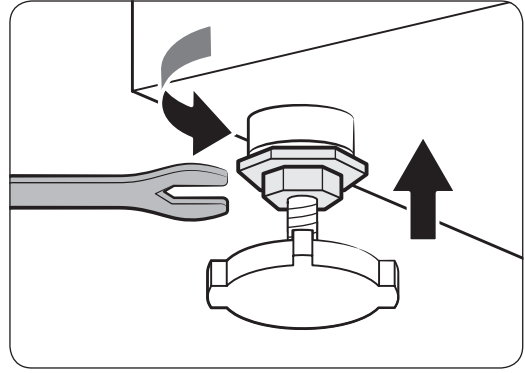

⚠ تنبيه

عند تركيب المنتج، تأكد من عدم ضغط أرجل الاستواء على كابل الطاقة.

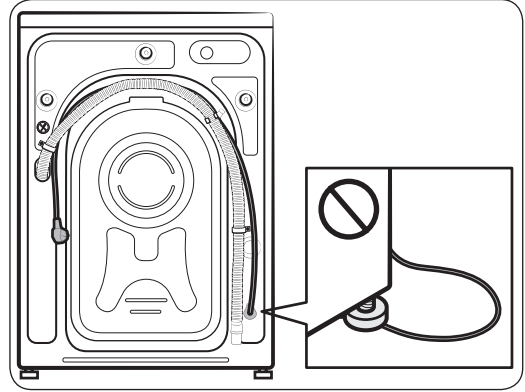

⚠ تنبيه

تأكد أن أرجل الاستواء كلها مستقرة على سطح الأرضية لتجنب تحرك الغسالة أو التسبب في ضوضاء بسبب الاهتزاز. ثم تحقق مما إذا كانت الغسالة لا تذبذب. فإذا كانت الغسالة لا تذبذب، فأحكم ربط الصواميل.

الخطوة ٤ توصيل خرطوم تزويد الماء


خرطوم المياه المتوفر قد يختلف تبعا للطراز. يرجى اتباع التعليمات حسب خرطوم المياه المتوفر.

التوصيل بصنبور الماء الملولب


١. صل خرطوم الماء بصنبور الماء، ثم أدره باتجاه اليمين لإحكام الربط.

⚠ تنبيه


قبل توصيل خرطوم الماء، فتأكد من وجود وردة مطاطية في موصل الخرطوم. لا تستخدم الخرطوم إذا كانت الوردة تالفة أو مفقودة.

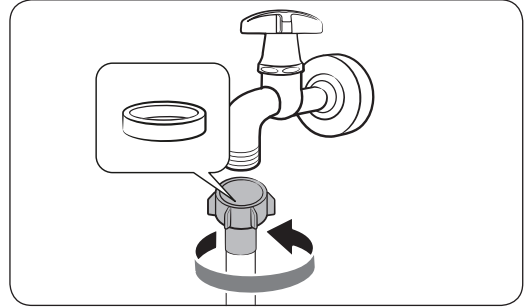

٢. صل الطرف الآخر من خرطوم إمداد المياه بصمام الدخول الموجود بالجانب الخلفي من الغسالة ثم أدره في اتجاه اليمين لإحكامه.

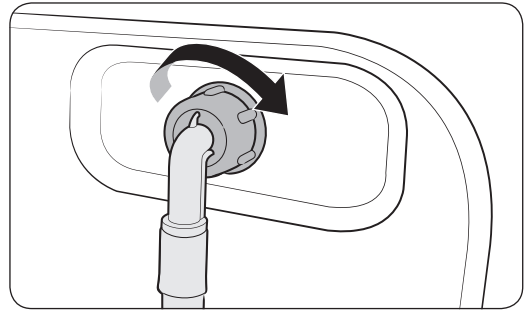

٣. ببطاء، افتح صنبور المياه وتحقق من وجود تسريبات حول أماكن التوصيلات. كرر الخطوات ١ و ٢ في حالة وجود تسرب مياه.

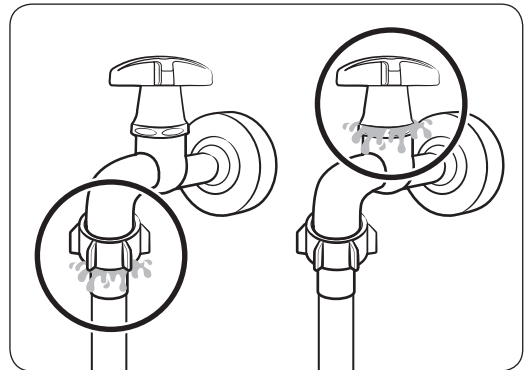

⚠ تحذير


إذا حدث تسرب للمياه، أوقف تشغيل الغسالة وافصلها عن مصدر الكهرباء. في حالة حدوث تسرب من خرطوم المياه، اتصل بمركز خدمة سامسونج المحلي، أو اتصل بفني السباكة في حالة حدوث تسرب من صنبور الماء. قد يؤدي عدم الالتزام بذلك إلى الصعق الكهربائي.

⚠ تنبيه


لا تطيل خرطوم الإمداد بالمياه بالقوة. إذا كان الخرطوم قصيرًا للغاية، استبدله بخرطوم أطول يتحمل الضغط العالي.

التوصيل بصبور الماء غير الملوث


١. أزل المحول (A) من خرطوم إمداد المياه (B).

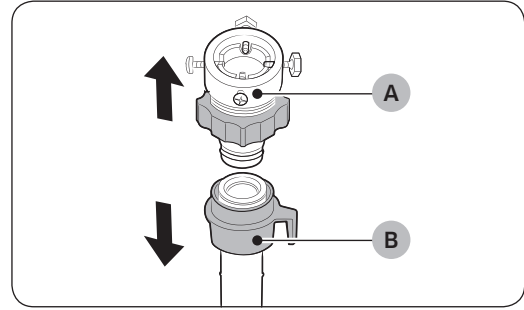

٢. استخدم مفكاً برأس رباعي (صلبية) لإرخاء ربط المسامير الأربعة بالمهايت.

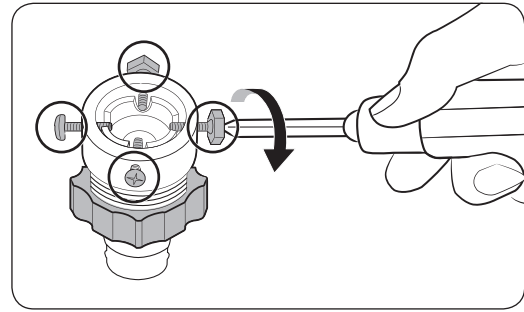


٣. أمسك المحول وأدر الجزء (C) في اتجاه السهم لفكه بمقدار ٥ ملليمتر (*).

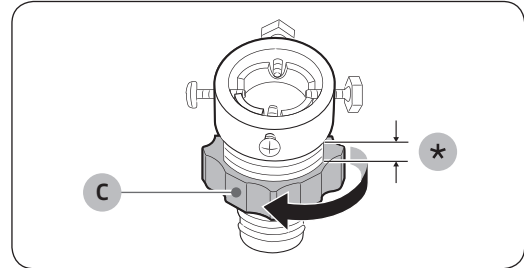


٤. ضع المحول على صبور الماء، ثم اقفل المسامير وأنت ترفع المحول.

٥. أدر الجزء (C) في اتجاه السهم لإحكام ربطه.

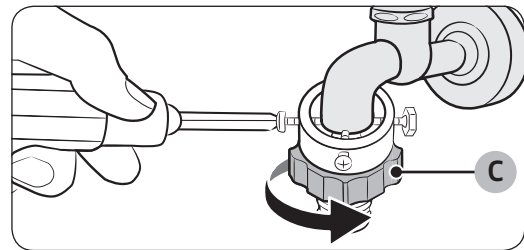

٦. في أثناء شد الجزء (D) على خرطوم الماء، صل خرطوم الماء بالمحول. ثم حرر الجزء (D). يركب الخرطوم بموضعه بالمحول ويُسمع صوت طقطقة.

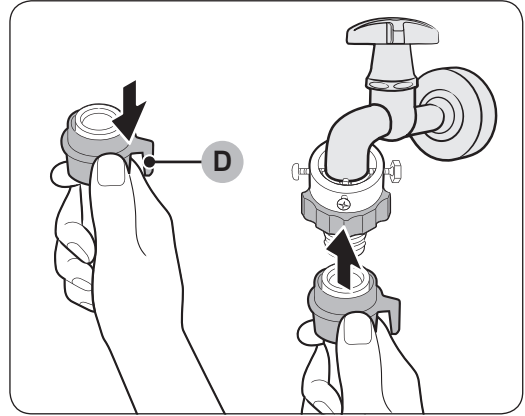


٧. لإكمال توصيل خرطوم الماء، انظر ٢ و ٣ في المقطع "التوصيل بصنبور الماء الملولب".

ملاحظة

- بعد توصيل خرطوم المياه إلى المحول، اسحب خرطوم الماء لأسفل للتحقق من توصيله كما ينبغي.
- استخدم نوعًا رائعًا من صنبير المياه. إذا كان الصنبور مربعًا أو كبيرًا جدًا، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول.


بالنسبة للطرازات المحددة المزودة بمدخل إضافي للإمداد بالمياه الساخن:

١. صل الطرف الأحمر من خرطوم الإمداد بالمياه الساخن بصمام الدخول الموجود بالجانب الخلفي من الغسالة.
٢. صل الطرف الآخر من خرطوم الإمداد بالمياه الساخن إلى صنبور المياه الساخن.

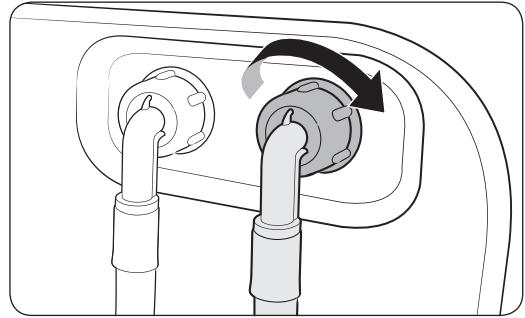

خرطوم التوقف المائي (طرازات محددة فقط)

يُحذر خرطوم إيقاف المياه المستخدمين من مخاطر تسرب المياه عند وقوعها. فهو يستشعر تدفق المياه ويضيئ المؤشر (A) الموجود بالمركز في اللون الأحمر في حالة وجود تسرب.

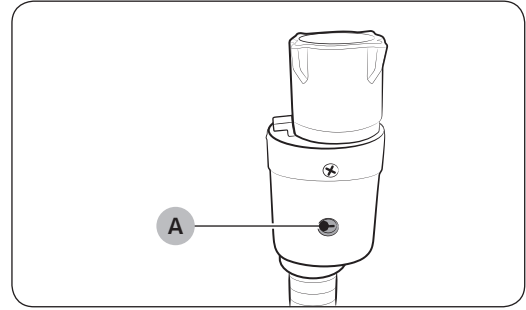

ملاحظة


يتعين تركيب طرف خرطوم إيقاف المياه في صنوبر المياه وليس الغسالة.

الخطوة ٥ اضبط وضع خرطوم التصريف

يمكن وضع خرطوم التصريف بثلاث طرق:


فوق حافة حوض الغسيل

يتعين وضع خرطوم التصريف على ارتفاع بين ٦٠ سم و ٩٠ سم (*) أعلى من مستوى الأرضية. للإبقاء على انثناء خرطوم التصريف، استخدم **ماسك الخرطوم البلاستيكي (A)**. ثبت الماسك على الجدار بواسطة خطاف لضمان تصريف مستقر.

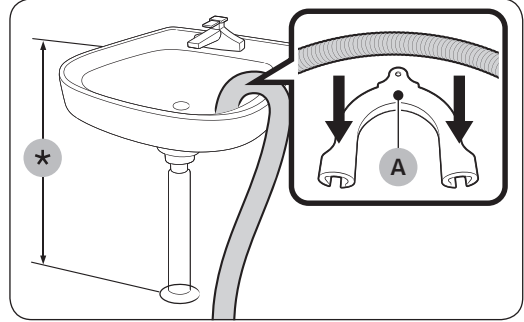

حول أنبوب التصريف

- يجب أن يكون أنبوب التصريف بين ٦٠ سم و ٩٠ سم ارتفاع (*). يُنصح باستخدام أنبوب رأسي ذي ارتفاع يبلغ ٦٥ سم.
- لضمان بقاء خرطوم التصريف في مكانه، استخدم دليل الخرطوم البلاستيك المتوفر (انظر الشكل).
- لمنع سحب تدفق المياه في أثناء التصريف، تأكد من إدخال خرطوم التصريف ١٥ سم في أنبوب الصرف.
- لمنع انتقال خرطوم التصريف، ثبت دليل الخرطوم بالجدار.
- متطلبات الأنبوب الرأسي للتصريف:
- حد أدنى لقطر الدائرة ٥ سم
- الحد الأدنى لسعة الجرف ٦٠ متر في الدقيقة

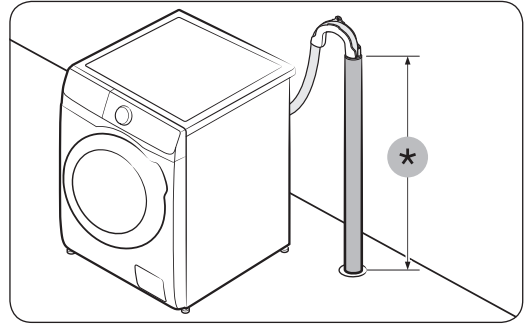


في فرع أنبوب تصريف الحوض

يجب أن يكون فرع أنبوب التصريف فوق سبابة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

(*) : ٦٠ سم

⚠ تنبيه

أزل الغطاء عن فرع أنبوب تصريف الحوض قبل توصيل أنبوب التصريف إليه.

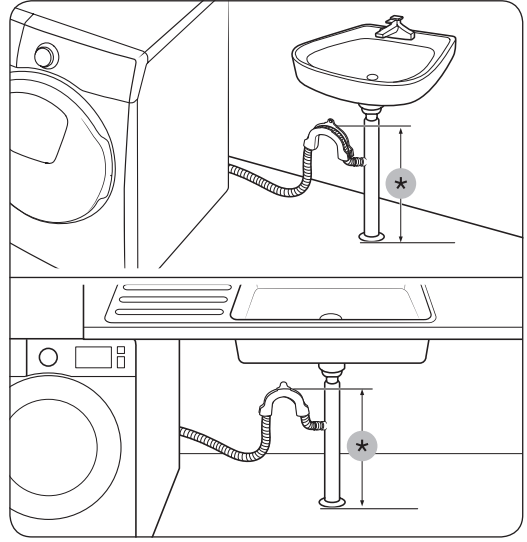

الخطوة ٦ تشغيل الجهاز

صل كابل الطاقة في المقبس بالحائط على أن يكون مؤرّضًا ومحميًا وله قدرة مناسبة ومزودًا بمنصهر أو قاطع دائرة. ثم، انقر على  وواصل الضغط لمدة ٣ ثوان لتشغيل الغسالة.


ما قبل بدء التشغيل

الضبط الأولي

- عند تشغيل الغسالة للمرة الأولى، تعرض الشاشة عمليات الضبط الأولي. اتبع التعليمات التي تظهر على الشاشة لإتمامها.
- لن يجري تكرار الضبط الأولي بعد إتمامه.
- الضبط الأولي يشمل اختيار اللغة والمعايرة ودورة تعليم قصيرة.
- اضغط على **O** أو أدر قرص التوجيه للخطي الشاشة التالية.

إجراء المعايرة

- الضبط الأولي يشمل عملية المعايرة التي تكون بعد اختيار اللغة. يتعين المضي قدمًا في المعايرة قبل استخدام الغسالة.
- أفرغ الحاوية، ثم انقر على **▶** وواصل الضغط لبدء عملية المعايرة.
- عند إتمام المعايرة، يجري إيقاف التشغيل ثم التشغيل أوتوماتيكيًا.
- إذا كنت تود إجراء المعايرة مرة ثانية، انقر وواصل الضغط لمدة ٣ ثوان للدخول في وظائف النظام واختر القياس.

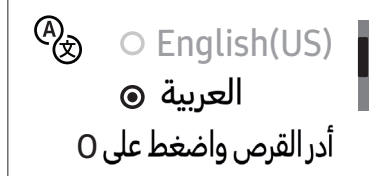١ اختيار اللغة	٢ القياس	٣ شاشة الترحيب
	أفرغ الأسطوانة قبل القياس [اضغط على O للخطي]	مرحبًا!
٤ توجيهات تعليمية		
لنكتشف الغسالة الجديدة! [اضغط على O للخطي]	أدر القرص للتعرف على الدورات [اضغط على O للخطي]	الآن اضغط لتبدأ دورة [اضغط على O للخطي]
اضغط لمعرفة الوظائف الإضافية [اضغط على O للخطي]	جرب حفظ التفضيلات في "دورتي"	غسالة الذكاء الاصطناعي الخاصة بك! تم كل شيء!



دليل غسل الملابس

الخطوة ١ الفرز

افرز الملابس وفق أي من المعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- اللون: فم بفصل الملابس البيضاء عن الملابس الملونة.
- الحجم: إن الجمع بين أحجام مختلفة من الملابس معًا في أسطوانة الغسالة يُحسن أداء الغسيل.
- رقة اللمس: اغسل الملابس الرقيقة كل على حدة، باستخدام خيار كوي سهل وذلك في حالة الأغراض الصوفية والسناثر والأغراض الحريرية. تحقق من الملصقات على الأغراض.

ملاحظة

تأكد من التحقق من ملصقات كيفية العناية بالملابس وافرزها بناء على ذلك قبل بدء الغسيل.

الخطوة ٢ إفراغ الجيوب

أفرغ كل جيوب الغسيل والملابس

- إن الأغراض المعدنية مثل العملات المعدنية والدبابيس والإبريم على الملابس.

اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها

- إذا تركت سحابات السراويل والجواكت مفتوحة أثناء الغسل، فإن هذا قد يسبب تلف سلة الأسطوانة. لذا يجب غلق السحابات وثبيتها بخيط قبل الغسل.
- قد تتشابك الملابس ذات الخيوط والأشرطة الطويلة مع ملابس أخرى. احرص على تثبيت الخيوط قبل بدء الغسل.

الخطوة ٣ استخدام شبكة الغسيل

- تأكد من وضع حمالات الصدر (التي تصلح للغسيل بالغسالة) في شبكة غسيل. فالأجزاء المعدنية في حمالات الصدر قد تنكس وتشف أغراض الغسيل الأخرى.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسل جيدة.
- لا تقم بغسل شبكة الغسل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة قد تحركها وتسبب حدوث إصابات.

الخطوة ٤ الغسل المسبق (في حالة الضرورة)

إذا كان الغسيل شديد الاتساخ، حدد الخيار ما قبل الغسيل للبرنامج المختار. لا تختبر ما قبل الغسيل في حالة إضافة مسحوق التنظيف يدويًا إلى الحاوية.



ما قبل بدء التشغيل

الخطوة ٥ تحديد سعة الحمولة

لا تتجاوز الوزن المحدد للغسالة. لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى نتائج غير مرضية بالنسبة للغسيل. انظر صفحة ٣٧ للوقوف على سعة الوزن وفق نوع الملابس.

ملاحظة

عند غسل المفارش أو الألففة، قد تطول مدة الغسل أو تقل فعالية عملية التجفيف. لذا فإن أقصى سرعة دورة تجفيف موصى بها في حالة المفارش أو الألففة هي ٨٠٠ لفة في الدقيقة وتكون سعة الوزن ٢,٠ كجم أو أقل.

تنبيه

- إن الغسيل غير المتوازن داخل الغسالة قد يُقلل فاعلية أداء التجفيف.
- تأكد من دخول الملابس في الحوض تماما، وأنها ليست متعلقة بالباب.
- لا تغلق الباب بشدة. أغلق الباب برفق. وإلا، ربما لا ينغلق الباب بشكل صحيح.

الخطوة ٦ وضع المنظف المناسب

يعتمد نوع مسحوق الغسيل على نوع القماش (القطن أو الألياف الصناعية أو الملابس الناعمة أو الصوف)، والألوان ودرجة حرارة المياه ودرجة الاتساخ. تأكد من استخدام منظف مصمم للغسالات الأوتوماتيكية.

ملاحظة

- اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقاً لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. فإذا لم تكن متأكداً من درجة عسر المياه، اتصل بالجهات المحلية المسئولة.
- لا تستخدم منظف يميل إلى التصلب أو السيولة. قد يظل المنظف بعد دروة الشطف ويسد مخرج الصرف.


تنبيه

عند غسل الصوف باستخدام دورة صوف، استخدم المنظفات المخصصة للملابس الصوفية. فاستخدام منظف مسحوق في دورة صوف قد يبقى على الغسيل ويغير لونه.


كبسولات الغسيل

يُرجى إتباع الخطوات التالية للحصول على أفضل النتائج من كبسولات الغسيل.

١. نضع الكبسولة في قاع حلة الغسيل وهي فارغة تجاه الجزء الخلفي منها.

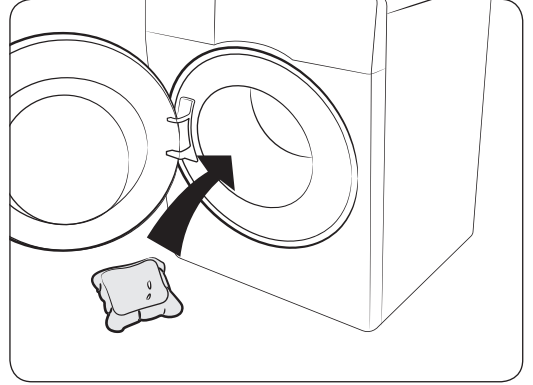

٢. نضع الغسيل في الحلة أعلى الكبسولة.

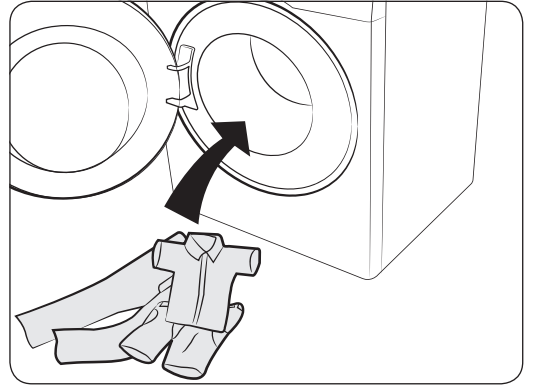

⚠ تنبيه


في الدورات التي تستخدم المياه الباردة أو الدورات التي تنتهي في أقل من ساعة واحدة، ربما لا تذوب الكبسولة تماما.

ما قبل بدء التشغيل

إرشادات خاصة بدرجة التنظيف

تحتوي طرازات الموزع على وحدة توزيع ذات ثلاث حجيرات: فالحجيرة اليسرى تكون مُخصصة للغسيل الرئيسي وتكون الوسطى لمنعمات الأقمشة واليمنى للغسيل التمهيدي.

١. **حجيرة ما قبل الغسيل (I)**: استخدم منظف ما قبل الغسيل.
٢. **حجيرة الغسيل الرئيسي (II)**: استخدم منظف الغسيل الرئيسي ومنعم الماء ومنظف النقع والمبيض و/ أو مزيلات البقع.
٣. **حجيرة المنعم (III)**: ضع المواد الإضافية مثل منعم الأقمشة. يتعين عدم تخطي علامة الحد الأقصى (A).

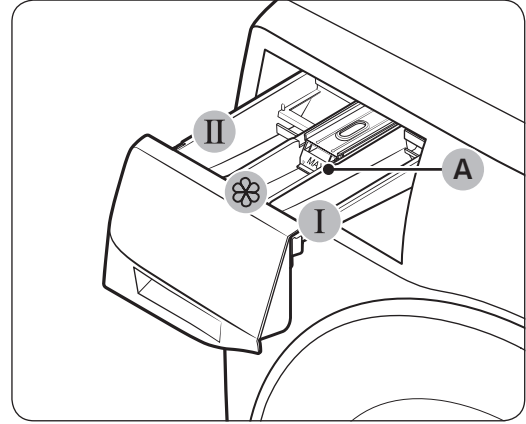


⚠ تنبيه


- لا تستخدم الأنواع التالية من المنظفات في الدرج:
- المنظفات على شكل ألواح أو أقراص كريات أو شبكات

لإضافة مساعدات الغسيل إلى الموزع اليدوي


١. افتح درج المنظفات قليلاً.
٢. ضع منظف الغسيل في **حجيرة الغسيل الرئيسية (II)** وفق تعليمات الجهة المصنعة أو توصياتها بهذا الصدد. لاستخدام المنظفات السائلة، يُرجى الاسترشاد بصفحة ٣٤.

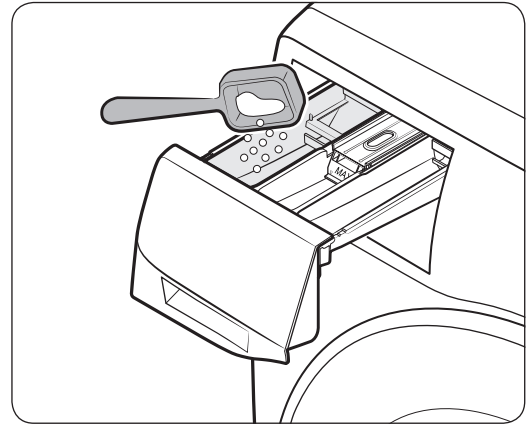

٣. ضع منعم الأقمشة في  حُجيرة منعم الأقمشة. يتعين عدم تخطي علامة الحد الأقصى.

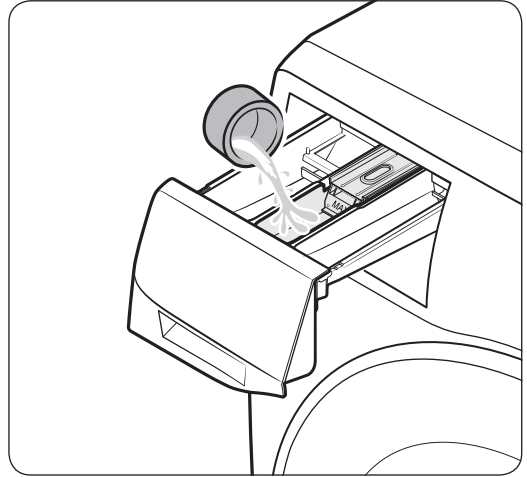


٤. إذا كنت بحاجة لاستخدام خاصية ما قبل الغسيل، ضع منظف ما قبل الغسيل في  حُجيرة ما قبل الغسيل وفق تعليمات جهة التصنيع أو توصياتها.
٥. أغلق درج المنظفات.

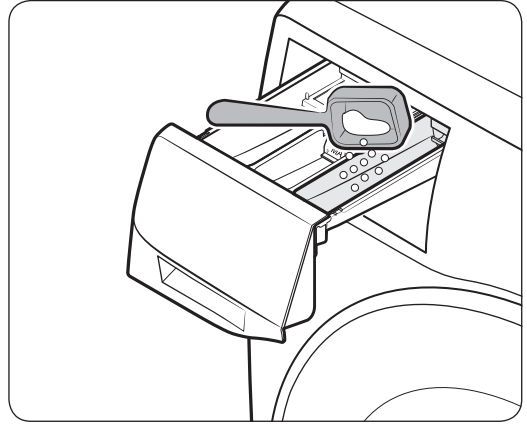

⚠ تنبيه


- لا تضع مسحوق التنظيف البودرة في موضع المنظف السائل.
- يتعين الالتزام بتخفيف منعم الأقمشة المركز قبل وضعه بالغسالة.
- لا تضع مسحوق التنظيف الرئيسي في  حُجيرة منعم الأقمشة.

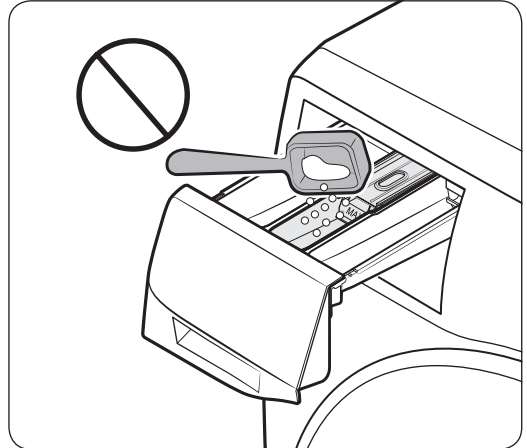


ما قبل بدء التشغيل

استخدام المنظفات السائلة يدويًا (الطرز المعينة فقط)

أولاً: أدخل وعاء السائل في **II** حجرة الغسيل الرئيسية. ثم ضع
منظف الملابس السائل في الوعاء بحيث يكون منسوب التنظيف
أسفل علامة الحد الأقصى (A).

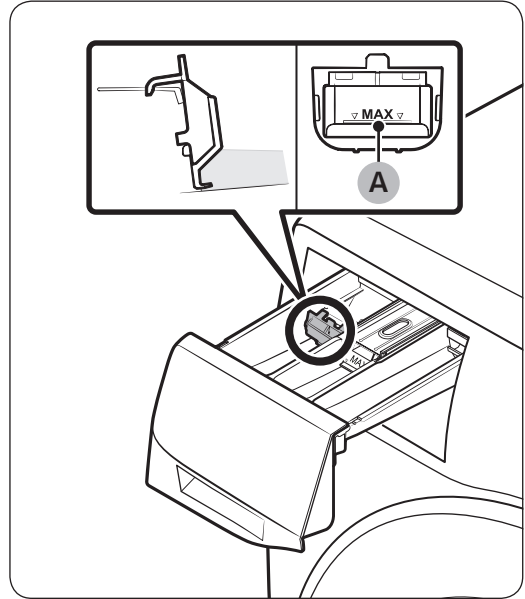

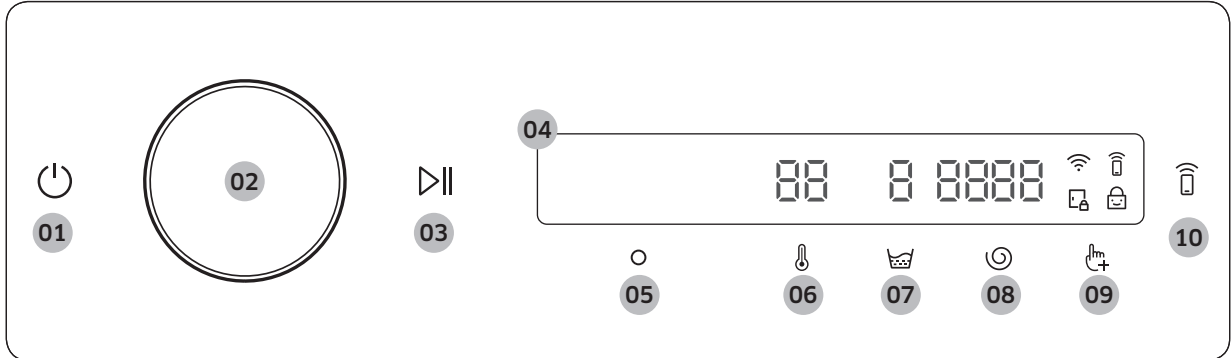


١ الطاقة	اضغط وواصل الضغط لتشغيل أو إيقاف تشغيل الغسالة. - إذا كنت لم تستخدم لوحة التحكم لمدة ١٠ دقائق من تشغيل الغسالة، ستوقف الغسالة التشغيل أوتوماتيكياً. - توقف الغسالة التشغيل أوتوماتيكياً بعد إتمام الدورة. ⚠ تنبيه لا تنقر على () إيقاف تشغيل الغسالة عندما تكون الغسالة في أثناء تنفيذ دورة غسيل. انقر على (▶) وواصل الضغط لإيقاف الدورة أولاً، ثم انقر على () لإيقاف تشغيل الغسالة.
٢ قرص التوجيه	أدر قرص التوجيه إلى اليسار أو اليمين للانتقال بين الدورات والوظائف. عندما تدير قرص التوجيه، ستعرض شاشة LCD الاختيار (مثل الدورة، أو الوظائف الإضافية، وظائف النظام).
٣ تشغيل/توقف ▶	انقر واستمر بالضغط لبدء التشغيل أو إيقافه.
٤ شاشة العرض	توضح شاشة العرض المعلومات عن الدورة الحالية للغسيل والوقت المتبقي المقدّر لإتمامها وكذلك تعرض أكواد المعلومات في حال حدوث مشكلة ما.
٥ OK	انقر لتأكيد اختيارك للوظيفة أو الإعدادات.
٦ درجة الحرارة	اضغط هنا لتغيير درجة حرارة المياه بالنسبة للدورة المختارة. يشير المؤشر أعلى الزر للقيمة الافتراضية أو الإعدادات المختارة.
٧ شطف	اضغط هنا لتغيير عدد مرات الشطف بالنسبة للدورة المختارة. يشير المؤشر أعلى الزر للقيمة الافتراضية أو الإعدادات المختارة.
٨ دوران	اضغط هنا لتغيير سرعة دوران التجفيف بالنسبة للدورة المختارة. يشير المؤشر أعلى الزر للقيمة الافتراضية أو الإعدادات المختارة.
٩ الوظائف الإضافية	انقر لدخول قائمة الوظائف الإضافية. انقر واستمر بالضغط لمدة ٣ ثوان لدخول قائمة مهام النظام.
١٠ التحكم الذكي	انقر لتشغيل / إيقاف تشغيل وظيفة التحكم الذكي. انقر واستمر بالضغط لدخول وضع الاقتران للتوصيل بتطبيق SmartThings. عندما يجري تنشيط وظيفة التحكم الذكي، يمكنك التحكم في الغسالة عن بعد باستخدام تطبيق SmartThings على هواتف الذكي أو جهاز اللوحي (أكان بنظام الأندرويد أم iOS).

توصيفات الأيقونة

• تشير هذه الأيقونة إلى أن الغسالة متصلة بالواي-فاي.	Wi-Fi	
• هذه الأيقونة تشير إلى تشغيل/إيقاف التحكم الذكي. • لمزيد من المعلومات عن التحكم الذكي، يُرجى الاطلاع على صفحة ٤٦.	التحكم الذكي	
• تشير هذه الأيقونة إلى أن الباب مغلق ولا يُمكن فتحه. • يُغلق الباب أوتوماتيكيًا في أثناء الدورة، ويضئ هذا المؤشر عندئذ. • يمكنك فتح الباب عندما تختفي هذه الأيقونة.	قفل الباب	
• هذه الأيقونة تشير إلى تشغيل قفل ضد الأطفال. • لمزيد من المعلومات عن قفل ضد الأطفال، يُرجى الاطلاع على صفحة ٤٢.	قفل ضد الأطفال	

تشغيل دورة

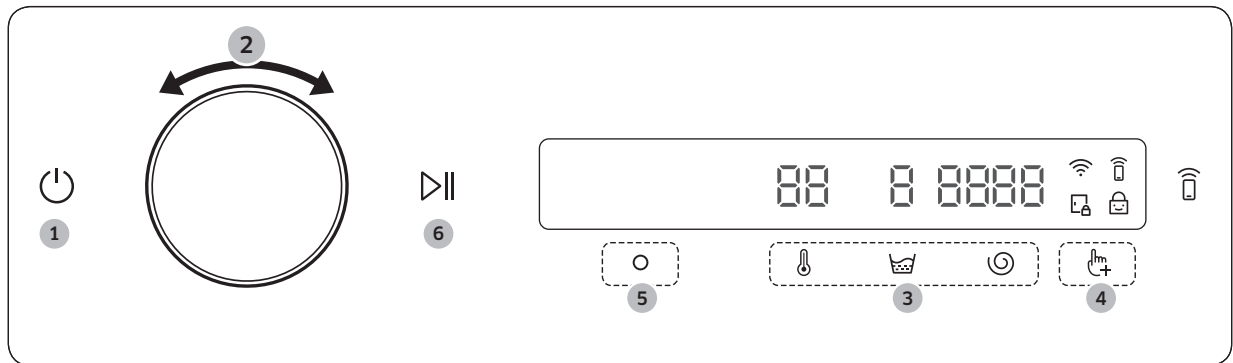

1. انقر لتشغيل الغسالة.
2. أدر قرص التوجيه لاختيار الدورة التي تريدها.
- لمزيد من المعلومات عن "رؤية عامة للدورة"، يُرجى الاطلاع على صفحة ٣٧.
3. انقر ، أو ، أو لتغيير إعدادات الدورة الافتراضية.
4. انقر ، وأدر قرص التوجيه لاختيار وظيفة إضافية.
- لمزيد من المعلومات عن الوظائف الإضافية، يُرجى الاطلاع على صفحة ٤٠.
5. انقر على لتغيير إعدادات الوظيفة الإضافية المختارة.
- وليس بالضرورة أن يتوفر لجميع الدورات وظائف إضافية.
6. انقر على واستمر بالضغط لبدء التشغيل.
- ما أن تُحدد الدورة التي تريدها، تعرض الشاشة وصفًا موجزًا، وأقصى حمولة غسيل، وزمن الدورة. يمكنك كذلك التحقق من التقدم في الدورة، ووقت الدورة المتبقي، وأكواد المعلومات.

رؤية عامة للدورة

توصيفات الدورة

الدورة	الوصف	أقصى وزن (كجم)	
		WD1*T*****	WD9*T*****
القطن	• للملابس القطنية أو أغطية السرير أو مفارش المائدة أو الملابس الداخلية والمناشف أو القمصان. يجري ضبط مدة الغسيل والشطف وتعديلها أوتوماتيكياً وفق الوزن. • لتنظيف الأغراض القطنية خفيفة الاتساخ على درجة حرارة بسيطة تبلغ ٢٠ درجة سلتريوس.	الحد الأقصى	
الغسل بتقنية الذكاء الاصطناعي (WD**T98*****) WD**T93**** هذه الطرز فقط	• يضبط كمية المنظف والدورة وفق الحمولة وشدة الاتساخ. ويفضل استخدام هذه الدورة مع وظيفة التوزيع الأوتوماتيكي.	الحد الأقصى	
الغسل السريع '15	• لغسل الملابس خفيفة الاتساخ بوزن أقل من ٢,٠ كجم التي تحتاجها بسرعة. • استخدام أقل من ٢٠ غراماً من المنظفات. استخدام أكثر من ٢٠ غراماً من المنظفات قد يترك بقايا المنظفات. • للمنظفات السائلة، استخدام ٢٠ مل من المنظفات السائلة بحد أقصى.	٢,٠	
السرعة العالية (WD**T9*****) WD**T7*****, WD**T6**** هذه الطرز فقط	• الانتهاء السريع في غضون ٣٩ دقيقة من الملابس اليومية مثل الملابس الداخلية والقمصان. • ستختلف مدة دورة الغسيل بناء على عوامل تدفق الماء وكميته، والحمولة ونوع الغسيل.	٥,٠	
برد شديد	• يساهم وضع ecobubble (غسيل الفقاعات) ذو درجة الحرارة المنخفضة في الحفاظ على الطاقة.	٤,٠	
القطن الاقتصادي	• يُحقق وضع الطاقة المنخفضة الأداء المثالي لأقمشة القطن وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان. • ولأغراض توفير الطاقة، قد تكون درجة حرارة الغسل الفعلية أقل من الحرارة المحددة.	الحد الأقصى	
أقمشة اصطناعية	• للأقمشة المصنوعة من البوليستر (الديولين والتريفيبرا) ومادة البوليأمايد (البيرلون والنيلون) أو ما يماثل ذلك من الأنسجة.	٤,٠	
القماش الرقيق	• للأقمشة الشفافة وحملات الصدر، والملابس النسائية التحتية، (الملابس الحريرية) وغيرها من الأقمشة التي تغسل يدوياً فقط. • للحصول على أفضل النتائج، استخدم مادة منظفة سائلة.	٢,٠	
القوط	• لمناشف الحمام وأدوات الاستحمام والمسحات.	٤,٠	

أقصى وزن (كجم)	الوصف		الدورة
	WD1*T*****	WD9*T*****	
٢,٠	• لأغطية السرير وملاءات وأغطية الفراش، وما إلى ذلك. • لتحقيق أفضل النتائج، اغسل نوع واحد من المفروشات وتأكد أن الوزن أقل من ٢,٠ كيلو جرام.		أطقم الأسرة
٢,٠	• للقمصان والبلوزات المصنوعة من القطن والأقمشة التركيبية.		القمصان
٤,٠	• أنسجة القطن والكتان التي تباشر الجلد، مثل الملابس الداخلية. • للحصول على أفضل النتائج الصحية حدد درجة حرارة ٦٠ درجة مئوية أو أعلى. • تتميز دورات البخار برعاية الحساسية والقضاء على البكتيريا (التعقيم).		بخار التنظيف
٢,٠	• خاص بالصوف القابلة للغسيل في الغسالة لأوزان أقل من ٢ كجم. • تعتمد دورة الصوف على الاهتزاز والنقع الهادئ وذلك لحماية أنسجة الصوف من الانكماش/ التلف. • يوصى باستخدام منظف معتدل.		الصوف
٢,٠	• يناسب ذلك ملابس التسلق والتزلج والملابس الرياضية المصنوعة من خامات خاصة مثل الألياف اللينة والقماش القابل للتمدد والألياف الدقيقة.		خارج المنزل
٢,٠	• لغسيل ملابس التمارين مثل البدل والرياضية وسراويل التدريب وغير ذلك من ملابس الأداء الحركي. توفر هذه الدورة تنظيف فعال من الأوساخ في حالة الأقمشة ذات التركيب الخاص مع التحكم في تدوير الحاوية.		الملابس الرياضية
٤,٠	• يعتمد على الشطف الإضافي وتقليل التجفيف لضمان غسل ملابسك الداكنة المفضلة بلطف وشطفها جيدًا.		الألوان
٤,٠	• لتقليل الضوضاء والاهتزاز.		الغسل الصامت
٤,٠	• للملابس التي تستخدم يوميًا مثل الملابس الداخلية والقمصان.		الحمل المنوع (WD**T5***** هذه الطرز فقط)
الحد الأقصى	• لتحقيق التجفيف المثالي بالتدوير في حالة الرطوبة العالية.		يوم غائم
الحد الأقصى	• ويوفر ميزة الشطف الإضافي بعد وضع منعם الأقمشة على الغسيل.		الشطف والدوران
الحد الأقصى	• لتصريف المياه داخل الحاوية وتشغيل عملية تجفيف إضافية لأجل إزالة الرطوبة من الغسيل على نحو فعال.		التصريف/الدوران

الدورة	الوصف	أقصى وزن (كجم)	
		WD9**T*****	WD1**T*****
تنظيف الأسطوانة+ (WD**T9*****, WD**T7*****, WD**T6***** هذه الطرز فقط)	• تنظيف الحوض بالتخلص من الأوساخ والبكتريا منه. • ينظف طوق الباب المطاطي بإزالة الأوساخ من الطوق. • يجري تنفيذ ذلك كل ٤٠ غسلة بدون وضع منظف أو مبيض. تظهر رسالة التنبيه بعد كل ٤٠ غسلة. • تأكد من خلو الأسطوانة. • لا تستخدم أي مواد منظفة لتنظيف الأسطوانة.	-	-
تنظيف الأسطوانة (WD**T5***** لهذا الطراز فقط)	• تنظيف الحوض بالتخلص من الأوساخ والبكتريا منه. • يجري تنفيذ ذلك كل ٤٠ غسلة بدون وضع منظف أو مبيض. تظهر رسالة التنبيه بعد كل ٤٠ غسلة. • تأكد من خلو الأسطوانة. • لا تستخدم أي مواد منظفة لتنظيف الأسطوانة.	-	-

دوره التجفيف

الغسل والتجفيف	• لتنظيف الأغراض القطنية ذات الاتساخ العادي التي من المقرر غسلها على درجة حرارة ٤٠ سلزيوس أو ٦٠ سلزيوس، معًا في الدورة نفسها، ولتجفيفها على نحو يتيح تخزينها فورًا في خزانة الملابس. يُمكن استخدام هذه الدورة لتقييم الامتثال للتشريع الأوروبي البيئي للغسيل والتجفيف.	٧,٠	٦,٠
تجفيف القطن	• للأغراض التجفيف بشكل عام.	٧,٠	٦,٠
تجفيف مواد اصطناعية	• دورة تجفيف منخفضة الحرارة للملابس الحساسة لدرجة الحرارة.	٣,٠	
الغسيل بالهواء	• هذا البرنامج مفيداً لإزالة الروائح السيئة.	١,٠	

الوظائف الإضافية

استخدام الوظائف الإضافية

١. انقر .
٢. أدر قرص التوجيه لاختيار الوظيفة التي تريدها.
٣. انقر على  لتغيير إعدادات الوظيفة المختارة أو بدء الوظيفة.

ملاحظة

- للعودة إلى الشاشة الرئيسية، انقر على  مرة أخرى أو أدر قرص التوجيه لاختيار رجوع وانقر .
- إذا كانت الخاصية المختارة غير مدعومة، فإنه يجري عرض الرسالة "غير مدعّم حالياً" والزر  غير مُنشط.
- عندما تختار وظيفة إضافية ما، فإنه تظهر رسالة مساعدة قصيرة في أول عشر مرات من الاستخدام.

التجفيف

يمكنك إضافة عملية تجفيف في نهاية دورة الغسيل.

١. اختر دورة وغير إعدادات الضرورة حسب الضرورة.
٢. انقر .
٣. أدر قرص التوجيه لاختيار التجفيف، وانقر .
٤. أدر قرص التوجيه أو انقر  عدة مرات لاختيار وقت التجفيف المرغوب.
 - يمكنك الاختيار من بين إيقاف، تلقائي، ٣٠ دقيقة، ١ ساعة ٠٠ دقيقة، ١ ساعة ٣٠ دقيقة، ٢ ساعة ٠٠ دقيقة، ٣ ساعة ٠٠ دقيقة، أو ٤ ساعة ٠٠ دقيقة.
٥. انقر على ، واستمر بالضغط.

Quick Drive (WD**T7***** لهذا الطراز فقط)

يمكنك تقليل وقت الغسيل الكلي لإعدادات الدورة المختارة.

١. اختر دورة وغير إعدادات الضرورة حسب الضرورة.
٢. انقر .
٣. أدر قرص التوجيه لاختيار Quick Drive، وانقر .
٤. انقر على ، واستمر بالضغط.



الغسل المسبق

يمكنك إضافة دورة غسيل أولية قبل دورة الغسيل الأساسية.

١. اختر دورة وغير إعدادات الضرورة حسب الضرورة.

٢. انقر .

٣. أدر قرص التوجيه لاختيار الغسل المسبق، وانقر .

٤. انقر على , واستمر بالضغط.

المركز

للغسيل شديد الاتساخ. ويكون مدة تشغيل كل دورة أطول من المعتاد.

١. اختر دورة وغير إعدادات الضرورة حسب الضرورة.

٢. انقر .

٣. أدر قرص التوجيه لاختيار المركز، وانقر .

٤. انقر على , واستمر بالضغط.

النقع في الفقاعات

وتُساعد هذه الخاصية على إزالة الكثير من البقع الصعبة. عند اختيار وظيفة النقع بالفقاعات، يجري نقع الغسيل في فقاعات الماء لتحقيق الغسيل الفعال.

١. اختر دورة وغير إعدادات الضرورة حسب الضرورة.

٢. انقر .

٣. أدر قرص التوجيه لاختيار النقع في الفقاعات، وانقر .

- النقع في الفقاعات يتوفر مع هذه الدورات ويضيف إليها ما يصل إلى ٣٠ دقيقة: القطن، اقمشة اصطناعية، أطقم الأسرة، السرعة العالية.

٤. انقر على , واستمر بالضغط.

دورتي

أضف دورات أو أزلها لإنشاء القائمة الشخصية للدورات.

١. انقر .

٢. أدر قرص التوجيه لاختيار دورتي، وانقر .

- يتعين ألا تكون الغسالة قيد التشغيل حتى يمكن تحرير دورة لإنشاء دورة مفضلة.

٣. أدر قرص التوجيه لاختيار الدورة المرغوبة.

٤. انقر  لإضافة الدورة المرغوبة أو لإزالتها.

- يجري حفظ إضافة الدورة أو إزالتها أوتوماتيكيًا.

٥. ما إن تُكمل إنشاء دورتي، انقر على  للعودة إلى شاشة الدورات.

ملاحظة

- لا يُمكن إزالة الدورات القطن الاقتصادي و تنظيف الأسطوانة+ من قائمة الدورات.
- يمكنك كذلك تحرير دورتي في تطبيق SmartThings.



تأجيل الانتهاء

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق، باختيار تأجيل الوقت من ساعة واحدة حتى ٢٤ ساعة. (بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يجري فيه الانتهاء من عملية الغسيل.

١. اختر دورة وغير إعدادات الضرورة حسب الضرورة.
٢. انقر .
٣. أدر قرص التوجيه لاختيار تأجيل الانتهاء، وانقر .
٤. أدر قرص التوجيه لاختيار الوقت المرغوب، وانقر .
٥. انقر على ، واستمر بالضغط.
- تظهر الحالة في الشاشة وتدير الغسالة الحوض لاستشعار بثقل الوزن، وذلك إذا كان استشعار الحمل محدد مسبقاً للدورة المختارة. عندما يكتمل استشعار الحمل، تعرض الشاشة الوقت المتبق حتى تنتهي دورة الغسيل.
- لإلغاء تأجيل الانتهاء، انقر على  لإعادة بدء تشغيل الغسالة.

قفل ضد الأطفال

لنح الأطفال أو الرضع من بدء تشغيل الغسالة أو إعدادها، يقفل قفل ضد الأطفال جميع الأزرار باستثناء  و .

١. انقر .
٢. أدر قرص التوجيه لاختيار قفل ضد الأطفال، وانقر .
٣. انقر على  لاختيار تشغيل أو إيقاف.
- أيقونة قفل ضد الأطفال  تضيء عند تشغيل الوظيفة.

ملاحظة

- عندما يكون قفل ضد الأطفال قيد التشغيل، فإنه يجري تعطيل جميع الأزرار باستثناء  و . كذلك يجري إغلاق باب الغسالة.
- إن النقر على زر ما في أثناء تشغيل قفل ضد الأطفال من شأنه إطلاق إنذار يُصاحبه رسالة "تشغيل القفل ضد الأطفال".
- لا يمكنك فتح الباب بعد دورة غسيل عندما يكون قفل ضد الأطفال قيد التشغيل. أوقف تشغيل الوظيفة قبل فتح الباب حتى يمكنك إخراج الغسيل.



وظائف النظام

استخدام وظائف النظام

١. اضغط على الزر وواصل الضغط لمدة ٣ ثوان.
٢. أدر قرص التوجيه لاختيار وظيفة النظام المرغوبة، وانقر .
٣. انقر على لتغيير إعدادات الوظيفة المختارة أو بدء الوظيفة.

ملاحظة

للعودة إلى الشاشة الرئيسية، انقر على مرة أخرى أو أدر قرص التوجيه لاختيار رجوع وانقر .

نمط الذكاء الاصطناعي

تحفظ هذه الوظيفة الدورات والإعدادات التي تستخدمها بكثرة. عند تشغيل هذه الوظيفة، تتذكر الغسالة الدورات التي استخدمتها أكثر من غيرها وإعداداتها (درجة الحرارة، شطف، دوران) وتعرضهم بحسب ترتيب استخدامهم.

١. اضغط على الزر وواصل الضغط لمدة ٣ ثوان.
٢. أدر قرص التوجيه لاختيار نمط الذكاء الاصطناعي، وانقر .
٣. انقر على لاختيار تشغيل أو إيقاف.
 - الإعداد الافتراضي أن تكون تشغيل. اضبطها على وضع إيقاف إذا كنت لا تود استخدام هذه الوظيفة.
 - عند إيقاف تشغيل الوظيفة، فإنه يجري إعادة تعيين جميع البيانات المحفوظة.

المنبه

يمكنك تشغيل أو إيقاف تشغيل الصوت للغسالة. عندما يجري ضبط هذه الوظيفة على إيقاف التشغيل، سيتوقف تشغيل تنبيه AddWash (إضافة الغسيل)، وصوت إتمام الدورة، وتنبيه انقطاع التيار الكهربائي. ومع ذلك، تظل الأصوات الأخرى نشطة.

١. اضغط على الزر وواصل الضغط لمدة ٣ ثوان.
٢. أدر قرص التوجيه لاختيار المنبه، وانقر .
٣. انقر على لاختيار تشغيل أو إيقاف.
 - الإعداد الافتراضي أن تكون تشغيل.

ملاحظة

تظل الإعدادات دون تغيير حتى إذا أعدت تشغيل الغسالة.

القياس

يمكنك تشغيل المعايرة مرة أخرى لتقدير الوزن بدقة.

١. اضغط على الزر وواصل الضغط لمدة ٣ ثوان.
٢. أدر قرص التوجيه لاختيار القياس، وانقر .
- لا تبدأ المعايرة إذا كان الباب غير مغلق كما ينبغي.
- تدور الحاوية في اتجاه عقارب الساعة وعكس عقارب الساعة لمدة ٣ دقائق.
٣. عند الانتهاء من هذه الدورة، تظهر رسالة "تم قياس الوزن" على شاشة العرض ويجري إيقاف تشغيل الغسالة تلقائيًا.



Wi-Fi

يمكنك تشغيل الواي-فاي في الغسالة أو إيقاف تشغيله.

١. اضغط على الزر  وواصل الضغط لمدة ٣ ثوان.

٢. أدر قرص التوجيه لاختيار Wi-Fi، وانقر .

٣. انقر على  لاختيار تشغيل أو إيقاف.

- تكون الإعدادات الافتراضية لوضع Wi-Fi في الغسالة في وضع إيقاف التشغيل. ومع ذلك، فإن وضع Wi-Fi يتحول أوتوماتيكياً إلى وضع التشغيل عند تشغيل الغسالة للمرة الأولى. بعد ذلك، يستمر إعداد Wi-Fi على حاله بغض النظر عن توصيل الغسالة بالطاقة أم لا.

- ما أن تضبط Wi-Fi الغسالة على وضع التشغيل ويجري توصيلها بشبكة، فإن الغسالة تظل متصلة بالشبكة حتى إذا كانت الغسالة غير متصلة بالطاقة.

- تشير Wi-Fi  إلى أن الغسالة متصلة بجهاز إعادة التوجيه الراوتر خلال اتصال الواي-فاي.

اللغة

يمكنك تغيير لغة النظام.

١. اضغط على الزر  وواصل الضغط لمدة ٣ ثوان.

٢. أدر قرص التوجيه لاختيار اللغة، وانقر .

٣. أدر قرص التوجيه لاختيار اللغة المرغوبة، وانقر .

إعادة الضبط حسب المصنع

يمكنك إعادة ضبط الغسالة.

١. اضغط على الزر  وواصل الضغط لمدة ٣ ثوان.

٢. أدر قرص التوجيه لاختيار إعادة الضبط حسب المصنع، وانقر .

- هنا سيجري إعادة ضبط الغسالة على إعداد المصنع.




مميزات خاصة


AddWash (إضافة الغسيل) (الطرز المزودة به فقط)

لإضافة الغسيل بعد بدء الغسيل، استخدم باب AddWash (إضافة الغسيل).

١. انقر على **||** واستمر بالضغط لبدء دورة الغسيل.
٢. اضغط على الجزء العلوي من باب AddWash (إضافة الغسيل) لفتح الباب. سيجري تحريك الباب للداخل قليلاً عندما تضغط عليه ثم يُفتح.

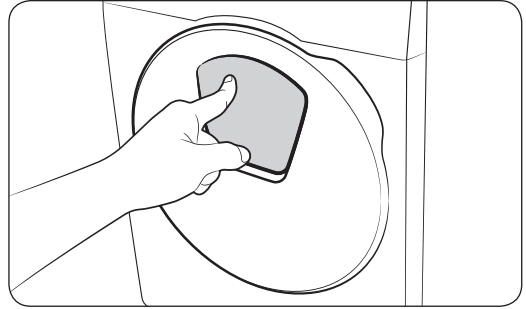

٣. افتح باب AddWash (إضافة الغسيل) كلياً ثم أدخل الغسيل الإضافي في الحاوية خلال باب AddWash (إضافة الغسيل).
٤. ارفع باب AddWash (إضافة الغسيل) مرة أخرى إلى موضعه، ومن ثم اغلق الباب بدفع الجزء العلوي من الباب إلى أن تسمع صوت "نقرة". ثم، انقر على **||** واستمر بالضغط عليه مرة أخرى لبدء دورة الغسيل.

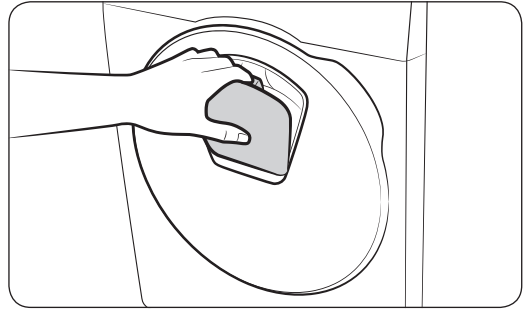


تنبيه

لا تضغط على AddWash (إضافة الغسيل) بشدة. فهو عرضة للكسر.

ملاحظة

لا يتسرب الماء الموجود داخل الحاوية في حالة إغلاق باب AddWash (إضافة الغسيل) غلقاً محكمًا سليماً. قد تتجمع قطرات من الماء حول AddWash (إضافة الغسيل) لكنها لا تتسرب من الحاوية. وهذا أمر طبيعي.



تنبيه

- لا تفتح باب AddWash (إضافة الغسيل) إذا تشكلت غسالة الصابون الزائدة في الحاوية بما يتجاوز مستوى باب AddWash (إضافة الغسيل).
- لا تحاول فتح باب AddWash (إضافة الغسيل) في أثناء عمل الغسالة دون الضغط أولاً على **||** ومواصلة الضغط عليه. يُرجى ملاحظة أنه يمكن فتح باب AddWash (إضافة الغسيل) دون قصد عند إتمام الغسيل (دون الضغط على زر **||**، ومواصلة الضغط عليه) عند اكتمال الغسيل.
- لا تضيف حملاً زائداً خلال باب AddWash (إضافة الغسيل). قد يسبب ذلك ضعف أداء الغسالة أو تأثيره سلبيًا.
- ولا تستخدم المنطقة السفلية من باب AddWash (إضافة الغسيل) بوصفها مقبض. قد تحشر أصابعك بها.
- تأكد أن الملابس غير عالقة في باب AddWash (إضافة الغسيل).
- احرص على إبعاد الحيوانات الأليفة عن الغسالة وبخاصة باب AddWash (إضافة الغسيل).
- عند استخدام الماء الدافئ في الغسيل، يبدو باب AddWash (إضافة الغسيل) كما لو أنه يسرب الماء بعد فتح باب AddWash (إضافة الغسيل) وغلقه. هذه مسألة طبيعية وسببها ببساطة هو تكثف البخار الخارج من باب AddWash (إضافة الغسيل) ومن ثم تكون قطرات ماء على السطح.
- أما عند غلق باب AddWash (إضافة الغسيل) فإن الباب يكون مُحكمًا ولا يتسرب الماء. ومع ذلك فإنك قد تتعرض لا يبدو تسرباً للماء حول الباب - بعض من الماء المتبقي حول باب AddWash (إضافة الغسيل) قد يُشكل قطرات ماء. وهذا أمر طبيعي.



- متى كانت درجة حرارة الماء أعلى من ٥٠ درجة مئوية، فإنه لا يمكن فتح الباب الرئيسي أو باب AddWash (إضافة الغسيل). كذلك إذا كان مستوى الماء في الحاوية أعلى من نقطة معينة؛ فإنه لا يمكن فتح الباب الرئيسي.
- أما إذا ظهر الكود "باب Addwash مفتوح" على شاشة العرض، يُرجى مراجعة قسم **أكواد المعلومات** لمعرفة الخطوات المتبعة.
- حافظ على نظافة باب AddWash (إضافة الغسيل) والمناطق المحيطة به في الأوقات كافة، فالبقايا أو المنظفات على أو حول جلب باب AddWash (إضافة الغسيل) قد تسبب التسرب.

إضافة الغسيل في الطرازات غير المزودة بباب AddWash (إضافة الغسيل) (الطرازات المحددة فقط)

١. انقر على **▶** واستمر بالضغط لبدء دورة الغسيل.
٢. افتح الباب وضع الغسيل في الحاوية.
٣. أغلق الباب، وانقر على **▶** واستمر بالضغط عليه مرة أخرى لاستكمال دورة الغسيل.

التحكم الذكي (الموديلات المزودة بها فقط)

يمكنك كذلك الاتصال بتطبيق SmartThings والتحكم في غسالتك عند بعد.

الاتصال بالغسالة

١. تنزيل تطبيق SmartThings وفتحه في هاتفك الذكي أو جهازك اللوحي (أكان بنظام الأندرويد أم iOS).
٢. انقر على **⌕** لتشغيل الغسالة.
٣. انقر على **⌕** ، واستمر بالضغط.

a. تدخل الغسالة وضع نقطة الوصول (AP) وتتصل بهاتف الذكي أو جهازك اللوحي.

b. انقر على **⌕** للمصادقة على الغسالة.

c. ما إن تكتمل عملية المصادقة، تتصل الغسالة بنجاح عبر التطبيق.

- يمكنك كذلك تحرير استخدام عدة خصائص ومزايا في تطبيق SmartThings.

ملاحظة

- إذا أخفقت الغسالة دون الاتصال بتطبيق SmartThings، حاول مرة أخرى.
- تحقق مما إذا كان جهاز إعادة التوجيه الراوتر إذا كان ثمة مشكلة في الاتصال بالإنترنت بعد توصيل الغسالة بتطبيق SmartThings.
- إذا كان الواي-فاي في وضع عدم التشغيل، انقر على **⌕** واستمر بالضغط لمدة ٣ ثوان لدخول قائمة مهام النظام واختيار تشغيل الواي-فاي.
- إن تشغيل واي-فاي الغسالة يتيح توصيل الغسالة عبر تطبيق SmartThings على هاتفك الذكي أو جهازك اللوحي، بغض النظر حالة توصيل الغسالة بالطاقة. ومع ذلك، فإذا كانت الغسالة تبدو كأنها غير متصلة بالإنترنت على تطبيق SmartThings إذا كان واي فاي الغسالة في وضع عدم التشغيل.
- أغلق الباب قبل بدء وظيفة التحكم الذكي.
- إذا كنت تستخدم الغسالة لفترة دون توصيلها بتطبيق SmartThings، ستظهر رسالة منبثقة بشأن التحكم الذكي ستظهر لمدة ٣ ثوان.
- إذا كان واي-فاي الغسالة غير متصل بنقطة الوصول، فإن سيجري إيقاف تشغيل الواي-فاي عند إيقاف تشغيل الطاقة.



Stay Connect (البقاء متصلاً)

اضبط خاصية Stay Connect (البقاء متصلاً) في تطبيق SmartThings للإبقاء على تشغيل التحكم الذكي في نهاية كل دورة. تظل الغسالة متصلة بالتطبيق حتى يمكنك إضافة تعليمات إضافية أكنت في المنزل أم بعيداً.

١. إذا شغلت خاصية Stay Connect (البقاء متصلاً) على تطبيق SmartThings، فإن الغسالة ستظل في وضع استعداد لحفظ الطاقة بعد إتمام الدورة.

- تظل وظيفة Stay Connect (البقاء متصلاً) نشطة حتى ٧ أيام من إغلاق الباب.

٢. إذا كانت وظيفة Stay Connect (البقاء متصلاً) نشطة، فإنه يجري إضاءة أيقونات Smart Control (التحكم الذكي) و Door Lock (قفل الباب) على شاشة عرض الغسالة.

٣. يمكنك كذلك التحكم بسهولة في الغسالة، وإضافة شطف أو تدوير أو دورات تجفيف باستخدام تطبيق SmartThings.

ملاحظة

- تتحول الغسالة إلى وضع الاستعداد لحفظ الطاقة عند إيقاف التشغيل حتى إذا كانت الغسالة غير متصلة بتطبيق SmartThings.
- في بعض الحالات، تضيء أيقونة Door Lock (قفل الباب) فقط.



تطبيق SmartThings (الطرز المزودة به فقط)

اتصال Wi-Fi

- على هاتفك الذكي أو جهازك اللوحي، انتقل إلى **Settings (الإعدادات)** وشغل الاتصال اللاسلكي وحدد نقطة الوصول (AP).
- يدعم الجهاز بروتوكولات الواي-فاي ٢,٤ غيغاهرتز.

تنزيل

في سوق التطبيقات (متجر Google Play، و Apple App Store، و Samsung Galaxy Apps)، ابحث عن تطبيق SmartThings بالبحث عن كلمات "SmartThings". تنزيل التطبيق على جهازك وتثبيته.

ملاحظة

التطبيق عرضة للتغيير دون إشعار مسبق لتحسين الأداء.

تسجيل الدخول

أولا يجب تسجيل الدخول إلى SmartThings بحسابك لدى سامسونج. لإنشاء حساب جديد لدى سامسونج، اتبع الإرشادات في التطبيق. لا تحتاج إلى تطبيق منفصل لإنشاء حساب خاص بك.

ملاحظة

إذا كان لديك حساب لدى سامسونج، استخدم هذا الحساب لتسجيل الدخول. مستخدمو هواتف سامسونج الذكية أو الأجهزة اللوحية المسجلة يسجلون الدخول تلقائيا.

لتسجيل الجهاز الخاص بك على تطبيق SmartThings

١. تأكد أن هاتفك الذكي أو جهازك اللوحي متصل بشبكة اتصال لاسلكية. وإذا لم يكن الجهاز متصلا، انتقل إلى **Settings (الإعدادات)** وشغل الاتصال اللاسلكي وحدد AP (نقطة الوصول).
٢. افتح تطبيق SmartThings على هاتفك الذكي أو جهازك اللوحي.
٣. عندما تظهر رسالة "A new device is found". (تم العثور على جهاز جديد)، حدد **Add (إضافة)**.
٤. في حالة عدم ظهور رسالة، حدد + وحدد جهازك من قائمة الأجهزة المتوفرة. إذا لم يكن جهازك مدرجا في القائمة، حدد **Device Type (نوع الجهاز) > Specific Device Model (طرز جهاز معين)**، ثم أضف جهازك يدوياً.
٥. سجل جهازك في تطبيق SmartThings على النحو التالي.
 - a. أضف جهازك على تطبيق SmartThings. تأكد من اتصال جهازك بتطبيق SmartThings.
 - b. عند الانتهاء من التسجيل، يظهر جهازك على هاتفك الذكي أو جهازك اللوحي.

إعلان المصدر المفتوح

إن البرنامج الوارد في هذا المنتج يكون برنامج مفتوح المصدر. يمكنك الحصول على نسخة شفيرة مصدرة كاملة مقابلة منا لمدة ثلاث سنوات من تاريخ آخر شحن للمنتج وذلك عبر الرابط الإلكتروني <http://opensource.samsung.com> (يرجى استخدام قائمة "Inquiry" (استفسار))

كذلك من الممكن الحصول على كود مصدر في وسيط مادي مثل قرص مدمج ويطلب رسم بسيط في مثل هذه الحالة. يقود الرابط التالي http://opensource.samsung.com/opensource/SMART_AT_051/seq/0 إلى الترخيص مفتوح المصدر المتصلة بالمنتج. وهذا العرض متاح ومتوفر لأي شخص تبلغه هذا المعلومة.



ملاحظة

بموجب ذلك، تصرّح سامسونج للإلكترونيات أن الجهاز من نوع معدات الراديو، وهو خاضع للتوجيه 2014/53/EU. النص الكامل لإعلان الاتحاد الأوروبي الخاص بالمطابقة متاح على العنوان التالي على الإنترنت: ويمكن الاطلاع على الإعلان الرسمي للتوافق في <http://www.samsung.com>، انتقل إلى Support (الدعم) > Search Product Support (بحث دعم المنتج) وأدخل اسم الطراز. الحد الأقصى لقوة إرسال Wi-Fi: ٢٠ ديسيبل ميلي واط في ٢,٤١٢ غيغاهرتز - ٢,٤٧٢ غيغاهرتز

حافظ على الغسالة نظيفة حتى لا ينخفض مستوى الأداء والحفاظ على عمرها الافتراضي.

تنظيف الأسطوانة+

نفذ هذه الدورة بشكل منتظم لتنظيف الحوض والتخلص من البكتريا. هذه الدورة تسخن الماء بين ٦٠ و ٧٠ درجة مئوية، كما أنها تزيل الأوساخ المتراكمة في الطوق المطاطي للباب.

١. انقر (١).

٢. أدر قرص التوجيه لاختيار تنظيف الأسطوانة+

٣. انقر على (▶)، واستمر بالضغط.

⚠ تنبيه

- لا تستخدم أي مواد منظفة لتنظيف الأسطوانة. فالمخلفات الكيميائية في الحوض قد تسبب الضرر للملابس أو للحوض بالغسالة.
- للحيلولة دون تراكم كلس، أضف الكمية المناسبة من المنظف وفق مستوى عسر المياه أو أضف منعم الماء إلى المنظف.

منبه التذكير تنظيف الأسطوانة+

اعتمادًا على الطراز، فإن منبه تنظيف الأسطوانة+ سيكون إما بأيقونة أو LED.

بالنسبة للأيقونات، فإن الأيقونة تضيء على لوحة التحكم.


في حالة LEDs، تضيء LED عند تنظيف الأسطوانة+، أو في منطقة الخيارات بلوحة التحكم.

- يظهر منبه تنظيف الأسطوانة+ يومض على لوحة التحكم مرة كل ٤٠ مرة غسيل. ينصح بتنفيذ تنظيف الأسطوانة+ بانتظام.
- عندما ترى هذا المنبه لأول مرة، يمكنك تجاهله ٦ مرات متتالية. ولا يظهر هذا التذكير بدءًا من الغسلة السابعة. ومع ذلك فإن التذكير يظهر مرة ثانية عند الغسلة الأربعين التالية.
- حتى بعد إنهاء آخر عملية، فإن قد تظل رسالة "0".
- يمكنك كذلك تسجيل عداد تشغيل دورة تنظيف الأسطوانة+ بالنقر على (١). لا يوقف ذلك الغسالة أو يوقفها عن العمل وإنما يُشير إلى عدد الدورات.
- حتى إذا لم تختفي رسالة "0"، فإن الغسالة تعمل بشكل طبيعي.
- وإنه كذلك يوصى بتشغيل الدورة بشكل منتظم لأغراض تتصل بالوقاية الصحية.


التصريف عند الطوارئ

في حالة انقطاع الكهرباء، صرف المياه الموجود في الأسطوانة قبل إخراج الغسيل.

١. أوقف تشغيل الغسالة ثم افصل الغسالة من مأخذ الكهرباء.
٢. اضغط على الجزء العلوي من **غطاء المصفاة** لينفتح.

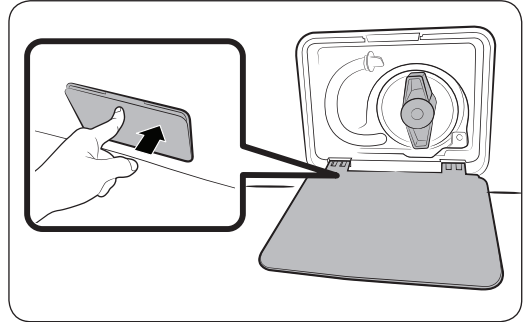


٣. ضع وعاء فارغ متسع حول الغطاء ثم اسحب خرطوم التصريف في حالة الطوارئ ليصل للوعاء مع الإمساك بخرطوم الأنبوب (A).

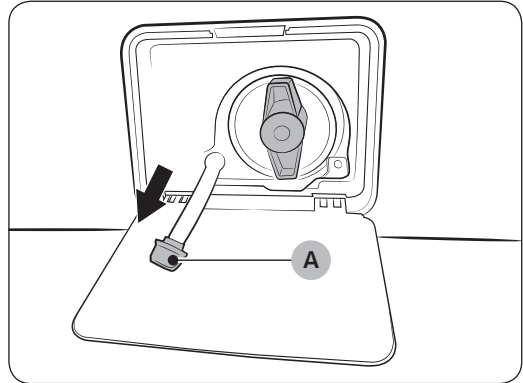

٤. افتح غطاء الخرطوم ودع الماء أنبوب التصريف عند الطوارئ (B) يتدفق في الوعاء.
٥. بالإنهاء من التفريغ، أغلق غطاء الخرطوم ثم أعد خرطوم التصريف إلى موضعه. أغلق غطاء المرشح.

ملاحظة

استخدم وعاء كبير لأن كمية الماء في الحاوية أكبر من المتوقع.

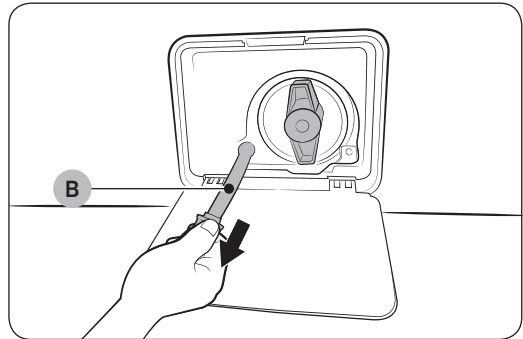


سطح الغسالة

استخدم قطعة قماش عليها منظف منزلي لا يحتوي على مواد آكلة. لا تضع المياه على الغسالة.

باب AddWash (إضافة الغسيل)

١. افتح باب AddWash (إضافة الغسيل).
٢. استخدم قطع قماش مبللة لتنظيف باب AddWash (إضافة الغسيل).
- لا تستخدم مواد تنظيف. قد يحدث تغير في اللون.
- توخ الحذر عند تنظيف الحلقة المطاطية وكذلك **ميكانيزم القفل (A)**.
- أزل الغبار عن منطقة النافذة بشكل منتظم.
٣. امسح باب AddWash (إضافة الغسيل) وأغلقه حتى تسمع صوت طقطقة خفيفة.

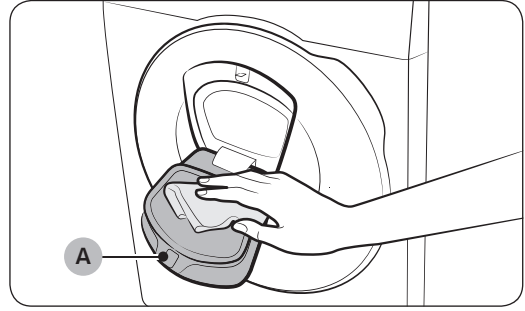


⚠ تنبيه

- لا تضغط على باب AddWash (إضافة الغسيل) ضغط شديدًا. فهو عرضة للكسر.
- لا تترك باب AddWash (إضافة الغسيل) مفتوحًا في أثناء تشغيل الغسالة.
- لا تضع أشياء ثقيلة على باب AddWash (إضافة الغسيل) أبدًا.
- للوقاية من الأذى البدني، لا تمس باب AddWash (إضافة الغسيل) في أثناء دوران الحاوية.
- لا تفتح باب AddWash (إضافة الغسيل) في أثناء عمل الغسالة. قد يُعرضك ذلك للأذى أو الإصابة البدنية.
- لا تستخدم لوحة الخصائص بينما يكون باب AddWash (إضافة الغسيل) مفتوحًا. وقد يُسبب ذلك إصابة بدنية أو فشل في النظام.
- لا تضع أغراضًا بخلاف الغسيل.
- لا تضع أغراضًا كبيرة في الحاوية عبر باب AddWash (إضافة الغسيل).
- لا تسحب الحلقة المطاطية لباب AddWash (إضافة الغسيل) في أثناء التنظيف. وقد يُسبب ذلك تلفًا أو ضررًا.


المصفاة الشبكية

نظف المصفاة الشبكية للإمداد بالمياه مرة كل عامين.

١. أوقف تشغيل الغسالة وافصل كابل الكهرباء.
٢. أغلق صنبور المياه.
٣. حرر الخرطوم وفكه من الجانب الخلفي من الغسالة. غط الخرطوم بقطعة قماش للحيلولة دون خروج المياه منه.

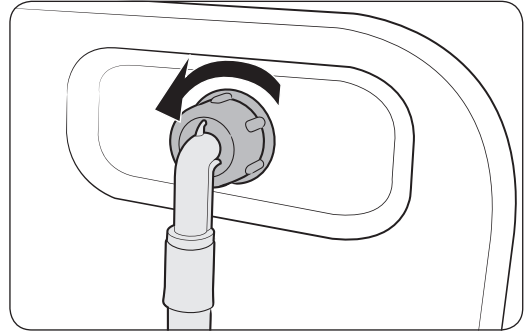

٤. استخدم زردية لسحب المصفاة الشبكية من فتحة صمام الدخول.
٥. اغمر المصفاة الشبكية في المياه بعمق بحيث يجري غمر الموصل ذي السنون.
٦. جفف المصفاة الشبكية تمامًا في الظل.
٧. أعد إدخال المصفاة الشبكية في فتحة صمام الدخول وأعد وصل خرطوم الماء في صمام الدخول.
٨. افتح صنبور المياه.

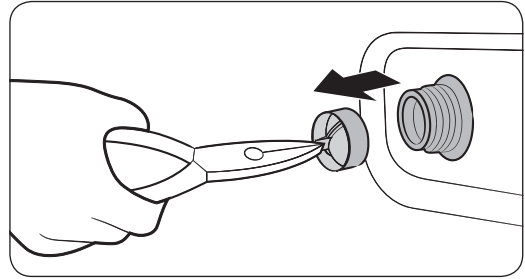


ملاحظة

إذا تعرضت المصفاة الشبكية للانسداد، تعرض الشاشة الخطأ "تحقق من مصدر المياه".


مصفاة المخلفات

يُنصح بتنظيف مصفاة المخلفات مرة كل شهرين لتجنب انسدادها. إن مصفاة المخلفات المسدودة قل تقليل تأثير الفقاعات.

١. أوقف تشغيل الغسالة وافصل كابل الكهرباء.
٢. صرف الماء الباقي داخل الحاوية. راجع قسم **التصريف عند الطوارئ**.
٣. اضغط على الجزء العلوي من **غطاء المصفاة** لينفتح.
٤. أدر غطاء مصفاة المخلفات إلى اليسار وصرّف المياه المتبقية.

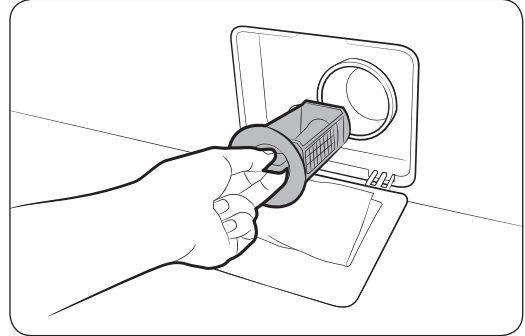


٥. نظف مصفاة المخلفات باستخدام فرشاة ناعمة. تأكد أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٦. أعد تركيب مصفاة المخلفات وأدر غطاء المصفاة تجاه اليمين.

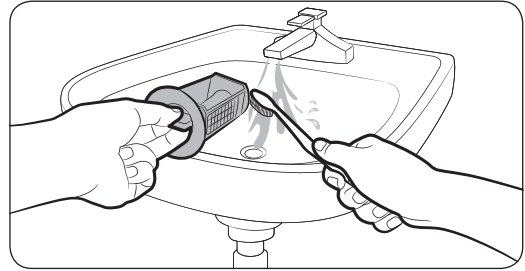

ملاحظة

- تتميز بعض مصافي المخلفات بخاصية غطاء أمان مُصممة للحيلولة دون عبث الأطفال. لفتح غطاء أمان مصفاة المخلفات، اضغط على الغطاء للداخل وأدره عكس اتجاه عقارب الساعة. وهنا تُساعد ميكانيكية النابض الموجة في غطاء الأمان على فتح المصفاة.
- لغلق غطاء أمان مصفاة المخلفات، أدره في اتجاه عقارب الساعة. يصدر الزنبرك صوتًا خلال ذلك وهذا أمر طبيعي.

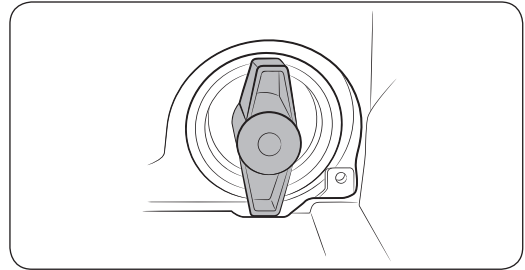

ملاحظة


إذا تعرضت مصفاة المضخة للانسداد، تعرض الشاشة الخطأ **"التحقق من التصريف"**.

تنبيه


- تأكد من إغلاق غطاء المصفاة بعد تنظيف المصفاة. قد يؤدي عدم الالتزام بذلك إلى حدوث تسرب.
- تأكد من إغلاق وضع المصفاة بشكل صحيح بعد تنظيف المصفاة. قد يؤدي عدم الالتزام بذلك إلى خلل بالتشغيل أو حدوث تسرب.

درج مسحوق الغسيل

١. ممسكا لأسفل **بذراع التحرير** على الجانب الداخلي من الدرج، افتح الدرج قليلاً.

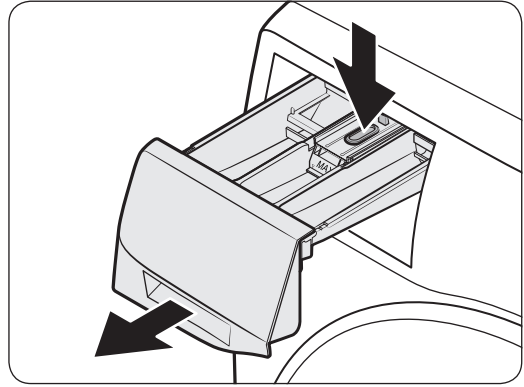

٢. نظف مكونات الدرج في ماء جاري باستخدام فرشاة ناعمة.

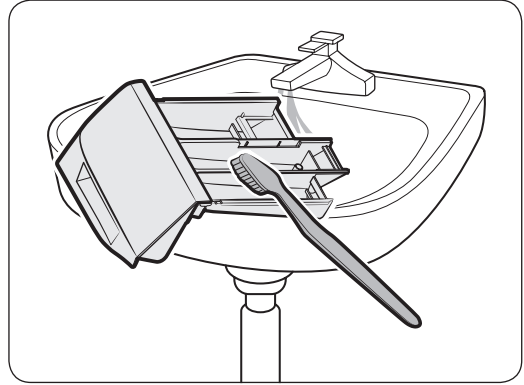


٣. نظف تجويف الدرج باستخدام فرشاة زجاج لإزالة بقايا المنظف والكلس في تجويف الدرج.

٤. أعد إدخال حاوية المنظفات السائلة في الدرج.

٥. ادفع بدرج المسحوق للداخل لغلغه.

ملاحظة

تأكد أن تجويف الدرج جاف تمامًا قبل إدخال درج المنظف.

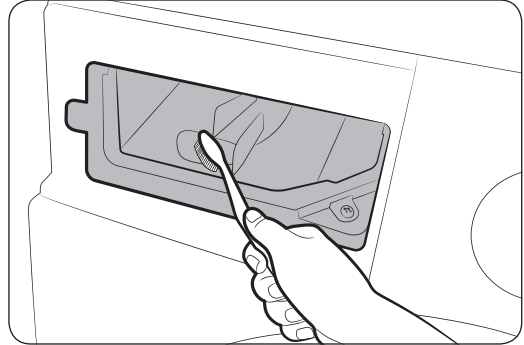

ملاحظة

لإزالة الجزء المتبقي من المنظف، نفذ الدورة **الشطف والدوران** بينما تكون الأسطوانة خالية.

إزالة الصقيع عن الغسالة

١. قد تتجمد الغسالة إذا انخفضت درجة الحرارة دون ٠ سلزيوس.
٢. أوقف تشغيل الغسالة وافصل كابل الكهرباء.
٣. صب المياه الدافئة على صنبور المياه لإرخاء خرطوم توريد المياه.
٤. أزل خرطوم توريد المياه وانقعه في المياه الدافئة.
٥. صب المياه الدافئة في أسطوانة الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد وصل خرطوم الإمداد بالمياه إلى صنبور المياه.

ملاحظة

إذا لم تعمل الغسالة بشكل طبيعي، كرر الخطوات أعلاه حتى تعمل الغسالة بشكل طبيعي.

يجب الحذر جاء بشأن الفترات الزمنية من سوء الاستخدام

- تجنب ترك الغسالة لفترات طويلة دون الاستخدام. يتعين تصريف المياه من الغسالة وافصل كابل الطاقة في هذه الحالة.
١. أدر قرص التوجيه لاختيار الشطف والدوران.
 ٢. أفرغ الحاوية، ثم انقر على II، وواصل الضغط.
 ٣. أغلق صنبور الماء وافصل خرطوم الإمداد بالماء عند إتمام الدورة.
 ٤. أوقف تشغيل الغسالة وافصل كابل الكهرباء.
 ٥. افتح الباب ودع الهواء يمر خلال الأسطوانة.

استكشاف الأخطاء وإصلاحها

إذا كان ثمة مشكلة ما، تحقق من رسالة المعلومات على شاشة LCD واتباع التعليمات على الشاشة. فإذا استمرت المشكلة، يُرجى الاتصال بمركز الخدمة.

نقاط التحقق والفحص

إذا واجهت مشكلة بالغسالة، تحقق من الجدول التالي وجرب ما به من اقتراحات.

المشكلة	الإجراء المتبع
الغسالة لا تعمل.	- تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. - تأكد من إغلاق الباب بإحكام. - تأكد أن حنفيات مصدر المياه مفتوحة. - انقر على واستمر بالضغط لبدء تشغيل الغسالة. - تأكد أن قفل ضد الأطفال غير نشط. - قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الباب وإجراء دورة تصريف سريعة. - افحص المصهر أو إعادة ضبط قاطع الدائرة. - تحقق من سلامة التوصيل بمصدر الطاقة الكهربائية. - اكتشاف انخفاض في الفولطية. - تحقق من تركيب كابل الطاقة. - تأكد أن الملابس غير عالقة بالباب. - تظهر رسالة "باب Addwash مفتوح" دون النقر على زر ، واستمرار الضغط. فإذا حدث ذلك، اتبع أي من الخطوات التالية: - اضغط على باب AddWash (إضافة الغسيل) لإغلاقه بشكل صحيح. ثم انقر على واستمر بالضغط وحاول مرة أخرى. - لإضافة الغسيل، افتح باب AddWash (إضافة الغسيل) وضع الغسيل. ثم أغلق باب AddWash (إضافة الغسيل) تمامًا. ثم، انقر على واستمر بالضغط لبدء التشغيل مرة ثانية.
ربما تكون كمية الماء غير كافية أو ربما انقطعت إمدادات المياه.	- افتح صنبور المياه كاملاً. - تأكد من إغلاق الباب بإحكام. - تأكد أن خرطوم التغذية بالماء غير متجمد. - تأكد أن خرطوم التغذية بالماء ليس مثنيًا أو مسدودًا. - تأكد من كفاية ضغط الماء. - تأكد من سلامة توصيل صنبور المياه الباردة والمياه الساخنة. - نظف المصفاة الشبكية وربما تعرضت للانسداد.
يبقي قدر من المنظف في درج المنظفات حتى بعد إكمال دورة الغسيل.	- تأكد من تشغيل الغسالة بضغط ماء كاف. - تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق. - تأكد من إدخال غطاء الشطف إدخالاً سليماً. - إذا كنت تستخدم منظفًا جيبياً، تأكد أن قرص تحديد المنظف في الموضع المناسب. - أزل غطاء الشطف ونظف درج المنظفات.

استكشاف الأخطاء وإصلاحها

المشكلة	الإجراء المتبع
اهتزازات عنيفة في الغسالة أو ضوضاء عالية.	- تأكد من استواء مستوى تثبيت الغسالة وأنها على أرضية صلبة غير زلقة. إذا لم تكن الأرضية مستوية، استعن بأرجل الاستواء لضبط ارتفاع الغسالة. - تأكد من إزالة مسامير الشحن. - تأكد من عدم ملاصقة الغسالة لأي شيء آخر. - تأكد من توزيع وزن الملابس الموجودة في الغسالة. - يمكن أن يُصدر الموتور قدر من الضوضاء في أثناء التشغيل العادي. - كذلك قد تسبب الملابس الزينة بالمعادن أو الرداء السراولي قدر من الضوضاء في أثناء غسلها. وهذا أمر طبيعي. - كذلك تُسبب الأغراض المعدنية مثل العملات المعدنية أصواتًا. بعد إتمام الغسيل، أزل هذه الأغراض المعدنية من الحاوية أو علبة المرشح. - أعد توزيع الملابس. في حالة غسيل قطعة واحدة من الملابس، مثل بُرنس حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية، وتظهر رسالة التنبيه "رصد غير متوازن" على الشاشة.
عدم التصريف، و/ أو الدوران.	- تأكد من استقامة خرطوم الصرف على امتداد نظام الصرف. إذا وجدت أي إعاقه للتصريف، فاتصل بخدمة الصيانة. - تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة. - أغلق الباب ثم انقر على > وواصل الضغط. - لن تعمل الغسالة أو تدور قبل غلق الباب وذلك لسلامتك وأمانك. - تأكد أن خرطوم التغذية بالماء ليس مجتمدًا أو مسدودًا. - تأكد أن خرطوم الصرف متصل بنظام التصريف وأن نظام الصرف ليس مسدودًا. - إذا لم تتوفر كمية المياه الكافية للغسالة بالقوة الكافية فإن الغسالة تتوقف مؤقتًا عن التصريف أو التجفيف. وما أن تتوفر للغسالة الكمية الكافية من المياه بالقوة الكافية فإنها تعاود العمل بشكل طبيعي. - تأكد من سلامة موضع خرطوم التصريف بناء على نوع التوصيل. - نظف مصفاة المخلفات فربما تعرضت للانسداد.
باب الغسالة لا يفتح.	- انقر على > واستمر بالضغط لإيقاف تشغيل الغسالة. - قد يستغرق الأمر ثوان قليلة حتي يتحرر قفل الباب. - لا يمكن فتح الباب حتى تمر ٣ دقائق على توقف الغسالة عن العمل أو فصل التيار الكهربائي. - تأكد من تصريف كل الماء في الحاوية الغسالة للخارج. - لا يمكن فتح الباب في حالة وجود مياه في الحاوية. صرف المياه في الحاوية ثم افتح الباب يدويًا. - تأكد أن مصباح قفل الباب مُطفأ. ينطفأ مصباح قفل الباب بعد إتمام تصريف الماء من الغسالة.
زيادة الغسالة وباقي المنظفات.	- تأكد من استخدام الأنواع الموصى بها من المنظفات. - استخدم مادة منظفة عالية الفعالية لمنع زيادة تكون غُسالة الصابون أو رَغْوته. - خفض كمية المادة المنظفة للماء اليسر أو كميات الغسيل الصغيرة أو الغسيل خفيف الاتساخ بأوساخ صغيرة أو بسيطة. - لا يوصى باستخدام مادة منظفة غير HE.
لا يمكن وضع كمية إضافية من المنظفات.	تأكد أن الكمية المتبقية من المنظف ومنعم الأقمشة لا تتجاوز الحد المسموح.



المشكلة	الإجراء المتبع
يتوقف.	• ضع كابل الكهرباء في منفذ كهربائي عامل. • افحص المصهر أو إعادة ضبط قاطع الدائرة. • أغلق الباب وانقر على > واستمر بالضغط لبدء تشغيل الغسالة. لن تعمل الغسالة أو تدور قبل غلق الباب وذلك لسلامتك وأمانك. • قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الباب وإجراء دورة تصريف سريعة. • قد يوجد إيقاف مؤقت أو فترة نقع في الدورة. انتظر فترة بسيطة وربما تواصل الغسالة العمل بعد قليل. • تأكد من عدم انسداد المصفاة الشبكية في خرطوم الإمداد الموجودة في صنادير المياه. نظف المصفاة الشبكية دوريًا. • إذا لم تتوفر كمية المياه الكافية للغسالة بالقوة الكافية فإن الغسالة تتوقف مؤقتًا عن التصريف أو التجفيف. وما أن تتوفر للغسالة الكمية الكافية من المياه بالقوة الكافية فإنها تعاود العمل بشكل طبيعي.
الماء بماء ذي درجة حرارة غير مناسبة.	• افتح الصنبورين فتحًا كاملاً. • تأكد من أن تحديد درجة الحرارة صحيح. • تأكد من أن الخراطيم متصلة بالحنفيات الملائمة. قم بوضع خطوط الماء. • تأكد من ضبط سخان الماء على الحد الأدنى للماء الساخن على درجة ٤٩ سلتزيوس في الصنبور. كذلك افحص سعة الماء الدافئ ومعدل التعويض. • إفصل الخراطيم ونظف المصفاة الشبكية. قد تكون المصفاة الشبكية مسدودة. • عندما يتم ملء غسالتك بالماء، فقد يحدث تغيير لدرجة حرارة الماء أثناء قيام ميزة التحكم بدرجة الحرارة أوتوماتيكياً بالتحقق من درجة حرارة الماء القادم. وهذا أمر طبيعي. • قد تلاحظ في أثناء ملء غسالتك بالماء أن الماء الساخن فقط و/ أو الماء البارد فقط ينطلق عبر وحدة التوزيع عند اختيار درجات حرارة الغسيل على الماء الساخن أو البارد. هذه هي الوظيفة الطبيعية لخاصية التحكم الأوتوماتيكي بدرجة الحرارة بينما تحدد غسالتك درجة حرارة الماء.
الغسيل يظل رطبًا مبللًا في نهاية دورة الغسيل.	• استخدم سرعة التجفيف العالية أو الإضافية. • استخدم مادة منظفة عالية الفعالية لمنع زيادة تكون غُسالة الصابون أو رغوته. • كمية الغسيل (كمية الملابس) صغيرة جداً. قد كمية الغسيل الصغيرة (غرض واحد أو غرضين) تؤدي إلى عدم التوازن وعدم التجفيف تجفيفًا كاملاً. • تأكد أن خرطوم توريد الماء ليس مجمدًا أو مسدودًا.
تسرب الماء.	• تأكد من إغلاق الباب بإحكام. • تأكد من أن كل وصلات الخرطوم محكمة الربط. • تأكد من إدخال طرف خرطوم التصريف بطريقة صحيحة وتثبيته في نظام التصريف. • تجنب التحميل الزائد. • استخدم مادة منظفة عالية الفعالية لمنع زيادة تكون غُسالة الصابون أو رغوته. • تحقق من خرطوم التصريف. - تأكد أن طرف خرطوم التصريف غير موضوع على الأرضية. - تأكد أن خرطوم التصريف ليس مجمدًا أو مسدودًا.
ثمة روائح تصدر عن الغسالة.	• تجمع غُسالة الصابون الزائدة في التجويفات وهو ما يُسبب روائح كريهة. • التشغيل الدوري للغسالة على دورات الغسيل المنظفة لتعقيمها. • نظف جلبة الباب (انظر المخطط). • نظف الأجزاء الداخلية للغسالة بعد إتمام دورة الغسيل.



استكشاف الأخطاء وإصلاحها

المشكلة	الإجراء المتبع
لا يمكن رؤية فقاعات (الموديلات التي تدعم الفقاعات فقط).	- قد لا يمكنك رؤية الفقاعات إذا كانت الأغراض في الحاوية كثيرة جدًا. - الملابس شديدة الاتساخ قد لا تتيح تكون الفقاعات.
هل يمكنني فتح باب AddWash (إضافة الغسيل) في أي وقت؟	- يمكن فتح باب AddWash (إضافة الغسيل) عندما يظهر المؤشر 7 فقط. ومع ذلك فإنه لا يمكن فتح باب AddWash (إضافة الغسيل) في الحالات التالية: - في أثناء عمليات الغلي أو التجفيف وارتفاع درجة الحرارة الداخلية - في حالة ضبط قفل ضد الأطفال لأغراض الأمن والسلامة - عندما تكون حاوية الغسيل أو دورة الغسيل لا تحتوى على خاصية إضافة الغسيل في أثناء التشغيل.
ظهور رسالة على الشاشة للتنبيه أن الموزع مفتوح.	- تحقق من إغلاق درج المنظفات بشكل صحيح. - افتح درج المنظفات وأغلقه مرة أخرى. تأكد من إغلاقه بشكل صحيح.

في حالة استمرار المشكلة، اتصل بمركز خدمة العملاء. ورقم مركز الخدمة العملاء المذكور في الملصق المرفق بالمنتج.



أكواد المعلومات

في حالة تعرض الغسالة للعطل، قد يظهر أحد رموز المعلومات على لوحة العرض. تحقق من الجدول التالي وجرب ما به من اقتراحات.

الكود	الإجراء المتبع
التحقق من التصريف	لا يجري صرف الماء. - تأكد أن خرطوم التغذية بالماء ليس مجمدًا أو مسدودًا. - تأكد من سلامة موضع خرطوم التصريف بناءً على نوع التوصيل. - نظف مصفاة المخلفات فربما تعرضت للانسداد. - تأكد من استقامة خرطوم الصرف على امتداد نظام الصرف. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
تحقق من مصدر المياه	لا يجري تغذية الغسالة بالماء. - تأكد أن حنفيات مصدر المياه مفتوحة. - تأكد أن خرطوم الماء غير مسدود. - تأكد أن صنبور المياه غير مجمد. - تأكد من تشغيل الغسالة بضغط ماء كافٍ. - تأكد من سلامة توصيل صنبور المياه الباردة والمياه الساخنة. - نظف المصفاة الشبكية فربما تعرضت للانسداد. - سيجري تعطيل جميع الأزرار لمدة ٣ دقائق بعد ظهور كود المعلومات. - عندما تظهر رسالة "تحقق من مصدر المياه"، تُصرف الغسالة المياه لمدة ٣ دقائق. في الوقت نفسه، سيجري تعطيل زر الطاقة.
تحقق من خطوط المياه	تأكد من سلامة توصيل خرطوم التغذية بالماء البارد بصنبور الماء البارد. إذا جرى توصيل خرطوم التغذية بالماء البارد بصنبور الماء الساخن فإن الغسيل قد يتعرض للتفسخ في بعض الدورات.
رصد غير متوازن	التجفيف لا يعمل. - تأكد من بسط الغسيل بسطًا مستويًا. - تأكد من تركيب الغسالة على سطح مستو ثابت ومستقر. - أعد توزيع الملابس. في حالة غسيل قطعة واحدة من الملابس، مثل بُرنس حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية، وتظهر رسالة تنبيه نصها "رصد غير متوازن" على الشاشة.
الباب مفتوح	تشغيل الغسالة بينما يكون الباب مفتوح. - تأكد من إغلاق الباب بإحكام. - تأكد أن الملابس غير عالقة بالباب.
باب AddWash (إضافة الغسيل) مفتوح (في الطرازات المزودة به فقط)	تظهر الرسالة عند فتح باب AddWash (إضافة الغسيل) دون النقر على زر AddWash، واستمرار الضغط. فإذا حدث ذلك، اتبع أي من الخطوات التالية: - اضغط على باب AddWash (إضافة الغسيل) لإغلاقه بشكل صحيح. ثم انقر على AddWash واستمر بالضغط وحاول مرة أخرى. - إضافة الغسيل، افتح باب AddWash (إضافة الغسيل) وأضف الغسيل. أغلق باب AddWash (إضافة الغسيل) بشكل صحيح، ثم انقر على AddWash واستمر بالضغط لبدء التشغيل مرة ثانية.
OC	زيادة كمية الماء. - أعد التشغيل بعد التجفيف. - إذا ظل أحد الأكواد ظاهرًا على الشاشة، اتصل بمركز خدمة Samsung المحلي.



استكشاف الأخطاء وإصلاحها

الكود	الإجراء المتبع
LC, LC1	- تحقق من خرطوم التصريف. - تأكد أن طرف خرطوم التصريف غير موضوع على الأرضية. - تأكد أن خرطوم التصريف ليس مجمدًا أو مسدودًا. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
3C	- تحقق من سلامة عمل موتور الحاوية. - حاول إعادة بدء دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
3CP	- ثمة حاجة لفحص التحكم الإلكتروني. - حاول إعادة بدء دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
UC	- تحقق من سلامة عمل موتور النبضات. - تحقق من سلامة التوصيل بمصدر الطاقة الكهربائية. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
HC	- اكتشاف انخفاض في الفولطية. - تحقق من تركيب كابل الطاقة. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
1C	- التحقق من ارتفاع درجة الحرارة. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
AC	- مستشعر مستوى الماء لا يعمل بطريقة صحيحة. - أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
8C	- تحقق من سلامة التوصيلات بين PBA الرئيسية والفرعية. - أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
AC6	- مستشعر MEMS لا يعمل بطريقة صحيحة. - أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
DC1	- تحقق من سلامة التوصيلات بين PBA الرئيسية والعاكسة. - قد تعاود الغسالة العمل أوتوماتيكيًا إلى التشغيل العادي اعتمادًا على الحالة. - أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
DC3	- قفل /فتح الباب الرئيسي لا يعمل بشكل ملائم. - أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
	- عدم عمل قفل /فتح باب AddWash (إضافة الغسيل) بشكل ملائم. - أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. - إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.



الكود	الإجراء المتبع
FC	موتور مروحة التجفيف لا يعمل كما ينبغي. • أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة عملاء Samsung.
HC2	سخان التجفيف لا يعمل كما ينبغي. • أوقف تشغيل الغسالة، وأعد تشغيل دورة الغسيل. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة عملاء Samsung.

إذا وجدت أن أحد الأكواد يستمر بالظهور على الشاشة، اتصل بمركز خدمة Samsung المحلي.



جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وتجفيف وكي (وتنظيف جاف إذا لزم الأمر). يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

يحظر الكي		مواد مقاومة	
يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة		ملابس رقيقة	
تنظيف جاف		يمكن الغسل عند ٩٥ °م	
التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط		يمكن الغسل عند ٦٠ °م	
التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط		يمكن الغسل عند ٤٠ °م	
يحظر استخدام التنظيف الجاف		يمكن الغسل عند ٣٠ °م	
تجفف وهي مفردة		غسل يدوي فقط	
يمكن نشرها لتجف		تنظيف جاف فقط	
تجفيف الملابس وهي معلقة على حمالة		يمكن استخدام مادة تبييض مع الماء البارد	
تجفيف بالتدوير، حرارة عادية		يحظر استخدام مادة تبييض	
تجفيف بالتدوير، حرارة خفيفة		يمكن الكي عند ٢٠٠ °م بحد أقصى	
يحظر تجفيفها بالتدوير		يمكن الكي عند ١٥٠ °م بحد أقصى	
		يمكن الكي عند ١٠٠ °م بحد أقصى	

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يُرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار حتى يتعذر يمكن توصيل الجهاز بمصدر طاقة. أزل الغطاء حتى لا تنحشر الحيوانات والأطفال الصغار بداخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- لا تستخدم منتجات إزالة البقع والمبيضات قبل دورة الغسيل إلا عندما يكون ذلك ضرورياً.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).


ضمان قطع الغيار

نضمن توافر قطع الغيار التالية لمتخصصي الإصلاح المحترفين والمستخدمين النهائيين لمدة عشر سنوات على الأقل من تقديم آخر وحدة من الموديل للأسواق.

- الباب، ومفصلات الباب، والجلب، والجلب الأخرى، ومجموعة قفل الباب، والأطراف البلاستيكية موزعات المنظف.

قائمة المواصفات الفنية

تعني علامة " * " موديلات مختلفة ويمكن أن تختلف قيمتها من (0-9) أو (A-Z).

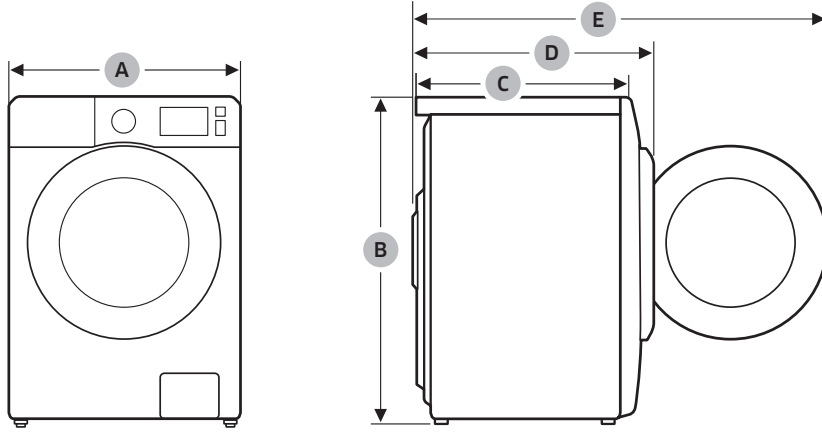

النوع	غسالة أتوماتيك ذات فتحة تعبئة أمامية
اسم الطراز	WD1*T*****
الأبعاد	A (العرض) ٦٠٠ مم
	B (الارتفاع) ٨٥٠ مم
	C (العمق) ٦٠٠ مم
	D ٦٨٠ مم (WD1*T*3****, WD1*T*0****) ٦٩٠ مم (WD1*T*8****, WD1*T*5****)
	E ١١٢٠ مم
ضغط الماء	٥٠ كيلوباسكال - ٨٠٠ كيلوباسكال
الوزن الصافي	٨٠ كجم
أقصى سعة للحمولة	غسيل وتدوير ١٠,٠ كجم
	التجفيف ٧,٠ كجم
استهلاك الطاقة	تيار متردد ٢٣٠-٢٤٠ فولت ٥٠ / هرتز
الغسل والتسخين والتجفيف	١٩٠٠-٢٣٠٠ واط
	١٦٠٠-١٩٠٠ واط
دورات التنشيف	١٤٠٠ دورة في الدقيقة
كفاءة التدوير-التجفيف	٥ نجوم

ملاحظة

- إن التصميم والمواصفات عرضة للتغيير دون إشعار وذلك بهدف تحقيق جودة أفضل.
- جاء تحديد المواصفات الواردة على ملصق الطاقة باستخدام البرنامج التالي وفق UAE.S 5010-2. (يسري ذلك على موديلات الإمارات العربية المتحدة فقط)
- البرنامج هو "القطن ٦٠ مئوية + المرکز".
- تم قياس بيانات استهلاك طاقة التجفيف وفقاً للشروط المنصوص عليها في المواصفات القياسية UAE.S 5010-2. (يسري ذلك على موديلات الإمارات العربية المتحدة فقط)
- يجب تنفيذ التجفيف الأول عند حمولة تبلغ ٧ كجم (تتكون الحمولة من: ٢ ملاءات، ١٢ كيس وسادة، و٣٤ منشفة) وذلك باختيار تجفيف القطن + دوران (يمكن إضافة ١ أو ٢ منشفة أو إزالتهما لضبط الوزن).
 - يجب تنفيذ التجفيف الثاني عند حمولة تبلغ ٣ كجم (تتكون الحمولة من: ٢ ملاءات، ٤ كيس وسادة، و٠ منشفة) وذلك باختيار تجفيف القطن + دوران؛ (يمكن إضافة ١ أو ٢ منشفة أو إزالتهما لضبط الوزن).

النوع	غسالة أتوماتيك ذات فتحة تعبئة أمامية
اسم الطراز	WD9*T7***** WD9*T6***** WD9*T5*****
الأبعاد	A (العرض) ٦٠٠ مم
	B (الارتفاع) ٨٥٠ مم
	C (العمق) ٦٥٠ مم
	D ٧٣٠ مم (WD9*T*3****, WD9*T*0****) ٧٤٠ مم (WD9*T*8****, WD9*T*5****)
	E ١١٧٠ مم
ضغط الماء ٥٠ كيلوباسكال - ٨٠٠ كيلوباسكال	
الوزن الصافي ٦٨ كجم	
أقصى سعة للحمولة	غسيل وتدوير ٩,٠ كجم
	التجفيف ٦,٠ كجم
استهلاك الطاقة	الغسل والتسخين ١٩٠٠-٢٣٠٠ واط
	التجفيف ١٦٠٠-١٩٠٠ واط
دورات التنشيف ١٤٠٠ دورة في الدقيقة	
كفاءة التدوير-التجفيف ٥ نجوم	

ملاحظة

- إن التصميم والمواصفات عرضة للتغيير دون إشعار وذلك بهدف تحقيق جودة أفضل.
- جرى تحديد المواصفات الواردة على ملصق الطاقة باستخدام البرنامج التالي وفق UAE.S 5010-2. (يسري ذلك على موديلات الإمارات العربية المتحدة فقط)
- البرنامج هو "القطن ٦٠ مئوية + المُرَّز".
- تم قياس بيانات استهلاك طاقة التجفيف وفقاً للشروط المنصوص عليها في المواصفات القياسية UAE.S 5010-2. (يسري ذلك على موديلات الإمارات العربية المتحدة فقط)
- يجب تنفيذ التجفيف الأول عند حمولة تبلغ ٦ كجم (تتكون الحمولة من: ٢ ملاعق، ٨ كيس وسادة، و٢٤ منشفة) وذلك باختيار تجفيف القطن + دوران؛ (يمكن إضافة ١ أو ٢ منشفة أو إزالتهما لضبط الوزن).
 - يجب تنفيذ التجفيف الثاني عند حمولة تبلغ ٣ كجم (تتكون الحمولة من: ٢ ملاعق، ٦ كيس وسادة، و١٠ منشفة) وذلك باختيار تجفيف القطن + دوران (يمكن إضافة ١ أو ٢ منشفة أو إزالتهما لضبط الوزن).

هل لديك أسئلة أو تعليقات؟

أزر موقعنا على الإنترنت على	اتصل على	البلد
www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)	800-SAMSUNG (800 - 726 7864)	U.A.E
	800-SAM CS (800-72627)	OMAN
	183-CALL (183-2255)	KUWAIT
	8000-GSAM (8000-4726)	BAHRAIN
	800-CALL (800-2255)	QATAR