

Automatic electric washing machine

User manual

WD22T6300**/WD21T6300**/WD18T6300**



DC68-04254E-00

SAMSUNG

Contents

Safety information	4
What you need to know about the safety instructions	4
Important safety symbols	4
Important safety precautions	5
Critical installation warnings	8
Installation cautions	10
Critical usage warnings	10
Usage cautions	11
Critical cleaning warnings	14
 Installation	 15
What's included	15
Installation requirements	17
Step-by-step installation	19
 Before you start	 27
Initial setup	27
Laundry guidelines	28
Detergent drawer guidelines	30
 Operations	 33
Control panel	33
Operating a cycle	35
Cycle overview	36
Additional functions	38
System functions	41
Special features	43
SmartThings (applicable models only)	44
Open Source Announcement	45
 Maintenance	 46
Drum Clean+	46
Emergency drain	47
Cleaning	48
Door diaphragm	51
Defrosting your washing machine	52
Care against an extended time of disuse	52

Troubleshooting	53
Checkpoints	53
Information codes	57
Specifications	59
Fabric care chart	59
Protecting the environment	61
Specification sheet	62
Specification sheet (Only for Saudi Arabia Models)	63
Information of main washing programmes (Only for Saudi Arabia Models)	64
Packing & unpacking	65
Packing	65
Unpacking	65

Safety information

Congratulations on your new Samsung washing machine. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washing machine's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.

Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.

Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**.

CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage**.

NOTE

Indicates that a risk of personal injury or material damage exists.

These warning signs are here to prevent injury to yourself and others.

Please follow them explicitly.

After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. **For use in Europe:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
3. Children should be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

Safety information

6. For appliances with ventilation openings in the base, that a carpet must not obstruct the openings;
7. **For use in Europe:** Children of less than 3 years should be kept away unless continuously supervised.
8. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
9. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
10. The lint trap has to be cleaned frequently, if applicable.
11. Lint must not to be allowed to accumulate around the tumble dryer.
(not applicable for appliances intended to be vented to the exterior of the building)
12. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
13. Do not dry unwashed items in the tumble dryer.
14. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.

15. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
16. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
17. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
18. Remove all objects from pockets such as lighters and matches.
19. **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
20. Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.
21. The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
22. **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

Safety information

23. This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- areas for communal use in blocks of flats or in launderettes.

Critical installation warnings

WARNING

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the appliance, or injury.

The appliance is heavy, therefore take care when lifting it.

Plug the power cord firmly into a wall socket that meets local electrical specifications. Use the socket for this appliance only, and do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket so that the cord is running towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials out of the reach of children as these may be dangerous.

- If a child places a bag over its head, it may suffocate.

When the appliance, power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.

Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the appliance.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.

Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.

Do not twist or tie the power cord.

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

Following the repair by a non-authorized service provider, self-repair or non-professional repair of the product, Samsung is not liable for any damage to the product, any injury or any other product safety issue caused by any attempt to repair the product which does not carefully follow these repair and maintenance instructions. Any damage to the product caused by an attempt to repair the product by any person other than a Samsung certified service provider will not be covered by the warranty.

Safety information

Installation cautions

⚠ CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a solid, level floor that can support its weight.

- Failure to do so may result in abnormal vibrations, movement, noise, or problems with the appliance.

Critical usage warnings

⚠ WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.

- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power cord immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Remove the washing machine door lever before disposing the appliance.

- If trapped inside the appliance, children may suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washing machine before using it.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.

- This may result in electric shock, fire, or an explosion.

Do not open the washing machine door by force while it is operating (high-temperature washing/drying/spinning).

- Water flowing out of the washing machine may result in burns or cause the floor to be slippery. This may result in injury.
- Opening the door by force may result in damage to the appliance or injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power cord while an operation is in progress.

- Plugging the power cord into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children climb in or onto the appliance.

- This may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washing machine while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling the power cord. Always grip the plug firmly and pull it straight out of the outlet.

- Damage to the power cord may cause a short-circuit, fire and/or electric shock.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the appliance, or injury.

If the water supply hose comes loose from the water tap and floods the appliance, unplug the power cord.

- Failure to do so may result in electric shock or fire.

Unplug the power cord when the appliance is not being used for long periods of time or during a thunder or lightning storm.

- Failure to do so may result in electric shock or fire.

If any foreign substance enters into the appliance, unplug the power cord and contact your nearest Samsung Customer Service.

- This may result in electric shock or fire.

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

Usage cautions

CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power cord and clean the washing machine using a damp, soft cloth.

- Failure to do so may result in discolouration, deformation, damage, or rust.

The front glass may be broken by a strong impact. Take care when using the washing machine.

- If the glass is broken, it may result in injury.

Open the water tap slowly after a long period of non-use, water supply failure, or when reconnecting the water supply hose.

- The air pressure in the water supply hose or the water pipe may damage a part of the appliance or result in a water leak.

If a draining error occurs during an operation, check if there is a draining problem.

- If the washing machine is used when it is flooded because of a draining problem, it may result in electric shock or fire.

Safety information

Insert the laundry into the washing machine completely so that the laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washing machine, or result in a water leak.

Turn the water supply off when the washing machine is not being used.

- Ensure that the screws on the water supply hose connector are properly tightened.

Ensure that the rubber seal and front door glass are not contaminated by a foreign substance (e.g. waste, thread, hair, etc.).

- If a foreign substance is caught in the door or the door is not completely closed, it may cause a water leak.

Open the water tap and check if the water supply hose connector is firmly tightened and that there is no water leak before using the appliance.

- If the screws on the water supply hose connector are loose, it may result in a water leak.

The appliance you have purchased is designed for domestic use only.

Using the appliance for business purposes qualifies as an appliance misuse. In this case, the appliance will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the appliance, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, this may result in electric shock, fire or problems with the appliance.

Do not place objects that generate electromagnetic fields near the washing machine.

- This may result in injury due to a malfunction.

Water drained during a high-temperature wash or drying cycle is hot. Do not touch the water.

- This may result in burns or injury.

Draining time may vary depending on the water temperature. If the water temperature is too high, the draining process starts after the water cools down.

Do not wash, spin, or dry water-proof seats, mats, or clothing (*) unless your appliance has a special cycle for washing these items.

(*): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle and car covers, etc.

- Do not wash thick or hard mats even if the washing machine mark is on the care label. This may result in injury or damage to the washing machine, walls, floor, or clothing due to abnormal vibrations.
- Do not wash throw rugs or doormats with rubber backing. The rubber backing may come off and stick to inside the drum, and this may result in malfunction such as a drainage error.

Do not operate the washing machine when the detergent drawer is removed.

- This may result in electric shock or injury due to a water leak.

Do not touch the insides of the drum during or just after drying as it is hot.

- This may result in burns.

The door glass becomes hot during washing and drying. Therefore, do not touch the door glass.

Also, do not allow children to play around the washing machine or touch the door glass.

- This may result in burns.

Do not insert your hand into the detergent drawer.

- This may result in injury as your hand may be caught by the detergent input device.

Remove the liquid detergent guide (applicable models only) when using powdered detergent.

- If not, water may leak through the front of the detergent drawer.

Do not place any objects (such as shoes, food waste, animals) other than laundry into the washing machine.

- This may result in damage to the washing machine, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knives, fingernails, etc.

- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.

- This may cause the rubber seal to become deformed and result in a water leak.

Do not leave metal objects such as safety pins, hair pins or bleach in the drum for long periods of time.

- This may cause the drum to rust.
- If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.

- This may result in spontaneous combustion or ignition due to the heat from the oxidation of the oil.

Do not use water from water cooling/heating devices.

- This may result in problems with the washing machine.

Do not use natural hand-washing soap for the washing machine.

- If it hardens and accumulates inside the washing machine, it may result in problems with the appliance, discolouration, rust, or bad odours.

Place socks and brassieres in a washing net and wash them with the other laundry.

Do not wash large laundry items such as bedding in the washing net.

- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.

- If it accumulates inside the washing machine, it may result in a water leak.

Safety information

Make sure that the pockets of all the clothing items to be washed are empty.

- Hard, sharp objects such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons or other heavy metal objects.

Sort the laundry by colour on the basis of its colorfastness and select the recommended cycle, water temperature and additional functions.

- This may result in discolouration or fabric damage.

Take care that children's fingers are not caught in the door when you close it.

- Failure to do so may result in injury.

To prevent odours and mould, leave the door open after a wash cycle to allow the drum to dry.

To prevent limescale build up, leave the detergent drawer open after a wash cycle and dry inside it.

Critical cleaning warnings

WARNING

Do not clean the appliance by spraying water directly onto it.

Do not use a strong acidic cleaning agent.

Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.


- Failure to do so may result in electric shock or fire.

Installation

Follow these instructions carefully to ensure proper installation of the washing machine and to prevent accidents when doing laundry.

What's included

Make sure all the parts are included in the product package. If you have a problem with the washing machine or the parts, contact a local Samsung customer centre or the retailer.

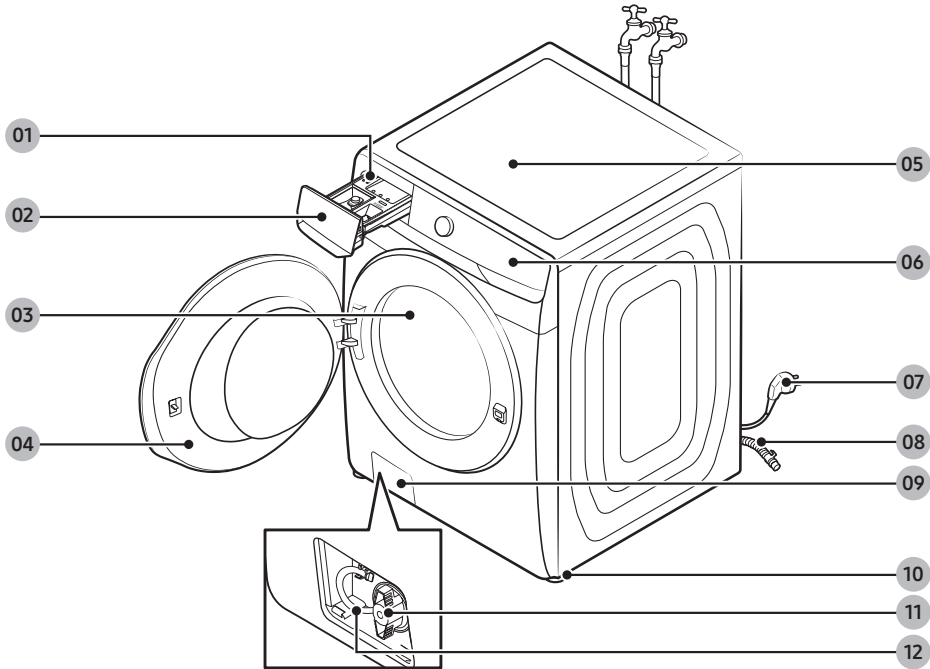

01 Release lever

02 Detergent drawer (Manual dispenser)

03 Drum

04 Door

05 Worktop

06 Control panel

07 Power plug

08 Drain hose

09 Filter cover

10 Levelling feet

11 Debris filter

12 Emergency drain tube


Installation



Spanner



Bolt caps




Hose guide



Cold water hose



Hot water hose



Liquid detergent guide
(applicable models only)



Cable tie



Drain hose (applicable models
only)

NOTE

- Spanner: For removing the shipping bolts and levelling the washing machine.
- Bolt caps: For covering the holes after removing the shipping bolts. The provided number of bolt caps (3 to 6) depends on the model.
- Hose guide: For hanging the drain hose in the drainpipe or wash-basin.
- Cold/Hot water hose: For supplying water to the washing machine. (Hot water hoses is for applicable models only.)
- Liquid detergent guide: Insert it in the detergent compartment to use liquid detergent.

Installation requirements

Electrical supply and grounding

- Use an individual branch circuit specific to the washing machine.

To ensure proper grounding, the washing machine comes with a power cord featuring a three-prong grounding plug for use in a properly installed and grounded outlet.

Check with a qualified electrician or service person if you are not sure about the grounding. Do not modify the provided plug. If it does not fit the outlet, call a qualified electrician to install a suitable outlet.

WARNING

- Do NOT use an extension cord.
- Use only the power cord that comes with the washing machine.
- Do NOT connect the ground wire to plastic plumbing, gas lines, or hot water pipes.
- Improperly connected grounding conductors may cause electric shock.
- Do not remove or modify the grounding pin of power cord to reduce the risk of electric hazard.
- Please use the additional grounding wire provided with this appliance if there is no hole for earth pin in power inlet socket.

Water supply

A proper water pressure for this washing machine is between 50 kPa and 800 kPa. Water pressure less than 50 kPa may cause the water valve to not close completely, or it may take longer to fill the drum, causing the washing machine to turn off. Water taps must be within 120 cm from the rear of the washing machine so that the provided inlet hoses reach the washing machine.

To reduce the risk of leaks:

- Make sure water taps are easily accessible.
- Turn off the taps when the washing machine is not in use.
- Check for any leaks at the water inlet hose fittings on a regular basis.

CAUTION

Before using the washing machine for the first time, check all connections at the water valve and taps for any leaks.

Drain

Samsung recommends a standpipe 60-90 cm high. The drain hose must be connected through the hose clip to the standpipe, and the standpipe must fully cover the drain hose.

Installation

Flooring

For best performance, the washing machine must be installed on a solid floor. Wood floors may need to be reinforced to minimise vibration and/or unbalanced loads. Carpeting and soft tile surfaces do not resist vibration well and may cause the washing machine to move slightly during the spin cycle.

CAUTION

Do NOT install the washing machine on a platform or a poorly supported structure.

Water temperature

Do not install the washing machine in areas where water may freeze as the washing machine always retains some water in its water valves, pumps, and/or hoses. Frozen water left in the connection parts may cause damage to belts, the pump, and other components of the washing machine.

Alcove installation

Minimum clearance for stable operation:

Sides	25 mm
Top	25 mm
Rear	50 mm
Front	550 mm

If both the washing machine and a dryer are installed in the same location, the front of the alcove must have at least a 550 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

Step-by-step installation

STEP 1 Select a location

Location requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for ventilation and wiring
- The ambient temperature is always higher than the freezing point (0 °C)
- Away from a heat source

STEP 2 Remove the shipping bolts


Unpack the product package and remove all shipping bolts.

NOTE


Number of shipping bolts may differ depending on the model.

WARNING

- Packaging materials can be dangerous to children. Dispose all packaging material (plastic bags, polystyrene, etc.) out of children's reach.
- To avoid injury, cover the holes with bolt caps after removing the shipping bolts. Do not move the washing machine without the shipping bolts in place. Assemble the shipping bolts before moving the washing machine to another location. Keep the shipping bolts in a safe place for future use.

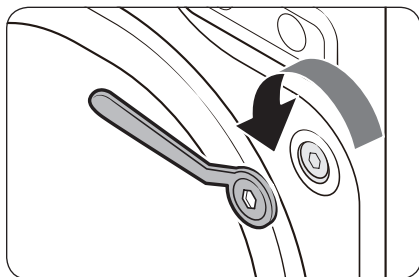



1. Loosen all shipping bolts on the rear of the machine using the supplied spanner.

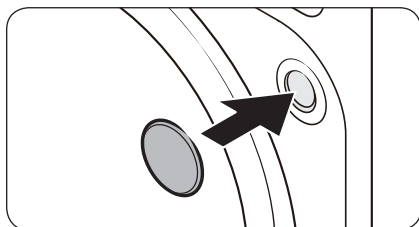


2. Fill the holes with the supplied plastic bolt caps. Keep the shipping bolts for future use.

Installation


3. Close all plastic bolt caps on the rear of the washing machine.

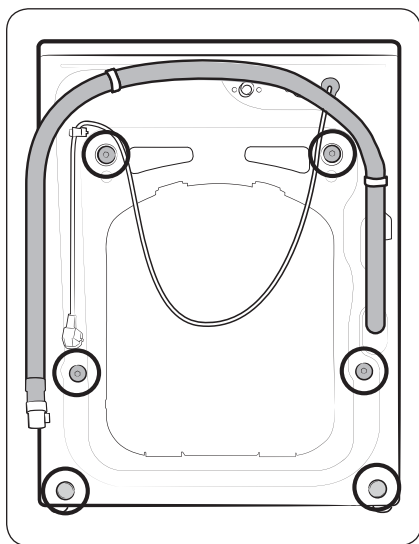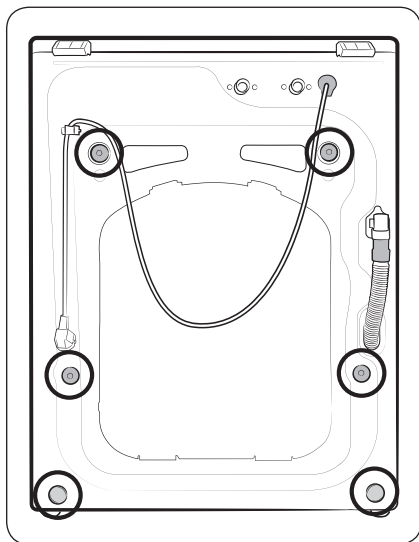


STEP 3 Adjust the levelling feet

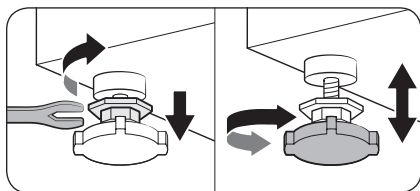

1. Gently slide the washing machine into position. Excessive force may damage the levelling feet.
2. Level the washing machine by manually adjusting the levelling feet.

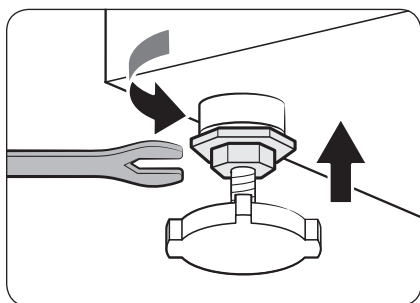

3. When levelling is complete, tighten the nuts using the spanner.

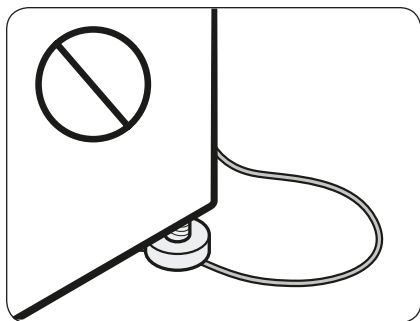

⚠ CAUTION

When installing the product make sure the levelling feet is not pressing the power cord.

⚠ CAUTION


Make sure all the levelling feet are seating on the floor surface to avoid the washing machine from moving or generating noise due to vibration. Then, check if the washing machine is not rocking. If the washing machine is not rocking, tighten the nuts.

Installation

STEP 4 Connect the water hose

The provided water hose may differ depending on the model. Please follow the instruction according to the provided water hose.


Connecting to a threaded water tap

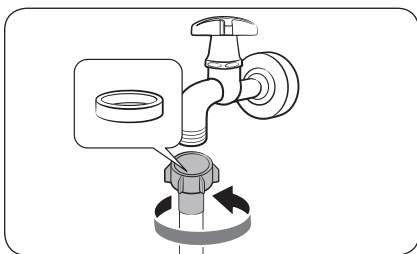


1. Connect the water hose to the water tap, and then turn it to the right to tighten.

⚠ CAUTION

Before connecting the water hose, make sure there is a rubber washer in the hose connector. Do not use the hose if the washer is damaged or missing.

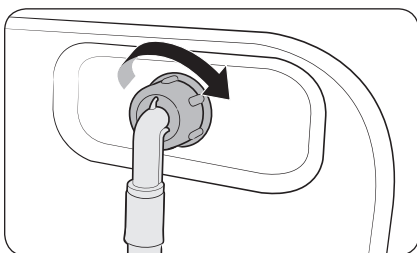

2. Connect the other end of the water hose to the inlet valve on the back of the washing machine, and then turn it to the right to tighten.

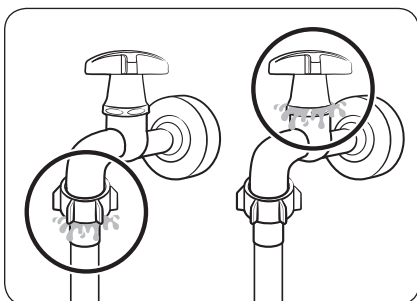

3. Slowly open the water tap and check if there are any leaks around the connection areas. If there are water leaks, repeat step 1 and 2.


⚠ WARNING

If there is a water leak, stop operating the washing machine and disconnect it from the electrical supply. Then, contact a local Samsung service centre in case of a leak from the water hose, or contact a plumbing technician in case of a leak from the water tap. Otherwise, this may cause electric shock.


⚠ **CAUTION**

Do not stretch the water hose by force. If the hose is too short, replace the hose with a longer, high-pressure hose.


Connecting to a non-threaded water tap

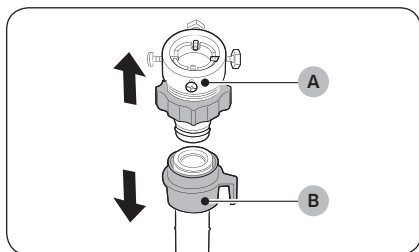


1. Remove the **adaptor (A)** from the water **hose (B)**.

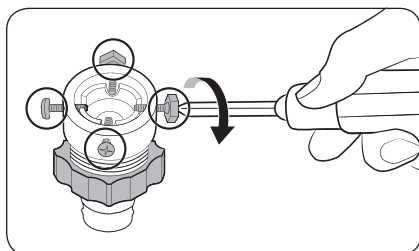

2. Use a Phillips screwdriver to loosen four screws on the adaptor.

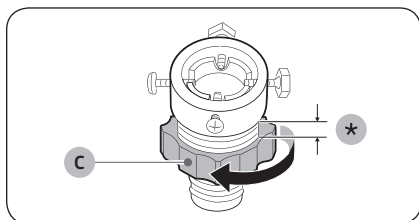


3. Hold the adaptor and turn **part (C)** in the arrow direction to loosen it by 5 mm (*).

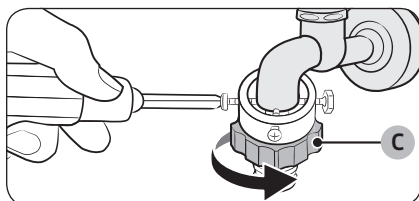

4. Insert the adaptor onto the water tap, and then tighten the screws while lifting the adaptor.
5. Turn **part (C)** in the arrow direction to tighten it.

Installation

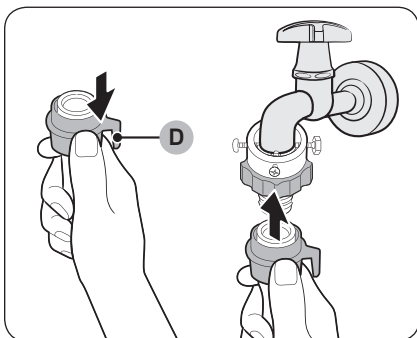


6. While pulling down **part (D)** on the water hose, connect the water hose to the adaptor. Then, release **part (D)**. The hose fits into the adaptor with a clicking sound.

7. To complete connecting the water hose, see 2 and 3 on the “**Connecting to a threaded water tap**” section.

NOTE


- After connecting the water hose to the adaptor, pull the water hose down to check if it is connected properly.
- Use a popular type of water taps. If the tap is square-shaped or too big, remove the spacer ring before inserting the tap into the adaptor.

For models with an additional hot water inlet:

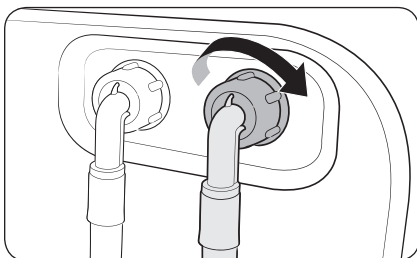

1. Connect the red end of the hot water hose to the hot water inlet on the back of the machine.
2. Connect the other end of the hot water hose to the hot water tap.

Aqua stop hose (applicable models only)

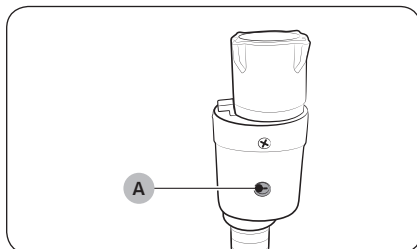

The aqua stop hose alerts users of a risk of water leaks. It senses the water flow and turns red on the centre **indicator (A)** in case of a leak.


NOTE

The end of the aqua stop hose must be fitted to the water tap and not the machine.

Installation


STEP 5 Position the drain hose

The drain hose can be positioned in three ways:

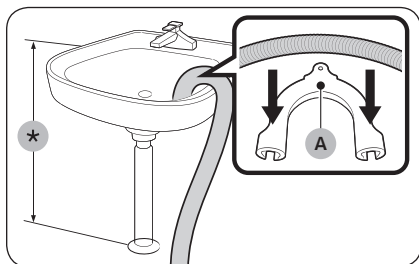

Over the edge of a wash basin

The drain hose must be placed between 60 cm and 90 cm (*) above from the floor. To keep the spout of the drain hose bent, use the supplied **plastic hose guide (A)**. Secure the guide to the wall using a hook to ensure stable drainage.

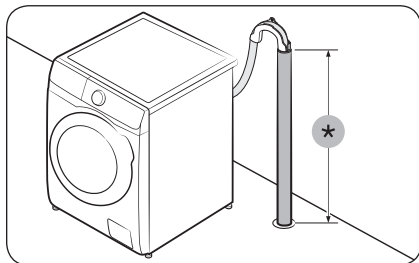

In a drain pipe

The drain pipe should be between 60 cm and 90 cm high (*). It is advisable to use a 65 cm high vertical pipe.

- To ensure the drain hose stays in position, use the plastic hose guide provided (see the figure).
- To prevent the siphoning of water flow during drainage, make sure to insert the drain hose 15 cm in the drain pipe.
- To prevent the drain hose from moving around, secure the hose guide to the wall.

Drain standpipe requirements:

- Minimum diameter of 5 cm
- Minimum carry-away capacity of 60 litres per minute

STEP 6 Power on

Plug the power cord into a wall socket protected by a fuse or circuit breaker. Then, tap  to turn on the washing machine.

Before you start

Initial setup

- When you turn on the washing machine for the first time, the screen shows the initial setup process. Follow the on-screen instructions to complete it.
- Initial setup will not repeat after you've completed it.
- The initial setup includes language selection, calibration, and a brief tutorial.
- Tap  to skip to the next screen.

Run Calibration

- Initial setup includes the calibration process which comes after the language selection. You must proceed calibration before using the washing machine.
- Empty the drum, and then tap and hold  to start calibration.
- When calibration is complete, power turns off and then turns on automatically.
- If you want to proceed calibration again, tap and hold  for 3 seconds to enter the system function and select **Calibration**.

01 Language selection	02 Calibration	03 Welcome screen
   English  Suomi  Turn dial & Tap 	Empty drum before calibrating [Tap  to skip]	Welcome!
04 Tutorial		
Let's explore your new washer! [Tap  to skip]	A washer that knows you! All Done!	



Before you start

Laundry guidelines

STEP 1 Sort

Sort the laundry according to these criteria:

- Care Label: Sort the laundry into cottons, mixed fibres, synthetics, silks, wools, and rayon.
- colour: Separate whites from colours.
- Size: Mixing different sized items together in the drum improves the washing performance.
- Sensitivity: Wash delicate items separately using an Easy Iron option for pure, new woollen items, curtains, and silk items. Check the labels on the items.

NOTE

Make sure to check the care label on the clothing, and sort them accordingly before starting the wash.

STEP 2 Empty pockets

Empty all the pockets of your laundry items

- Metal objects such as coins, pins, and buckles on clothing may damage other laundry items as well as the drum.

Turn clothing with buttons and embroideries inside out

- If trousers or jacket zippers are open while washing, the drum may be damaged. Zippers should be closed and fixed with a string.
- Clothing with long strings may become entangled with other clothes. Make sure to tie the strings before starting the wash.

STEP 3 Use a laundry net

- Brassieres (machine washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items.
- Small, light clothing such as socks, gloves, stockings, and handkerchiefs may become caught around the door. Place them inside a fine laundry net.
- Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.



STEP 4 Determine the load capacity

Do not overload the washing machine. Overloading may cause the washing machine to not wash properly. For the load capacity for the type of clothing, see page 36.

NOTE

When washing bedding or bedding covers, the wash time may be lengthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended load capacity is 2.0 kg or less.

CAUTION

- Unbalanced laundry may reduce the spinning performance.
- Make sure the laundry is fully inserted in the drum and not caught in the door.
- Do not slam the door. Close the door gently. Otherwise, the door may not be closed properly.

STEP 5 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Make sure to use the laundry detergent that is designed for automatic washing machines.

NOTE

- Follow the detergent manufacturer's recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your local area. If you are not sure about the water hardness, contact a local water authority.
- Do not use detergent that tends to be hardened or solidified. This detergent may remain after the rinse cycle, blocking the drain outlet.


CAUTION

When washing wool using the Wool cycle, use a detergent dedicated to wool items. If used with the Wool cycle, powder detergent may remain on the laundry and discolour the laundry.

Before you start

Detergent drawer guidelines

The manual dispenser models provide a three-compartment dispenser: the left compartment for the main wash, the centre for fabric softeners, and the right for the preliminary wash.

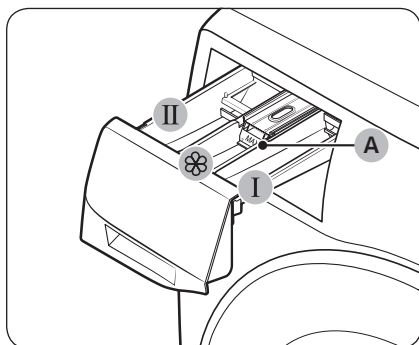


1. **I Prewash compartment:** Apply prewash detergent.
2. **II Main-wash compartment:** Apply main-wash detergent, water softener, soaking detergent, bleach, and/or stain removers.
3. **☼ Softener compartment:** Apply additives such as fabric softener. Do not exceed the **max line (A)**.

⚠ CAUTION


Do not use the following types of detergent in the drawer:

- Tablet, capsule, ball, or net types.


To apply washing agents to the manual dispenser

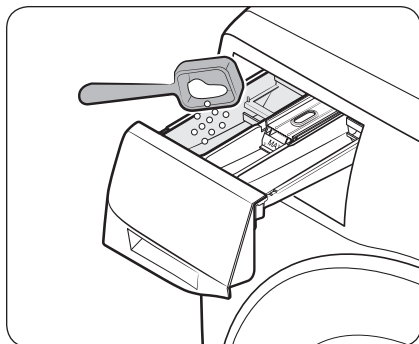


1. Slide open the detergent drawer.
2. Apply laundry detergent to the **II main-wash compartment** as instructed or recommended by the manufacturer. To use liquid detergent, see page 32.

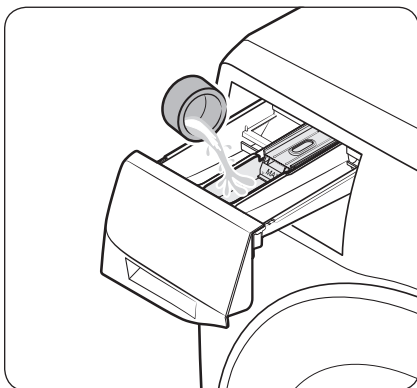

3. Apply fabric softener to the  **softener compartment**. Do not exceed the **max line**.

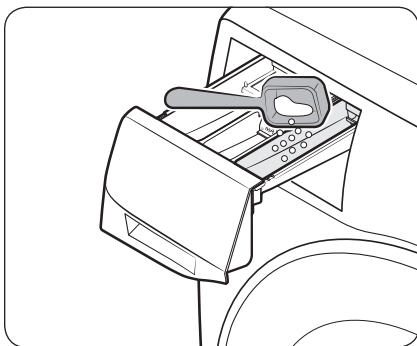

4. If you want to prewash, apply prewash detergent to the  **prewash compartment** as instructed or recommended by the manufacturer.
5. Close the detergent drawer.

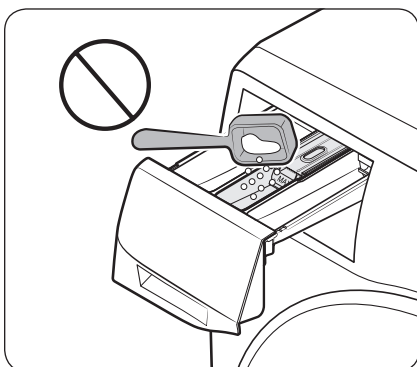

 CAUTION


- Do not apply powder detergent to the liquid detergent container.
- Concentrated fabric softener must be diluted with water before applied.
- Do not apply main-wash detergent to the  **softener compartment**.



Before you start

English

To use liquid detergent manually (applicable models only)

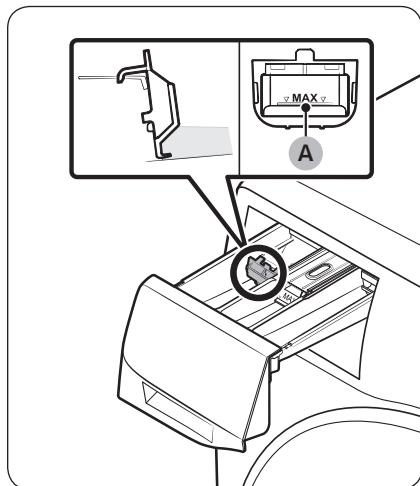


First insert the provided liquid detergent container in the **II main-wash compartment**. Then, apply liquid detergent to the container below the marked **max line (A)**.



Operations

Control panel

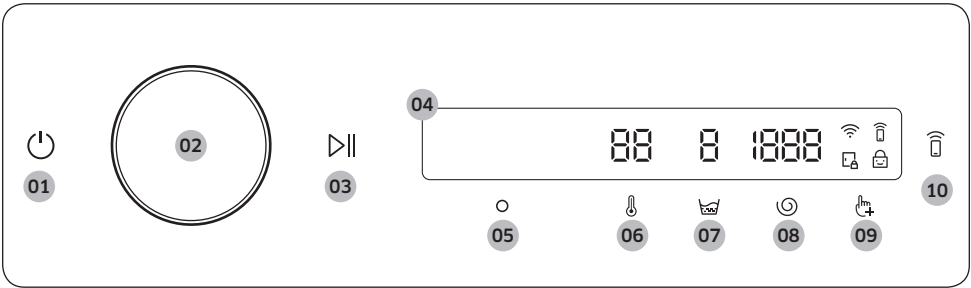

01 Power	Tap to turn the washing machine on or off. - If you do not manipulate the control panel for 10 minutes after the washing machine is turned on, the washing machine automatically turns off. - The washing machine automatically turns off when the cycle completes. CAUTION Do not tap to turn the washing machine off while the wash cycle is in progress. Tap and hold to pause the cycle first, and then tap to turn the washing machine off.
02 Navigation dial	Turn the navigation dial left or right to navigate through cycles and functions. When you turn the navigation dial, LCD displays your selection (such as cycle, additional functions, and system functions).
03 Start/Pause	Tap and hold to start or pause an operation.
04 Display	The display shows current cycle information and estimated time remaining, or an information message when a problem occurs.
05 OK	Tap to confirm your selection of function or setting.
06 Temp.	Tap to change the water temperature for the selected cycle. The indicator above the button indicates the default or selected setting.
07 Rinse	Tap to change the rinse count for the selected cycle. The indicator above the button indicates the default or selected setting.
08 Spin	Tap to change the spin speed for the selected cycle. The indicator above the button indicates the default or selected setting.
09 Additional function	Tap to enter the additional functions menu. Tap and hold for 3 seconds to enter the system functions menu.

Operations


10 Smart Control

- Tap to activate or deactivate the Smart Control function.
Tap and hold to enter pairing mode to connect to the SmartThings app.
- When the Smart Control function is activated, you can control your washing machine remotely using the SmartThings app on your smartphone or tablet (Android or iOS).

Icon descriptions

	Wi-Fi	This icon indicates that the washing machine is connected to Wi-Fi.
	Smart Control	- This icon indicates that Smart Control is on. - For more information on Smart Control, see page 43.
	Door Lock	- This icon indicates the door is locked and cannot be opened. - The door locks automatically during a cycle and this indicator turns on. - You can open the door when this icon disappears.
	Child Lock	- This icon indicates that Child Lock is on. - For more information on Child Lock, see page 40.

Operating a cycle

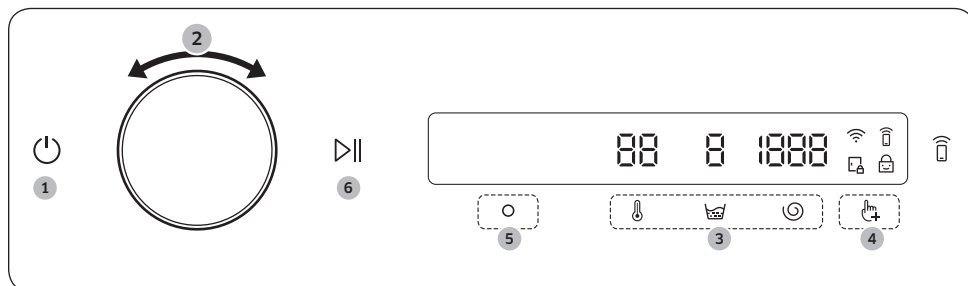

1. Tap to turn on the washing machine.
2. Turn the **Navigation dial** to select the cycle you want.
 - For more information on **Cycle overview**, see page 36.
3. Tap , , or to change the default cycle settings.
4. Tap , and then turn the **Navigation dial** to select additional function.
 - For more information on **Additional functions**, see page 38.
5. Tap to change the settings for selected additional function.
 - Not all cycles have additional functions available.
6. Tap and hold to start operation.
 - Once you set the cycle you want, the screen displays a brief cycle description, maximum laundry load, and cycle time. You can also check the cycle progress, remaining cycle time, and information codes.



Operations

Cycle overview

NOTE

Other cycles can be used after adding them to your cycle list using the My Cycles function. For more information, see the “My Cycles” section on page 39

Cycle descriptions

Cycle	Description	Max load (kg)
E Cotton (Only for Saudi Arabia models)	Optimal performance with lower energy for cotton fabrics, bed linens, table linens, underwear, towels, or shirts. For energy saving, the actual washing temperature may be lower than specified.	Max
Cotton	For cottons, bed linens, table linens, underwear, towels, or shirts. The washing time and the rinse count are automatically adjusted according to the load.	Max
Quick Wash	- For less soiled laundry with less than a 5.0 kg load. - It takes at least 17 minutes, depending on the conditions such as the water pressure, water hardness, and/or extra options selected. - A recommended amount of detergent is less than 20 g (for a 5.0 kg load).	5
Hygiene Steam	- For colourfast fabrics and heavily soiled laundry, this cycle heats the supplied water over 60 °C to eliminate bacteria. - If you stop running the cycle while the washing machine is heating the water, the door remains locked for your safety.	9
Power Bubble+	For cleaning heavily soiled clothing by using powerful bubbles.	9
Eco Bubble+	For energy-efficient washing using less water and energy.	9
Colors	This cycle washes items in low-temperature water to prevent discolouration.	9
Towels	- For bath towels, washcloths, and mats. - A recommended capacity is below 5 kg.	9
Bedding	- For bed spreads, bed sheets, bedding covers, etc. - For best results, wash only 1 type of bedding and make sure the load weighs less than 2.0 kg.	4
Thin Bedding	For thin summer bedding.	4



Cycle	Description	Max load (kg)
Shirts	For shirts, blouses that are made of cotton, synthetic fiber.	5
Blouses	For shirts, blouses that are made of delicate fiber. We recommend that you use detergent made especially for this purpose.	5
Wool	- Specific for machine-washable wool for loads less than 2.0 kg. - The Wool cycle features fine pulsating and soaking to protect the wool fibres from shrinkage/distortion. - A neutral detergent is recommended.	2
Activewear	For exercise wear such as sports jerseys, training pants, shirts/tops and other performance clothing. This cycle provides effective soil removal with controlled drum rotation for special fabric care.	5
Baby Care	Featuring a high-temperature wash and extra rinses to help remove the remaining detergent effectively.	9
Cloudy Day	For optimum spin drying at high humid condition.	9
Clean Wash	Featuring additional rinses to ensure that the laundry is rinsed thoroughly.	9
Deep Softener (Not applicable for Saudi Arabia models)	This cycle washes items while maintaining the softness of the fabric.	9
Rinse+spin	For loads that need rinsing only or to add rinse-aided fabric softener to.	-
Wash+Dry	To quickly wash and dry relatively clean laundry.	3
Dry Only	Select to only dry items.	
Air Bedding Care	Removes bad odours, bacteria, and dust from the laundry.	
Air Sanitize	Removes bad odours and bacteria from the laundry.	
Drum Clean+	- Cleans the drum and the rubber door gasket by removing dirt and bacteria from them. - For details, see the Drum Clean+ section on page 46.	-
Self Tub Dry	For drying interior of the washing machine to maintain it hygienically. You must remove all items in the tub before starting this cycle.	-

Operations

Additional functions

Using Additional Functions

1. Tap .
2. Turn the **Navigation dial** to select the desired additional function.
3. Tap  to change the selected function's settings or start the function.

NOTE

- To return to the main screen, tap  again or turn the **Navigation dial** to select **Back** and tap .
- If the selected function is not supported, the "**This function is currently not supported**" message is displayed, and the  button is not activated.
- When you select an additional function, a brief help message appears for the first ten times of use.

Dry

You can add a drying process at the end of a wash cycle.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Dry**, and then tap .
4. Turn the **Navigation dial** or tap  repeatedly to select the desired drying time.
 - You can select from **Off**, **Normal**, **Extra**, **Delicates**, **30min**, **1hr 00min**, **1hr 30min**, **2hr 00min**, or **2hr 30min**.
5. Tap and hold .

Bubble Soak

This function helps remove a wide variety of stubborn stains. With Bubble Soak selected, laundry is thoroughly soaked in water bubbles for effective washing.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Bubble Soak**, and then tap .
 - Bubble Soak is available with and adds up to 30 minutes to these cycles: Cotton, Quick Wash, Hygiene Steam, Power Bubble+, Eco Bubble+, Towels, Bedding, Shirts, Baby Care, and Deep Softener.
4. Tap and hold .

Add Garments

Use this function to add laundry after the wash starts.

1. Tap .
2. Turn the **Navigation dial** to select **Add Garments**, and then tap .
 - The water starts draining. Add laundry when the Door Lock indicator turns off, and then close the door.
3. Tap and hold .

My Cycles

Add or remove cycles to create a personal cycle list.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **My Cycles**, and then tap .
 - You can only edit a cycle to create a personal cycle when the washing machine is not operating.
3. Turn the **Navigation dial** to select a desired cycle.
4. Tap  to add or remove the selected cycle.
 - Addition and removal of the course is saved automatically.
5. Once you finish creating My Cycles, tap  to return to the cycles screen.

NOTE

- The Cotton and Drum Clean+ cycles cannot be removed from the cycles list.
- You can also edit My Cycles in the SmartThings app.

Drum Light

This turns on the light inside the drum so you can check the status of the items inside.

1. Tap .
2. Turn the **Navigation dial** to select **Drum Light**, and then tap .
 - Even if the washing machine is turned off, the drum light will turn on as long as the power cable is connected.
 - Once the Drum Light function is enabled, the drum light will turn off automatically after 2 minutes.
 - Opening the washing machine door automatically turns on the drum light. The light will then turn off automatically after 2 minutes.
 - Water droplets on the surface of the drum light can scatter light such that it resembles a yellow stain. This is merely an optical illusion and not a malfunction.

Operations

Delay End

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 1 to 24 hours (in 1 hour increments). The hour displayed indicates the time the wash will finish.

1. Select a cycle and change the cycle settings as necessary.
2. Tap .
3. Turn the **Navigation dial** to select **Delay End**, and then tap .
4. Turn the **Navigation dial** to select the desired time, and then tap .
5. Tap and hold .
 - Status shows in the display and the washing machine tumbles the drum to sense the weight of the load (if load sensing is preset for the selected cycle). When load sensing is complete, the display shows the remaining time until the end of the wash cycle.
 - To cancel Delay End, tap  to restart the washing machine.

Child Lock

To prevent children or infants from accidentally starting or setting the washing machine, Child Lock locks all buttons except for  and .

1. Tap .
2. Turn the **Navigation dial** to select **Child Lock**, and then tap .
3. Tap  to select **On** or **Off**.

NOTE

- When Child Lock is on, all buttons are disabled except for  and . The washing machine door also locks.
- Tapping a button while Child Lock is on triggers an alarm with the “**Child Lock On**” message.
- You cannot open the door after a wash cycle when the Child Lock is on. Turn the function off before opening the door to take out the laundry.

System functions

Using System Functions

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** and select the desired system function, and then tap .
3. Tap  to change the selected function's settings or start the function.

NOTE

To return to the main screen, tap  again or turn the **Navigation dial** to select **Back** and tap .

AI Pattern

This function saves frequently used cycles and settings. When you turn the function on, the washing machine remembers the cycles you use most and their settings (Temp., Rinse, Spin) and displays them in frequency order.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **AI Pattern**, and then tap .
3. Tap  to select **On** or **Off**.
 - The default setting is On. Set it to Off if you do not want to use this function.
 - When you turn off the function, all the saved data resets.

Alarm

You can turn on or off the sound from the washing machine. When this function is set to Off, the AddWash alarm, the melody of cycle completion, and the power-off beep does not sound. However, the other sounds stay active.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Alarm**, and then tap .
3. Tap  to select **On** or **Off**.
 - The default setting is On.

NOTE

The setting remains unchanged even if you restart the washing machine.

Calibration

You can run calibration again for accurate weight detection.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Calibration**, and then tap .
 - Calibration does not start if the door is not closed properly.
 - The drum rotates clockwise and anticlockwise for about 3 minutes.
3. When calibration is complete, the "Calibration complete" message appears on the display and the washing machine turns off automatically.

Operations

Wi-Fi

You can turn the washing machine's Wi-Fi on or off.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Wi-Fi**, and then tap .
3. Tap  to select **On** or **Off**.
 - The washing machine's Wi-Fi is off as a factory default setting. However, the washing machine's Wi-Fi turns on automatically when you turn on the washing machine for the first time. Then, the final Wi-Fi setting maintains regardless of the washing machine power status.
 - Once you turn on the washing machine's Wi-Fi and connect to a network, the washing machine remains connected to the network even when you turn off the power.
 - The Wi-Fi  indicates that the washing machine is connected to the router through the Wi-Fi connection.

Language

You can change the system language.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Language**, and then tap .
3. Turn the **Navigation dial** to select the desired language, and then tap .

Factory Reset

You can reset the washing machine.

1. Tap and hold  for 3 seconds.
2. Turn the **Navigation dial** to select **Factory Reset**, and then tap 
 - Your washing machine resets to the factory setting.

Special features

Smart control

You can connect to the SmartThings app and control your washing machine remotely.

Connecting your washing machine

1. Download and open the SmartThings app on your smartphone or tablet (Android & iOS).
2. Tap  to turn on the washing machine.
3. Tap and hold .
 - a. The washing machine enters AP mode and connects to your smartphone or tablet.
 - b. Tap  to authenticate your washing machine.
 - c. Once the authentication process is complete, your washing machine is successfully connected to the app.
 - You can use various features available in the SmartThings app.

NOTE

- If your washing machine fails to connect with the SmartThings app, try again.
- Check your router if you experience any Internet connection problem after connecting your washing machine with the SmartThings app.
- If the Wi-Fi is off, tap and hold  for 3 seconds to enter the System functions menu, and select Wi-Fi to turn it on.
- Turning the washing machine's Wi-Fi on allows you connect to the washing machine via SmartThings app on your smartphone or tablet, regardless of the power status of the washing machine. However, the washing machine appears offline on the SmartThings app if the washing machine's Wi-Fi is off.
- Close the door before starting the Smart Control function.
- If you use your washing machine for a while without connecting it to the SmartThings app, a pop-up message about Smart Control will show for 3 seconds on 20th, 40th, and 60th use.
- If the washing machine's Wi-Fi is not connected to an AP (access point), the Wi-Fi will turn off when you turn of the power.

Stay Connect

Set up the Stay Connect function in your SmartThings app to keep Smart Control turned on at the end of a cycle. Your washing machine stays connected to the app so you can send additional instructions, whether you are at home or away.

1. If you turn on the Stay Connect function on the SmartThings app, the washing machine will stay in standby power saving mode after completing a cycle.
 - The Stay Connect function will remain active for up to 24 hours if the door remains closed.
2. When the Stay Connect function is active, the Smart Control, Door Lock, and Wi-Fi icons are illuminated on your washing machine display.
3. You can conveniently control your washing machine, adding rinse, spin or dry cycles using the SmartThings app.

Operations

NOTE

- The washing machine switches to standby power saving mode when operation is paused even if the machine is not connected to the SmartThings app.
- In some circumstances, only the Door Lock icon may be illuminated.

SmartThings (applicable models only)

Wi-Fi connection

On your smartphone or tablet, go to **Settings** and turn on the wireless connection and select an AP (Access Point).

- This appliance supports the Wi-Fi 2.4 GHz protocols.

Download

On an app market (Google Play Store, Apple App Store, Samsung Galaxy Apps), find the SmartThings app with a search term of "SmartThings". Download and install the app on your device.

NOTE

The app is subject to change without notice for improved performance.

Log in

You must first log into SmartThings with your Samsung account. To create a new Samsung account, follow the instructions on the app. You don't need a separate app to create your account.

NOTE

If you have a Samsung account, use the account to log in. A registered Samsung smartphone or tablet user automatically logs in.

To register your appliance to SmartThings

1. Make sure your smartphone or tablet is connected to a wireless network. If not, go to **Settings** and turn on the wireless connection and select an AP (Access Point).
2. Open **SmartThings** on your smartphone or tablet.
3. If a message of "A new device is found.", select **Add**.
4. If no message appears, select **+** and select your appliance in a list of devices available. If your appliance is not listed, select **Device Type** > **Specific Device Model**, and then add your appliance manually.
5. Register your appliance to the SmartThings app as follows.
 - a. Add your appliance to SmartThings. Make sure your appliance is connected to SmartThings.
 - b. When registration is complete, your appliance appears on your smartphone or tablet.

Open Source Announcement

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by contacting our support team via <http://opensource.samsung.com> (Please use the "Inquiry" menu.)

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/SMART_AT_051/seq/0 leads to the open source license information as related to this product. This offer is valid to anyone in receipt of this information.



NOTE

When Wi-Fi is activated, the energy consumption increases in comparison to the values specified in the indicative information.

Maintenance

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Drum Clean+

Perform this cycle regularly to clean the drum by removing bacteria from it. This cycle heats the water between 60 °C and 70 °C, and it also removes accumulated dirt from the rubber door gasket.

1. Tap .
2. Turn the **Navigation dial** to select **Drum Clean+**.
3. Tap and hold .

CAUTION

- Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum may cause damage to the laundry or the drum of the washing machine.
- To prevent limescale, add the proper amount of detergent according to your local water hardness or add a water softener additive together with the detergent.

Drum Clean+ reminder

Depending on the model, the **Drum Clean+** reminder is either an icon or an LED.


For icons, the icon lights up on the control panel.

For LEDs, the LED lights up next to **Drum Clean+**, or on the option area of the control panel.


- The **Drum Clean+** reminder blinks on the control panel once every 40 washes. It is advisable to perform **Drum Clean+** regularly.
- When you first see this reminder blinking, you can ignore the reminder for 6 consecutive washes. From the 7th wash, the reminder no longer appears. However, it appears again on the second 40th wash.
- Even after the last process is terminated, the "0" message may remain.
- You can record the running count of the **Drum Clean+** cycle by tapping . This does not stop or turn off the machine but marks your cycle count.
- Even if "0" does not disappear, the machine operates normally.
- It is recommended to run the cycle regularly for hygienic purposes.

Emergency drain


In case of a power failure, drain the water inside the drum before taking out the laundry.

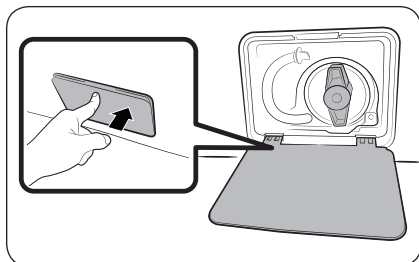

1. Power off and unplug the washing machine from the electrical outlet.
2. Gently press the top area of the **filter cover** to open.

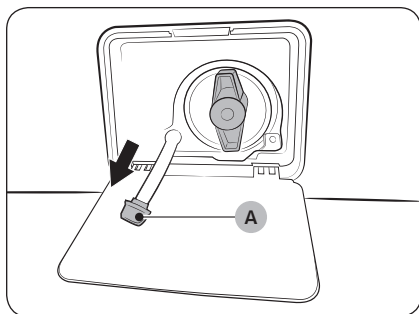

3. Put an empty, spacious container around the cover, and stretch the emergency drain tube to the container while holding the **tube cap (A)**.

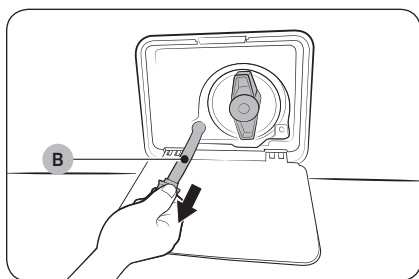

4. Open the tube cap and let water in the **emergency drain tube (B)** flow into the container.
5. When done, close the tube cap, and reinsert the tube. Then, close the filter cover.

NOTE

Use a spacious container because the water in the drum may be more than expected.

Maintenance


Cleaning

Surface of the washing machine


Use a soft cloth with a nonabrasive household detergent. Do not spray water onto the washing machine.

Mesh filter

Clean the mesh filter of the water hose once or twice a year.

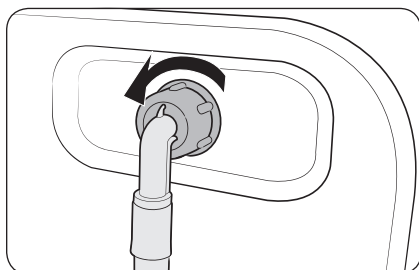

1. Turn off the washing machine, and unplug the power cord.
2. Close the water tap.
3. Loosen and disconnect the water hose from the back of the washing machine. Cover the hose with a cloth to prevent water from gushing out.

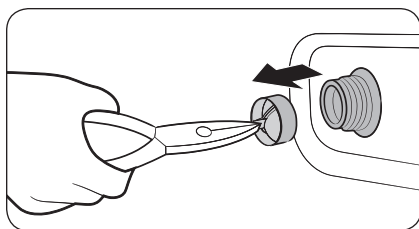


4. Use pliers to pull out the mesh filter from the inlet valve.
5. Submerge the mesh filter deeply in water so that the threaded connector is also submerged.
6. Dry the mesh filter completely in the shade.
7. Reinsert the mesh filter into the inlet valve, and reconnect the water hose to the inlet valve.
8. Open the water tap.

NOTE


If the mesh filter is clogged, an information code of “4C” appears on the screen.

Debris filter


It is advisable to clean the debris filter every 2 months to prevent its clogging. A clogged debris filter may reduce the bubble effect.

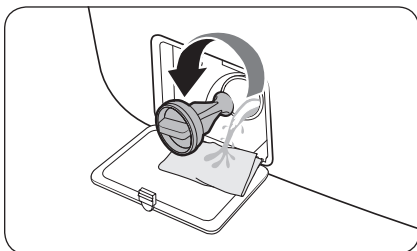

1. Turn off the washing machine, and unplug the power cord.
2. Drain the remaining water inside the drum. See the **Emergency drain** section.
3. Gently press the top area of the **filter cover** to open.
4. Turn the debris filter knob to the left, and drain off the remaining water.

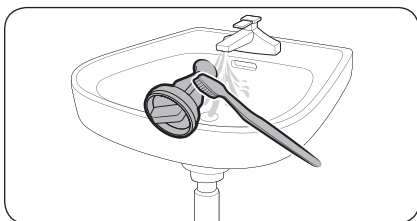

5. Clean the debris filter using soft brushes. Make sure the drain pump propeller inside the filter is unclogged.
6. Reinsert the debris filter, and turn the filter knob to the right.

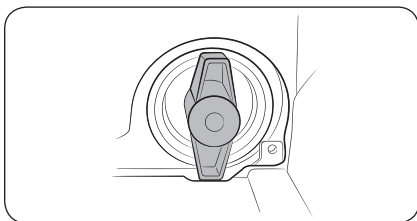

NOTE

- Some debris filters feature a safety knob that is designed to prevent accidents by children. To open the safety knob of the debris filter, push in and turn it anticlockwise. The spring mechanism of the safety knob helps open the filter.
- To close the safety knob of the debris filter, turn it clockwise. The spring makes a rattling sound, which is normal.

NOTE

If the pump filter is clogged, an information code of “5C” appears on the screen.


CAUTION

- Make sure the filter knob is closed properly after cleaning the filter. Otherwise, this may cause a leak.
- Make sure the filter is inserted properly after cleaning it. Otherwise, this may cause an operational failure or a leak.




Maintenance


Detergent drawer

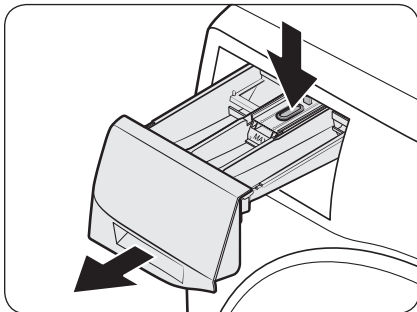

1. While holding down the **release lever** inside the drawer, slide open the drawer.

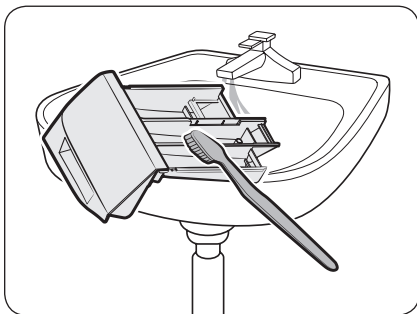

2. Clean the drawer components in flowing water using a soft brush.

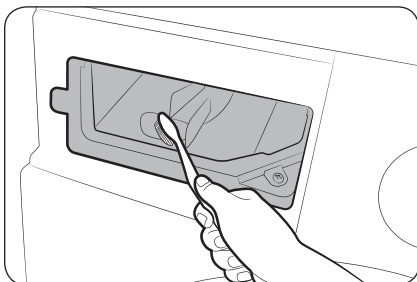

3. Clean the drawer recess using a soft brush.
4. Reinsert the liquid detergent container to the drawer.
5. Slide the drawer inward to close it.

NOTE

Make sure the drawer recess is completely dry before inserting the detergent drawer.


NOTE

To remove remaining detergent, perform the **Rinse+Spin** cycle with the drum being empty.



Door diaphragm

Lint may accumulate on the door diaphragm during a wash or dry cycle. Remember to clean the door diaphragm after using a wash or dry cycle.

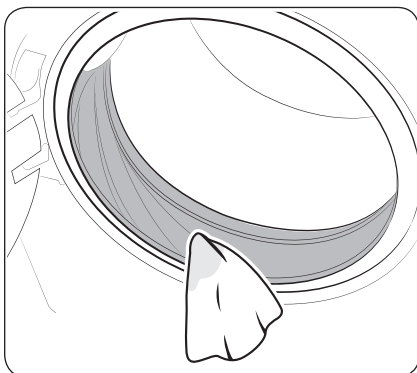

1. Open the door, and then empty the drum.
2. Clean the lint on the door diaphragm.
3. Combine 3/4 cups of liquid chlorine bleach and 1 gallon of warm tap water.
4. Wearing rubber gloves, use a soft, clean cloth dipped in the water and bleach solution to clean the diaphragm.
5. Let stand for 5 minutes, and then wipe up and dry well.

CAUTION

Use bleach carefully and be sure to follow the bleach manufacturer's use and care instructions.

Maintenance

Defrosting your washing machine

The washing machine may freeze when it drops below 0 °C.

1. Turn off the washing machine, and unplug the power cord.
2. Pour warm water over the water tap to loosen the water hose.
3. Disconnect the water hose, and soak it in warm water.
4. Pour warm water into the drum and leave it for about 10 minutes.
5. Reconnect the water hose to the water tap.

NOTE

If the washing machine still doesn't operate normally, repeat the above steps until it operates normally.

Care against an extended time of disuse

Avoid leaving the washing machine unused for an extended time. If this is the case, drain the washing machine and unplug the power cord.

1. Turn the **Navigation dial** to select **Rinse+Spin**.
2. Empty the drum, and then tap and hold **▷||**.
3. When the cycle is complete, close the water tap and disconnect the water hose.
4. Turn off the washing machine, and unplug the power cord.
5. Open the door to let air circulate through the drum.



Troubleshooting

If there is any problem, check the information message on the LCD screen and follow the on-screen instructions.

If the problem persists, please contact the service center.

Checkpoints

If you encounter a problem with the washing machine, first check the table below and try these suggestions.

Problem	Action
Does not start.	• Make sure the washing machine is plugged in. • Make sure the door is properly closed. • Make sure the water taps are open. • Tap and hold ▷ to start the washing machine. • Make sure Child Lock is not activated. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and will do quick drain. • Check the fuse or reset the circuit breaker. • Check if power is supplied properly. • Low voltage detected. - Check if the power cord is plugged in. • Make sure laundry is not caught in the door. • The “DDC” message appears when you open the AddWash door without tapping and holding ▷ . If this happens, do one of the following: • Press the AddWash door to close properly. Then, tap and hold ▷ and try again. • To add laundry, open the AddWash door and put in laundry. close the AddWash door completely. Then, tap and hold ▷ to resume operation.
Water supply is insufficient, or no water is supplied.	• Fully open the water tap. • Make sure the door is properly closed. • Make sure the water supply hose is not frozen. • Make sure the water supply hose is not kinked or clogged. • Make sure there is sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged.
After a cycle, detergent remains in the detergent drawer.	• Make sure the washing machine is running with sufficient water pressure. • Make sure the detergent is added to the centre of the detergent drawer. • Make sure the rinse cap is inserted properly. • If using granular detergent, make sure the detergent selector is in the upper position. • Remove the rinse cap and clean the detergent drawer.





Troubleshooting

Problem	Action
Excessive vibrations or makes noise.	• Make sure the washing machine is installed on a level, solid floor that is not slippery. If the floor is not level, use the levelling feet to adjust the height of the washing machine. • Make sure the shipping bolts are removed. • Make sure the washing machine is not in contact with any other object. • Make sure the laundry load is balanced. • The motor can cause noise during normal operation. • Overalls or clothes with metallic decorations can cause noise while being washed. This is normal. • Metal objects such as coins can cause noise. After washing, remove these objects from the drum or filter case. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and a “Ub” check message will be shown in the display.
Does not drain and/or spin.	• Make sure the drain hose is straightened all the way to the drain system. If you encounter a drain problem, call for service. • Make sure the debris filter is not clogged. • Close the door and tap and hold ▷ . - For your safety, the washing machine will not tumble or spin unless the door is closed. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is connected to a drain system that is not clogged. • If the washing machine is not supplied with sufficient power, the washing machine will temporarily not drain or spin. As soon as the washing machine regains sufficient power, it will operate normally. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged.
The door does not open.	• Tap and hold ▷ to stop the washing machine. • It may take a few moments for the door lock mechanism to disengage. • The door will not open until 3 minutes after the washing machine has stopped or the power has been off. • Make sure all the water in the drum is drained. • The door may not open if water remains in the drum. Drain the drum and open the door manually. • Make sure the door lock light is off. The door lock light turns off after the washing machine has drained.



Problem	Action
Excessive suds.	• Make sure you use the recommended types of detergent as appropriate. • Use high efficiency (HE) detergent to prevent oversudsing. • Reduce the detergent amount for soft water, small loads, or lightly soiled loads. • Non-HE detergent is not recommended.
Cannot add additional detergent.	• Make sure the remaining amount of detergent and fabric softener is not over the limit.
Stops.	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door, and tap and hold > to start the washing machine. For your safety, the washing machine will not tumble or spin unless the door is closed. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and will do quick drain. • There may be a pause or soak period in the cycle. Wait briefly, and the washing machine may start. • Make sure the mesh filter of the water supply hose at the water taps is not clogged. Periodically clean the mesh filter. • If the washing machine is not supplied with sufficient power, the washing machine will temporarily not drain or spin. As soon as the washing machine regains sufficient power, it will operate normally.
Fills with the wrong water temperature.	• Fully open both taps. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct taps. Flush water lines. • Make sure the water heater is set to supply a minimum of 49 °C hot water at the tap. Also, check the water heater capacity and recovery rate. • Disconnect the hoses and clean the mesh filter. The mesh filter may be clogged. • While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature.
Load is wet at the end of a cycle.	• Use the High or Extra High spin speed. • Use high efficiency (HE) detergent to reduce oversudsing. • Load is too small. Small loads (one or two items) may become unbalanced and not spin completely. • Make sure the drain hose is not kinked or clogged.

Troubleshooting

Problem	Action
Leaks water.	• Make sure the door is properly closed. • Make sure all hose connections are tight. • Make sure the end of the drain hose is correctly inserted and secured to the drain system. • Avoid overloading. • Use high efficiency (HE) detergent to prevent oversudsing. • Check the drain hose. - Make sure the end of the drain hose is not placed on the floor. - Make sure the drain hose is not clogged.
Has odours.	• Excessive suds collect in recesses and can cause foul odours. • Run cleansing cycles to sanitise periodically. • Clean the door seal (diaphragm). • Dry the washing machine interior after a cycle has finished.
No bubbles are seen (Bubble models only).	• You may not be able to see bubbles if there is too much items in the drum. • Severely contaminated laundry may not generate bubbles.
A message appears on the display to alert that dispenser is open.	• Check if the detergent drawer is closed properly. - Open the detergent drawer and close it again. Make sure it's closed properly.

If a problem persists, contact a service center. The number of the service center is on the label attached to the product.

Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.

Code	Action
Check drainage	Water is not draining. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged. • Make sure the drain hose is straightened all the way to the drain system. • If the information code remains, contact a customer service centre
Check water supply	Water is not supplied. • Make sure the water taps are open. • Make sure the water hoses are not clogged. • Make sure the water taps are not frozen. • Make sure the washing machine is operating with sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged. • All buttons will be disabled for 3 minutes after the information code appears. • When the "4C" message appears, the machine drains water for 3 minutes. In the meantime, the Power button will be disabled.
Check water lines	• Make sure the cold water supply hose is firmly connected to the cold water tap. If it is connected to the hot water tap, the laundry may be deformed with some cycles.
Unbalanced laundry detected	Spinning does not work. • Make sure laundry is spread out evenly. • Make sure the washing machine is on a flat, stable surface. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and an "Ub" check message will be shown in the display.
Door is open	Operating the washing machine with the door open. • Make sure the door is properly closed. • Make sure laundry is not caught in the door.
OC	Water has overflowed. • Restart after spinning. • If the information code remains on the display, contact a local Samsung service centre.

Troubleshooting

Code	Action
LC, LC1	Check the drain hose. • Make sure the end of the drain hose is not placed on the floor. • Make sure the drain hose is not clogged. • If the information code remains, contact a customer service centre.
3C	Check the drum motor for operation. • Try restarting the cycle. • If the information code remains, contact a customer service centre.
HC	High temperature heating check. • If the information code remains, contact a customer service centre.
1C	The Water Level sensor is not working properly. • Turn the machine off, and restart the cycle. • If the information code remains, contact a customer service centre.
AC	Check communications between main and sub PBAs. • Turn the machine off, and restart the cycle. • If the information code remains, contact a customer service centre.
AC6	Check communications between the main and the inverter PBAs. • Depending on the state, the machine may automatically returns to normal operation. • Turn the machine off, and restart the cycle. • If the information code remains, contact a customer service centre.
DC1	The Main Door lock/unlock is not working properly. • Turn the machine off, and restart the cycle. • If the information code remains, contact a customer service centre.
FC	The drying fan motor is not working properly. • Turn the machine off, and restart the cycle. • If the information code remains, contact a local Samsung service centre.
HC2	The drying heater is not working properly. • Turn the machine off, and restart the cycle. • If the information code remains, contact a local Samsung service centre.

If any information code keeps appearing on the screen, contact a local Samsung service centre.

Specifications

Fabric care chart

The following symbols provide garment care direction. The Clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to maximize garment life and reduce laundering problems.

Washing

	95 °C boil wash.
	60 °C coloured wash.
	60 °C coloured wash. ("Easy care" coloured wash)
	40 °C coloured wash.
	40 °C mild wash.
	40 °C very mild wash.
	30 °C fine wash.
	30 °C mild fine wash.
	30 °C very mild fine wash.
	Hand wash.
	Do not wash.

NOTE

The numbers in the wash tub specify the maximum washing temperatures in degrees celsius Celsius which must not be exceeded.

Bleaching

	Any bleach allowed.
	Only oxygen bleach allowed.
	Do not bleach.

Drying

	Tumble drying / Drying at a temperature of 80 °C with a normal drying process.
	Tumble drying / Drying at a temperature of 60 °C with a mild drying process.
	Do not tumble dry
	Line drying.
	Drip line drying.
	Flat drying.
	Drip flat drying.
	Line drying in the shade.
	Drip line drying in the shade.
	Flat drying in the shade.
	Drip flat drying in the shade.

NOTE

- The dots indicate the drying level of the dryer.
- The lines indicate the type and place of the drying.

Specifications

Ironing

	Iron at maximum sole plate temperature of 200 °C.
	Iron at maximum sole plate temperature of 150 °C.
	Iron at maximum sole plate temperature of 110 °C. Caution when using steam irons (work without steam).
	Do not iron.

NOTE

The dots indicate the temperature ranges for ironing (regulator, steam, travel irons and ironing machines).

	Very mild professional wet-cleaning.
	Do not wet-clean.

NOTE

- The letters in a circle indicate the solvents (P, F) used in dry cleaning or wet cleaning (W).
- Generally, the line under the symbol indicates a milder treatment (e.g. gentle cycle for easy-care items). The double line indicates care levels with particularly gentle treatment.

Professional care

	Professional dry-cleaning in perchloroethylene and/or hydrocarbons (heavy benzines) with normal process.
	Professional dry-cleaning in perchloroethylene and/or hydrocarbons (heavy benzines) with gentle process.
	Professional dry-cleaning in hydrocarbons (heavy benzines) with normal process.
	Professional dry-cleaning in hydrocarbons (heavy benzines) with gentle process.
	Do not dry-clean.
	Professional wet-cleaning.
	Mild professional wet-cleaning.

Protecting the environment


- This appliance is manufactured from recyclable materials. If you decide to dispose of it, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the lid so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).



Specifications

Specification sheet

"*" Asterisk(s) means variant model and can be varied (0-9) or (A-Z).

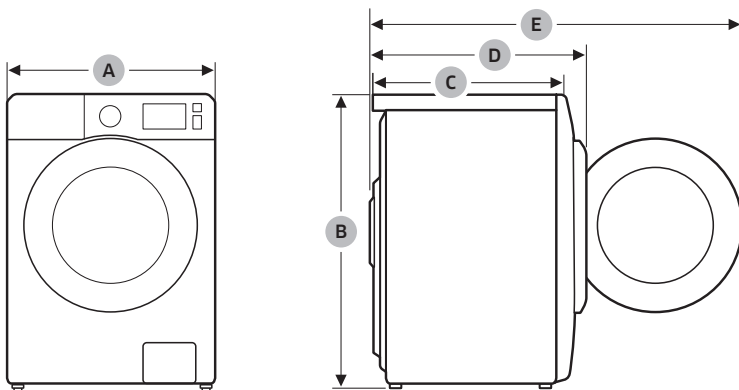

Type		Front loading washing machine			
Model name		WD22T6300**	WD21T6300**	WD18T6300**	
Dimensions	A (Width)	686 mm			
	B (Height)	984 mm			
	C (Depth)	796 mm			
	D	864 mm			
	E	1386 mm			
Water pressure		50-800 kPa			
Net weight		97.0 kg			
Maximum load capacity		Washing and spinning	22.0 kg	21.0 kg	18.5 kg
		Drying	13.0 kg	12.0 kg	9.5 kg
Power consumption	Washing and heating	AC 220-240 V / 50 Hz	2100-2500 W		
	Dry		2100-2500 W		
Spin revolutions		1100 RPM			
Spin-Drying Efficiency		5 stars			



NOTE

- The design and specifications are subject to change without notice for quality improvement purposes.
- Only for UAE Models: The energy label specifications have been determined by using the following program according to UAE.S 5010-2.
 - Set programme
Wash: Cotton 60 °C, Rinse: 1, Spin: 5

Specification sheet (Only for Saudi Arabia Models)

"*" Asterisk(s) means variant model and can be varied (0-9) or (A-Z).

The manufacturer's name and/or his trademark			SAMSUNG
Kind of washing machine			AUTOMATIC ELECTRIC WASHING MACHINE
The type number			WD21T6300**
Rated voltage (volts)			230 V~
Rated frequency (Hz)			60 Hz
Rated power input (watt or kW)	Rated power input	Wash and heating	2100 W
Standard (rated) washing capacity (kg)			21.0 kg
Annual Energy Consumption			352 kWh
Annual Water Consumption			23100 liters
Dimensions			W686 x D796 x H984 (mm)
IP number			IPX4
Water pressure			50 kPa - 800 kPa
Net weight			97.0 kg
Spin revolutions			1100 rpm
Country of origin			Made in Vietnam
Manufacturer			Samsung Electronics Co.,ltd.

NOTE

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

The energy Label specifications have been determined by using the following program according to SASO 2885.

- The program for "WD21T6300*" is "E Cotton".
- RPM at the energy course : 1000 RPM



Specifications

English


Information of main washing programmes (Only for Saudi Arabia Models)

Model	Course (Program)	Cycle	a number of cycle	Water consumption [L]	Time [min]
WD21T6300**	Cotton 60 °C Full (e Cotton)	Washing	1	45	137
		Rinsing	1	25	14
			2	30	7
		Spinning	1	5	12
	Cotton 60 °C Half (e Cotton)	Washing	1	40	87
		Rinsing	1	40	14
			2	20	7
		Spinning	1	5	12
	Cotton 40 °C Half (e Cotton)	Washing	1	40	67
		Rinsing	1	40	14
			2	20	7
		Spinning	1	5	12




Packing & unpacking

Packing

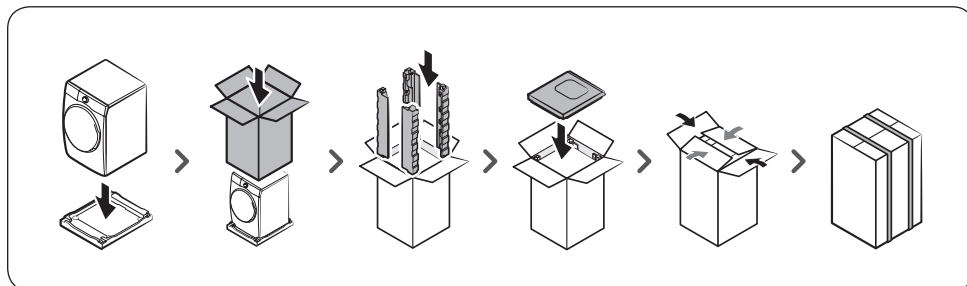

1. Put the washing machine on the bottom cushion.
2. Put the packing box over the machine.
3. Insert the 4 side cushions in the packing box, one for each corner.
4. Insert the top cushion on the top of the machine.
5. Close the top cover of the box.
6. Wrap up the box with straps.

Unpacking

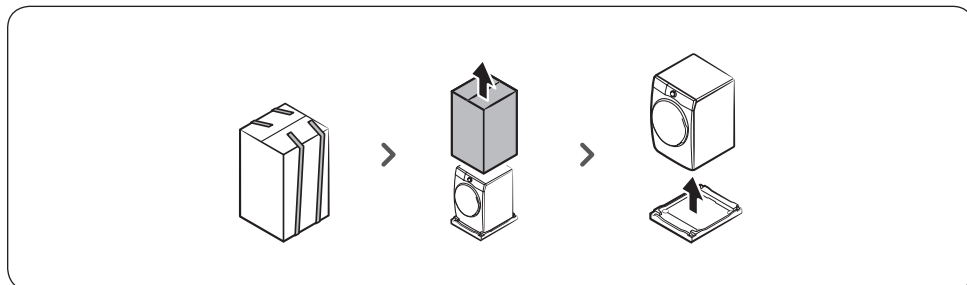

1. Cut the straps to untie.
2. Hold the packing box with both hands, and raise the box to remove.
3. Remove the washing machine from the bottom cushion.

NOTE

The number of cushions and straps may vary depending on the model.

Memo

Memo

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
EGYPT	08000-7267864 16580 WhatsApp 010 000 16580	www.samsung.com/eg/support
IRAN	021-8255	www.samsung.com/iran/support
Israel	*6963	www.samsung.com/il/support/
SAUDI ARABIA	8002474357 (800 24/7 HELP) From Inside Saudi Arabia +966112974690 From outside Saudi Arabia (May Call Charges will be applied)	www.samsung.com/sa_en/support (English) www.samsung.com/sa/support (Arabic)
PAKISTAN	0800-Samsung (7267864)	www.samsung.com/pk/support
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAM CS (800-72627)	
KUWAIT	183-CALL (183-2255)	
BAHRAIN	8000-GSAM (8000-4726)	
QATAR	800-CALL (800-2255)	
TURKEY	444 77 11	www.samsung.com/tr/support
JORDAN	0800-22273 06 5777444	www.samsung.com/levant/support
Lebanon	1598	
Iraq	80010080	
ALGERIA	3004	www.samsung.com/n_africa/support
TUNISIA	80 100 012	
MOROCCO	080 100 22 55	

غسالة كهربائية أوتوماتيكية

دليل المستخدم

WD22T6300**/WD21T6300**/WD18T6300**

SAMSUNG



DC68-04254E-00

المحتويات

العربية

٤	معلومات السلامة
٤	ما يجب أن تعرفه حول إرشادات السلامة
٤	رموز السلامة المهمة
٥	احتياطات السلامة المهمة
٨	تحذيرات التركيب الهامة
٩	تنبيهات التركيب
٩	تحذيرات الاستخدام المهمة
١٠	تنبيهات الاستخدام
١٣	تحذيرات التنظيف الهامة
١٤	التركيب
١٤	مكونات الغسالة
١٦	متطلبات التركيب
١٨	تفاصيل عملية التركيب
٢٦	قبل بدء التشغيل
٢٦	الإعداد الأولي
٢٧	إرشادات الغسيل
٢٩	الإرشادات الخاصة بدرجة التنظيف
٣٢	العمليات
٣٢	لوحة التحكم
٣٤	تشغيل دورة
٣٥	نظرة عامة على الدورات
٣٧	الوظائف الإضافية
٤٠	وظائف النظام
٤٢	الميزات الخاصة
٤٣	تطبيق SmartThings (الطراز الملائمة فقط)
٤٤	تصريح بشأن البرامج مفتوحة المصدر
٤٥	الصيانة
٤٥	تنظيف الأسطوانة+
٤٦	تصريف الطوارئ
٤٧	التنظيف
٥٠	حاجز الباب
٥١	فك تجميد الغسالة
٥١	الحذر من عدم الاستخدام لفترة طويلة



٥٢	استكشاف المشاكل وحلها
٥٢	نقاط الفحص
٥٦	رموز المعلومات
٥٨	المواصفات
٥٨	جدول العناية بالأقمشة
٦٠	حماية البيئة
٦٠	بيان المواصفات
٦٢	صفحة المواصفات (لطرز المملكة العربية السعودية فقط)
٦٣	معلومات حول برامج الغسل الأساسية (فقط لطرز المملكة العربية السعودية)
٦٤	التعبئة & التفريغ
٦٤	التعبئة
٦٤	التفريغ



معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يتضمن هذا الدليل معلومات مهمة حول عملية تركيب الجهاز واستخدامه والعناية به. لذا، يُرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة المتوفرة بالغسالة.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية لضمان معرفة كيفية تشغيل الميزات والوظائف المتعددة لغسالتك الجديدة بسلامة وفعالية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. لا تستخدم هذا الجهاز إلا للغرض المخصص له على النحو الموضح في دليل الإرشادات الذي بين يديك.

لا تغطي التحذيرات وإرشادات السلامة المهمة الواردة في هذا الدليل جميع الظروف والمواقف المحتمل حدوثها. لذا، يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها.

ونظراً لأن إرشادات التشغيل التالية تنطبق على طرز متعددة، فإن خصائص الغسالة التي تستعملها قد تختلف قليلاً عن تلك الدرجة في هذا الدليل، كما أن بعض علامات التحذير المذكورة قد لا تكون ذات صلة. إذا كان لديك أي أسئلة أو استفسارات، فاتصل بأقرب مركز خدمة، أو ابحث عن التعليمات والمعلومات عبر الإنترنت على الموقع www.samsung.com.

رموز السلامة المهمة

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

 **تحذير**

المخاطر أو الممارسات غير الآمنة التي قد ينتج عنها التعرض لإصابة شخصية خطيرة و/أو الوفاة و/أو تلف بالملكات.

 **تنبيه**

المخاطر أو الممارسات غير الآمنة التي قد ينتج عنها التعرض لإصابة شخصية و/أو تلف بالملكات.

 **ملحوظة**

تشير إلى وجود خطر من التعرض لإصابة شخصية أو ضرر مادي.

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.

لذا، يُرجى اتباعها بعناية.

وبعد قراءة هذا الدليل، احتفظ به في مكان آمن للرجوع إليه في المستقبل.

اقرأ جميع الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر، كما هو الحال مع أي أجهزة تستخدم الطاقة الكهربائية والأجزاء المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.



احتياطات السلامة المهمة

⚠ تحذير

لتقليل احتمالات نشوب حريق أو التعرّض لصدمة كهربية أو حدوث إصابات جسدية للأشخاص أثناء استخدام الجهاز، اتبع احتياطات السلامة الأساسية التالية:

1. لم يتم تصميم هذا الجهاز ليستخدمه أشخاص من ذوي الاحتياجات الخاصة أو من تنقصهم المعرفة والخبرة (بما في ذلك الأطفال)، إلا إذا كانوا تحت إشراف شخص مسؤول عن سلامتهم.
2. **الاستخدام في أوروبا:** يمكن أن يستخدم هذا الجهاز الأطفال الذين تبدأ أعمارهم من ٨ سنوات فيما أكثر، بالإضافة إلى الأشخاص ممن يعانون من قصور في القدرات الجسدية والحسية والعقلية وأولئك الذين تنقصهم المعرفة والخبرة إذا كانوا تحت الإشراف وعلى علم بالإرشادات التي تتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر المتضمنة في عملية الاستخدام. ويجب ألا يتم السماح للأطفال بالعبث بالجهاز. كما يجب عدم السماح للأطفال بالقيام بأعمال التنظيف والصيانة التي يقوم بها المستخدم دون إشراف.
3. يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
4. في حالة تلف سلك التيار الكهربائي، يجب تغييره من قبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
5. يجب استخدام مجموعات الخراطيم الجديدة المرفقة بالغسالة وعدم استخدام مجموعات الخراطيم القديمة مرة أخرى.
6. بالنسبة للأجهزة التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.
7. **الاستخدام في أوروبا:** يجب أن يبتعد الأطفال أقل من ٣ سنوات عن الغسالة ما لم يخضعوا لمراقبة مستمرة.



٨. تنبيه: لتجنب وجود خطر بسبب إعادة الضبط غير المقصودة للقاطع الحراري، يجب ألا يتم تزويد هذا الجهاز بالطاقة من خلال جهاز فصل ووصل خارجي -مثل المؤقت- أو توصيله بدائرة كهربية يتم تشغيلها وإيقاف تشغيلها بصورة منتظمة من قبل مرفق الخدمة العامة.
٩. لا تستخدم المجفف الدوار في حالة استخدام مواد كيميائية للتنظيف.
١٠. يجب تنظيف مصفاة النسالات بانتظام، إن أمكن.
١١. لا تسمح بتراكم نسالات حول المجفف الدوار. (لا ينطبق ذلك على الأجهزة المصممة لتكون تهويتها خارج المبنى)
١٢. يجب توفير تهوية كافية لتجنب تسرب الغازات إلى الغرفة من الأجهزة التي تستخدم أنواعاً أخرى من الوقود، بما في ذلك النيران المباشرة.
١٣. تجنب تجفيف الملابس غير المغسولة داخل المجفف الدوار.
١٤. يجب غسل الملابس المتسخة بمواد مثل زيت الطهي والأسيتون والكحول والبنزين والكبروسين ومزيلات البقع وزيت التريبتين والشمع ومزيلات الشمع، بماء ساخن مع إضافة كمية إضافية من المنظف قبل تجفيفها في المجفف الدوار.
١٥. يجب عدم تجفيف أشياء مثل المطاط الأسفنجي (مطاط لاتكس) أو أغذية الرأس الخاصة بالحمام أو الأقمشة والملابس المقاومة للماء أو الأشياء المدعومة بالمطاط أو الوسائد المحشوة بالمطاط الأسفنجي باستخدام المجفف الدوار.
١٦. ويجب استخدام منعومات الأقمشة أو المنتجات المشابهة وفقاً لإرشادات استخدام منعومات الأقمشة.
١٧. تتم المرحلة النهائية من دورة المجفف الدوار دون تسخين (دورة التجفيف البارد) لضمان ترك قطع الغسيل عند درجة حرارة تضمن عدم تعرضها للتلف.
١٨. قم بتفريغ الجيوب من جميع الأشياء التي قد تكون موجودة بها مثل الولاعات وأعواد الثقاب.



١٩. تحذير: لا تقم بإيقاف المجفف الدوار قبل انتهاء دورة التجفيف، إلا إذا قمت بإخراج الغسيل بالكامل ونشره بسرعة حتى تتبدد الحرارة.

٢٠. يجب عدم تفريغ هواء العادم من خلال مصرف الهواء الذي يتم استخدامه لخروج العادم من الأجهزة التي تستخدم الغاز أو أنواعًا أخرى من الوقود.

٢١. يجب عدم تركيب الجهاز خلف باب قابل للغلق أو باب منزلق أو باب بمفصلة توجد على الجهة المقابلة لجهة المجفف الدوار؛ حيث يعوق ذلك فتح باب المجفف الدوار بشكل كامل.

٢٢. تحذير: يجب ألا يتم تزويد هذا الجهاز بالطاقة من خلال جهاز فصل ووصل خارجي -مثل المؤقت- أو توصيله بدائرة كهربية يتم تشغيلها وإيقاف تشغيلها بصورة منتظمة من قبل مرفق خدمة عامة.

٢٣. صُمم هذا الجهاز للاستخدام المنزلي فقط ولم يتم تصميمه للاستخدام في الأماكن التالية:

- مناطق مطابخ الموظفين في المتاجر والمكاتب وبيئات العمل الأخرى؛
- المزارع؛
- من قبل العملاء في الفنادق والموتيلات وغيرها من البيئات السكنية؛
- البيئات من النوع المخصص للمبيت والإفطار؛
- مناطق الاستخدام الجماعي في المجمعات السكنية أو في المغاسل.



معلومات السلامة

تحذيرات التركيب الهامة

⚠ تحذير

- يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد يؤدي عدم الالتزام بهذه التعليمات إلى حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج أو التعرض للإصابة.
- يجب توخي الحذر عند رفع الغسالة لأن وزنها ثقيل.
- قم بتوصيل سلك التيار الكهربائي بإحكام بمقبس حائط يستوفي المواصفات الكهربائية المحلية. لا تستخدم المقبس إلا لتشغيل هذا الجهاز، ولا تستخدم سلك تمديد.
- قد تؤدي مشاركة مأخذ الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو تمديد سلك التيار الكهربائي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تطابق كل من الجهد الكهربائي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج؛ قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.
- قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من أطراف قابس التيار الكهربائي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.
- افصل قابس التيار الكهربائي ونظفه باستخدام قطعة قماش جافة.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.
- أدخل قابس التيار الكهربائي في مقبس الحائط بحيث يكون اتجاه السلك ناحية الأرض.
- إذا قمت بإدخال قابس التيار الكهربائي في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل، وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.
- احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول أيدي الأطفال، نظرًا لأنها قد تمثل خطرًا عليهم.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.
- في حالة تلف الجهاز أو قابس التيار الكهربائي أو سلك التيار الكهربائي، اتصل بأقرب مركز خدمة.
- يجب توصيل الجهاز بطرف أرضي بشكل سليم.
- لا تقم بتوصيل الجهاز بماسورة غاز أو ماسورة ماء بلاستيكية أو سلك تليفون.
- قد يؤدي ذلك إلى التعرض لصدمة كهربية أو نشوب حريق أو حدوث انفجار أو مشكلات بالجهاز.
- يجب عدم توصيل سلك التيار الكهربائي بمقبس لم يتم توصيله بطرف أرضي بشكل صحيح، وتأكد من أن ذلك يتم وفقًا للقوانين المحلية والدولية.
- يجب عدم تركيب هذا الجهاز بالقرب من سخان أو أي مواد قابلة للاشتعال.
- لا تضع هذا الجهاز في مكان رطب أو به زيت أو أي مكان به غبار أو في مكان عرضة لضوء الشمس المباشر أو الماء (قطرات المطر).
- يجب عدم تركيب هذا الجهاز في مكان معرّض لدرجات حرارة منخفضة.
- قد يؤدي الجليد إلى انفجار الأنابيب.
- لا تقم بتركيب هذا الجهاز في موقع يكون به تسرب للغاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- لا تستخدم محوّلًا كهربائيًا.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- لا تستخدم قابس تيار كهربائي أو سلك تيار كهربائي تالفاً أو مقبس حائط غير مُحكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.



لا تسحب سلك التيار الكهربائي أو تثنيه بشدة.

لا تقم بلف سلك التيار الكهربائي أو ربطه.

لا تعلق سلك التيار الكهربائي فوق شيء معدني أو تضع شيئاً ثقيلًا فوقه أو تمرر سلك التيار الكهربائي بين أشياء أو تدفعه في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو نشوب حريق.

لا تقم بسحب سلك التيار الكهربائي عند فصل قابس التيار الكهربائي.

- افصل قابس التيار الكهربائي عن طريق سحب القابس.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربائية أو نشوب حريق.

يجب وضع الجهاز بحيث يسهل الوصول إلى قابس التيار الكهربائي وصنابير توريد الماء وأنباب تصريف الماء.

في حالة إصلاح المنتج من خلال مزود خدمة غير معتمد أو إصلاحه بنفسك أو إصلاحه دون الاستعانة بفني محترف، لا تتحمل شركة Samsung أي مسؤولية تجاه تلف المنتج أو حدوث أي إصابة أو أي مشكلة أخرى تتعلق بسلامة المنتج بسبب محاولة إصلاح المنتج وعدم اتباع إرشادات الإصلاح والصيانة التي بين يديك بعناية. لا يغطي الضمان أي تلف يحدث للمنتج بسبب محاولة إصلاحه بواسطة أي شخص غير مزود الخدمة المعتمد من شركة Samsung.

تنبيهات التركيب

⚠ تنبيه

يجب تركيب هذا الجهاز بطريقة يمكن من خلالها الوصول إلى قابس التيار الكهربائي بسهولة.

- قد يؤدي عدم الالتزام بهذا الأمر إلى حدوث صدمة كهربائية أو نشوب حريق نتيجة لتسريب الكهرباء.

يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزنه.

- قد ينتج عن عدم الالتزام بهذه التعليمات حدوث اهتزازات أو حركة أو ضوضاء أو مشاكل بالجهاز.

تحذيرات الاستخدام المهمة

⚠ تحذير

في حالة تعرض الجهاز لكمية زائدة من الماء، أوقف توريد المياه والتيار الكهربائي بشكل فوري، واتصل بأقرب مركز خدمة.

- لا تلمس قابس التيار الكهربائي بيدين مبللتين.

- قد يؤدي عدم الالتزام بذلك إلى حدوث صدمة كهربائية.

في حالة إصدار الجهاز لضوضاء غير طبيعية أو رائحة اشتعال أو دخان، افصل سلك التيار الكهربائي فورًا واتصل بأقرب مركز خدمة.

- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربائية أو نشوب حريق.

في حالة وجود تسرب للغاز (مثل غاز البروبان أو الغاز النفطي المسال، وما إلى ذلك)، يجب تهوية المكان فورًا دون لمس قابس التيار الكهربائي. ولا تلمس الجهاز أو سلك التيار الكهربائي.

- لا تستخدم مروحة تهوية.

- قد تحدث شرارة وتؤدي إلى حدوث صدمة كهربائية أو نشوب حريق.

قم بإزالة مقبض باب الغسالة قبل التخلص من الجهاز.

- فقد يَحسّ الأطفال داخل الغسالة ويتعرضون للاختناق حتى الموت.

تأكد من إزالة الأغلفة (الإسفنج / الفوم) الموجود أسفل الغسالة قبل استخدامها.



معلومات السلامة

يجب عدم غسل العناصر الملوثة بالجازولين أو الكيروسين أو البنزين أو مخفف الدهان أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.
- يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسل/التجفيف/العصر عند درجة حرارة عالية).
- قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بحروق أو تصبغ الأرض منزلة. قد ينتج عن ذلك حدوث إصابات.
- قد يؤدي فتح الباب بالقوة إلى تلف الجهاز أو حدوث إصابة.
- لا تلمس قابس التيار الكهربائي بيدين مبللتين.
- قد ينتج عن هذا الأمر التعرض لصدمة كهربية.
- لا تقم بإيقاف تشغيل الغسالة بفصل سلك التيار الكهربائي أثناء تشغيلها.
- قد يؤدي إدخال سلك التيار الكهربائي مرة أخرى في مقبس الحائط إلى حدوث شرارة ينتج عنها صدمة كهربية أو نشوب حريق.
- كما يجب عدم السماح للأطفال بالتسلق داخل أو فوق الغسالة.
- قد ينتج عن ذلك حدوث صدمة كهربية أو حروق أو إصابة.
- لا تضع يدك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.
- قد ينتج عن ذلك حدوث إصابات.
- لا تفصل الجهاز عن طريق سحب سلك التيار الكهربائي، بل يجب دائمًا إمساك قابس التيار الكهربائي بإحكام وسحبه بشكل مستقيم من مأخذ التيار الكهربائي.
- قد يؤدي تلف سلك التيار الكهربائي إلى حدوث قصر في الدائرة الكهربائية و/أو حريق و/أو التعرض لصدمة كهربية.
- لا تحاول إصلاح الجهاز أو فكّه أو تعديله بنفسك.
- لا تستخدم أي منصهر (مثل النحاس أو سلك معدني، وما إلى ذلك) بخلاف المنصهر القياسي.
- اتصل بأقرب مركز خدمة عند الحاجة إلى إصلاح الجهاز أو إعادة تركيبه.
- قد يؤدي عدم الالتزام بهذه التعليمات إلى حدوث صدمة كهربية أو نشوب حريق أو مشاكل بالجهاز أو التعرض للإصابة.
- عندما يصبح خرطوم توريد الماء غير محكم وينتج عنه تسريب للماء في الجهاز، يجب فصل سلك التيار الكهربائي من المقبس الكهربائي.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.
- يجب فصل سلك التيار الكهربائي في حالة عدم استخدام الجهاز لفترات طويلة أو أثناء العواصف الرعدية أو البرق.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.
- في حالة دخول أي مادة غريبة إلى الجهاز، قم بفصل سلك التيار الكهربائي واتصل بأقرب مركز خدمة لشركة Samsung.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.
- لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون داخل الغسالة أو فوقها. حيث إنه لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

تنبيهات الاستخدام

⚠ تنبيه

- عند وجود مادة غريبة داخل الغسالة، مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، افصل سلك التيار الكهربائي ونظف الغسالة باستخدام قطعة قماش رطبة وناعمة.
- قد يؤدي عدم الالتزام بهذا الأمر إلى حدوث تغيير في الألوان أو التشويه أو التلف أو الصدأ.



قد ينكسر الزجاج الأمامي نتيجة لحدوث اصطدام قوي. لذا، يجب الحرص عند استخدام الغسالة.

- قد تحدث إصابة في حالة انكسار الزجاج.

افتح الصنبور ببطء عند الاستخدام بعد فترة طويلة من عدم الاستخدام أو في حالة عدم التمكن من إمداد الماء أو عند إعادة توصيل خرطوم إمداد الماء.

- قد يؤدي ضغط الهواء في خرطوم إمداد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو حدوث تسرب للماء.

في حالة حدوث خطأ في عملية التصريف أثناء التشغيل، تحقق من عدم وجود مشكلة تتعلق بالتصريف.

- قد يؤدي استخدام الغسالة أثناء تسرب المياه منها نتيجة وجود مشكلة بالتصريف إلى الإصابة بصدمة كهربية أو نشوب حريق.

يجب إدخال الملابس بالكامل في الغسالة بحيث لا تعلق بالباب.

- قد يؤدي ذلك إلى تلف الملابس أو الغسالة، أو قد ينتج عنه حدوث تسريب للماء.

أغلق الصنبور في حالة عدم استخدام الغسالة.

- تأكد من ربط مسامير خرطوم توريد الماء بإحكام.

تأكد من عدم التصاق أي مواد غريبة بالحاجز المطاطي والزجاج الأمامي للباب (على سبيل المثال، مخلفات أو خيوط أو شعر، وما إلى ذلك).

- في حالة التصاق أي مادة غريبة في الباب أو لم يتم إغلاقه جيداً، فقد يتسبب ذلك في حدوث تسرب للماء.

يجب فتح الصنبور والتحقق من إحكام وصلة خرطوم الماء وعدم وجود تسريب للماء قبل استخدام الجهاز.

- في حالة عدم إحكام ربط المسامير أو وصلة خرطوم توريد الماء، قد يحدث تسريب للماء.

تم تصميم الجهاز الذي قمت بشرائه للاستخدام المنزلي فقط.

يُعد استخدام الجهاز لأغراض تجارية سوء استخدام له. وفي هذه الحالة، لا تتم تغطية الجهاز من خلال الضمان القياسي الذي تقدمه شركة Samsung، كما أن شركة Samsung لا تتحمل أي مسؤولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

لا تقف فوق الجهاز أو تضع أشياء فوقه (مثل غسيل أو شموع مُضاءة أو سائير مشتعلة أو أطباق أو مواد كيميائية أو أشياء معدنية، وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالجهاز أو وقوع إصابات.

يجب عدم رش مواد متطايرة، مثل المبيدات الحشرية، فوق سطح الجهاز.

- بالإضافة إلى أن هذا الأمر يضر الإنسان، فقد ينتج عنه أيضاً الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالجهاز.

لا تضع أشياء ينتج عنه مجالات كهرومغناطيسية بالقرب من الغسالة.

- قد ينتج عن هذا حدوث إصابات جسدية نتيجة وجود خلل في وظائف التشغيل.

الماء الذي يتم تصريفه أثناء الغسل بدرجات حرارة عالية أو أثناء دورة التجفيف يكون ساخناً، فلا تلمسه.

- قد ينتج عن هذا الأمر حدوث حروق أو إصابات.

قد يختلف وقت التصريف حسب درجة حرارة الماء. إذا كانت درجة حرارة الماء مرتفعة جداً، فستبدأ عملية التصريف بعد أن يبرد الماء.

يجب عدم غسل مفروشات المقاعد أو السجاد أو الأقمشة (*) المقاومة للماء أو عصرها أو تشييقها ما لم يكن جهازك متضمناً دورة خاصة لغسلها.

(*) المفروشات الصوفية أو الأغطية المقاومة للأمطار أو سترات الصيد أو بنطلونات التزلج أو حقائب النوم أو أغطية الحفاضات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات، وما إلى ذلك.

- يجب عدم غسل السجاد السميك أو الثقيل حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج. قد يؤدي هذا الأمر إلى حدوث إصابة أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية.



معلومات السلامة

- لا تغسل السجاد ذا الوبر أو ممسحة الأرجل التي تحتوي على المطاط. فقد ينسلخ المطاط ويلصق بالحوض من الداخل، مما يؤدي إلى حدوث قصور في أداء المنتج كأن تحدث مشكلة في التصريف.
- يجب عدم تشغيل الغسالة في حالة عدم وجود درج المنظف.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة جسدية نتيجة لتسرب الماء.
- يجب عدم لمس الحوض من الداخل أثناء عملية التجفيف أو بعدها مباشرة؛ حيث يكون ساخناً.
- قد ينتج عن هذا الأمر الإصابة بحروق.
- يصبح زجاج الباب ساخناً أثناء الغسل والتجفيف. ولذا، لا تلمس زجاج الباب.
- ولا تسمح للأطفال أيضاً باللعب حول الغسالة أو لمس زجاج الباب.
- قد ينتج عن هذا الأمر الإصابة بحروق.
- لا تضع يدك في درج المنظف.
- قد ينتج عن هذا الأمر حدوث إصابات عن طريق سحب يدك بواسطة أداة إدخال المنظف.
- قم بإزالة حاوية المنظف السائل (الطرز الملائمة فقط) عند استخدام مسحوق غسيل.
- إذا لم تفعل ذلك، قد يتسرب الماء من الجهة الأمامية من درج المنظف.
- تجنب وضع أي أشياء (مثل الأحذية وبقايا الطعام والحيوانات) غير الملابس داخل الغسالة.
- قد يؤدي هذا الأمر إلى تلف الغسالة أو حدوث إصابة ووفاة في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.
- لا تضغط على الأزرار باستخدام أدوات حادة، مثل المسامير أو السكاكين أو الأظفار، وما إلى ذلك.
- قد ينتج عن ذلك حدوث صدمة كهربية أو إصابة.
- يحظر غسل الملابس التي تحتوي على زيوت أو كريما أو مستحضرات سائلة، والتي توجد في متاجر مستحضرات العناية بالبشرة أو عيادات التدليك عادةً.
- قد ينتج عن هذا الأمر تلف الحاجز المطاطي مما يؤدي إلى تسرب الماء.
- يجب عدم ترك أي أشياء معدنية، مثل الدبابيس أو دبائيس الشعر أو مواد التبييض، في الحوض لفترات طويلة من الوقت.
- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة بدء ظهور الصدأ على سطح الحوض، قم بتنظيف سطحها باستخدام سائل تنظيف (متعادل) وإسفنجة. ولا تستخدم فرشاة معدنية مطلقاً.
- لا تستخدم منظفاً جافاً بشكل مباشر، ولا تغسل الملابس أو تشطفها أو تعصرها في حالة إضافة منظف جاف إليها.
- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناتجة عن تأكسد الزيت.
- لا تستخدم الماء من أجهزة تبريد/تسخين الماء.
- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.
- لا تستخدم صابون غسيل اليدين الطبيعي بالغسالة.
- في حالة حدوث تراكم وتبيس داخل الغسالة، قد تحدث مشاكل بالجهاز، مثل تغير اللون أو الصدأ أو تولد رائحة كريهة.
- يمكنك وضع الجوارب وحملات الصدر داخل شبكة الغسيل وغسلها مع بقية الملابس.
- لا تغسل عناصر الغسيل كبيرة الحجم، مثل المفروشات، في شبكة الغسيل.
- يؤدي عدم الالتزام بهذا الأمر إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.
- لا تستخدم منظفاً غير سائل.
- قد يحدث تعرب للماء في حالة تراكم المنظف المتبقي داخل الغسالة.



- تأكد من إفراغ جميع جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.
 - لا تقم بغسل الملابس المزودة بإبريمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.
 - افرز الغسيل حسب اللون وفقاً لثباته ثم حدد الدورة المناسبة ودرجة الحرارة المناسبة والوظائف الإضافية.
 - قد ينتج عن هذا الأمر تغير اللون أو تلف في النسيج.
 - توخ الحذر حتى لا تنحسر أصابع الأطفال بالباب عند إغلاقه.
 - قد يؤدي عدم توخي الحذر إلى حدوث إصابة.
 - لمنع الروائح والعفن، اترك الباب مفتوحاً بعد دورة الغسل حتى تجف الحاوية.
 - لمنع تراكم الترسبات الكلسية، اترك درج المنظف مفتوحاً بعد دورة الغسل وجففه من الداخل.

تحذيرات التنظيف الهامة

⚠ تحذير

- لا تنظف الجهاز برش الماء عليه مباشرة.
- لا تستخدم منظفًا حمضيًا قويًا.
- لا تستخدم البنزين أو مخفف الدهان أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر تغيير في اللون أو تشويه أو تلف أو حدوث صدمة كهربية أو نشوب حريق.
 - افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
 - قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق.




التركيب


اتبع هذه الإرشادات بعناية لضمان التركيب السليم للغسالة ومنع وقوع حوادث أثناء الغسيل.

مكونات الغسالة

تأكد من وجود جميع الأجزاء بعبوة المنتج. إذا واجهت أي مشكلة بالغسالة أو أجزائها، فاتصل بمركز خدمة عملاء Samsung المحلي أو بائع التجزئة.

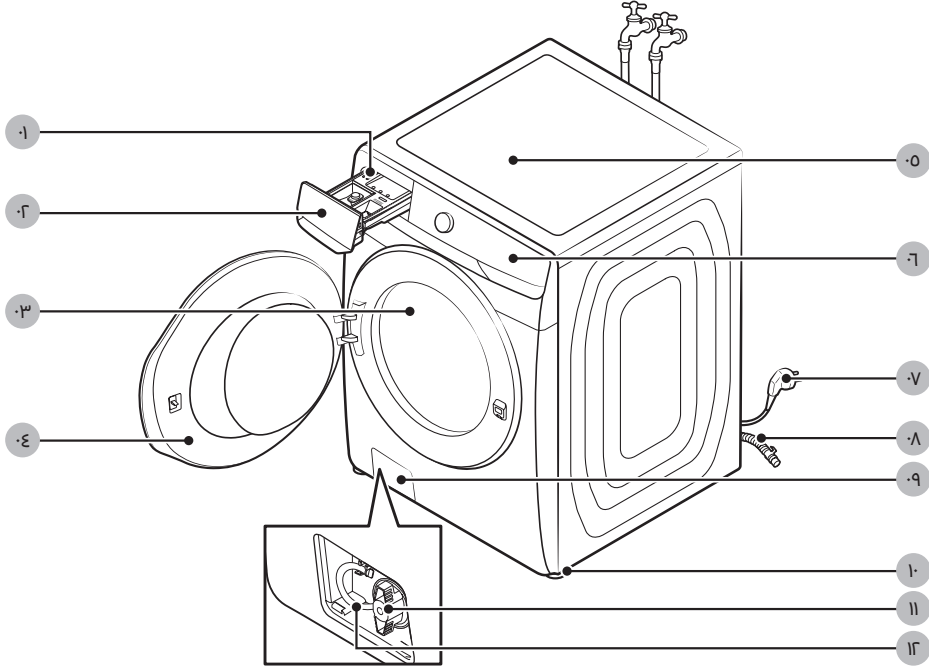

١ ذراع الإطلاق	٢ درج المنظف (مزود يدوي)	٣ الحاوية
٤ باب الغسالة	٥ سطح الغسالة	٦ لوحة التحكم
٧ قابس التيار الكهربائي	٨ خرطوم التصريف	٩ غطاء المصفاة
١٠ أرجل استواء الغسالة	١١ مصفاة المخلفات	١٢ أنبوب تصريف الطوارئ




حامل الخرطوم




أغطية المسامير



مفتاح الربط

حاوية المنظف السائل
(الطرز الملائمة فقط)


خرطوم الماء الساخن

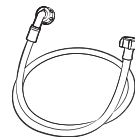

خرطوم الماء البارد



خرطوم التصريف (الطرز الملائمة فقط)



رابط الكبل

ملحوظة

- مفتاح الربط: لفك مسامير الشحن وضبط استواء الغسالة.
- أغطية المسامير: لتغطية الفتحات بعد فك مسامير الشحن. عدد أغطية المسامير المتوفرة (٣ إلى ٦) حسب الطراز.
- حامل الخرطوم: لتعليق خرطوم التصريف بأنبوب التصريف أو حوض الغسيل.
- خرطوم الماء البارد/الساخن: لإمداد الماء إلى الغسالة. (خراطيم الماء الساخن للطرز الملائمة فقط).
- حاوية المنظف السائل: قم بإدخالها في حجرة المنظف لاستخدام المنظف السائل.

التركيب

متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل بطرف أرضي

- استخدم دائرة كهربائية فرعية منفصلة مخصصة للغسالة.
- لضمان تأريض مناسب، يتم تزويد الغسالة بسلك تيار كهربائي به قابس تأريض بثلاثة سنون لاستخدامه مع مأخذ تم تركيبه وتأريضه بشكل سليم.
- استشر في صيانة أو في كهرباء مؤهلاً إذا لم تكن متأكدًا من سلامة التأريض.

لا تقم بتعديل القابس المرفق. وفي حالة عدم توافقه مع مأخذ التيار الكهربائي، اتصل بفني كهرباء مؤهل لتركيب مأخذ ملائم.

⚠ تحذير

- يحظر استخدام سلك تمديد.
- استخدم فقط سلك التيار الكهربائي المتوفر مع الغسالة.
- لا توصل السلك الأرضي بمواسير بلاستيكية أو خطوط غاز أو مواسير ماء ساخن.
- قد تتسبب موصلات التوصيل بطرف أرضي التي يتم توصيلها بشكل غير سليم في حدوث صدمة كهربية.
- لا تقم بإزالة أو تعديل قابس التأريض في سلك الطاقة لتقليل خطورة التعرض لصدمة كهربية.
- يرجى استخدام سلك التأريض الإضافي المتوفر مع هذه الغسالة إذا لم تكن هناك فتحة لقابس الأرض في مقبس مدخل الطاقة.

توريد الماء

يتراوح ضغط الماء المناسب لهذه الغسالة بين ٥٠ كيلو باسكال و٨٠٠ كيلو باسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلو باسكال في عدم إحكام غلق صمام الماء، أو قد يُستغرق وقت أطول في ملء الحاوية، مما يؤدي إلى إيقاف تشغيل الغسالة. يجب ألا تبعد صنابير الماء أكثر من ١٢٠ سم من الجانب الخلفي للغسالة لتسهيل توصيل خرطوم إمداد الماء بالغسالة. للحد من مخاطر التسرب:

- تأكد من سهولة الوصول إلى صنابير الماء.
- أغلق صنابير الماء في حالة عدم استخدام الغسالة.
- تحقق بانتظام من عدم وجود أي تسريبات في وصلات خرطوم إمداد الماء.

⚠ تنبيه

افحص جميع توصيلات صمام الماء والصنابير للتحقق من عدم وجود أي تسرب قبل استخدام الغسالة لأول مرة.

التصريف

توصي شركة Samsung باستخدام أنبوب رأسي يبلغ ارتفاعه ٦٠-٩٠ سم. ويجب توصيل خرطوم التصريف باستخدام مشبك الخرطوم بالأنبوب الرأسي الذي يجب أن يغطي خرطوم التصريف بالكامل.



تركيب القنطرة

الحد الأدنى للمساحة الخالية حول الغسالة اللازمة للحصول على تشغيل مستقر:

الجانبا	٢٥ مم
الجهة العلوية	٢٥ مم
الجهة الخلفية	٥٠ مم
الجهة الأمامية	٥٥٠ مم

في حالة تركيب الغسالة والمجفف معًا في المكان نفسه، يجب أن تحتوي الجهة الأمامية للقنطرة على فتحة هواء غير مسدودة بقطر ٥٥٠ مم على الأقل. علماً بأن الغسالة لا تتطلب فتحة هواء خاصة.

التركيب الأرضي

للحصول على أفضل أداء، يجب تركيب الغسالة على أرضية ثابتة وصلبة، قد تحتاج الأرضية الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. لا توفر الأرضيات المروشة بالسجاد وذات البلاط الناعم مقاومة جيدة للاهتزاز، بل على العكس، قد تتسبب في تحرك الغسالة بشكل طفيف أثناء دورة العصر.

⚠ تنبيه

لا تقم بتركيب الغسالة على قاعدة أو بنية غير مدعومة بشكل جيد.

درجة حرارة الماء

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء؛ حيث إن الغسالة تحتفظ دوماً ببعض الماء في صمامات الماء أو المضخات أو الخراطيم أو في الثلاثة معاً. يتسبب الماء المتجمد بالوصلات في إلحاق ضرر بالسيور والمضخات والمكونات الأخرى للغسالة.



التركيب

تفاصيل عملية التركيب

الخطوة ١ اختيار مكان الغسالة

متطلبات المكان:

- سطح مستو وصلب بدون سجاد أو أرضية تحتل إعاقاة التهوية
- بعيد عن ضوء الشمس المباشر
- وجود مساحة كافية للتهوية والتوصيلات
- تكون درجة الحرارة المحيطة دائمًا أعلى من درجة التجمد (°C ٠)
- بعيد عن أي مصدر حرارة

الخطوة ٢ فك مسامير الشحن

قم بتفريغ محتويات عبوة المنتج وإزالة كل مسامير الشحن.


ملحوظة

قد يختلف عدد مسامير الشحن حسب الطراز.


تحذير

- قد تشكل مواد التغليف خطرًا على الأطفال. تخلص من تلك المواد (الأكياس البلاستيكية والبوليستيرين وغيرها من المواد) بعيدًا عن متناول الأطفال.
- لتجنب حدوث إصابات، قم بتغطية الفتحات بأغطية المسامير بعد فك مسامير الشحن. لا تقم بنقل الغسالة دون أن تكون مسامير الشحن في مكانها. قم بتركيب مسامير الشحن قبل نقل الغسالة إلى مكان آخر. احتفظ بمسامير الشحن في مكان آمن لاستخدامها في المستقبل.



١. قم بإرخاء كل مسامير الشحن الموجودة بالجهة الخلفية للغسالة باستخدام مفتاح الربط المرفق.

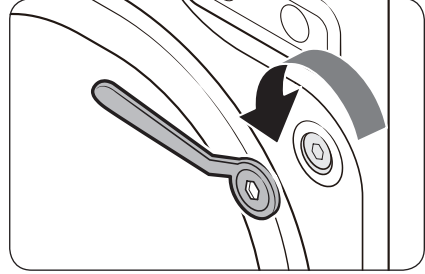

٢. سدّ جميع الفتحات باستخدام أغطية المسامير البلاستيكية المرفقة مع الجهاز.
احتفظ بمسامير الشحن لاستخدامها في المستقبل.

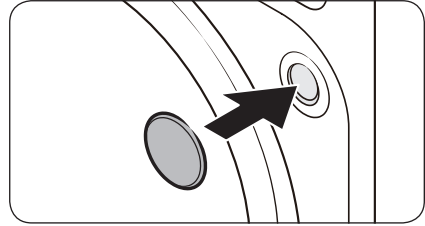

٣. أغلق جميع الأغشية البلاستيكية للمسامير في الجزء الخلفي من الغسالة.

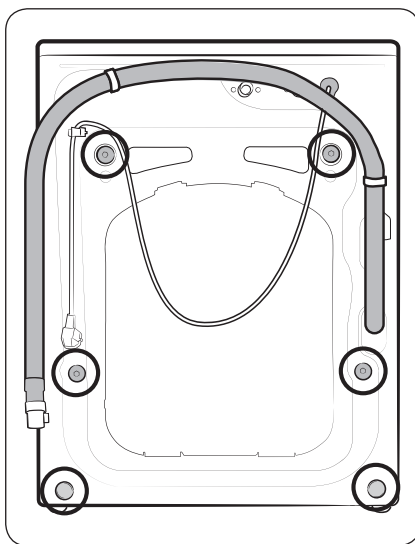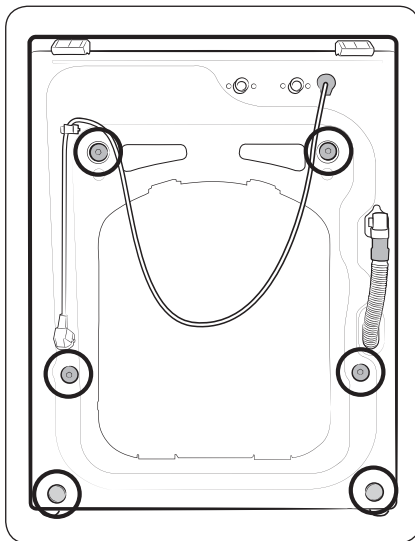


التركيب


الخطوة ٣ ضبط أرجل استواء الغسالة

العربية

١. انقل الغسالة إلى موضعها برفق. قد يؤدي استعمال القوة المفرطة إلى تلف أرجل الاستواء.
٢. اضبط استواء الغسالة باستخدام أرجل الاستواء يدويًا.

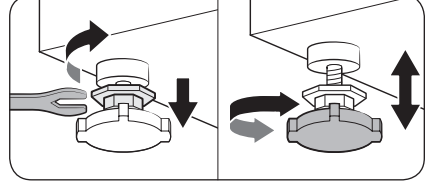


٣. عند الانتهاء من ضبط الاستواء، أحكم ربط الصواميل باستخدام مفتاح الربط.

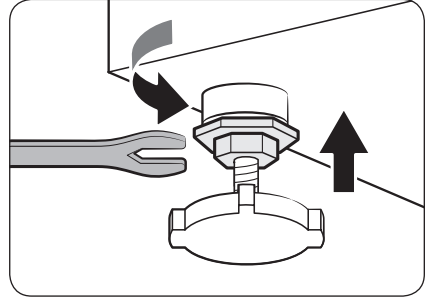

⚠ تنبيه

عند تركيب المنتج، تأكد من أن أرجل الاستواء لا تضغط على سلك التيار الكهربائي.

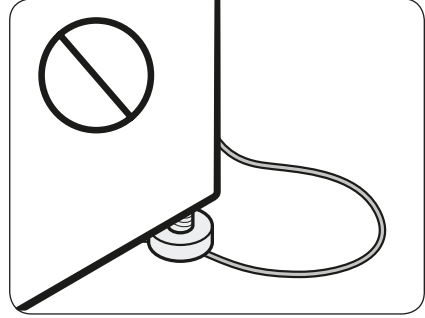

⚠ تنبيه

تأكد من أن جميع أرجل استواء الغسالة ثابتة على سطح الأرض لتجنب تحرك الغسالة أو إصدار ضوضاء بسبب الاهتزاز. وبعد ذلك، تحقق من عدم تأرجح الغسالة. عند استواء الغسالة وعدم تأرجحها، قم بربط الصواميل.



الخطوة ٤ توصيل خرطوم الماء


قد يختلف خرطوم الماء المتوفر حسب الطراز. لذا يُرجى اتباع التعليمات وفقًا لخرطوم الماء المتوفر.

التوصيل بصنبور ماء ملولب


١. قم بتوصيل خرطوم الماء بصنبور الماء، ثم قم بتدويره جهة اليمين لربطه.

⚠ تنبيه


قبل توصيل خرطوم الماء، تأكد من وجود حلقة مطاطية في موصل الخرطوم. لا تستخدم الخرطوم إذا كانت الحلقة المطاطية تالفة أو مفقودة.

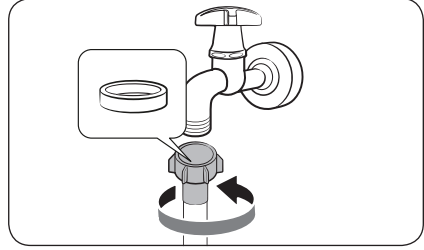

٢. قم بتوصيل الطرف الآخر من خرطوم الماء بصمام إمداد المياه الموجود بالجزء الخلفي من الغسالة، وقم بتدويره جهة اليمين لربطه.

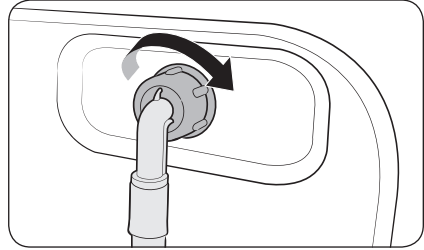

٣. افتح صنبور الماء ببطء، وتحقق من عدم وجود أي تسريبات حول مناطق التوصيل. إذا كانت هناك تسريب في الماء، فكرر الخطوات ١ و٢.

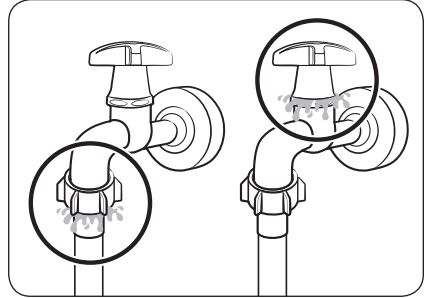

⚠ تحذير

في حالة تسرب المياه، قم بإيقاف تشغيل الغسالة وافصلها عن مصدر الكهرباء؛ ثم اتصل بمركز خدمة Samsung المحلي في حالة وجود تسرب من خرطوم الماء، أو اتصل بفي سباكة في حالة وجود تسرب من صنبور الماء. بخلاف ذلك، قد تحدث صدمة كهربائية.

⚠ تنبيه

لا تمدد خرطوم الماء بالقوة. إذا كان الخرطوم قصيرًا جدًا، فاستبدله بخرطوم ضغط عالي أطول.




التركيب


التوصيل بصنوبر ماء غير ملولب

العربية


١. افصل المحوّل (A) عن خرطوم الماء (B).

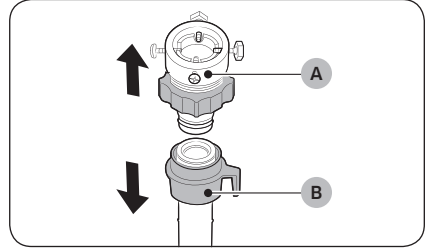


٢. فكّ البراغي الأربعة الموجودة بالمحوّل باستخدام مفك براغي مصلّب (فيليبس).

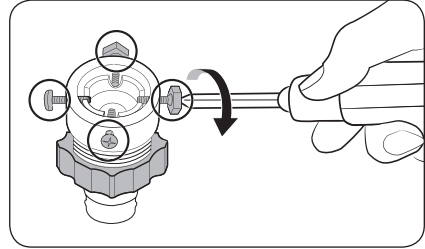


٣. أمسك المحوّل، ولف الجزء (C) باتجاه السهم لإرخائه بمقدار ٥ مم (*).

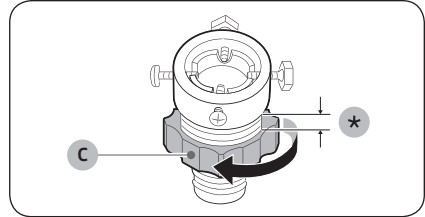

٤. أدخل المحوّل في صنوبر الماء، ثم أحكم ربط المسامير مع رفع المحوّل.
٥. لف الجزء (C) باتجاه السهم لإحكام ربطه.

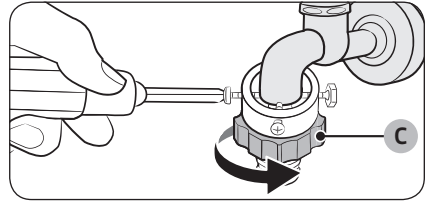

٦. أثناء سحب الجزء (D) لأسفل على خرطوم الماء، قم بتوصيل خرطوم الماء بالمحول. وبعد ذلك، قم بفك الجزء (D). يُسمع صوت طقطقة عند تثبيت الخرطوم بالمحول.

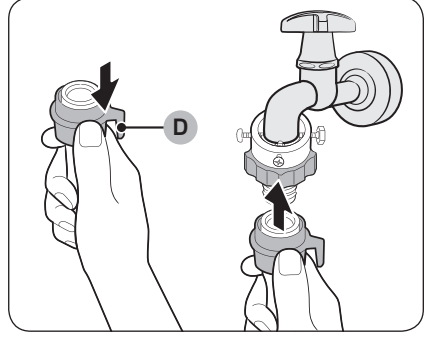


٧. لإكمال توصيل خرطوم الماء، راجع ٢ و ٣ في القسم "التوصيل بصنبور ماء ملولب".

ملحوظة

- بعد توصيل خرطوم الماء بالمحول، اسحب خرطوم الماء لأسفل للتحقق من توصيله بشكل صحيح.
- استخدم صنبور ماء من الأنواع الرائجة. إذا كان الصنبور مربع الشكل أو كبيرًا جدًا، فقم بإزالة حلقة المبادعة قبل إدخال الصنبور في المحول.

بالنسبة للطرز المزودة بفتحة إضافية لتوريد الماء الساخن:


١. قبل الطرف ذا اللون الأحمر من خرطوم الماء الساخن بفتحة إمداد الماء الساخن الموجودة بالجهة الخلفية للغسالة.
٢. قبل الطرف الآخر من خرطوم الماء الساخن بصنبور الماء الساخن.

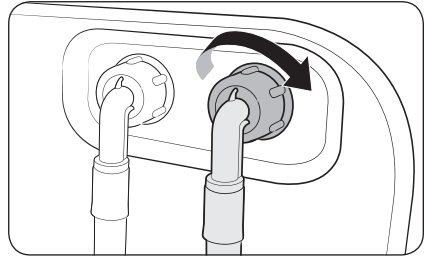

التركيب

خرطوم مانع تسرب الماء (الطرز الملائمة فقط)

ينبه خرطوم مانع تسرب الماء المستخدمين لخطر تسرب الماء. حيث يستشعر تدفق الماء، ومن ثمَّ يتحول المؤشر (A) الموجود في المنتصف إلى اللون الأحمر في حالة وجود تسرب للماء.

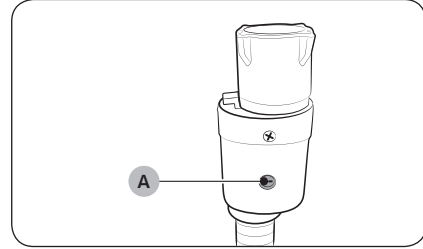

ملحوظة

يجب تركيب نهاية محبس خرطوم الماء بصنبور المياه وليس بالغسالة.


العربية

الخطوة ٥ وضع خرطوم تصريف الماء

يمكنك وضع خرطوم التصريف بثلاث طرق:


فوق حافة حاوية الغسيل

يجب أن يوضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و ٩٠ سم (*) عن الأرض. وللحفاظ على انشاء فوهة خرطوم التصريف، استخدم حامل الخرطوم البلاستيكي (A) المتوفر مع المنتج. ثبت الحامل بالحائط باستخدام خطاف، وذلك لضمان مستوى تصريف ثابت.

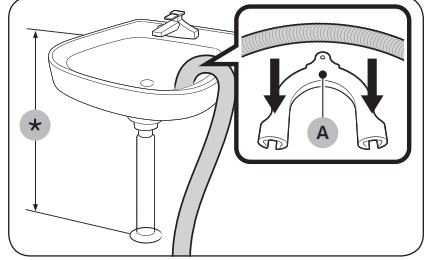

في أنبوب تصريف

- يجب أن يكون أنبوب التصريف على ارتفاع يتراوح بين ٦٠ سم و ٩٠ سم (*). يُنصح باستخدام ماسورة رأسية يبلغ ارتفاعها ٦٥ سم.
- للتأكد من بقاء خرطوم التصريف في مكانه، استخدم حامل الخرطوم البلاستيكي المتوفر مع المنتج (راجع الشكل).
 - لمنع جريان تدفق الماء أثناء التصريف، تأكد من إدخال خرطوم التصريف ١٥ سم في أنبوب التصريف.
 - لمنع خرطوم التصريف من الحركة، ثبت حامل الخرطوم بالحائط.
 - متطلبات الماسورة الرأسية للتصريف:
 - قطر يبلغ ٥ سم بحد أدنى
 - سعة جرف تبلغ ٦٠ لترًا في الدقيقة بحد أدنى

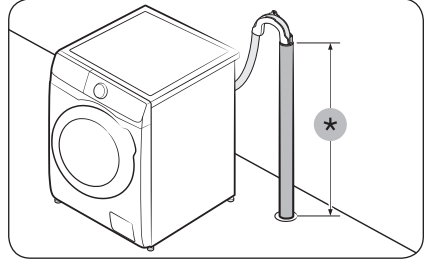

الخطوة ٦ تشغيل

وهل سلك التيار الكهربائي بمقبس حائط محمي بمنصهر أو قاطع دائرة كهربائية. ثم اضغط على (⏻) لتشغيل الغسالة.


قبل بدء التشغيل

الإعداد الأولي

- عند تشغيل الغسالة لأول مرة، تعرض الشاشة عملية الإعداد الأولي. اتبع التعليمات الموجودة على الشاشة لإتمام عملية الإعداد الأولي.
- لن يتكرر الإعداد الأولي بعد إكماله.
- يتضمن الإعداد الأولي تحديد اللغة والقياس وبرنامجًا تعليميًا موجزًا.
- اضغط على  للانتقال إلى الشاشة التالية.

تشغيل القياس

- يتضمن الإعداد الأولي عملية القياس والتي تأتي بعد تحديد اللغة. يجب إجراء القياس قبل استخدام الغسالة.
- قم بتفريغ الحاوية واضغط باستمرار على  لبدء القياس.
- عند اكتمال القياس، يتم إيقاف تشغيل الطاقة ثم تشغيلها تلقائيًا.
- إذا كنت ترغب في إجراء القياس مرة أخرى، اضغط باستمرار على  لمدة ٣ ثواني لإدخال وظيفة النظام ثم حدد القياس.

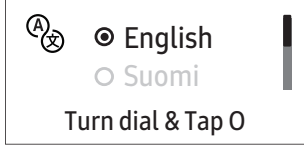١- تحديد اللغة	٢- القياس	٣- شاشة الترحيب
	أفرغ الأسطوانة قبل القياس [اضغط على O للتخطي]	مرحبًا!
٤- البرنامج التعليمي		
لنكتشف الغسالة الجديدة! [اضغط على O للتخطي]	— غسالة الذكاء الاصطناعي الخاصة بك! — تم كل شيء!	



إرشادات الغسيل

الخطوة ١ الفرز

افرز الملابس المطلوب غسلها وفقًا للمعايير التالية:

- بطاقة العناية: قم بفرز الملابس وتصنيفها إلى أقطان وألياف مخلوطة ومواد اصطناعية والحرير والأصواف والحرير الاصطناعي (الرايون).
- اللون: أفضل الملابس البيضاء عن الملابس الملونة.
- الحجم: يؤدي خلط قطع الملابس ذات الأحجام المختلفة في الحاوية معًا إلى تحسين مستوى أداء الغسل.
- الحساسية: اغسل الملابس الرقيقة وحدها باستخدام الخيار كوي سهل للملابس الصوفية والستائر والملابس الحريرية النقية والجديدة. راجع بطاقات العناية الموجودة على قطع الملابس.

ملحوظة

تأكد من مراجعة ملصقات العناية الموجودة على الملابس، وافرز قطع الملابس وفقًا لها قبل بدء الغسل.

الخطوة ٢ إفراغ الجيوب

أفرغ كافة جيوب الملابس المطلوب غسلها

- قد يؤدي وجود أجسام معدنية مثل العملات المعدنية والدبابيس والإبريمات المثبتة بالملابس إلى تلف قطع الملابس الأخرى وكذلك الحوض.

أقلب الملابس ذات الأزرار والملابس المطرزة

- إذا تُركت شحّابات السراويل أو السترات مفتوحة أثناء الغسل، فقد يتسبب هذا في تلف الحاوية. يجب غلق الشحّابات وتثبيتها بشريطة.
- قد تتشابك الملابس ذات الأشرطة الطويلة مع ملابس أخرى. احرص على ربط الأشرطة قبل بدء الغسل.

الخطوة ٣ استخدام شبكة الغسيل

- يجب وضع حمالات الصدر (التي يمكن غسلها في غسالة) في شبكة الغسيل. حيث قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما يؤدي إلى تمزيق قطع أخرى من الغسيل.
- قد تعلق الملابس الصغيرة والخفيفة بالباب، مثل الجوارب والقفازات والجوارب النسائية ومناديل اليد. لذا، يُرجى وضعها داخل شبكة غسيل ناعمة.
- لا تغسل شبكة الغسيل وحدها دون وجود ملابس بها؛ فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة وحدوث إصابات.



قبل بدء التشغيل

الخطوة ٤ تحديد سعة تحميل الملابس

لا تتجاوز الوزن المحدد للغسالة. قد يتسبب التحميل الزائد في انخفاض مستوى أداء الغسالة. لمراجعة سعة التحميل الملائمة لأنواع الملابس، انظر الصفحة ٣٥.

ملحوظة

عند غسل المفروشات أو أغطية اللحاف، قد تطول مدة الغسل أو تقل فعالية عملية الدوران. بالنسبة لأطقم الأسرة أو أغطية أطقم الأسرة، يوصى بأن تكون سعة الحمولة ٢,٠ كجم أو أقل.

تنبيه

- فالغسيل غير المتوازن قد يقلل من كفاءة العصر.
- تأكد من دخول قطع الملابس بشكل كامل في الحاوية وأنها غير عالقة بالباب.
- لا تغلق الباب بعنف. أغلق الباب برفق. وإلا، قد لا ينغلق الباب بطريقة صحيحة.

الخطوة ٥ استخدام نوع المسحوق المناسب

يعتمد نوع المنظف على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف) والألوان ودرجة حرارة الماء ودرجة الاتساخ. تأكد من استخدام منظف الغسيل المصمم خصيصًا للغسالات الأوتوماتيكية.

ملحوظة

- اتبع توصيات الشركة المصنعة للمنظف بخصوص وزن الملابس ودرجة الاتساخ ومستوى عسر الماء في منطقتك المحلية. إذا لم تكن متأكدًا من عسر الماء، فاتصل بالهيئة المحلية المسؤولة عن الموارد المائية لديك.
- لا تستخدم منظفًا صلبًا أو خشنًا. حيث قد يترسب هذا المنظف بعد دورة الشطف ويتسبب في انسداد مخرج التصريف.


تنبيه

عند غسل الملابس الصوفية باستخدام دورة الصوف، استخدم منظفًا مخصصًا للملابس الصوفية. قد يترك مسحوق الغسيل مع دورة الصوف أثرًا على الغسيل ويتسبب في تغير ألوانه.

الإرشادات الخاصة بدرج المنظف

توفر الطرز ذات المزود اليدوي مؤزماً بثلاث حجيرات: الحجيرة اليسرى للغسلة الأساسية، والحجيرة الموجودة بالمنتصف لمنظفات الأقمشة، والحجيرة اليمنى للغسلة الأولية.

١. **I** حجيرة الغسل المسبق: ضع منظف الغسل المسبق.
٢. **II** حجيرة الغسل الأساسي: ضع منظف الغسل الأساسي ومنقي المياه ومنظف النقع ومادة التبييض و/أو مواد إزالة البقع.
٣. **III** حجيرة منعم الأقمشة: ضع الإضافات مثل منعم الأقمشة. لا تتجاوز خط الحد الأقصى (A).

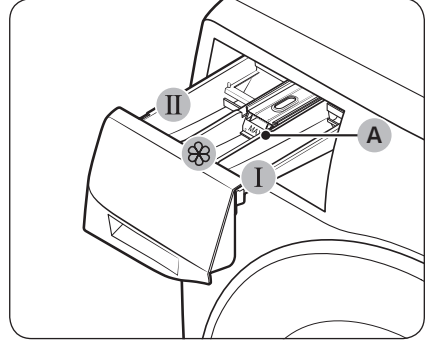


⚠ تنبيه

لا تستخدم أنواع المنظفات التالية في الدرج:

- الأقراص أو الكبسولات أو كرات أو شبكات التنظيف.

لوضع المنظفات في المزود اليدوي


١. اسحب درج المنظف للخارج.
٢. ضع منظف الغسيل في **II** حجيرة الغسل الأساسي وفقاً لإرشادات الشركة المصنعة وتوصياتها. لاستخدام منظف سائل، راجع الصفحة ٣١.

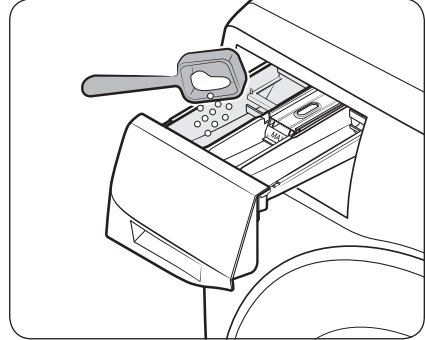


قبل بدء التشغيل

العربية

٣. ضع منغم الأقمشة في  حجرة المنغم. لا تتجاوز خط الحد الأقصى.

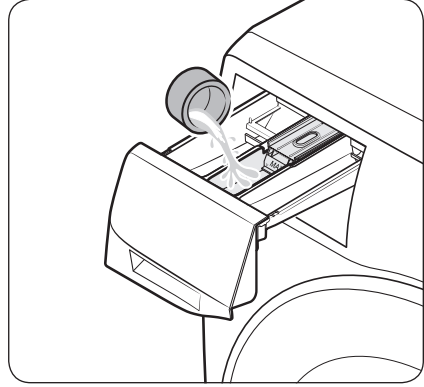


٤. إذا كنت تريد الغسل المسبق، فضع منظف الغسل المسبق في  حجرة الغسل المسبق وفقًا لإرشادات الشركة المصنعة وتوصياتها.
٥. أغلق درج المنظف.

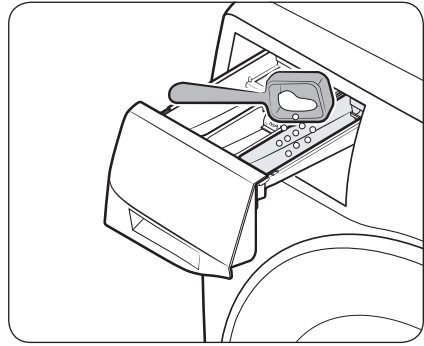


⚠ تنبيه


- لا تضع مسحوق غسيل في حاوية المنظف السائل.
- يجب تخفيف منغم الأقمشة المركز بالماء قبل وضعه.
- لا تضع منظف الغسل الأساسي في  حجرة المنغم.

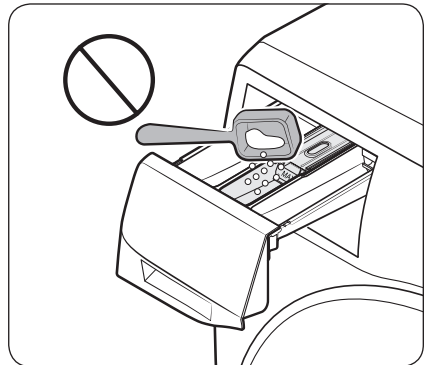

لاستخدام المنظف السائل يدويًا (الطرز الملائمة فقط)

أدخل أولاً حاوية السائل المتوفرة في **II** حجرة الغسل الأساسي. ثم
ضع المنظف السائل في الحاوية أسفل خط الحد الأقصى (A) المرسوم.

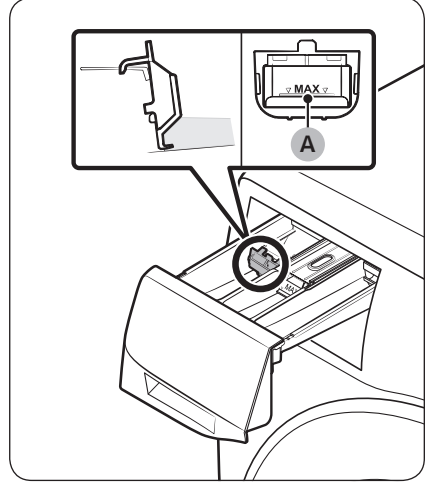

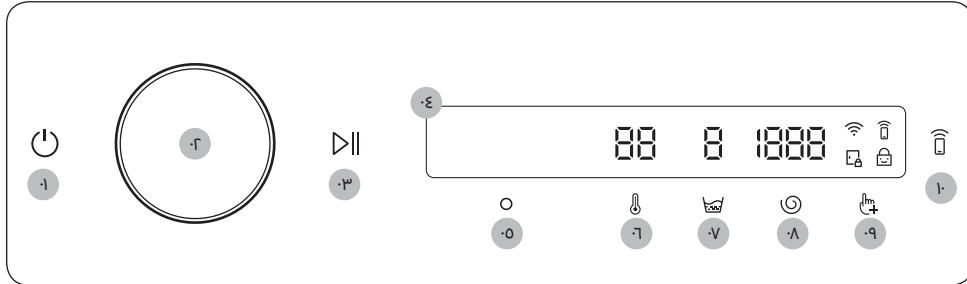

١ تشغيل	اضغط على هذا الزر لتشغيل الغسالة أو إيقاف تشغيلها. • إذا لم تستخدم لوحة التحكم لمدة ١٠ دقائق بعد تشغيل الغسالة، سيتم إيقاف تشغيل الغسالة تلقائيًا. • عند اكتمال الدورة يتم إيقاف تشغيل الغسالة تلقائيًا.
٢ قرص التنقل	⚠ تنبيه لا تضغط على إيقاف تشغيل الغسالة عندما تكون دورة الغسل قيد التقدم. اضغط باستمرار على إيقاف الدورة مؤقتًا أولاً، ثم اضغط على إيقاف تشغيل الغسالة.
٣ بدء/إيقاف مؤقت	أدر قرص التنقل إلى اليسار أو اليمين للتنقل عبر الدورات والوظائف. عند تدوير قرص التنقل، تعرض شاشة العرض LCD ما حددته (مثل الدورة والوظائف الإضافية ووظائف النظام).
٤ الشاشة	اضغط على هذا الزر باستمرار لبدء التشغيل أو إيقافه مؤقتًا.
٥ موافق	تعرض الشاشة معلومات الدورة الحالية والوقت المتبقي المقدّر، أو رسالة إعلام عند حدوث مشكلة.
٦ درجة الحرارة	اضغط على هذا الزر لتأكيد ما حددته من وظائف أو إعدادات.
٧ شطف	اضغط على هذا الزر لتغيير درجة حرارة الماء للدورة المحددة. • يشير المؤشر الموجود فوق الزر إلى الإعداد الافتراضي أو المحدد.
٨ دوران	اضغط على هذا الزر لتغيير عدد مرات الشطف للدورة المحددة. • يشير المؤشر الموجود فوق الزر إلى الإعداد الافتراضي أو المحدد.
٩ وظيفة إضافية	اضغط على هذا الزر لتغيير سرعة الدوران للدورة المحددة. • يشير المؤشر الموجود فوق الزر إلى الإعداد الافتراضي أو المحدد.
١٠ التحكم الذكي	اضغط على هذا الزر للدخول إلى قائمة الوظائف الإضافية. استمر في الضغط لمدة ٣ ثوانٍ للدخول إلى قائمة الوظائف الإضافية.
	اضغط على هذا الزر لتنشيط/إلغاء تنشيط وظيفة التحكم الذكي. اضغط باستمرار للدخول في وضع الإقران للاتصال بتطبيق SmartThings. • في حالة تنشيط الوظيفة التحكم الذكي، يمكنك التحكم في الغسالة عن بعد باستخدام تطبيق SmartThings على هاتفك الذكي أو جهازك اللوحي (Android أو iOS).



أوصاف الرموز


• يشير هذا الرمز إلى أن الغسالة متصلة بشبكة Wi-Fi.	Wi-Fi	
• يشير هذا الرمز إلى أن وظيفة التحكم الذكي قيد التشغيل. • لمزيد من المعلومات حول التحكم الذكي، انظر صفحة ٤٢.	التحكم الذكي	
• يشير هذا الرمز إلى أن الباب مقفل ولا يمكن فتحه. • يقفل الباب تلقائيًا أثناء الدورة ويتم تشغيل هذا المؤشر. • يمكنك فتح الباب عند اختفاء هذا الرمز.	قفل الباب	
• يشير هذا الرمز إلى أن وظيفة قفل ضد الأطفال قيد التشغيل. • لمزيد من المعلومات حول وظيفة قفل ضد الأطفال، انظر صفحة ٣٩.	قفل ضد الأطفال	



العمليات

تشغيل دورة


العربية

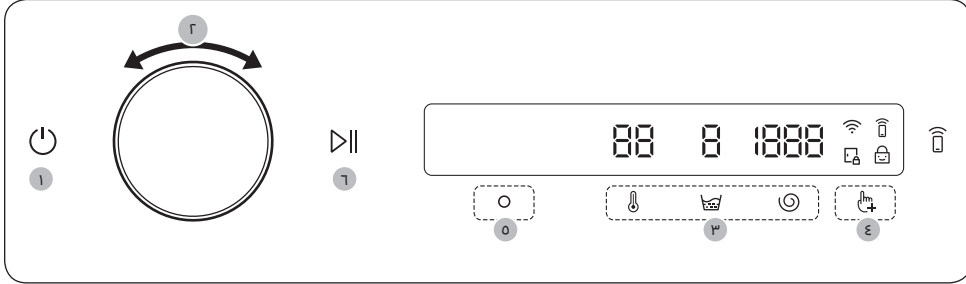

١. اضغط على (1) لتشغيل الغسالة.
٢. لف قرص التنقل لتحديد الدورة التي تريدها.
 - لمزيد من المعلومات حول نظرة عامة على الدورات، انظر صفحة ٣٥.
٣. اضغط على (3) أو (3) أو (3) لتغيير إعدادات الدورة الافتراضية.
 - لمزيد من المعلومات حول الوظائف الإضافية، انظر صفحة ٣٧.
٤. اضغط على (3)، ثم لف قرص التنقل لتحديد وظيفة إضافية.
 - لمزيد من المعلومات حول الوظائف الإضافية، انظر صفحة ٣٧.
٥. اضغط على (0) لتغيير إعدادات الوظيفة الإضافية المحددة.
 - ليس لكل الدورات وظائف إضافية متاحة.
٦. اضغط باستمرار على (1) لبدء التشغيل.
 - بمجرد ضبط الدورة التي تريدها، تعرض الشاشة وصفاً موجزاً للدورة، والحد الأقصى لحمولة الغسيل، ومدة الدورة. كما يمكنك التحقق من تقدم الدورة والمدة المتبقية للدورة ورموز المعلومات.



نظرة عامة على الدورات



يمكن استخدام دورات أخرى بعد إضافتها إلى قائمة الدورات الخاصة بك باستخدام الوظيفة دوراتي. لمزيد من المعلومات، راجع قسم دوراتي في صفحة ٣٨

أوصاف الدورات

الدورة	الوصف	أقصى وزن (كجم)
القطن الاقتصادي (لظرز المملكة العربية السعودية فقط)	أداء مثالي مع استهلاك طاقة أقل للمنسوجات القطنية أو أغطية السرير أو مفارش المائدة أو الملابس الداخلية أو المناشف أو القمصان. لتوفير الطاقة، ربما تنخفض درجة الحرارة الفعلية للغسالة عن الدرجة المحددة.	القصوى
القطن	للملابس القطنية أو أغطية الأسرة أو مفارش المناضد أو الملابس الداخلية أو الفوط أو القمصان. يتم ضبط وقت الغسل وعدد مرات الشطف تلقائيًا وفقًا للحمل.	القصوى
الغسل السريع	- للملابس الأقل اتساخًا التي تقل حمولتها عن ٥,٠ كجم. - يستغرق هذا البرنامج ١٧ دقيقة على الأقل، وذلك وفقًا لبعض الظروف مثل ضغط الماء أو تعسر الماء و/أو تحديد خيارات إضافية. - يُنصح باستخدام كمية منظف أقل من ٢٠ جرامًا (مع الملابس التي تزن ٥,٠ كجم).	٥
بخار التنظيف	- للملابس ذات الألوان الثابتة والملابس شديدة الاتساخ، فإن هذه الدورة تقوم بتسخين الماء لأكثر من ٦٠ °C للقضاء على البكتيريا. - إذا قمت بإيقاف دورة الغسيل في أثناء قيام الغسالة بتسخين الماء، فسيظل الباب مغلقًا للحفاظ على سلامتك.	٩
فقاعة التشغيل +	لتنظيف الملابس شديدة الاتساخ باستخدام فقاعات قوية.	٩
فقاعة اقتصادية +	لغسل موفر للطاقة باستخدام كمية أقل من الماء والطاقة.	٩
الألوان	تقوم هذه الدورة بغسل الملابس في ماء منخفض الحرارة لمنع تغير اللون.	٩
الفوط	- لفوط الحمامات، ومناشف الوجه، والمفارش. - يوصى بأن تكون سعة الحمولة أقل من ٥ كجم.	٩
أطقم الأسرة	- لأغطية الأسرة وأطقم الأسرة وأغطية الفراش، وما إلى ذلك. - للحصول على أفضل النتائج، اغسل نوعًا واحدًا فقط من أطقم الأسرة وتأكد من أن وزن الغسيل أقل من ٢,٠ كجم.	٤
الأطقم الرفيعة	لأطقم الأسرة الصيفية الرفيعة.	٤
القمصان	للقمصان والبلوزات المصنوعة من القطن، والألياف الصناعية.	٥
البلوزات	للقمصان والبلوزات المصنوعة من القطن، والألياف الرقيقة. نوصي باستخدام منظف مصنوع خصيصًا لهذا الغرض.	٥



العمليات

العربية

الدورة	الوصف	أقصى وزن (كجم)
الصوف	- هذه الدورة مخصصة للملابس الصوفية القابلة للغسل التي تقل حمولتها عن ٢٠ كجم. - تتميز الدورة الصوف باهتزاز خفيف ونقع دقيق لحماية الألياف الصوفية من الانكماش/التلف. - يُنصح باستخدام منظف عادي.	٢
الملابس الرياضية	لغسل الملابس الرياضية مثل القمصان الرياضية وسراويل التدريب والقمصان/البلوزات وملابس التمارين الرياضية. توفر هذه الدورة إزالة فعالة للأتربة من خلال دوران الحاوية المتحكم فيه لعناية خاصة بالأقمشة.	٥
العناية بالطفل	تتميز هذه الدورة بالغسل على درجة حرارة عالية، ولفات شطف إضافية للمساعدة في إزالة أي آثار للمنظف بفعالية.	٩
يوم غائم	لتجفيف مثالي بالدوران في حالة الرطوبة العالية.	٩
غسل نظيف	تتميز بمرات شطف إضافية لضمان شطف الغسيل جيدًا.	٩
منعم عميق (لا ينطبق على الطرز في المملكة العربية السعودية)	تقوم هذه الدورة بغسل الملابس مع الحفاظ على نعومة الأقمشة.	٩
الشطف والدوران	لكميات الغسيل التي تحتاج إلى الشطف فقط، أو التي تحتاج إضافة منعم أقمشة إلى مساعد الشطف.	-
الغسل والتجفيف	غسل الملابس النظيفة إلى حي ما وتجفيفها بسرعة.	٣
تجفيف فقط	حدده لتجفيف الملابس فقط.	
العناية بالأطقم الهوائية	إزالة الروائح الكريهة والبكتيريا والغبار من الغسيل.	
التعقيم بالهواء	إزالة الروائح الكريهة والبكتيريا من الغسيل.	
تنظيف الأسطوانة+	- تنظف الحاوية وحشية الباب المطاطية بإزالة الأوساخ والبكتيريا منهما. - لمزيد من المعلومات، راجع قسم تنظيف الأسطوانة+ في صفحة ٤٥.	-
تجفيف الحوض الذاتي	لتجفيف الجزء الداخلي من الغسالة للحفاظ عليها نظيفًا وصحيًا. يجب إزالة كل الملابس الموجودة في الحوض قبل بدء هذه الدورة.	-

الوظائف الإضافية

استخدام الوظائف الإضافية

١. اضغط على .
٢. لف قرص التنقل لتحديد الوظيفة الإضافية المطلوبة.
٣. اضغط على  لتغيير إعدادات الوظيفة المحددة أو بدء تشغيل الوظيفة.

ملحوظة

- للعودة إلى الشاشة الرئيسية، اضغط على  مرة أخرى أو لف قرص التنقل لتحديد رجوع ثم اضغط على .
- إذا كانت الوظيفة المحددة غير مدعومة، يتم عرض الرسالة "غير مدعّم حالياً" ويتم إلغاء تنشيط الزر .
- عند تحديد وظيفة إضافية، تظهر رسالة تعليمات مختصرة لأول عشر مرات من الاستخدام.

التجفيف

- يمكن إضافة عملية تجفيف في نهاية دورة الغسل.
١. حدد دورة غسيل وقم بتغيير إعدادات الدورة إذا لزم الأمر.
 ٢. اضغط على .
 ٣. لف قرص التنقل لتحديد التجفيف، ثم اضغط على .
 ٤. لف قرص التنقل أو اضغط على  بشكل متكرر لتحديد وقت التجفيف المطلوب.
- يمكنك الاختيار من بين إيقاف أو العادي أو إضافي أو القماش الرقيق أو ٣٠ دقيقة أو ١ ساعة و ٠٠ دقيقة أو ١ ساعة و ٣٠ دقيقة أو ٢ ساعة و ٠٠ دقيقة، أو ٢ ساعة و ٣٠ دقيقة.
٥. اضغط باستمرار على .

النقع في فقاعات

- تساعد هذه الوظيفة في إزالة كميات كبيرة من البقع الصعبة المختلفة. عند تحديد خيار النقع في فقاعات، يتم نقع الملابس في فقاعات الماء لضمان فعالية الغسيل.
١. حدد دورة غسيل وقم بتغيير إعدادات الدورة إذا لزم الأمر.
 ٢. اضغط على .
 ٣. لف قرص التنقل لتحديد النقع في فقاعات، ثم اضغط على .
- يتوفر النقع في فقاعات مع دورات التنظيف التالية ويضيف لكل دورة من هذه الدورات مدة تصل إلى ٣٠ دقيقة: القطن، الغسل السريع، بخار التنظيف، فقاعة التشغيل +، فقاعة اقتصادية +، الفوط، أطقم الأسرة، القمصان، العناية بالطفل، و منع عميق.
٤. اضغط باستمرار على .

أضف ملابس

استخدم هذه الوظيفة لإضافة غسيل بعد تشغيل دورة الغسيل.

١. اضغط على .
٢. لف قرص التنقل لتحديد أضف ملابس، ثم اضغط على .
- يبدأ تصريف الماء. أضف غسيل عندما يتوقف مؤشر قفل الباب ثم أغلق الباب.
٣. اضغط باستمرار على .

دوراتي

قم بإضافة أو إزالة دورات لإنشاء قائمة شخصية بالدورات.

١. اضغط باستمرار على  لمدة ٣ ثوانٍ.
٢. لف قرص التنقل لتحديد دوراتي، ثم اضغط على .
- لا يمكنك تحرير دورة لإنشاء دورة شخصية إلا في حالة عدم تشغيل الغسالة.
٣. لف قرص التنقل لتحديد الدورة المطلوبة.
٤. اضغط على  لإضافة أو إزالة الدورة المحددة.
- يتم حفظ إضافة وإزالة الدورة تلقائيًا.
٥. بمجرد الانتهاء من إنشاء دوراتي، اضغط على  للعودة إلى شاشة الدورات.

ملحوظة

- لا يمكن إزالة دورات الغسيل القطن وتنظيف الأسطوانة+ من قائمة دورات الغسيل.
- يمكنك أيضًا تحرير وظيفة دوراتي في التطبيق SmartThings.

ضوء الحوض

يؤدي هذا إلى تشغيل الضوء داخل الحاوية حتى تتمكن من فحص حالة الملابس الموجودة بالداخل.

١. اضغط على .
٢. لف قرص التنقل لتحديد ضوء الحوض، ثم اضغط على .
- حتى إذا تم إيقاف تشغيل الغسالة، فسيتم تشغيل ضوء الحاوية طالما كان كابل الطاقة متصلاً.
- بمجرد تمكين وظيفة ضوء الحوض، سينطفئ ضوء الحاوية تلقائيًا بعد مرور دقيقتين.
- إذا تم فتح باب الغسالة، سيتم تشغيل ضوء الحاوية تلقائيًا. سينطفئ الضوء تلقائيًا بعد مرور دقيقتين.
- يمكن أن تؤدي قطرات الماء الموجودة على سطح ضوء الحاوية إلى تشتت الضوء بحيث يشبه البقعة الصفراء. وهذا مجرد خداع بصري وليس عطلاً.



تأجيل الانتهاء

يمكنك ضبط الغسالة لإجراء عملية الغسل تلقائيًا في وقت لاحق عن طريق اختيار تأجيل الوقت من ساعة واحدة حتى ٢٤ ساعة (بزيادة ساعة واحدة)، حيث تشير الساعة المعروضة إلى وقت انتهاء الغسل.

١. حدد دورة غسيل وقم بتغيير إعدادات الدورة إذا لزم الأمر.
 ٢. اضغط على .
 ٣. لف قرص التنقل لتحديد تأجيل الانتهاء، ثم اضغط على .
 ٤. لف قرص التنقل لتحديد الوقت المطلوب، ثم اضغط على .
 ٥. اضغط باستمرار على .
- تظهر الحالة على الشاشة وتقوم الغسالة بتدوير الحاوية لاستشعار وزن الحمولة (وذلك في حالة ضبط استشعار الحمولة مسبقًا للدورة المحددة). عند اكتمال استشعار الحمولة، تعرض الشاشة الوقت المتبقي حتى نهاية دورة الغسل.
 - لإلغاء تأجيل الانتهاء، اضغط على  لإعادة تشغيل الغسالة.

قفل ضد الأطفال

لتجنب بدء تشغيل الغسالة أو ضبطها دون قصد بواسطة الأطفال أو الرضع، تقوم وظيفة قفل ضد الأطفال بقفل جميع الأزرار باستثناء  و .

١. اضغط على .
٢. لف قرص التنقل لتحديد قفل ضد الأطفال، ثم اضغط على .
٣. اضغط على  لتحديد تشغيل أو إيقاف.

ملحوظة

- عندما تكون وظيفة قفل ضد الأطفال قيد التشغيل، يتم تعطيل جميع الأزرار باستثناء  و . ويتم قفل باب الغسالة أيضًا.
- يؤدي النقر على أي زر عندما تكون وظيفة قفل ضد الأطفال قيد التشغيل إلى إصدار منبه مع الرسالة "تشغيل القفل ضد الأطفال".
- لا يمكن فتح باب الغسالة بعد دورة الغسل عندما تكون وظيفة قفل ضد الأطفال قيد التشغيل. قم بإيقاف تشغيل هذه الوظيفة قبل فتح الباب لإخراج الغسيل.



العمليات

وظائف النظام

استخدام وظائف النظام

١. اضغط باستمرار على  لمدة ٣ ثوانٍ.
٢. لف قرص التنقل وحدد وظيفة النظام المطلوبة ثم اضغط على .
٣. اضغط على  لتغيير إعدادات الوظيفة المحددة أو بدء تشغيل الوظيفة.

ملحوظة

للعودة إلى الشاشة الرئيسية، اضغط على  مرة أخرى أو لف قرص التنقل لتحديد رجوع ثم اضغط على .

نمط الذكاء الاصطناعي

تحفظ هذه الوظيفة الدورات والإعدادات المستخدمة بشكل متكرر. عند تشغيل هذه الوظيفة، تتذكر الغسالة الدورات التي تستخدمها كثيرًا وإعداداتها (درجة الحرارة، والشطف، والدوران) وتعرضها بترتيب التكرار.

١. اضغط باستمرار على  لمدة ٣ ثوانٍ.
٢. لف قرص التنقل لتحديد نمط الذكاء الاصطناعي، ثم اضغط على .
٣. اضغط على  لتحديد تشغيل أو إيقاف.
 - الإعداد الافتراضي هو تشغيل. قم بضبطه إلى إيقاف إذا كنت لا تريد تشغيل هذه الوظيفة.
 - عند إيقاف تشغيل هذه الوظيفة، يتم إعادة ضبط جميع البيانات المحفوظة.

المنبه

يمكنك تشغيل الصوت أو إيقاف تشغيله من الغسالة. عند ضبط هذه الوظيفة على إيقاف التشغيل، لن يصدر صوت عن منبه AddWash (إضافة غسيل)، ونغمة اكتمال دورة التنظيف، وصغير الإطفاء. ولكن ستظل بقية الأصوات نشطة.

١. اضغط باستمرار على  لمدة ٣ ثوانٍ.
٢. لف قرص التنقل لتحديد المنبه، ثم اضغط على .
٣. اضغط على  لتحديد تشغيل أو إيقاف.
 - الإعداد الافتراضي هو تشغيل.

ملحوظة

يظل الإعداد غير مقيد حتى في حالة إعادة تشغيل الغسالة.

القياس

يمكنك تشغيل القياس مرة أخرى لحساب الوزن بدقة.

١. اضغط باستمرار على  لمدة ٣ ثوانٍ.
٢. لف قرص التنقل لتحديد القياس، ثم اضغط على .
 - لا يبدأ القياس إذا لم يتم غلق الباب بطريقة صحيحة.
 - تدور حاوية الغسيل باتجاه عقارب الساعة وعكس اتجاهها لمدة ٣ دقائق تقريبًا.
٣. عند اكتمال القياس، تظهر الرسالة "تم قياس الوزن" على شاشة العرض، وتتوقف الغسالة عن التشغيل تلقائيًا.



Wi-Fi

يمكنك تشغيل شبكة Wi-Fi الخاصة بالغسالة أو إيقاف تشغيلها.

١. اضغط باستمرار على  لمدة ٣ ثواني.
 ٢. لف قرص التنقل لتحديد Wi-Fi، ثم اضغط على .
 ٣. اضغط على  لتحديد تشغيل أو إيقاف.
- يتم إيقاف تشغيل شبكة Wi-Fi الخاصة بالغسالة كإعداد المصنع الافتراضي. ومع ذلك، يتم تشغيل شبكة Wi-Fi الخاصة بالغسالة تلقائيًا عند تشغيل الغسالة لأول مرة. وبعد ذلك، يظل الإعداد النهائي لشبكة Wi-Fi بغض النظر عن حالة تشغيل الغسالة.
 - بمجرد تشغيل شبكة Wi-Fi الخاصة بالغسالة والاتصال بالشبكة، تظل الغسالة متصلة بالشبكة حتى في حالة إيقاف تشغيل الطاقة.
 - يشير  لشبكة Wi-Fi إلى أن الغسالة متصلة بالوجه من خلال اتصال Wi-Fi.

اللغة

يمكنك تغيير لغة النظام.

١. اضغط باستمرار على  لمدة ٣ ثواني.
٢. لف قرص التنقل لتحديد اللغة، ثم اضغط على .
٣. لف قرص التنقل لتحديد اللغة المطلوبة، ثم اضغط على .

إعادة الضبط حسب المصنع

يمكنك إعادة ضبط الغسالة.

١. اضغط باستمرار على  لمدة ٣ ثواني.
٢. لف قرص التنقل لتحديد إعادة الضبط حسب المصنع، ثم اضغط على .
- يتم إعادة ضبط الغسالة إلى إعداد المصنع.



تحكم ذكي

يمكنك الاتصال بتطبيق SmartThings والتحكم في الغسالة عن بُعد.

توصيل الغسالة

١. قم بتنزيل تطبيق SmartThings وفتحه على هاتفك الذكي أو جهازك اللوحي (Android، و iOS).
٢. اضغط على  لتشغيل الغسالة.
٣. اضغط باستمرار على .
- a. تدخل الغسالة في وضع نقطة الوصول وتتصل بهاتفك الذكي أو جهازك اللوحي.
- b. اضغط على  لمصادقة غسالتك.
- c. بمجرد اكتمال عملية المصادقة، تتصل الغسالة بالتطبيق بنجاح.
- يمكنك استخدام الميزات المختلفة المتوفرة في تطبيق SmartThings.

ملحوظة

- إذا تعذر على الغسالة الاتصال بتطبيق SmartThings، حاول مرة أخرى.
- تحقق من الموجه الخاص بك إذا واجهت أي مشكلة في الاتصال بالإنترنت بعد توصيل الغسالة بتطبيق SmartThings.
- إذا كانت شبكة Wi-Fi متوقفة عن التشغيل، فاضغط باستمرار على  لمدة ٣ ثوانٍ للدخول إلى قائمة وظائف النظام، وحدد شبكة Wi-Fi لتشغيلها.
- يتيح لك تشغيل شبكة Wi-Fi الخاصة بالغسالة توصيل الغسالة عبر تطبيق SmartThings على هاتفك الذكي أو جهازك اللوحي، بغض النظر عن حالة تشغيل الغسالة. ومع ذلك، تظهر الغسالة في وضع عدم الاتصال على تطبيق SmartThings في حالة إيقاف تشغيل شبكة Wi-Fi الخاصة بالغسالة.
- أغلق الباب قبل بدء تشغيل وظيفة التحكم الذكي.
- إذا استخدمت الغسالة لفترة وجيزة دون توصيلها بتطبيق SmartThings، ستظهر رسالة منبثقة حول التحكم الذكي لمدة ٣ ثوانٍ عند الاستخدام العشرين والأربعين.
- في حالة عدم اتصال شبكة Wi-Fi الخاصة بالغسالة بنقطة وصول، فسيتم إيقاف تشغيل شبكة Wi-Fi عند تشغيل الطاقة.

البقاء متصلًا

- قم بإعداد وظيفة البقاء متصلًا في تطبيق SmartThings الذي تستخدمه لتظل وظيفة التحكم الذكي قيد التشغيل في نهاية الدورة. تظل غسالتك متصلة بالتطبيق حتى تتمكن من إرسال تعليمات إضافية، سواء كنت في المنزل أو في الخارج.
١. إذا قمت بتشغيل وظيفة البقاء متصلًا في تطبيق SmartThings، فستظل الغسالة في وضع الاستعداد لتوفير الطاقة بعد إكمال الدورة.
 - ستظل وظيفة البقاء متصلًا نشطة لمدة ٢٤ ساعة إذا ظل الباب مغلقًا.
 ٢. عندما تكون وظيفة البقاء متصلًا نشطة، تضيء رموز التحكم الذكي وقفل الباب و Wi-Fi على شاشة العرض بالغسالة.
 ٣. يمكنك التحكم في الغسالة بسهولة، وإضافة دورات الشطف أو الدوران أو التجفيف باستخدام تطبيق SmartThings.

ملحوظة

- يتغير وضع الغسالة إلى وضع الاستعداد لتوفير الطاقة عند إيقاف التشغيل مؤقتًا حتى في حالة عدم اتصال الغسالة بتطبيق SmartThings.
- في بعض الظروف، قد يضيء رمز قفل الباب فقط.



تطبيق SmartThings (الطراز الملائمة فقط)

اتصال Wi-Fi

- من هاتفك الذكي أو جهازك اللوحي، انتقل إلى Settings (إعدادات) وقم بتشغيل الاتصال اللاسلكي واختر AP (نقطة وصول).
- تدعم هذه الغسالة بروتوكولات Wi-Fi ٢,٤ جيجا هرتز.

تنزيل

احصل على تطبيق SmartThings من متاجر التطبيقات (متجر جوجل بلاي "Google Play Store"، ومتجر تطبيقات أبل "Apple App Store"، وتطبيقات سامسونج جالاكسي "Samsung Galaxy Apps") باستخدام عبارة البحث "SmartThings". قم بتنزيل التطبيق وتثبيته على جهازك.

ملحوظة

التطبيق عرضة للتغيير بدون إخطار مسبق لتحسين الأداء.

تسجيل الدخول

يجب أولاً أن تسجل دخولك على SmartThings باستخدام حساب Samsung الخاص بك. لإنشاء حساب Samsung جديد، اتبع الإرشادات الموجودة بالتطبيق. لا تحتاج إلى تطبيق منفصل لإنشاء الحساب الخاص بك.

ملحوظة

إذا كان لديك حساب Samsung، فاستخدمه لتسجيل الدخول. ويتم تسجيل دخول مستخدم الهاتف الذكية أو الأجهزة اللوحية من Samsung المسجلة تلقائياً.

لتسجيل جهازك على SmartThings

١. تأكد أن هاتفك الذكي أو جهازك اللوحي متصل بشبكة لاسلكية. إذا لم يكن مسجلاً، فاهذب إلى Settings (إعدادات) وقم بتشغيل الاتصال اللاسلكي واختر AP (نقطة وصول).
٢. افتح تطبيق SmartThings على هاتفك الذكي أو جهازك اللوحي.
٣. عند ظهور رسالة "A new device is found." (تم العثور على جهاز جديد)، اختر Add (إضافة).
٤. إذا لم تظهر أية رسائل، فاختر + واختر الجهاز الخاص بك من قائمة الأجهزة المتاحة. إذا كان الجهاز الخاص بك غير موجود بالقائمة، فاختر Device Type (نوع الجهاز) > Specific Device Model (طراز جهاز محدد)، ثم أضف جهازك يدوياً.
٥. سجل الجهاز الخاص بك على تطبيق SmartThings كما يلي.
 - a. أضف الجهاز الخاص بك إلى تطبيق SmartThings. تأكد من اتصال جهازك بتطبيق SmartThings.
 - b. عند اكتمال التسجيل، يظهر جهازك على هاتفك الذكي أو جهازك اللوحي.



تصريح بشأن البرامج مفتوحة المصدر

يحتوي البرنامج المضمّن في هذا المنتج على برامج مفتوحة المصدر. يمكنك الحصول على كود المصدر المعني خلال مدة ثلاث سنوات بعد آخر شحنة من هذا المنتج عن طريق الاتصال بفريق الدعم لدينا عبر <http://opensource.samsung.com> (يرجى استخدام قائمة "الاستفسار").

من الممكن أيضًا أن تحصل على كود المصدر المعني كاملاً داخل وسيط مادي كقرص مدمج؛ مقابل تكلفة قليلة. يؤدي عنوان URL التالي http://opensource.samsung.com/opensource/SMART_AT_051/seq/0 إلى معلومات الترخيص مفتوح المصدر المتعلقة بهذا المنتج. يسري هذا العرض على أي شخص يحصل على هذه المعلومات.



ملحوظة

عندما يتم تنشيط شبكة Wi-Fi، يزيد استهلاك الطاقة مقارنة بالقيم المحددة في المعلومات الإرشادية.

الصيانة

حافظ على الغسالة نظيفة لمنع تدهور مستوى الأداء وإطالة عمرها الافتراضي.

تنظيف الأسطوانة+

قم بإجراء دورة التنظيف هذه بشكل منتظم لتنظيف الحاوية بإزالة البكتريا منها. تسخن دورة التنظيف هذه المياه حتى ما بين ٦٠ درجة مئوية و٧٠ درجة مئوية، وتزيل أيضًا الأوساخ المتراكمة من حشية الباب المطاطية.

١. اضغط على (U).

٢. لف قرص التنقل لتحديد تنظيف الأسطوانة+.

٣. اضغط باستمرار على (A).

⚠ تنبيه

- لا تستخدم أي منظفات لتنظيف حاوية الغسيل. قد تسبب المخلفات الكيماوية داخل الحاوية تلفًا للغسيل أو لحاوية الغسالة.
- لمنع الترسبات الكلسية، أضف كمية مناسبة من المنظف وفقًا لعسر الماء المحلي أو أضف مادة إضافية لتنقية الماء مع المنظف.

تذكير تنظيف الأسطوانة+

وفقًا للطراز، فإن تذكير تنظيف الأسطوانة+ إما أن يكون رمزًا أو مؤشر LED.

بالنسبة للرموز، تُضيئ الرمز على لوحة التحكم.

بالنسبة لمؤشرات LED، يُضيئ مؤشر LED بجانب تنظيف الأسطوانة+، أو على منطقة الخيار الخاصة ب لوحة التحكم.


- يومض تذكير تنظيف الأسطوانة+ على لوحة التحكم مرة كل ٤٠ دورة غسل. يُنصح بتشغيل تنظيف الأسطوانة+ بانتظام.
- عندما ترى هذا التذكير يومض لأول مرة، يمكنك تجاهله في عمليات الغسل الست التالية. وبدءًا من دورة الغسل السابعة لا يظهر التذكير. لكنه، يظهر مرة أخرى عند اكتمال دورة الغسل الأربعين التالية.
- حتى بعد انتهاء آخر عملية، قد لا تختفي الرسالة "0".
- يمكنك تسجيل عدد مرات تشغيل دورة تنظيف الأسطوانة+ من خلال الضغط على زر (U). ولا يؤدي هذا إلى توقف الغسالة أو إيقاف تشغيلها لكنه يرمز إلى عدد مرات الدورة.
- حتى وإن لم تختف الرسالة "0"، فستعمل الغسالة بشكل طبيعي.
- من المستحسن تشغيل الدورة بانتظام للأغراض الصحية.

تصريف الطوارئ


العربية

في حالة انقطاع التيار الكهربائي، قم بتصريف المياه الموجودة داخل الحاوية قبل إخراج الغسيل.

١. اقطع التيار الكهربائي، ثم افصل قابس الغسالة من مأخذ التيار.
٢. اضغط برفق على الجزء العلوي من غطاء المصفاة لفتحه.

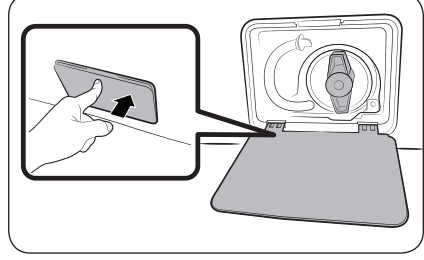


٣. ضع وعاءً فارغاً واسعاً حول الغطاء، ثم قم بتمديد أنبوب تصريف الطوارئ إلى الوعاء أثناء الإمساك بغطاء الأنبوب (A).

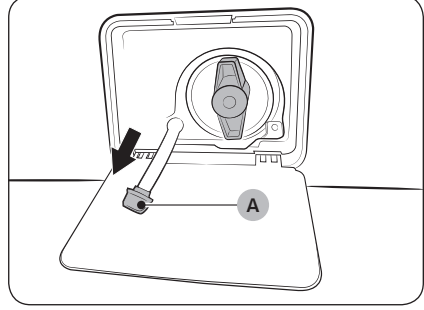

٤. افتح غطاء الأنبوب واسمح للماء الموجود في أنبوب تصريف الطوارئ (B) بالتدفق في الوعاء.
٥. عند الانتهاء، أغلق غطاء الأنبوب، ثم أعد إدخال الأنبوب. ثم أغلق غطاء المصفاة.

ملحوظة

استخدم وعاءً واسعاً نظراً لأن الماء في الحاوية قد يكون أكثر من المتوقع.

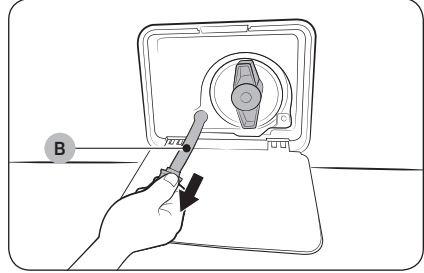

التنظيف


أوجه الغسالة

استخدم قطعة قماش ناعمة مع منظف منزلي غير كاشط. لا ترش الماء على الغسالة.


المصفاة الشبكية

نُظِّف المصفاة الشبكية لخرطوم الماء مرة أو مرتين في السنة.

١. قم بإيقاف تشغيل الغسالة، ثم افصل سلك التيار الكهربائي.
٢. أغلق صنبور الماء.
٣. قم بفك خرطوم الماء وفصله من الجهة الخلفية للغسالة. قم بتغطية الخرطوم بقطعة قماش لمنع تدفق الماء للخارج.

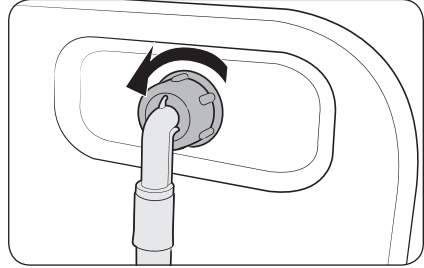

٤. استخدم الزردية لسحب المصفاة الشبكية من صمام توريد الماء.
٥. اغمر المصفاة الشبكية في الماء بعمق بحيث يتم غمر الوصلة المخيطة أيضًا.
٦. قم بتجفيف المصفاة الشبكية بالكامل في الظل.
٧. أعد إدخال المصفاة الشبكية في صمام توريد الماء، ثم أعد توصيل خرطوم الماء بصمام التوريد.
٨. افتح صنبور الماء.

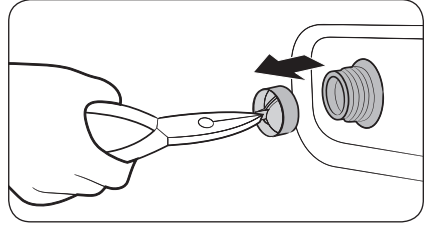

ملحوظة

إذا شُدت المصفاة الشبكية، فإن رمز المعلومات "4C" يظهر على الشاشة.


مصفاة المخلفات

يُنصح بتنظيف مصفاة المخلفات كل شهرين لمنع انسدادها. قد يقلل انسداد مصفاة المخلفات من تأثير الفقاعات.

١. قم بإيقاف تشغيل الغسالة، ثم افصل سلك التيار الكهربائي.
٢. قم بتصريف الماء المتبقي داخل الحاوية. راجع القسم تصريف الطوارئ.
٣. اضغط برفق على الجزء العلوي من غطاء المصفاة لفتحه.
٤. لف مقبض مصفاة المخلفات جهة اليسار، ثم قم بتصريف الماء المتبقي.




٥. نغلف مصفاة المخلفات باستخدام فرشاة ناعمة. تأكد أن مروحة مضخة تصريف الماء الموجودة داخل المصفاة غير مسدودة.
٦. أعد إدخال مصفاة المخلفات، ثم لف مقبض المصفاة جهة اليمين.

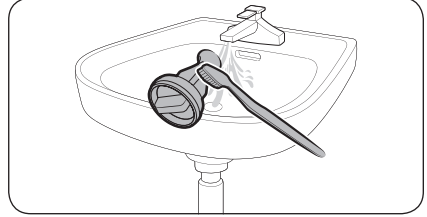

ملحوظة

- تتميز بعض مصافي المخلفات بمقبض أمان مصمم خصيصًا للحيولة دون تسبب الأطفال في وقوع حوادث. لفتح مقبض أمان مصفاة المخلفات، ادفعه للداخل، ثم لفه عكس اتجاه عقارب الساعة. تساعد الآلية الزنبركية لمقبض الأمان في فتح المصفاة.
- لإغلاق مقبض الأمان لمصفاة المخلفات، لفه في اتجاه عقارب الساعة. يصدر الزنبرك صوتًا رنائيًا بشكل طبيعي.

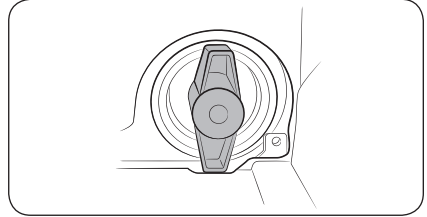

ملحوظة


إذا شدت مصفاة المضخة، فإن رمز المعلومات "5C" يظهر على الشاشة.

تنبيه


- تأكد من إغلاق مقبض المصفاة بشكل صحيح بعد تنظيف المصفاة. حيث قد يؤدي عدم الالتزام بذلك إلى حدوث تسرب للماء.
- تأكد من إعادة إدخال المصفاة بشكل صحيح بعد تنظيفها. وإلا، قد يؤدي ذلك إلى حدوث خلل في التشغيل أو تسرب.

درج المنظف

١. أثناء إمساك ذراع التحرير داخل الدرج، اسحب الدرج للخارج.

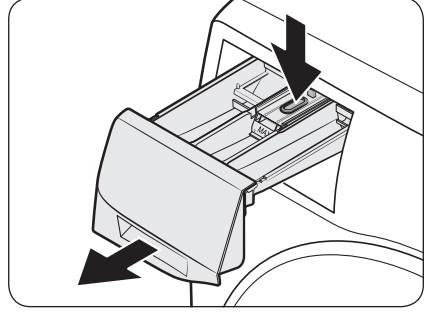

٢. قم بتنظيف مكونات الدرج بالماء المتدفق وباستخدام فرشاة ناعمة.

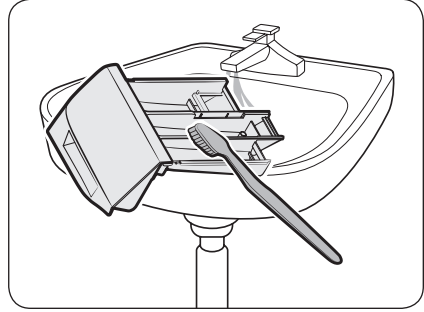


٣. قم بتنظيف تجويف الموزع باستخدام فرشاة ناعمة.

٤. أعد إدخال حاوية المنظف السائل إلى الدرج.

٥. ادفع الدرج إلى الداخل لإغلاقه.

ملحوظة

تأكد أن تجويف الدرج جاف تمامًا قبل إدخال درج المنظف.

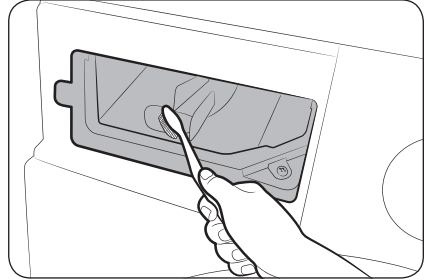

ملحوظة


لإزالة المنظف المتبقي، قم بتشغيل الدورة الشطف والدوران على أن تكون حاوية الغسيل فارغة.

الصيانة

حاجز الباب

قد تتراكم النسالات على حاجز الباب أثناء دورة الغسل أو التجفيف. تذكر تنظيف حاجز الباب بعد استخدام دورة الغسل أو التجفيف.

١. افتح الباب، ثم قم بتفريغ الحاوية.
٢. نظف النسالات الموجودة على حاجز الباب.
٣. أضف ٤/٣ كوب من سائل مبيض الكلور إلى جالون واحد من ماء الصنبور الدافئ.
٤. قم بارتداء قفازات مطاطية، واستخدم قطعة قماش ناعمة نظيفة مبللة ومحلول التبييض لتنظيف الحاجز.
٥. اتركه مدة ٥ دقائق، ثم امسحه وجففه جيدًا.

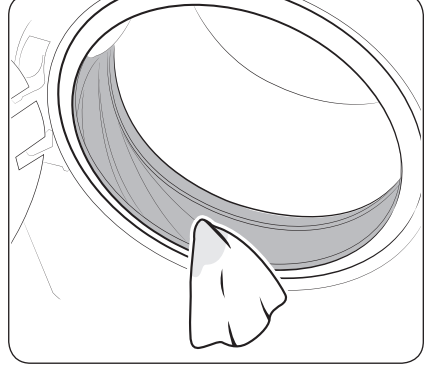

⚠ تنبيه

استخدم المبيض بعناية واحرص على اتباع تعليمات الجهة المصنعة بشأن استخدام المبيض.



فك تجميد الغسالة

قد تتجمد الغسالة عندما تنخفض الدرجة عن صفر °C.

١. قم بإيقاف تشغيل الغسالة، ثم افصل سلك التيار الكهربائي.

٢. صب الماء الدافئ على صنبور الماء لفك خرطوم الماء.

٣. افصل خرطوم الماء، وانقعه في الماء الدافئ.

٤. صب الماء الدافئ في الحاوية واتركه لمدة ١٠ دقائق تقريبًا.

٥. أعد توصيل خرطوم الماء بصنبور الماء.

ملحوظة

إذا استمرت الغسالة في العمل بشكل غير سليم، فكرر الخطوات السابقة حتى تعمل بشكل طبيعي.

الحذر من عدم الاستخدام لفترة طويلة

تجنب ترك الغسالة دون استخدام لفترة زمنية طويلة. وإذا كانت هذه هي الحالة، فيجب تصريف الماء من الغسالة ثم فصل سلك التيار الكهربائي.

١. لف قرص التنقل لتحديد الدورة الشطف والدوران.

٢. قم بتفريغ الحاوية واضغط باستمرار على >.

٣. عند اكتمال الدورة، أغلق صنبور الماء، ثم افصل خرطوم الماء.

٤. قم بإيقاف تشغيل الغسالة، ثم افصل سلك التيار الكهربائي.

٥. افتح الباب للسماح بدخول الهواء خلال الحوض.



استكشاف المشاكل وحلها

إذا كانت هناك أي مشكلة، فراجع رسالة المعلومات الموجودة على شاشة LCD واتبع التعليمات التي تظهر على الشاشة. إذا استمرت المشكلة، فالرجاء الاتصال بمركز الخدمة.

نقاط الفحص

إذا واجهت مشكلة مع الغسالة، فراجع الجدول التالي أولاً، وجرب الاقتراحات الواردة به.

المشكلة	الإجراء
الغسالة لا تبدأ الغسل.	- تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. - تأكد أن الباب مغلق بإحكام. - تأكد أن صناديق الماء مفتوحة. - اضغط باستمرار على ▶ لبدء تشغيل الغسالة. - تأكد من عدم تنشيط وظيفة قفل ضد الأطفال . - قبل أن تبدأ الغسالة في ملء الماء، ستصدر سلسلة من أصوات الطقطقة للتحقق من تفعيل قفل الباب والتصريف بسرعة. - افحص المنصهر أو أعد ضبط قاطع الدائرة الكهربائية. - تأكد من توصيل التيار الكهربائي بشكل سليم. - تم اكتشاف جهد كهربائي منخفض. - تحقق من توصيل سلك التيار الكهربائي. - تأكد من عدم وجود ملابس عالقة بالباب. - تظهر الرسالة "DDC" عندما تقوم بفتح باب AddWash دون الضغط باستمرار على ▶. وفي حالة حدوث ذلك، قم بأحد الإجراءات الآتية: - اضغط على باب AddWash لغلغه بطريقة صحيحة. ثم اضغط باستمرار على ▶ وحاول مرة أخرى. - لإضافة غسيل، افتح باب AddWash وضع الغسيل بالداخل وأغلق باب AddWash تمامًا. ثم اضغط باستمرار على ▶ لمتابعة التشغيل.
إما أن إمداد الماء غير كافٍ أو لا يتم إمداد الماء.	- افتح صنبور الماء بالكامل. - تأكد أن الباب مغلق بإحكام. - تأكد من أن خرطوم توريد الماء غير متجمد. - تأكد من أن خرطوم إمداد الماء ليس ملتويًا أو مسدودًا. - تأكد من أن ضغط الماء كافٍ. - تأكد من توصيل صنبوري الماء البارد والساخن بشكل صحيح. - نظف المصفاة الشبكية، فقد تكون مسدودة.
بعد انتهاء دورة غسل، يبقى المنظف في الدرج.	- تأكد من تشغيل الغسالة بضغط ماء كافٍ. - تأكد من إضافة المنظف في منتصف الدرج. - تأكد من إدخال غطاء الشطف بشكل صحيح. - إذا كنت تستخدم منظفًا خبيثًا، فتأكد من أن قرص تحديد المنظف في الوضع العلوي. - قم بفك غطاء الشطف ونظف درج المنظف.



المشكلة	الإجراء
الغسالة تهتز بشدة أو تحدث ضجيجًا.	- تأكد من تركيب الغسالة على أرضية مستوية وصلبة لا تؤدي إلى انزلاقها. إذا كانت الأرضية غير مستوية، فاستخدم أرجل استواء الغسالة لضبط مستوى ارتفاعها. - تأكد من فك مسامير الشحن. - تأكد من عدم ملامسة الغسالة لأي شيء آخر. - تأكد من موازنة حمولة الغسيل. - قد يصدر المحرك ضجيجًا أثناء التشغيل العادي. - قد تصدر ثياب العمل أو الملابس المزينة بقطع معدنية ضجيجًا أثناء غسلها. يعد هذا أمرًا طبيعيًا. - قد تصدر بعض الأجسام المعدنية كالعملات المعدنية ضجيجًا. بعد الغسل، قم بإزالة هذه الأجسام من حاوية الغسل أو حاوية التصفية. - إعادة توزيع الملابس بالغسالة. في حالة غسل قطعة واحدة فقط من الملابس، مثل بُرنس حمام أو بنطلون جينز، قد لا تكون نتيجة العصر النهائية مُرضية، وتظهر رسالة الفحص "Ub" على الشاشة.
لا تقم بالتصريف و/أو العصر.	- تأكد من فرد خرطوم تصريف الماء بالكامل داخل مجموعة التصريف. إذا كانت هناك مشكلة تتعلق بالتصريف، فاتصل بالخدمة. - تأكد أن مصفاة المخلفات غير مسدودة. - أغلق الباب ثم اضغط باستمرار على [▶]. - من أجل سلامتك، لن تقوم الغسالة بالدوران السريع أو العصر إلا إذا كان الباب مغلقًا. - تأكد من عدم انسداد خرطوم تصريف الماء أو تجفده. - تأكد من توصيل خرطوم التصريف بنظام تصريف غير مسدود. - إذا لم تكن الغسالة مزودة بمقدار كافي من الطاقة، فلن تقوم بالتصريف أو العصر مؤقتًا. وبمجرد وصول القدر الكافي من الطاقة إلى الغسالة مرة أخرى، ستعمل بشكل طبيعي. - تأكد أن خرطوم تصريف الماء في وضعه الصحيح، وذلك حسب نوع التوصيل. - نظّف مصفاة المخلفات حيث قد تكون مسدودة.
يتعذر فتح الباب.	- اضغط باستمرار على [▶] لإيقاف الغسالة. - قد يستغرق الأمر دقائق قليلة حتى تتحرر آلية قفل الباب. - لن يتم فتح الباب إلا بعد مرور ٣ دقائق على توقف الغسالة عن العمل أو فصل التيار الكهربائي. - تأكد من تصريف كل الماء الموجود في الحاوية. - قد لا يفتح الباب إذا كان هناك ماء في الحاوية. قم بتصريف الماء الموجود في الحاوية، وافتح الباب يدويًا. - تأكد من انطفاء ضوء قفل الباب. ينطفئ مؤشر قفل الباب بعد تصريف الماء من الغسالة.
توجد رغاوي زائدة.	- تأكد من استخدام أنواع المنظفات الموصى بها كلما أمكن. - استخدم منظفًا ذا فاعلية عالية (HE) لمنع تكوّن الرغوة الزائدة. - قلل كمية المسحوق عند استخدام ماء ساخن أو مع الحمولات الصغيرة أو خفيفة الاتساخ. - لا يفضل استخدام مساحيق سوى المساحيق ذات الفاعلية العالية.
لا يمكن إضافة منظف إضافي.	تأكد من أن الكمية المتبقية من المنظف ومنعم الأقمشة ليست زائدة عن الحد المسموح به.



استكشاف المشاكل وحلها

المشكلة	الإجراء
الغسالة تتوقف عن العمل.	• قم بتوصيل سلك التيار الكهربائي بمأخذ تيار كهربائي مباشر. • افحص المنصهر أو أعد ضبط قاطع الدائرة الكهربائية. • أغلق الباب، ثم اضغط باستمرار على ▶ لبدء تشغيل الغسالة. من أجل سلامتك، لن تقوم الغسالة بالدوران السريع أو العصر إلا إذا كان الباب مغلقًا. • قبل أن تبدأ الغسالة في ملء الماء، ستصدر سلسلة من أصوات الطقطقة للتحقق من تفعيل قفل الباب والتصريف بسرعة. • وقد تكون هناك فترة توقف أو نزع أثناء الدورة. انتظر قليلًا، فقد تبدأ الغسالة في العمل. • تأكد من عدم انسداد المصفاة الشبكية لخرطوم توريد الماء المتصل بصنبور الماء. نظف المصفاة الشبكية بانتظام. • إذا لم تكن الغسالة مزودة بمقدار كافٍ من الطاقة، فلن تقوم بالتصريف أو العصر مؤقتًا. وبمجرد وصول القدر الكافي من الطاقة إلى الغسالة مرة أخرى، ستعمل بشكل طبيعي.
تمتلئ الغسالة بماء ذي درجة حرارة خاطئة.	• افتح الصنبورين بالكامل. • تأكد من تحديد درجة الحرارة بشكل صحيح. • تأكد من توصيل الخرطومين بصنبوري الماء الصحيحين. تأكد من تدفق المياه في الوصلات. • تأكد من ضبط سخان الماء للحصول على ماء ساخن بدرجة حرارة ٤٩ °C على الأقل من الصنبور. افحص أيضًا سعة سخان الماء ومعدل الاسترداد. • افصل الخرطومين ونظف المصفاة الشبكية. فقد تكون مسدودة. • أثناء ملء الغسالة، قد تتغير درجة حرارة الماء نظرًا لأن ميزة التحكم التلقائي في درجة الحرارة تتحقق من درجة حرارة الماء الوارد. يعد هذا أمرًا طبيعيًا. • أثناء ملء الغسالة، قد تلاحظ مرور الماء الساخن و/أو الماء البارد فقط خلال المزود عند تحديد درجة حرارة الماء البارد أو الدافئ، وهذه وظيفة طبيعية لميزة التحكم التلقائي في درجة الحرارة نظرًا لأن الغسالة تحدد درجة حرارة الماء.
الملابس تظل مبتلة في نهاية الدورة.	• استخدم سرعة دوران "عالية" أو "عالية جدًا". • استخدم مسحوقًا ذا فاعلية عالية (HE) لتقليل الرغوة الزائدة. • الحمولة قليلة جدًا. قد يصبح الغسيل القليل (قطعة واحدة أو اثنتين) غير متوازن ولا يتم عصره بالكامل. • تأكد من عدم انسداد خرطوم تصريف الماء أو انثنائه.
الماء يتسرب.	• تأكد أن الباب مغلق بإحكام. • تأكد من إحكام جميع وصلات الخراطيم. • تأكد من إدخال طرف خرطوم التصريف وإحكام وضعه بشكل صحيح في نظام التصريف. • تجنب التحميل الزائد. • استخدم منظفًا ذا فاعلية عالية (HE) لمنع تكوين الرغوة الزائدة. • افحص خرطوم التصريف. • - تأكد أن طرف خرطوم التصريف غير مُلقى على الأرض. • - تأكد من عدم انسداد خرطوم التصريف.
هناك روائح كريهة.	• تجمع الرغوي الزائدة في التجاويف مما يسبب رائحة كريهة. • قم بتشغيل دورات التطهير بانتظام للتعقيم. • نظف حاجز الباب (العازل). • جفف الجزء الداخلي من الغسالة بعد انتهاء دورة الغسل.



المشكلة	الإجراء
الفقاعات لا تظهر (الطرز التي تدعم الفقاعات فقط).	• قد لا تتمكن من رؤية الفقاعات إذا كان هناك الكثير من الملابس في الحاوية. • قد لا تتكون الفقاعات نتيجة اتساخ الملابس الشديد.
تظهر رسالة على الشاشة للتنبيه بأن المزود مفتوح.	• تحقق من أن درج المنظف مغلق جيدًا. • - افتح درج المنظف واغلقه ثانيةً. تأكد من إغلاقه جيدًا.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء. رقم مركز الخدمة موجود على الملصق المرفق بالمنتج.



استكشاف المشاكل وحلها

رموز المعلومات

إذا لم تعمل الغسالة، فقد يظهر أحد رموز المعلومات على الشاشة. راجع الجدول التالي وجرب الاقتراحات الواردة به.

الرمز	الإجراء
تحقق من التصريف	- لا يتم تصريف الماء. - تأكد من عدم انسداد خرطوم تصريف الماء أو تجفده. - تأكد أن خرطوم تصريف الماء في وضعه الصحيح، وذلك حسب نوع التوصيل. - نظف مصفاة المخلفات حيث قد تكون مسدودة. - تأكد من فرد خرطوم تصريف الماء بالكامل داخل مجموعة التصريف. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
تحقق من مصدر المياه	- لا يتم تزويد الماء. - تأكد أن صنبور الماء مفتوحة. - تأكد من عدم انسداد خرطوم الماء. - تأكد من عدم تجفد صنبور الماء. - تأكد من تشغيل الغسالة بضغط ماء كافٍ. - تأكد من توصيل صنبوري الماء البارد والساخن بشكل صحيح. - نظف المصفاة الشبكية، فقد تكون مسدودة. - سيتم تعطيل كافة الأزرار لمدة ٣ دقائق بعد ظهور رمز المعلومات. - عند ظهور الرسالة "4C"، تقوم الغسالة بتصريف الماء لمدة ٣ دقائق. وخلال هذا الوقت، سيتم تعطيل زر تشغيل.
تحقق من خطوط المياه	تأكد من أن خرطوم توريد الماء البارد متصل بصنبور الماء البارد بإحكام. إذا كان الخرطوم متصلاً بصنبور الماء الساخن، فقد يتعرض الغسيل للتلف مع بعض الدورات.
رصد غير متوازن	الدوران لا يعمل. - تأكد من توزيع قطع الملابس بالتساوي في الغسالة. - تأكد من تركيب الغسالة على سطح مستو وثابت. - إعادة توزيع الملابس بالغسالة. في حالة غسل قطعة واحدة فقط من الملابس، مثل فرنس حمام أو بنطلون جينز، قد لا تكون نتيجة العصر النهائية مرضية، وتظهر رسالة الفحص "Ub" على الشاشة.
الباب مفتوح	تشغيل الغسالة أثناء فتح الباب. - تأكد أن الباب مغلق بإحكام. - تأكد من عدم وجود ملابس عالقة بالباب.
OC	يفيض الحوض بالمياه. - أعد التشغيل بعد العصر. - إذا استمر رمز المعلومات في الظهور على الشاشة، فاتصل بمركز خدمة Samsung المحلي.
LC و LC1	افحص خرطوم التصريف. - تأكد أن طرف خرطوم التصريف غير معلق على الأرض. - تأكد من عدم انسداد خرطوم التصريف. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.



الرمز	الإجراء
3C	- تحقق من تشغيل موتور الحاوية. - جرب إعادة تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
HC	- التحقق من عدم ارتفاع درجة الحرارة عند التسخين. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
1C	- مستشعر مستوى الماء لا يعمل بشكل سليم. - قم بإيقاف تشغيل الغسالة وأعد تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
AC	- تحقق من الاتصالات بين مجموعات لوحات الدوائر المطبوعة (PBA) الرئيسية والفرعية. - قم بإيقاف تشغيل الغسالة وأعد تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
AC6	- تحقق من الاتصالات بين مجموعات لوحات الدوائر المطبوعة (PBA) الرئيسية والعاكسة للتيار الكهربائي. - قد تعود الغسالة إلى عملية التشغيل العادية تلقائياً حسب الحالة. - قم بإيقاف تشغيل الغسالة وأعد تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
DC1	- قفل/إلغاء قفل الباب الرئيسي لا يعمل بشكل سليم. - قم بإيقاف تشغيل الغسالة وأعد تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة العملاء.
FC	- محرك مروحة التجفيف لا يعمل بشكل سليم. - قم بإيقاف تشغيل الغسالة وأعد تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة عملاء Samsung المحلي.
HC2	- سخان التجفيف لا يعمل بشكل سليم. - قم بإيقاف تشغيل الغسالة وأعد تشغيل الدورة. - في حالة استمرار ظهور رمز المعلومات، اتصل بمركز خدمة عملاء Samsung المحلي.

إذا ظل هناك أي رمز معلومات يظهر على الشاشة، فاتصل بمركز خدمة Samsung المحلي.



المواصفات

العربية

جدول العناية بالأقمشة

المبيّض

يسمح بأي مبيّض.	
يسمح بالأكسجين المبيّض فقط.	
يحظر استخدام المبيّض.	

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية بالملابس رموزًا خاصة بالتجفيف والتبييض والتجفيف والكي أو التنظيف الجاف عند الضرورة. يضمن استخدام الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

الغسل

دورة الغسل بالغلي ٩٥ درجة مئوية.	
دورة الملابس الملونة ٦٠ درجة مئوية.	
دورة الملابس الملونة ٦٠ درجة مئوية. (دورة الملابس الملونة "سهلة العناية")	
دورة الملابس الملونة ٤٠ درجة مئوية.	
دورة الغسل الحساسة ٤٠ درجة مئوية.	
دورة الغسل الحساسة للغاية ٤٠ درجة مئوية.	
دورة الغسل اللطيفة ٣٠ درجة مئوية.	
دورة الغسل الحساسة اللطيفة ٣٠ درجة مئوية.	
دورة الغسل اللطيفة الحساسة للغاية ٣٠ درجة مئوية.	
الغسيل اليدوي.	
يحظر الغسيل.	

التجفيف

التجفيف بالتدوير / التجفيف عند درجة حرارة ٨٠ درجة مئوية مع عملية التجفيف العادي.	
التجفيف بالتدوير / التجفيف عند درجة حرارة ٦٠ درجة مئوية مع عملية التجفيف الحساس.	
يحظر تجفيفها بالتدوير	
التجفيف على الحبل.	
تجفيف الملابس المبللة على الحبل.	
التجفيف على جزء مسطح.	
تجفيف الملابس المبللة على جزء مسطح.	
التجفيف على الحبل في الظل.	
التجفيف الملابس المبللة على الحبل في الظل.	
التجفيف على جزء مسطح في الظل.	
التجفيف الملابس المبللة على جزء مسطح في الظل.	

ملحوظة

تحدد الأرقام الموجودة في حوض الغسل الحد الأقصى لدرجات حرارة الغسيل بالدرجات المئوية التي لا يجب أن تتجاوزها.

ملحوظة

- تشير النقاط إلى مستوى تجفيف المجفف.
- تشير الخطوط إلى نوع التجفيف ومكانه.

الكي

	الكي بدرجة حرارة قصوى تبلغ ٢٠٠ درجة مئوية على لوح قاعدي.
	الكي بدرجة حرارة قصوى تبلغ ١٥٠ درجة مئوية على لوح قاعدي.
	الكي بدرجة حرارة قصوى تبلغ ١١٠ درجة مئوية على لوح قاعدي. توخ الحذر عند استخدام مكافو البخار (يعمل دون بخار).
	ممنوع الكي.

ملحوظة

تشير النقاط إلى نطاقات درجة الحرارة للكي (عادي وبالبخار ومكافو الرحلات وأجهزة الكي).

العناية الاحترازية

	التنظيف الجاف الاحترازي في بيركلوروايثيلين و/أو الهيدروكربونات (البزين الثقيل) مع الدورة العادية.
	التنظيف الجاف الاحترازي في بيركلوروايثيلين و/أو الهيدروكربونات (البزين الثقيل) مع الدورة الناعمة.
	التنظيف الجاف الاحترازي في الهيدروكربونات (البزين الثقيل) مع الدورة العادية.
	التنظيف الجاف الاحترازي في الهيدروكربونات (البزين الثقيل) مع الدورة الناعمة.
	يحظر التنظيف الجاف.
	التنظيف الرطب الاحترازي.
	التنظيف الرطب الاحترازي للملابس الحساسة.
	التنظيف الرطب الاحترازي للملابس الحساسة للغاية.
	يحظر التنظيف الرطب.

ملحوظة

- تشير الحروف الموجودة في الدائرة إلى أن المذيبات (F و P) يتم استخدامها في التنظيف الجاف أو التنظيف الرطب (W).
- يشير الخط الموجود أسفل الرمز عمومًا إلى معالجة أكثر حساسية (مثل الدورة الخفيفة للملابس التي تتطلب عناية سهلة). يشير الخط المزدوج إلى مستويات العناية مع معالجة خفيفة بشكل خاص.


المواصفات

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص منه، يُرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار حتى لا يتم توصيل الجهاز بمصدر طاقة. أزل الغطاء لتجنب تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع كميات زائدة من المنظف بخلاف الكميات الموصى بها حسب إرشادات الشركة المصنعة للمنظف.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفّر المياه والكهرباء من خلال إجراء الغسل بأوزان كاملة فقط (تختلف الكمية وفقًا للبرنامج المستخدم).

بيان المواصفات

تعني علامة (علامات) النجمة "*" أن الطراز متغير، ويمكن التعبير عنه بالرموز (0-9) أو (A-Z).

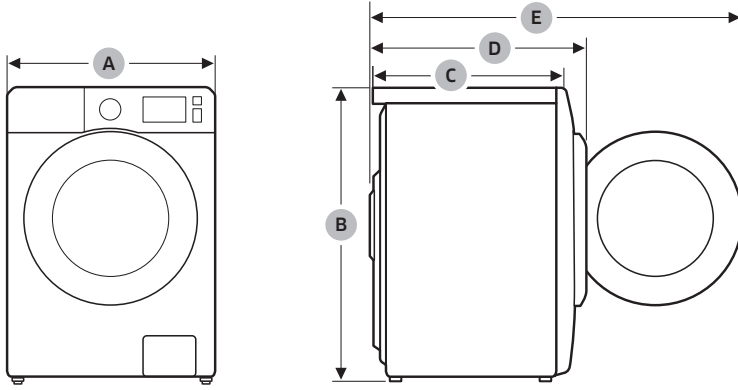

غسالة أمامية التحميل			النوع		
WD18T6300**	WD21T6300**	WD22T6300**	اسم الطراز		
٦٨٦ ملم			A (العرض)	الأبعاد	
٩٨٤ مم			B (الارتفاع)		
٧٩٦ مم			C (العمق)		
٨٦٤ ملم			D		
١٣٨٦ ملم			E		
٥٠ إلى ٨٠٠ كيلو باسكال			ضغط الماء		
٩٧,٠ كجم			الوزن الصافي		
١٨,٥ كجم	٢١,٠ كجم	٢٢,٠ كجم	الغسل والعصر	سعة الحمولة القصوى	
٩,٥ كجم	١٢,٠ كجم	١٣,٠ كجم	التجفيف		
٢١٠٠-٢٥٠٠ واط			تيار متردد ٢٢٠-٢٤٠ فولت / ٥٠ هرتز	الغسل والتسخين	استهلاك الطاقة
٢١٠٠-٢٥٠٠ واط				جاف	
١١٠٠ دورة في الدقيقة			دورات العصر		
٥ نجوم			كفاءة دوران التجفيف		

ملحوظة

- تصميم المنتج ومواصفاته عرضة للتغيير لأغراض تحسين الجودة دون إخطار مسبق.
- فقط لطرز الإمارات العربية المتحدة: تم تحديد المواصفات بملصق الطاقة باستخدام البرنامج الآتي وفقاً للمعيار UAE.S 5010-2.
- تعيين برنامج غسيل : القطن ٦٠ درجة مئوية، شطف: 1 والدوران: 5

صفحة المواصفات (لطرز المملكة العربية السعودية فقط)

تعني علامة (علامات) النجمة "*" أن الطراز متغير، ويمكن التعبير عنه بالرموز (0-9) أو (A-Z).

SAMSUNG		اسم الشركة المصنعة و/أو علامتها التجارية	
غسالة كهربائية أوتوماتيكية		نوع الغسالة	
WD21T6300**		رقم النوع	
٢٣٠ فولت		الجهد المقدّر (بالفولت)	
٦٠ هرتز		التردد المقدّر (بالهرتز)	
٢١٠٠ واط		دخول الطاقة المقدّر (بالواط أو الكيلوواط)	دخول الطاقة المقدّر (بالواط أو الكيلوواط)
٦٠٠ كجم		سعة الغسل القياسية (المقدّرة) (كجم)	
٣٥٢ كيلوواط في الساعة		الاستهلاك السنوي للطاقة	
٢٣١٠٠ لتر		الاستهلاك السنوي للماء	
العرض ٦٨٦ x العمق ٧٩٦ x الارتفاع ٩٨٤ (مم)		الأبعاد	
IPX4		رقم IP	
من ٥٠ كيلوباسكال إلى ٨٠٠ كيلوباسكال		ضغط الماء	
٩٧,٠ كجم		الوزن الصافي	
١١٠٠ لفة في الدقيقة		دورات العصر	
صنع في فيتنام		بلد المنشأ	
Samsung Electronics Co.,ltd.		الشركة المصنعة	

ملحوظة

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج. تم تحديد المواصفات بملصق الطاقة باستخدام البرنامج الآتي وفقًا للمعيار SASO 2885.

- برنامج الطراز "WD21T6300**" هو "القطن الاقتصادي".
- عدد اللفات في الدقيقة في برنامج الطاقة: ١٠٠٠ دورة في الدقيقة




معلومات حول برامج الغسل الأساسية (فقط لطرز المملكة العربية السعودية)

الوقت [بالدقائق]	استهلاك الماء [لتر]	عدد الدورات	الدورة	دورة (البرنامج)	الطراز
١٣٧	٤٥	١	الغسل	القطن عند درجة حرارة ٦٠ درجة مئوية بحمولة كاملة (القطن الاقتصادي)	WD21T6300**
١٤	٢٥	١	الشطف		
٧	٣٠	٢			
١٢	٥	١	العصر		
٨٧	٤٠	١	الغسل	القطن عند درجة حرارة ٦٠ درجة مئوية بنصف حمولة (القطن الاقتصادي)	
١٤	٤٠	١	الشطف		
٧	٢٠	٢			
١٢	٥	١	العصر		
٦٧	٤٠	١	الغسل	القطن عند درجة حرارة ٤٠ درجة مئوية بنصف حمولة (القطن الاقتصادي)	
١٤	٤٠	١	الشطف		
٧	٢٠	٢			
١٢	٥	١	العصر		




التعبئة & التفريغ

التعبئة

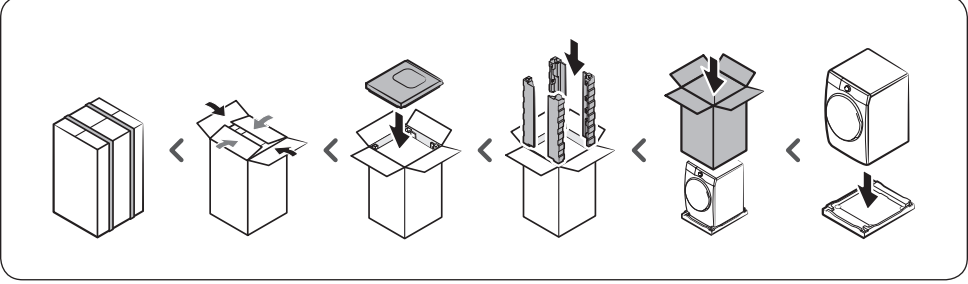

1. ضع الغسالة على الوسادة الماصة للصدمات السفلية.
2. ضع صندوق التعبئة على الغسالة.
3. أدخل الأربعة وسائد الجانبية في صندوق التعبئة، واحدة لكل ركن.
4. أدخل الوسادة الماصة للصدمات العلوية فوق الغسالة.
5. أغلق الغطاء العلوي للصندوق.
6. قم بتغليف الصندوق بالأشرطة.

التفريغ

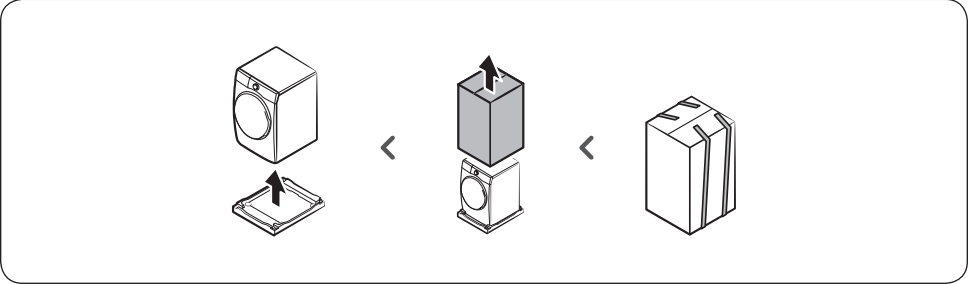

1. أقطع الأشرطة لفك الربط.
2. أمسك صندوق التعبئة بكلتا يديك، وأرفع الصندوق لإزالته.
3. قم بإزالة الغسالة من على الوسادة الماصة للصدمات السفلية.

ملحوظة

قد يختلف عدد الوسائد والأشرطة حسب الطراز.

مذكرة

مذكرة

مذكرة

هل لديك أي استفسارات أو تعليقات؟

أوقم بزيارة موقعنا على الإنترنت	اتصل	البلد
www.samsung.com/eg/support	08000-7267864 16580 WhatsApp 010 000 16580	EGYPT
www.samsung.com/iran/support	021-8255	IRAN
www.samsung.com/il/support/	*6963	Israel
www.samsung.com/sa_en/support (English) www.samsung.com/sa/support (Arabic)	8002474357 (800 24/7 HELP) From Inside Saudi Arabia +966112974690 From outside Saudi Arabia (May Call Charges will be applied)	SAUDI ARABIA
www.samsung.com/pk/support	0800-Samsung (7267864)	PAKISTAN
www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)	800-SAMSUNG (800 - 726 7864)	U.A.E
	800-SAM CS (800-72627)	OMAN
	183-CALL (183-2255)	KUWAIT
	8000-GSAM (8000-4726)	BAHRAIN
	800-CALL (800-2255)	QATAR
www.samsung.com/tr/support	444 77 11	TURKEY
www.samsung.com/levant/support	0800-22273 06 5777444	JORDAN
	1598	Lebanon
	80010080	Iraq
www.samsung.com/n_africa/support	3004	ALGERIA
	80 100 012	TUNISIA
	080 100 22 55	MOROCCO