OVEN
SERVICE MANUAL



Sensitivity: Public

SAFETY WARNING

This section contains safety instructions that will help protect from risk of personal injury or property damage.

Throughout this user manual the following symbols are used.

Important informations orinstructions of usage.

Warning for dangerous situations.

Warning for electric shock.

Warning for danger of fire.

Warning for hot surfaces.

General Safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
  Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Installation and repair procedures must always be performed by Authorized Service Agents. The manufacturer shall not be held responsible for damages arising from procedures carried out by unauthorized persons which may also void the warranty. Before installation, read the instructions carefully.
- Do not operate the product if it is defective or has any visible damage.
  Control that the product function knobs are switched off after every use.

Safety for Configurations

- Control the area of the configuration is appropriate.
- It is important that sources of energy is near the product.
- Do not lay the network wire on the hot surface.If not wire coalasces and this couses short circuit.
- Be cafeful during the configuration wire is not cut or deformed.If not change them with new one.
- There is not a component to release the gases resulting of the burning in the product.Set up the product according to the configuration rules.Especially,be careful with the airing tools and needs.

Sensitivity: Public

Informations for Consumer

- Product may be hot during the usage.Do not touch with hot parts ,inside the oven,heating components etc. .When the product is working it is hot so do not put combustable materials near the product.
- Do not wash the product with water! It is dangerous for electrick shock!Ürünü, üzerine s
- Do not heat the closed preserve jar or can with the product.Presure may cause the explosion.
- Do not clean while the product is working.
- Do not change in anything on the porduct or any repair instead of some problems in the user guide.
- If there is no door or window for airing ,blower must be built.
- Use a glove that is heat resistant during put/remove the meal to the hot oven
- Do not use the product if front glass is broken or removed or any deformation on the tweel block.
- When tweel block is open, be careful about children do not sit down on it.
- Do not hang cloth or towel or something like them on handle.

Sensitivity: Public

PRODUCT ASSEMBLY/ ASSEMBLY RULES/ SETTINGS

Product Transportation



To carry or move the product, do not use door or handle of the product. Door, handle or hinges can be harmed. Hold the sides of the oven with both hands only when it is cool to carry or move the product.



When the product is being carried or the product is being put to the ground, do not put it keenly, do not drag it and do not skid it from stairs.

Sensitivity: Public

Unpacking Product


To consider product changing in the mounting process, please do not harm package, product and the product package when extracting.

① Remove the tape from the package.



② You should rise the oven and the foam with two hands



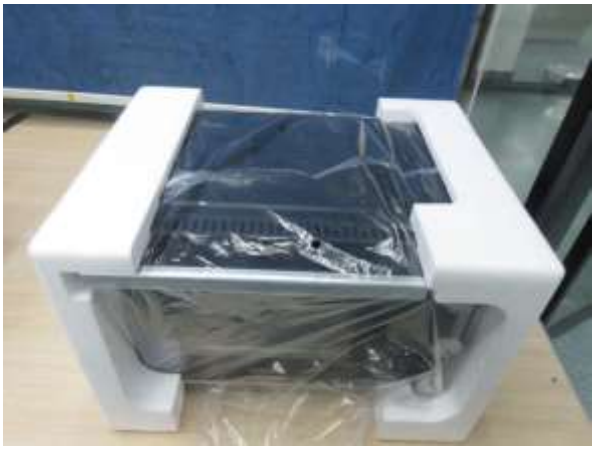

③ Take out the foam.







Sensitivity: Public

④ Take the plastic bag.





⑤The product should only be used on the bench.



Electrical Connection
Plug the power with the socket in good condition.




Oven Foots hang on (Optıonal)
There are four rubber feet as shown.



Sensitivity: Public

Product Use--Control panel

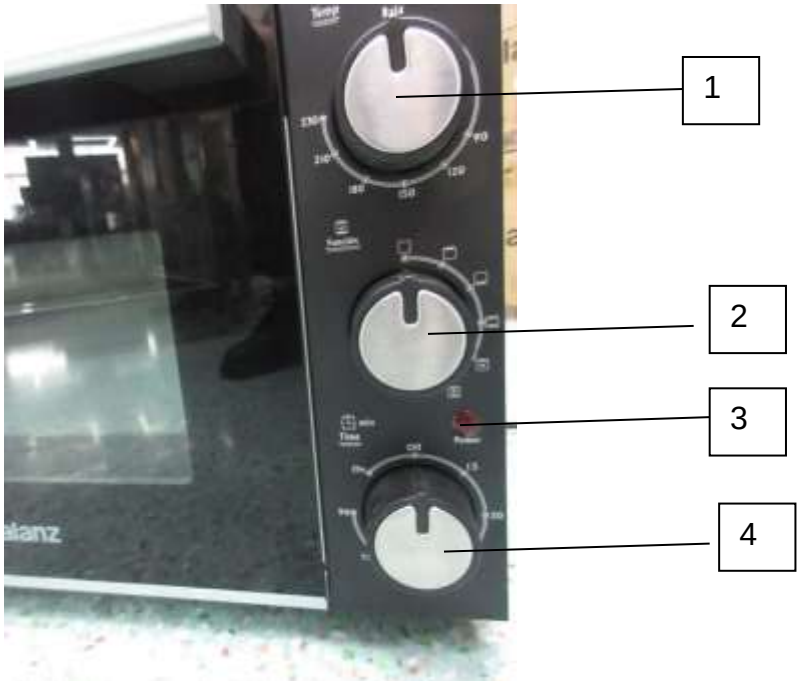

1	Thermostat knob
2	Function knob
3	Thermostat lamp
4	Mechanical timer

Turn the knob to set the desired function,cooking time, cooking temperature.

Sensitivity: Public





NOTE: Time must be set to start the cooking.If the time is not set, the oven will not work.




When the cooking time is over, the time setting knob automatically rotates counterclockwise. (If you do not want to use the timer function, turn the knob clockwise or counterclockwise to the hand symbol).

Switch off the oven with the time setting knob, function knob and temperature knob.

Sensitivity: Public

Accessories


①**Rotisserie Handle:** Allow you to pick up Rotisserie fork.

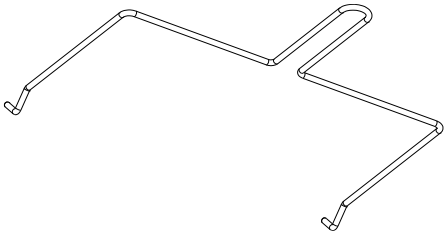


②**Rotisserie fork:** Use to roast a variety of meats and poultry.

ROTISSERIE FORK USING TIPS


1. Insert the fork into the rod until near the end of the rod and then secure with thumbscrew.
2. Insert the food from the other side of the rod.
3. Place second fort into other side of the rod, and then secure with thumbscrew. Check that the food is in the center of the rod firmly.
4. Insert the rod with food into the oven. Insert the one side of the rod into the support-hole of the oven. And then place the other side of the rod onto the support-bracket of the oven.

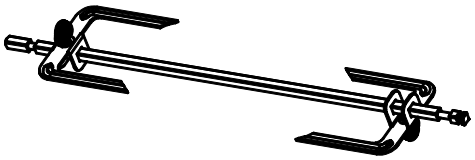


③**Wire Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.

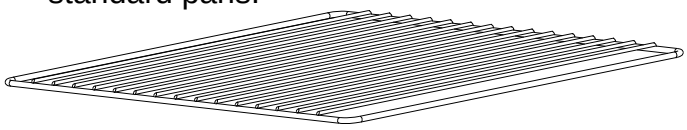

④**Food Tray:** For use in broiling and roasting meat, poultry, fish, and various other foods.

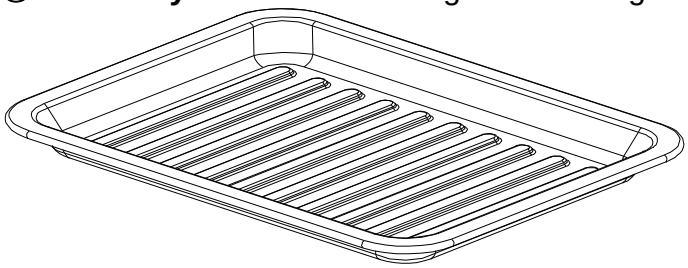


⑤**Food Tray Handle:** for removing tray or rack.

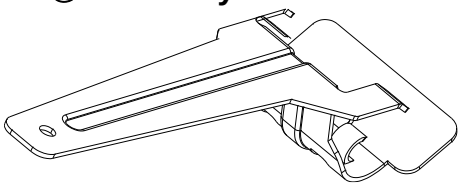

⑥**Crumb Tray:** For collecting fallen oil or crumb.

Sensitivity: Public

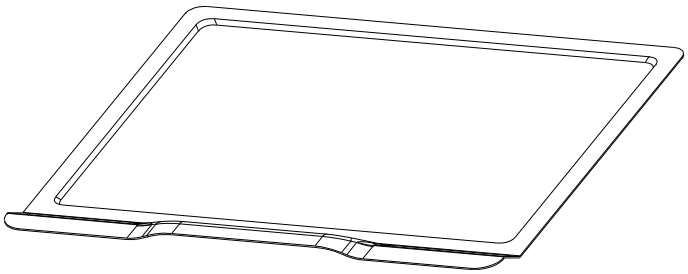

Tags and Descriptions used in the product

Type the label

Given information on the product nameplate label on the product gas.



Sticker on the location;

According to the type of product,Located on the back wall of the product.



Barcode Label

According to the type of product,Located on the back wall of the product.



Barcode label location;

Product packaging is pasted on cardboard.



Sensitivity: Public

Operating functions

The order of operating modes shown here may be different from the arrangement on your product.

Top and bottom heating



Top and bottom heating are in operation. Food is heated simultaneously from the top and bottom. For example, it is suitable for cakes, pastries, or cakes and casseroles in baking moulds. Cook with one tray only.

Fan supported bottom/top heating



Top heating, bottom heating plus fan (in the rear wall) are in operation. Hot air is evenly distributed throughout the oven rapidly by means of the fan. Cook with one tray only.


Fan assisted top heating



Top heating and the fan (in the rear wall) are in operation. Hot air is distributed better with fan when compared to the situation where only top heating is in operation.

Sensitivity: Public

Top/ bottom heating

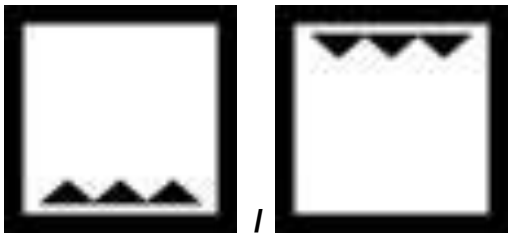

This function is ideal for baking pork slice, chicken legs, chicken wings, potato flakes, poultry meat, chops, fish and so on with more evenly heating up.

Top+ bottom heating + convection + rotisserie



Full grill and turnspit are in operation. It is suitable for grilling and making rotisserie with large pieces of meat.

Sensitivity: Public

List Ofcomponents/ Component Working Principle

Convection fan assembly





Convection fan with rotisserie assembly





heating elements



signal Lamp

The warning light is lighting on, indicating that the oven is in operation. Power consumption is very low.




Sensitivity: Public

TROUBLESHOOTING/ FAULT FINDING DIAGRAMS

Thermostat malfunctions


The oven is running continuously, the thermostat does not trip

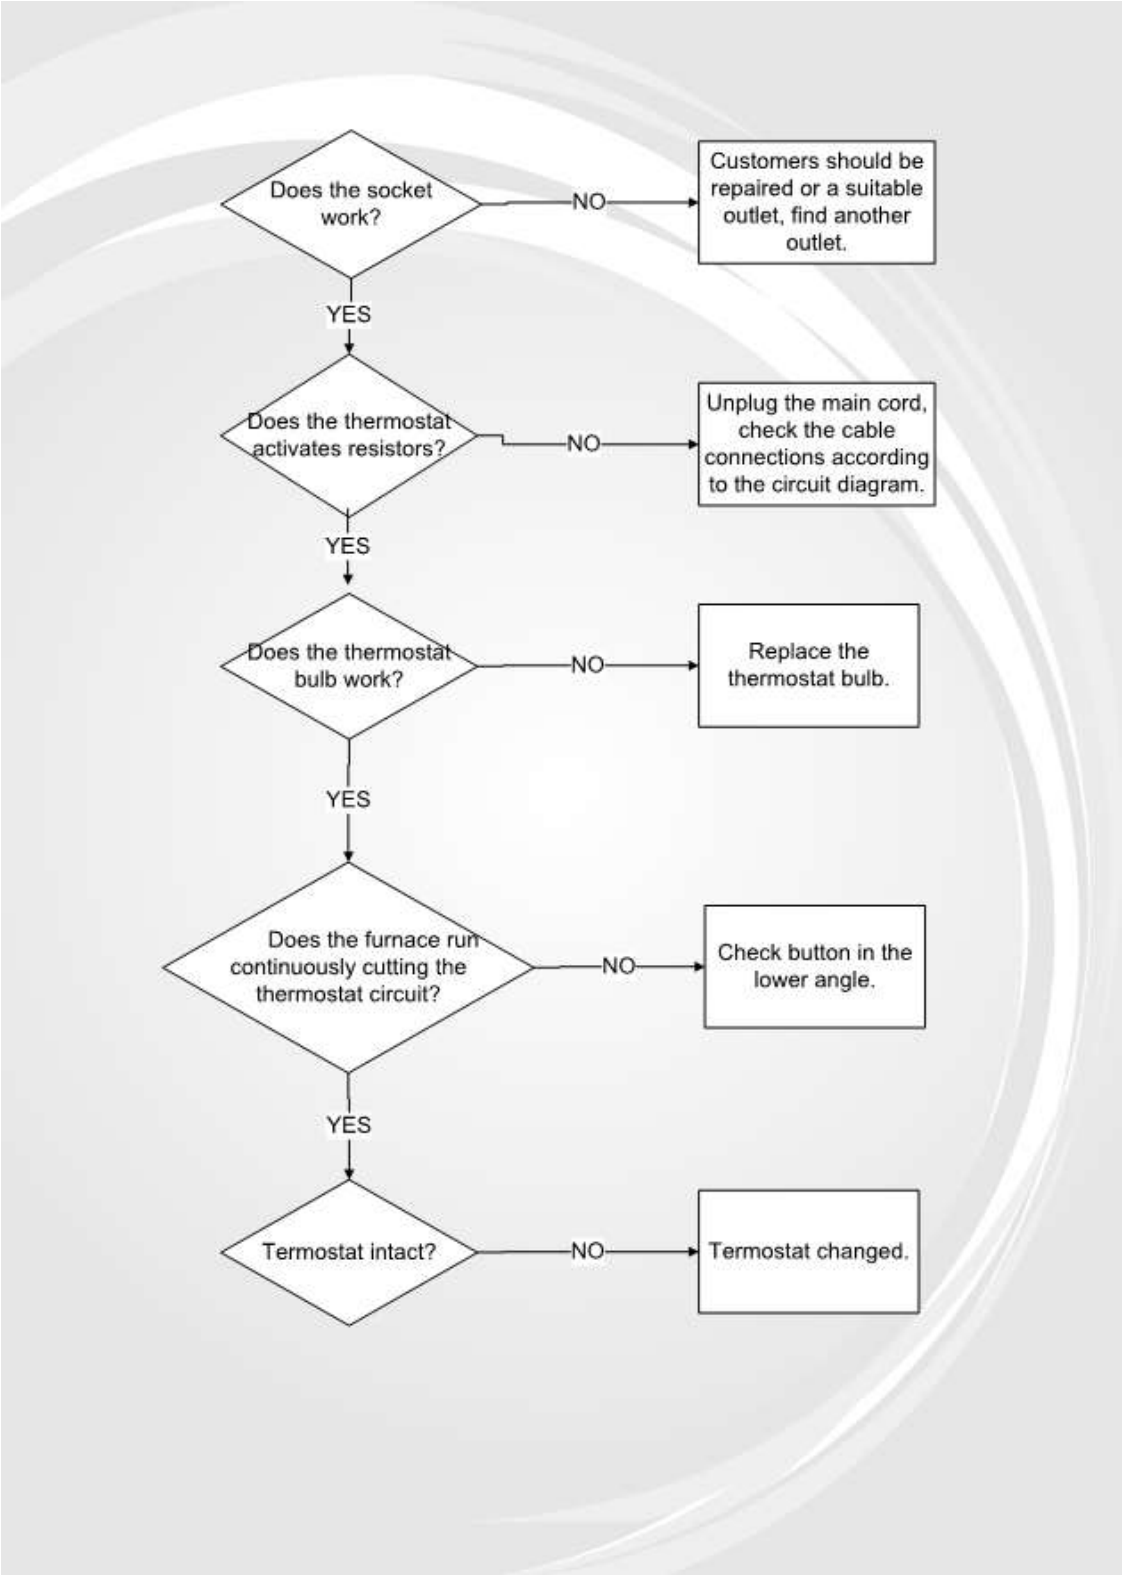

Sensitivity: Public

Troubleshooting of oven (terminal)

No Elecricity on oven or power not transferring to appliance from oven

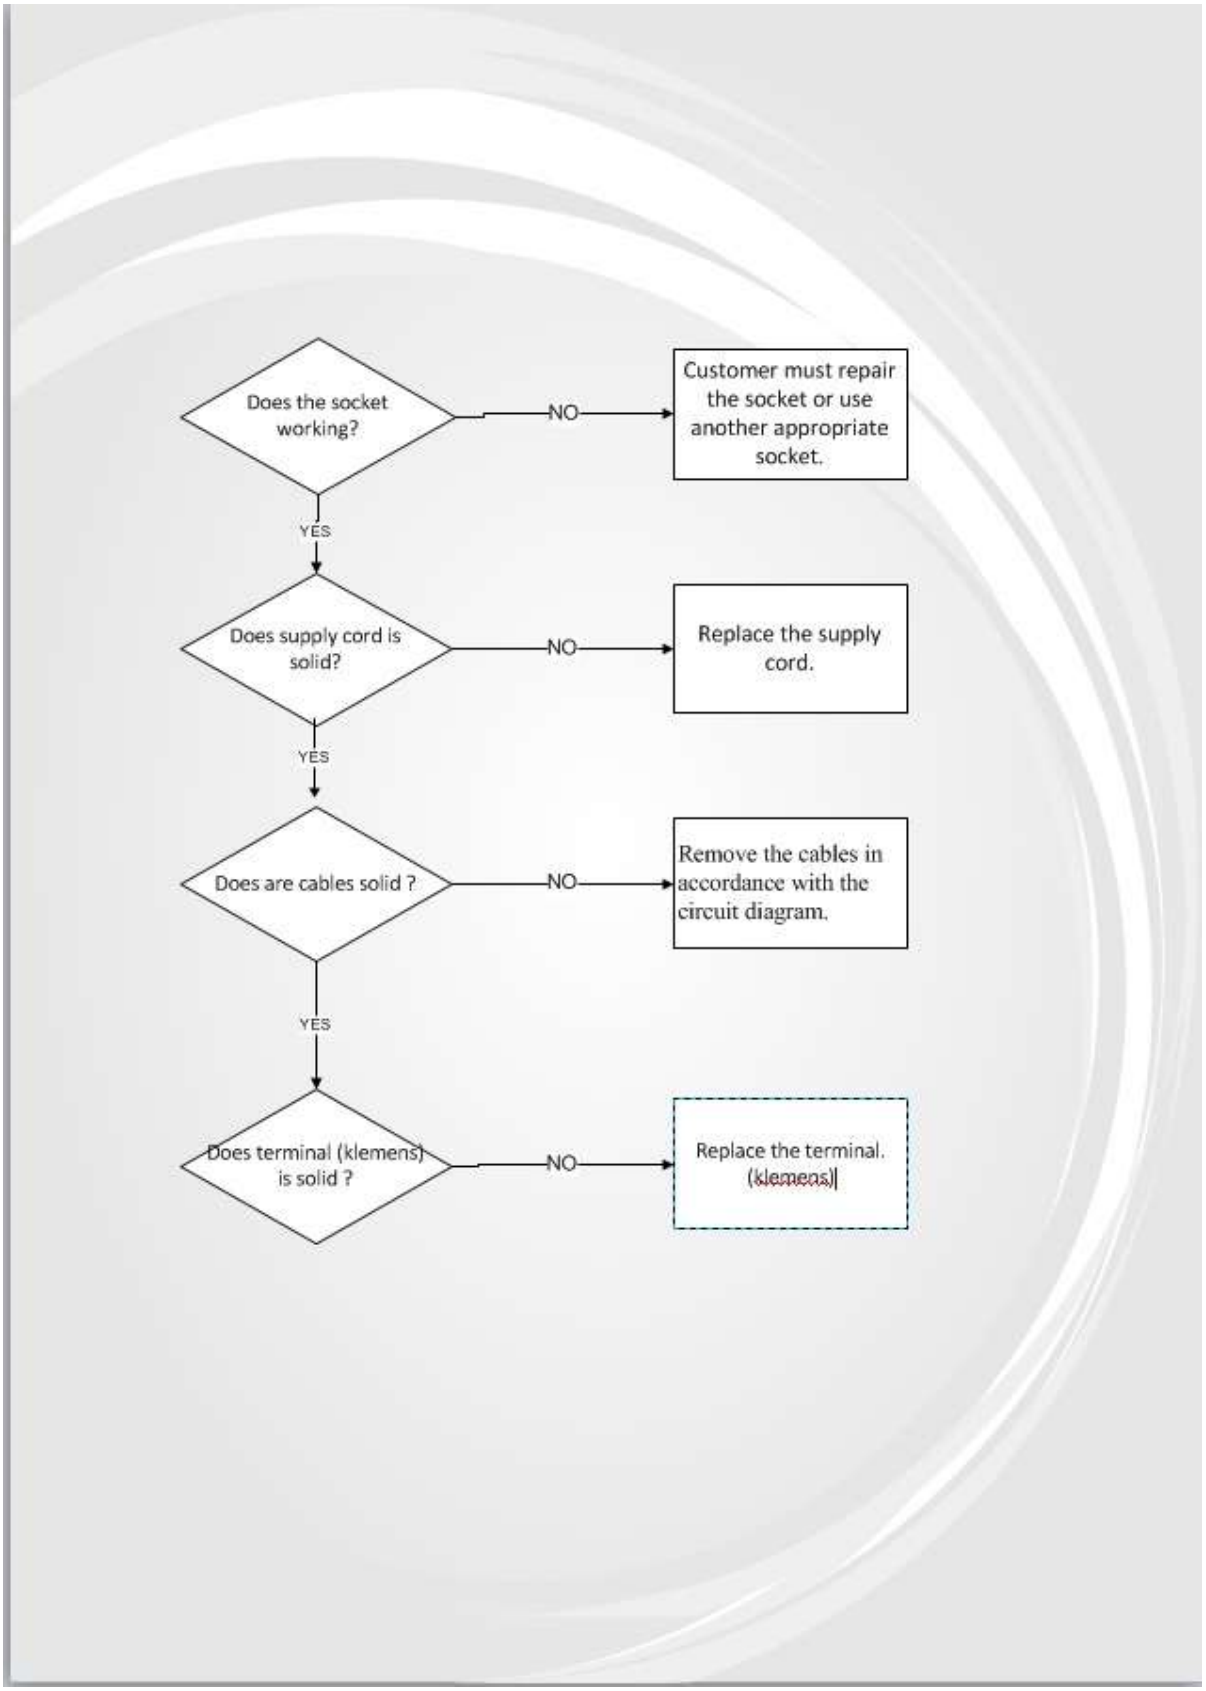

Sensitivity: Public

TOOLS FOR INSTALLATION/UNINSTALLATION

Cross screwdriver



straight screwdriver



combination cut pliers



Sensitivity: Public

INSTALLATION COMPONENTS /UNINSTALLATION

PS: Following instructions only for uninstalling of componets. Do opposite for installation of components.

Oven Feet change

There are four rubber feet.



①Pull out the four rubber feet as shown.



②And then use the cross screwdriver to remove the four screws to remove the for support feet.

Sensitivity: Public









Main enclosure and rear enclosure Change

① remove all the screws on the main enclosure.





Sensitivity: Public





② take the main enclosure.





③remove all the screws on the rear enclosure




④the power cord is connected with the rear enclosure. And there are so many wires connect with the power cord.





Sensitivity: Public

⑤cut the tapes.

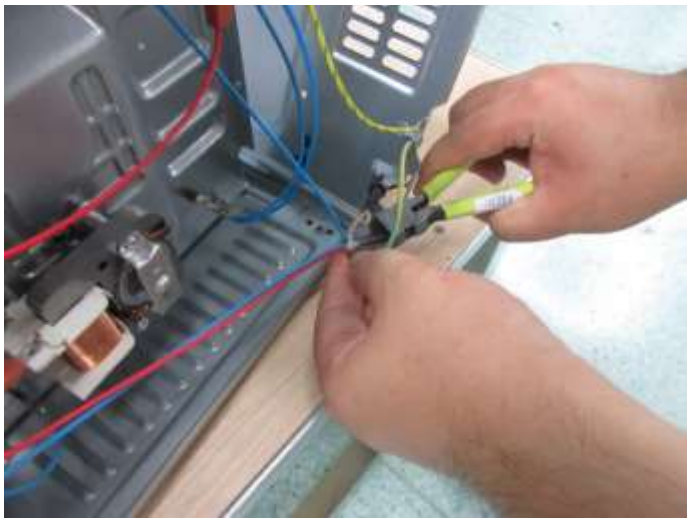



⑤ remove the wiring caps.

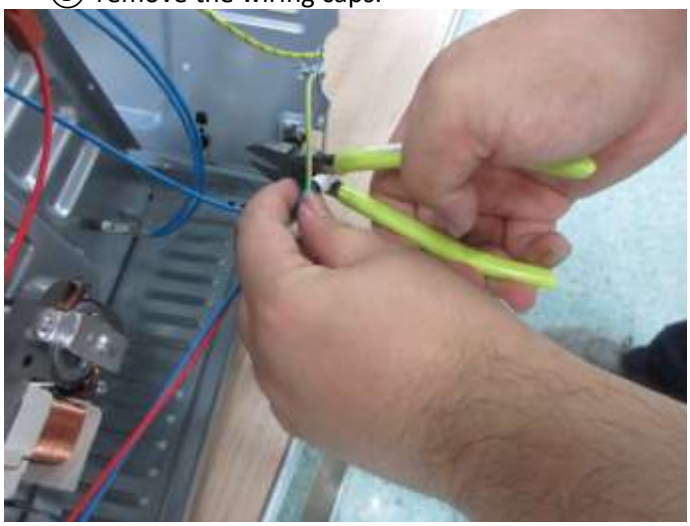


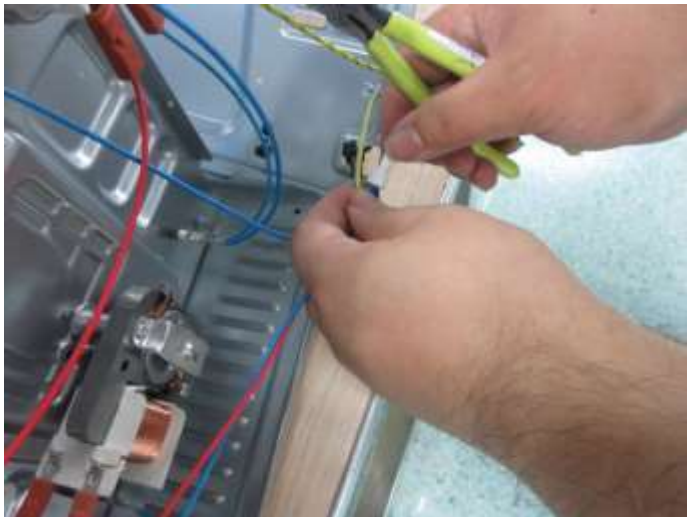

Sensitivity: Public

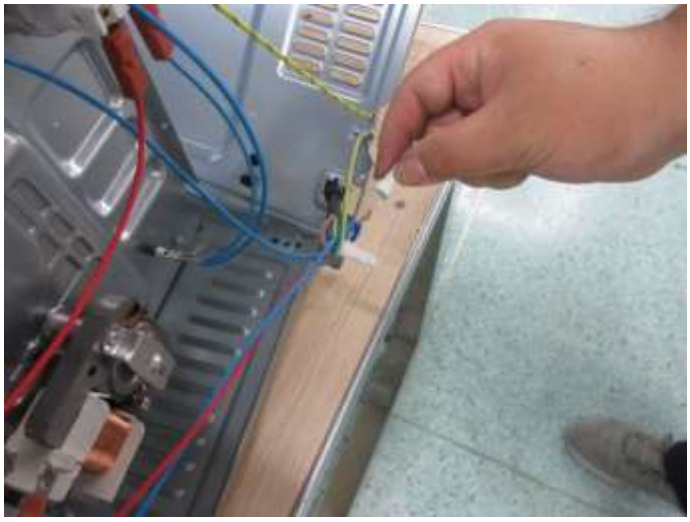

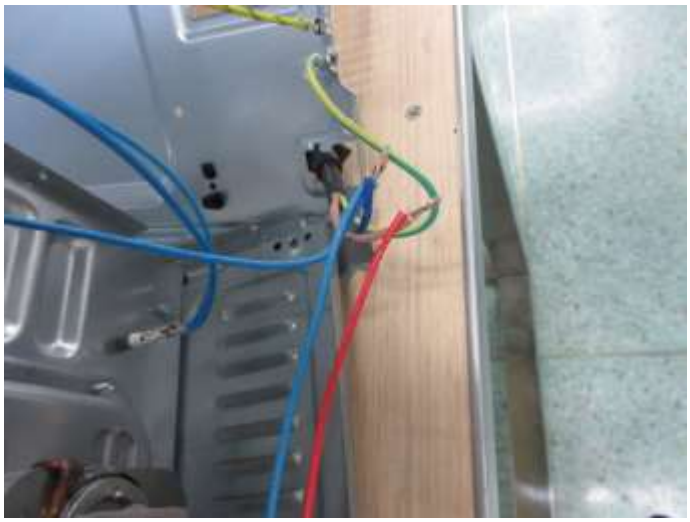

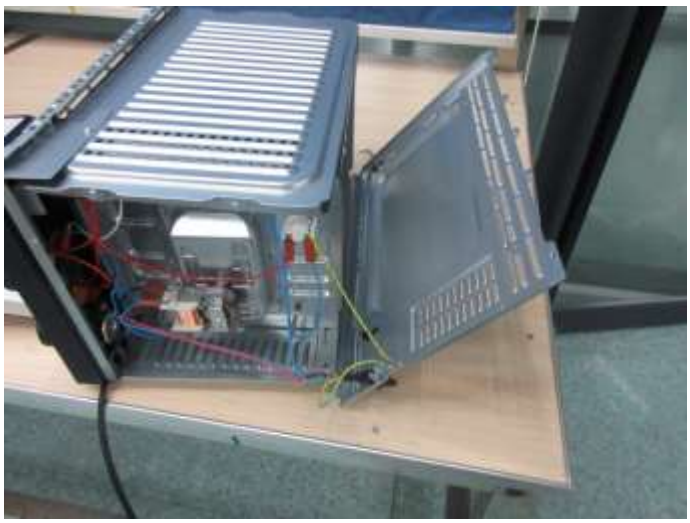


⑥ remove the screws beside the wire.






⑧pull out the wire.

Sensitivity: Public

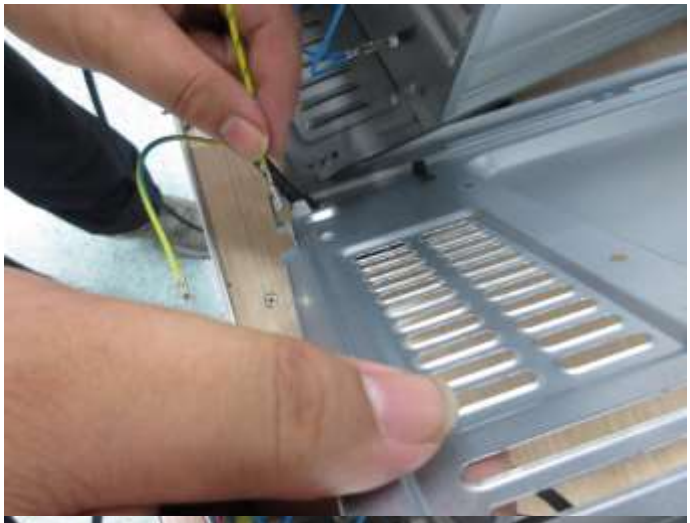



⑨unbolt the wires.

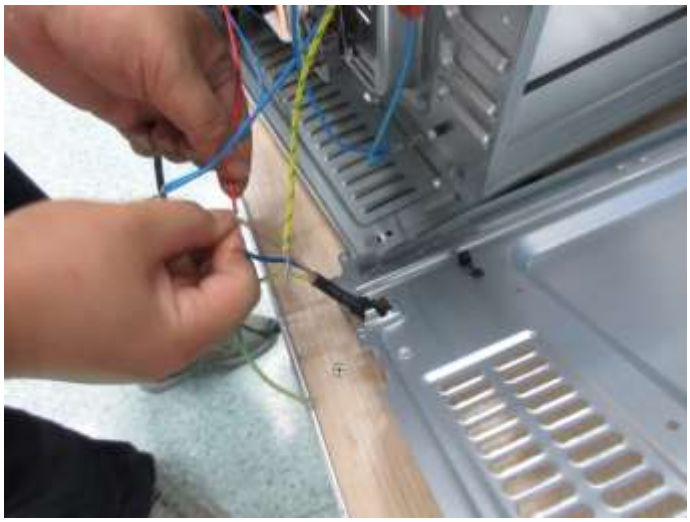

Sensitivity: Public



⑩take the spacer under the power cord.





Sensitivity: Public



⑪pull out the power cord. And take the rear enclosure.






Sensitivity: Public



heat insulation plate

① Replace the screws on the heat insulation palte..




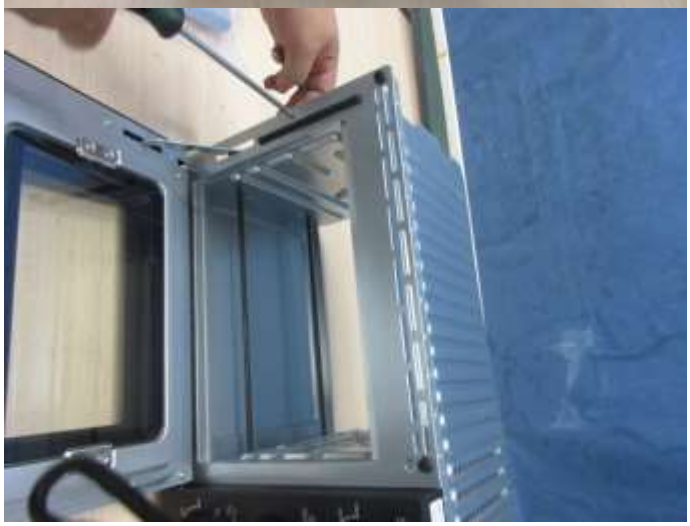

Sensitivity: Public





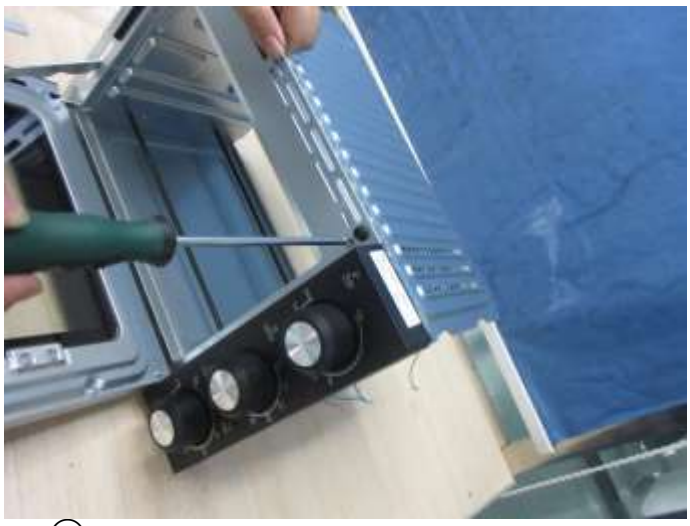

② take the heat insulation plate.





Front Door Change

①Open the front door complately



②remove the screw on the door axes and axes support. Then pull out the door with two hands.

Sensitivity: Public







②remove the screws on the door to disassemble the door handle.

Sensitivity: Public





③there is sticky tape between door frame and front glass door. Pry it open with a straight screwdriver carefully.



Sensitivity: Public







Sensitivity: Public




④remove the screws on the rear glass door.





Sensitivity: Public



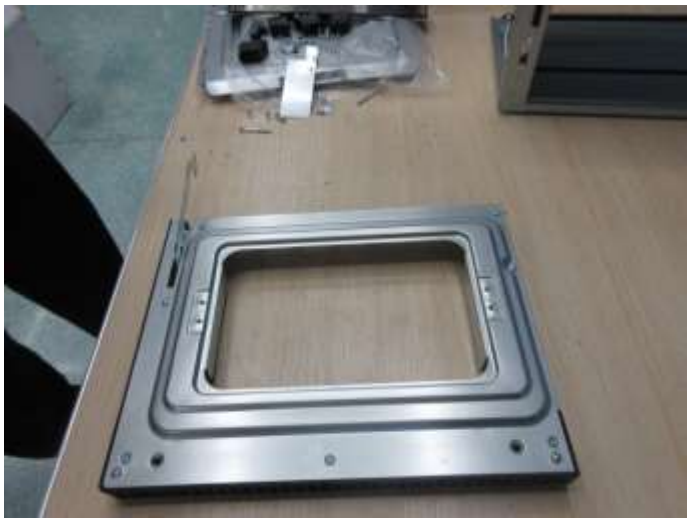

Knob Change

You should draw to yourself. Replace the button with the new one.



Sensitivity: Public

Replacement of the control panel


①To do this, the knobs must first be removed and the side wall removed.



②remove all the screws in front of the control panel.





③Cut the tapes.

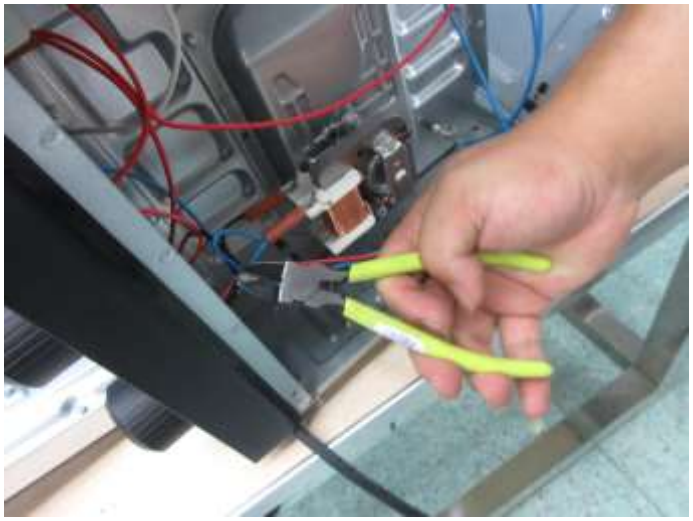


③ remove the wiring caps.


Sensitivity: Public

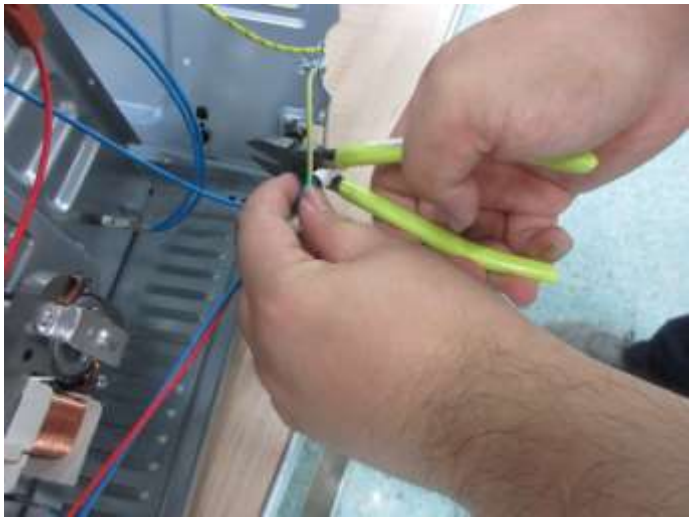

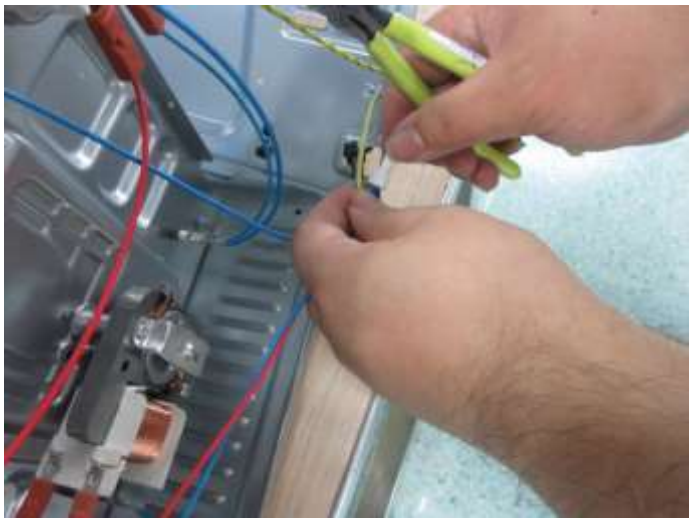


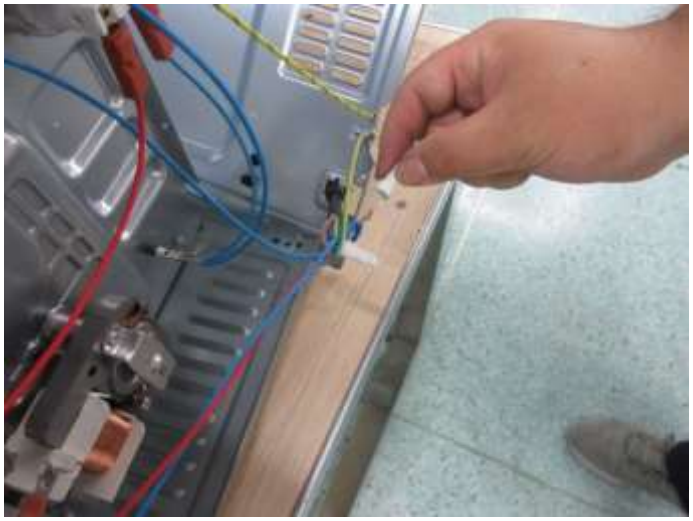


Sensitivity: Public

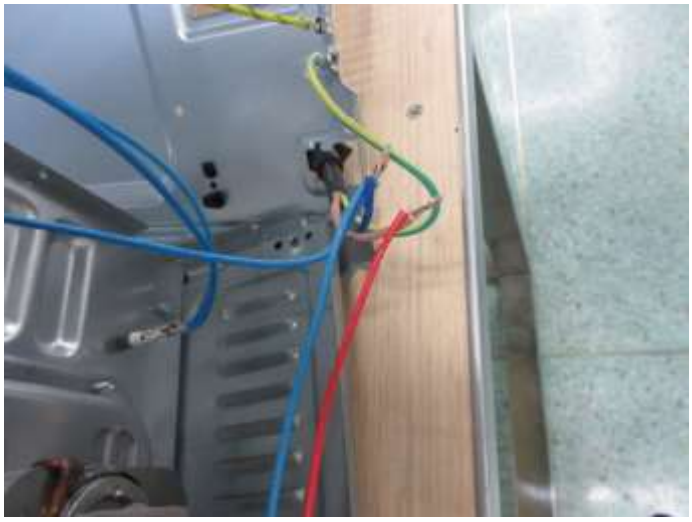



⑤Pull out the thermostat,switch and the timer behide the control panel. And then remove the line that connect with the thermostat,switch and the timer.

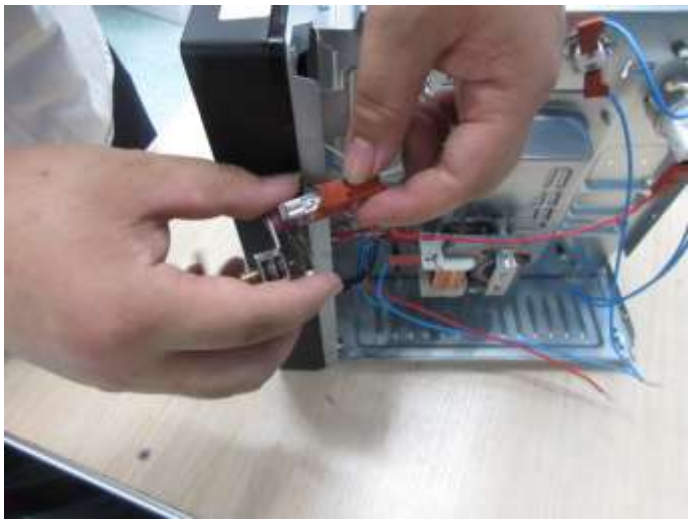

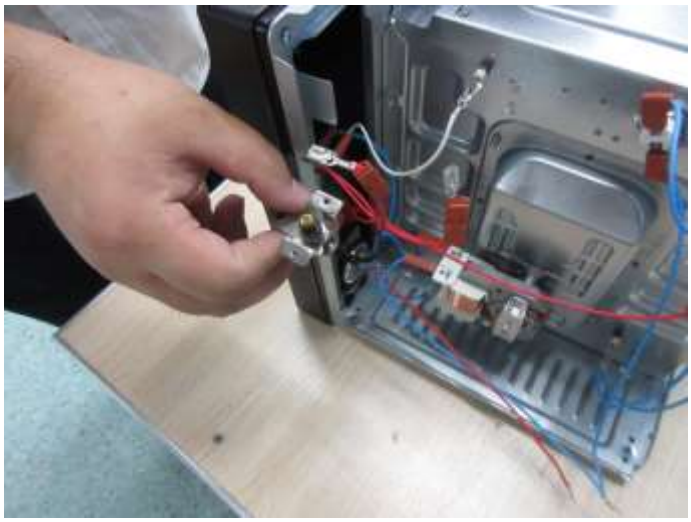

Sensitivity: Public

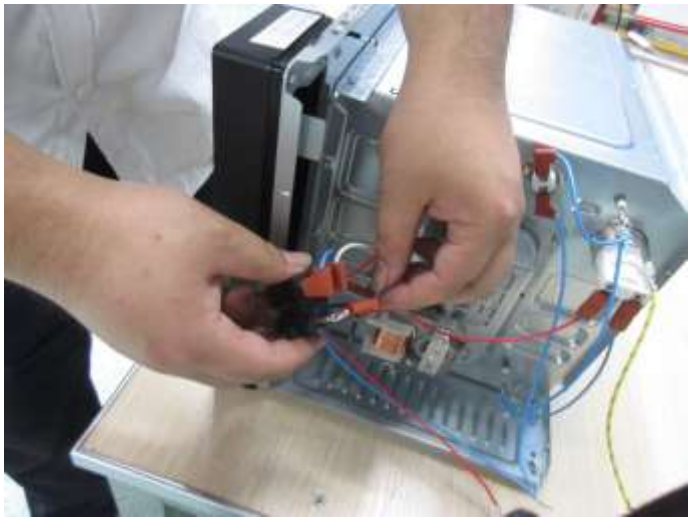

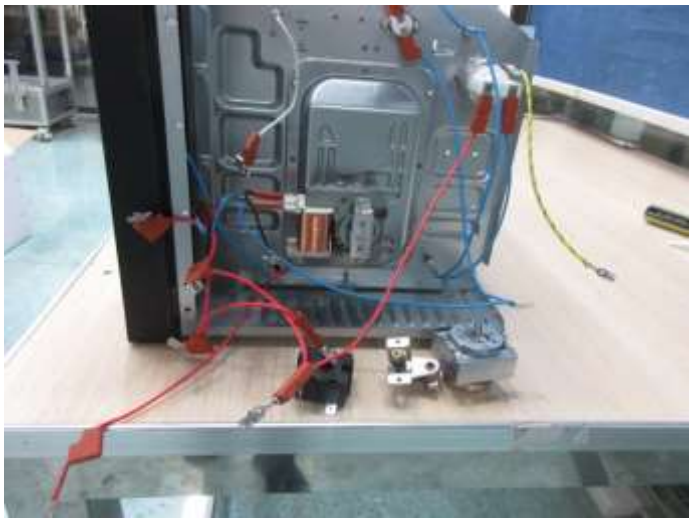

⑥The panel is connect with the front plate. Remove all the screws on the front plate. Then you can remove the front plate.



Sensitivity: Public








Sensitivity: Public



⑦ Remove the screws behide the panel. The panel is disassembled completely.

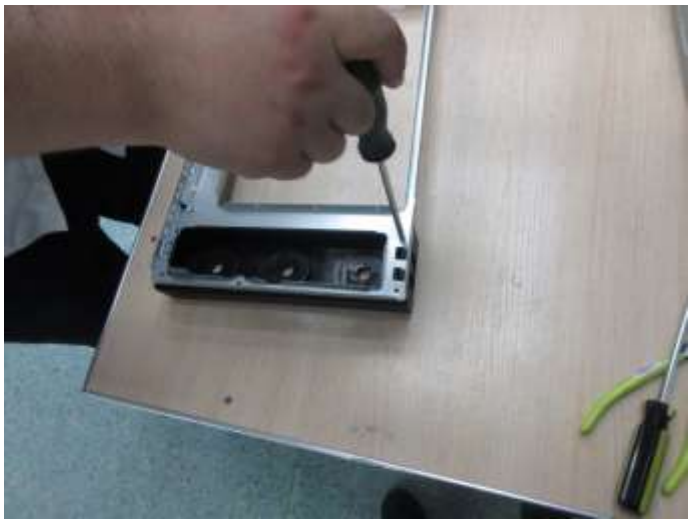




Sensitivity: Public



Convection fan assembly Change

①remove the screws on the convection fan assembly.

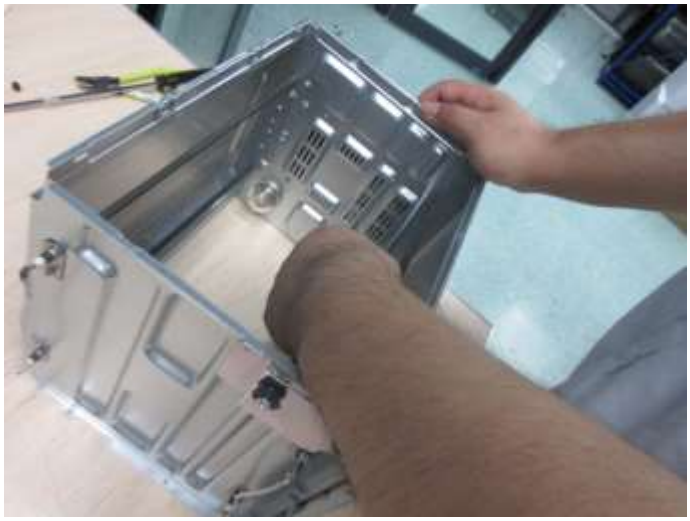

②Disassemble the convection fan assembly.


Sensitivity: Public






Lamp Change

①there are three buckles on the bottom of the lamp assembly. remove the line on the lame assembly. Then unlock the buckles.

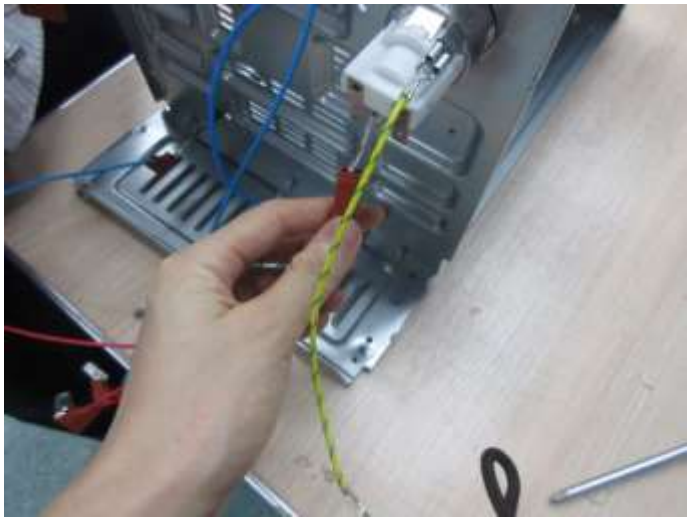


Sensitivity: Public

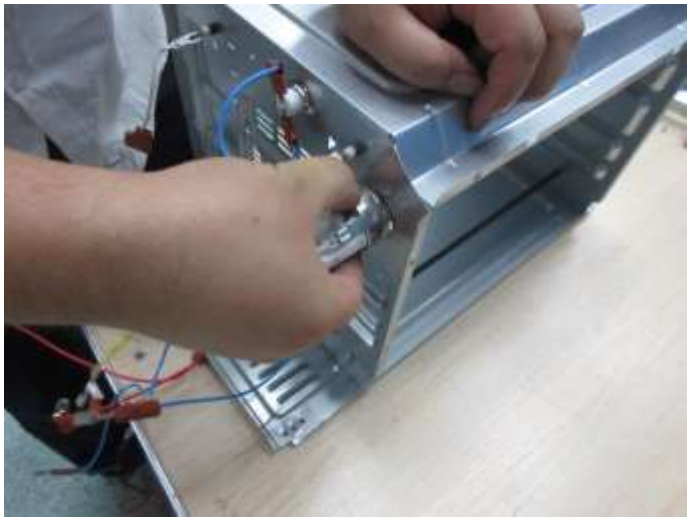





②hold the lamp assembly with two hands. Push in the direction of the inner oven to disassemble the lamp assembly.

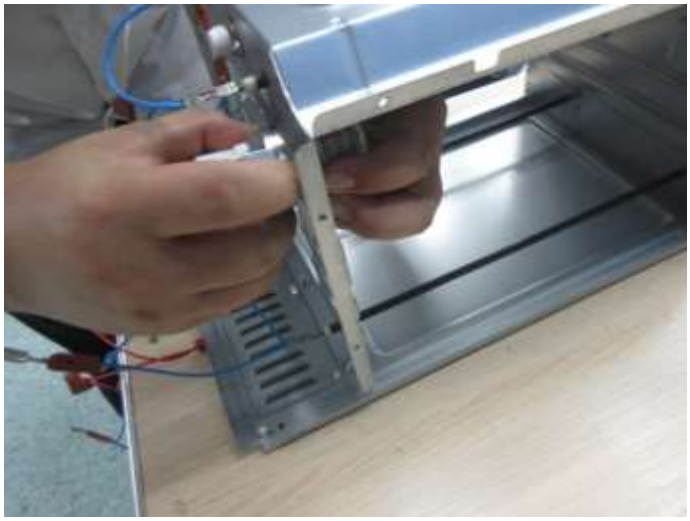

Sensitivity: Public

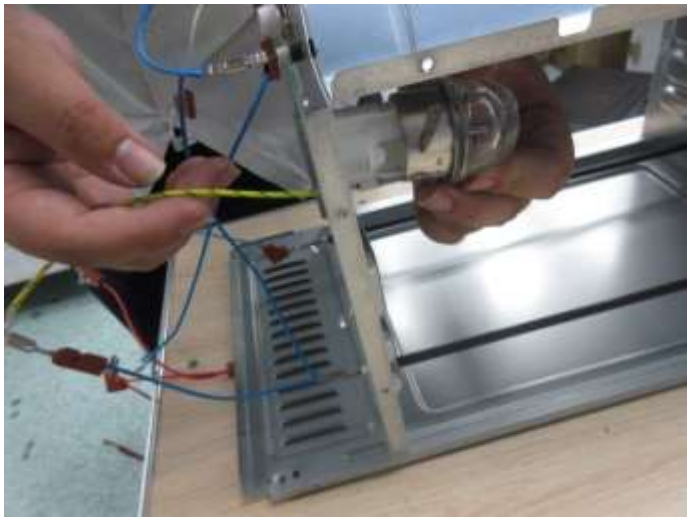

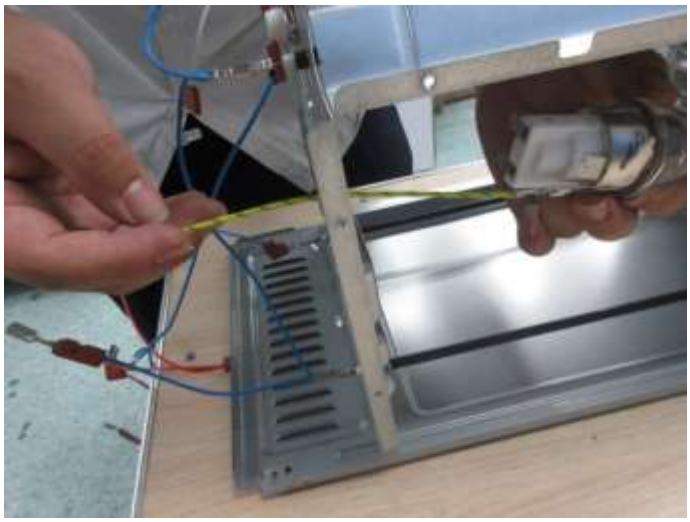

Oven Heating elements Change

①remove the screws beside the heating elements.



Sensitivity: Public

②pull out the heating element from one side.







Sensitivity: Public

EXPLODED VIEW

Explodedimages may varyaccording tothe type ofmodel and product . You can reach the last exploded views on e-library by define model type.

Sensitivity: Public

16.SERVICE PART LIST

Service part lists may varyaccording tothe type ofmodel and product . You can reach the last service part list on e-library by define model type.

Sensitivity: Public