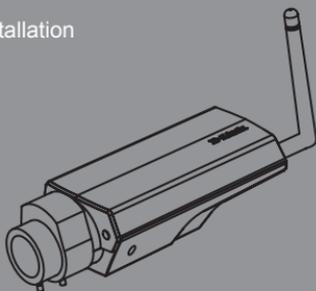**D-Link®**
Building Networks for People

Quick Install Guide
HD Network Camera

This document will guide you through the basic installation process for your new D-Link Network Camera.

DCS-3511/DCS-3530

DCS-3511/DCS-3530
Quick Install Guide

This installation guide provides basic instructions for installing the DCS-3511/DCS-3530 Network Camera on your network. For additional information about how to use the camera, please see the User Manual which is available on the CD included in this package or from http://support.dlink.com.

Installation Steps

1. Verify the package contents against the list below.
2. Hardware Overview
3. Hardware Installation
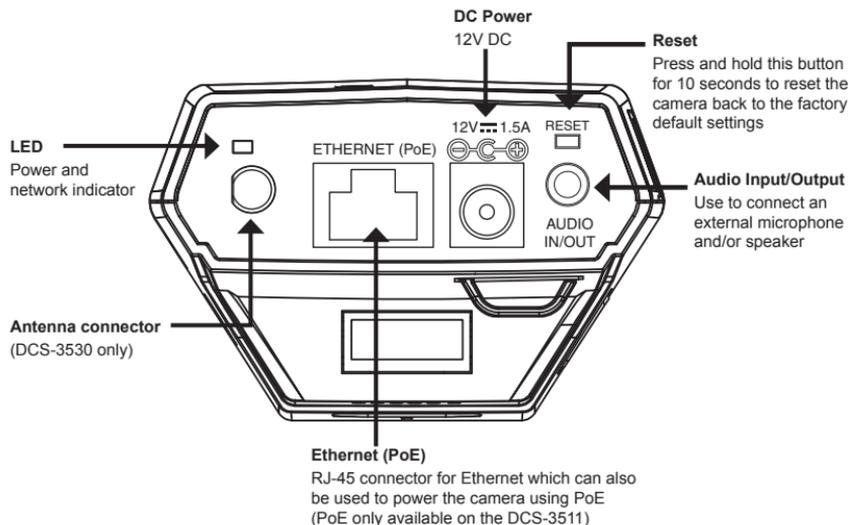4. Configuration with Wizard

1. Package Contents

° DCS-3511/DCS-3530 HD Network Camera
° Camera Stand
° Wireless Antenna (DCS-3530 only)
° Manual and Software on CD-ROM
° CAT5 Ethernet Cable
° Mic/Speaker Combo Cable
° Power Adapter
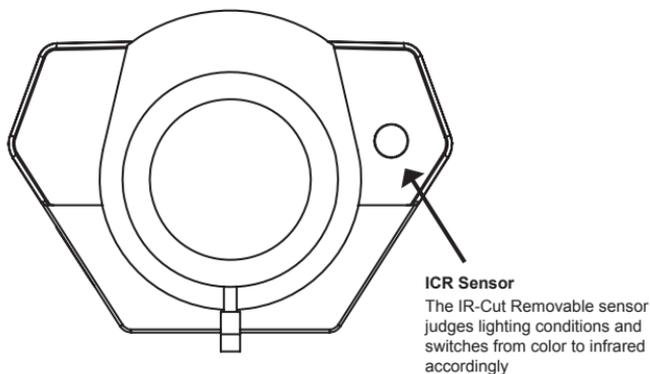° Quick Install Guide
° Lens Ring Fixture
° Allen Wrench

If any of the above items are missing, please contact your reseller.
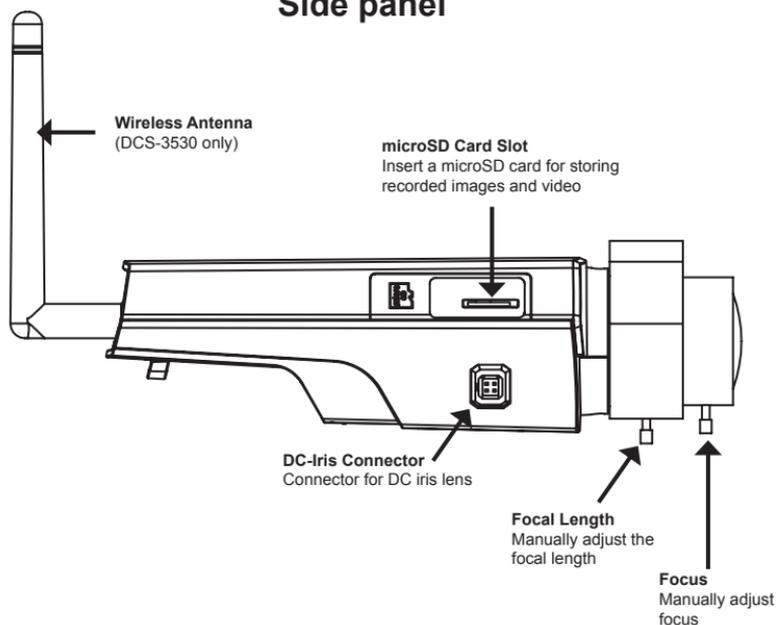
2. Hardware Overview

Rear Panel

DC Power
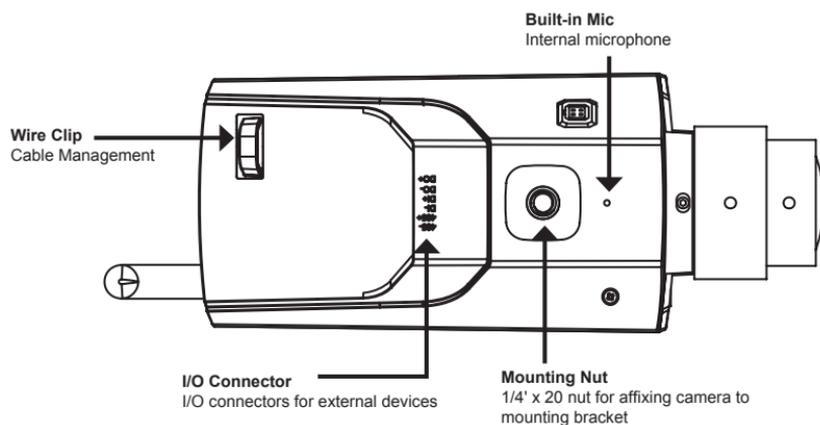12V DC

Reset
Press and hold this button for 10 seconds to reset the camera back to the factory default settings

LED
Power and network indicator

12V ⎓ 1.5A

ETHERNET (PoE)

RESET

AUDIO IN/OUT

Audio Input/Output
Use to connect an external microphone and/or speaker

Antenna connector
(DCS-3530 only)

Ethernet (PoE)
RJ-45 connector for Ethernet which can also be used to power the camera using PoE (PoE only available on the DCS-3511)

Front Panel

ICR Sensor
The IR-Cut Removable sensor judges lighting conditions and switches from color to infrared accordingly

Side panel

Wireless Antenna
(DCS-3530 only)

microSD Card Slot
Insert a microSD card for storing
recorded images and video

DC-Iris Connector
Connector for DC iris lens

Focal Length
Manually adjust the
focal length

Focus
Manually adjust
focus

Button panel

Built-in Mic
Internal microphone

Wire Clip
Cable Management

I/O Connector
I/O connectors for external devices

Mounting Nut
1/4' x 20 nut for affixing camera to
mounting bracket

3. Hardware Installation

Basic Connection (without PoE)
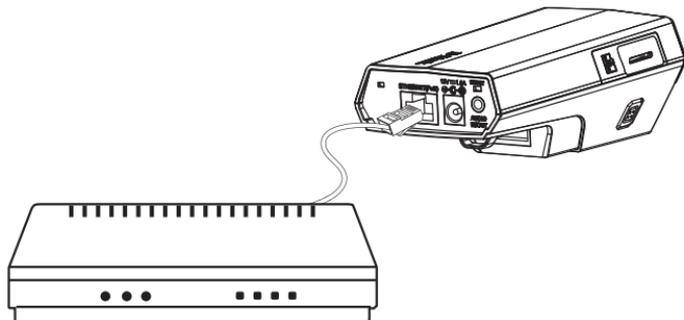Connect the camera to your switch or router via Ethernet cable.
Connect the supplied power cable from the camera to a power outlet.
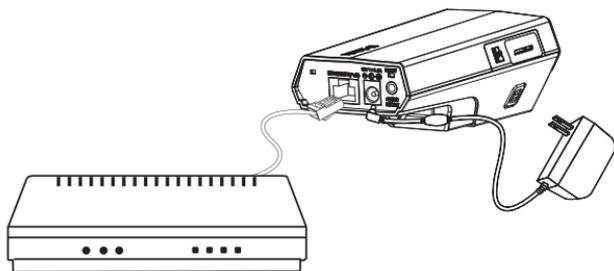
Connection Using a PoE Switch
If you are using a PoE switch, connect the network camera via Ethernet cable.
PoE will transmit both power and data over a single cable.

Note: Once power has been established, the LED will turn red. When the device has obtained an IP address and is accessible, the LED will turn green.

Attach the Antenna (DCS-3530 only)
Locate the antenna included with your DCS-3530 and attach it to the antenna connector located on the back of the DCS-3530.

D-Link DCS-3511/DCS-3530 Quick Install Guide
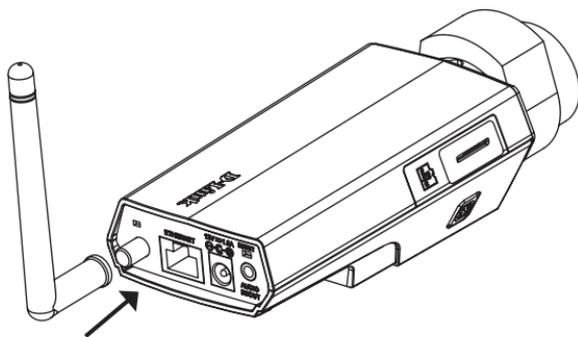
4. Configuration with Wizard

Insert the DCS-3511/DCS-3530 CD into your computer's CD-ROM drive to begin the installation. If the autorun function on your computer is disabled, or if the D-Link launcher fails to start automatically, click **Start > Run**. Type **D:\autorun.exe**, where D: represents the drive letter of your CD-ROM drive.

Click **Setup Wizard** to begin the installation. ──────▶

After clicking Setup Wizard, the following window will open.

Click **Next** to continue. ───────────────────────▶

Click **Yes** to accept the License Agreement. ────────▶

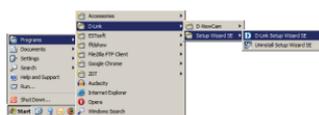To start the installation process, click **Next**. ──────▶

Note: The installation may take several minutes to finish.

Click **Finish** to complete the installation. ────────▶

Click on the **D-Link Setup Wizard SE** icon that was created in your Windows Start menu.

Start > D-Link > Setup Wizard SE

The Setup Wizard will appear and display the MAC address and IP address of your camera(s). If you have a DHCP server (i.e., router) on your network, a valid IP Address will be displayed. If your network does not use a DHCP server, the network camera's default static IP **192.168.0.20** will be displayed.

Click the **Wizard** button to continue.

Enter the Admin ID and password. When logging in for the first time, the default Admin ID is **admin** with the password left blank.

Click **Next** to proceed to the next page.

Select **DHCP** if you want the camera to obtain an IP address automatically from your router or DHCP server or select **Static IP** to manually assign the camera's IP settings.
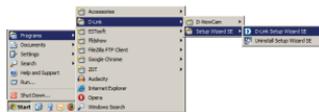
Click **Next** to proceed to the next page.

Take a moment to confirm your settings and click **Restart**.

Viewing Camera via Web Browser

Click on the **D-Link Setup Wizard SE** icon that was created in your Windows Start menu.

Start > D-Link > **Setup Wizard SE**

Select the camera and click the button labeled "**Link**" to access the web configuration.

The Setup Wizard will automatically open your web browser to the IP address of the camera.

Enter **admin** as the default username and leave the password blank. Click **OK** to continue.

This section shows your camera's live video. You can select your video profile and view or operate the camera. For additional information about web configuration, please refer to the user manual included on the CD-ROM or the D-Link website.

Notes

Notes

Notes

Notes

Notes

Notes

Contact Technical Support

D-Link's website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website or by phone.

United States
(877) 354-6555
http://support.dlink.com

Canada
(877) 354-6560
http://support.dlink.ca

D-Link

Version 1.0
October 15, 2013
a11633L8CD02