
ESL5205LO




| | | | |
|---|---|---|---|
| **HR** | Perilica posuđa | Upute za uporabu | 2 |
| **EN** | Dishwasher | User Manual | 24 |


Electrolux

# SADRŽAJ

**1.** INFORMACIJE O SIGURNOSTI..... 2
**2.** SIGURNOSNE UPUTE..... 4
**3.** OPIS PROIZVODA..... 6
**4.** UPRAVLJAČKA PLOČA..... 7
**5.** PROGRAMI..... 7
**6.** POSTAVKE..... 8
**7.** PRIJE PRVE UPOTREBE..... 11
**8.** SVAKODNEVNA UPORABA..... 13
**9.** SAVJETI..... 14
**10.** ČIŠĆENJE I ODRŽAVANJE..... 16
**11.** OTKLANJANJE POTEŠKOĆA..... 18
**12.** TEHNIČKI PODACI..... 22

# MISLIMO NA VAS

Hvala vam što ste kupili Electrolux uređaj. Izabrali ste proizvod koji sa sobom donosi desetljeća profesionalnog iskustva i inovacija. Domišljat i elegantan, projektiran je misleći na vas. Stoga, uvijek kada ga koristite, možete biti sigurni da ćete svaki put dobiti izvrsne rezultate.
Dobrodošli u Electrolux.
**Posjetite našu internetsku stranicu za:**



Dobivanje savjeta o korištenju, rješavanje problema, brošure i informacije o servisu i popravcima:
**www.electrolux.com/support**



Registrirajte svoj proizvod za bolju uslugu:
**www.registerelectrolux.com**



Kupujte dodatnu opremu, potrošni materijal i originalne rezervne dijelove za svoj uređaj:
**www.electrolux.com/shop**

# KORISNIČKA SLUŽBA I SERVIS

Obavezno koristite originalne rezervne dijelove.
Prilikom kontaktiranja ovlaštenog servisnog centra neka vam pri ruci budu sljedeći podaci: Model, PNC, serijski broj.
Informacije možete pronaći na natpisnoj pločici.

⚠ Upozorenje / Oprez - sigurnosne informacije

ⓘ Opće informacije i savjeti

Ekološke informacije

Zadržava se pravo na izmjene.

# 1. ⚠ INFORMACIJE O SIGURNOSTI

Prije postavljanja i korištenja uređaja, pažljivo pročitajte isporučene upute. Proizvođač nije odgovoran za bilo

kakvu ozljedu ili oštećenje koji su rezultat neispravnog postavljanja ili korištenja. Upute uvijek držite na sigurnom i pristupačnom mjestu za buduću upotrebu.

## **1.1** Sigurnost djece i osjetljivih osoba

- Ovaj uređaj mogu koristiti djeca od 8 godina i starija i osobe smanjenih tjelesnih, osjetilnih ili mentalnih mogućnosti ili osobe koje ne raspolažu iskustvom ili znanjem ako su pod nadzorom osobe odgovorne za njihovu sigurnost i rade po uputama koje se odnose na sigurno korištenje uređaja te razumiju uključene opasnosti.
- Bez stalnog nadzora djeca između 3 i 8 godina i osobe s vrlo visokim i složenim invaliditetom ne bi smjele koristiti ovaj uređaj.
- Bez stalnog nadzora djeca mlađa od 3 godine ne smiju upotrebljavati ovaj uređaj.
- Ne dozvolite djeci da se igraju s uređajem.
- Deterdžente čuvajte izvan dohvata djece.
- Držite djecu i kućne ljubimce podalje od uređaja dok su vrata uređaja otvorena.
- Bez nadzora djeca ne smiju čistiti uređaj i provoditi održavanje koje izvršava korisnik.

## **1.2** Opća sigurnost

- Ovaj uređaj namijenjen je za upotrebu u kućanstvu i za slične namjene kao što su:
  - farme, čajne kuhinje koje upotrebljavaju zaposleni u prodavaonicama, uredima i drugim radnim prostorima;
  - klijenti hotela, motela, bed&breakfast ustanova i drugih vrsta smještaja.
- Ne mijenjajte specifikacije ovog uređaja.
- Radni tlak vode (minimalni i maksimalni) mora biti između 0.5 (0.05) / 8 (0.8) bar (MPa)
- Pridržavajte se postavke maksimalnog broja od 13 mjesta.

- Ako je kabel za napajanje oštećen, proizvođač ili ovlašteni servisni centar ili slična kvalificirana osoba mora ga zamijeniti kako bi se izbjegla opasnost.
- Pribor za jelo stavite u košaru za pribor za jelo s oštrim rubovima okrenutom prema dolje, ili ga stavite u ladicu za pribor za jelo u vodoravan položaj s oštrim rubovima okrenutim prema dolje.
- Ne ostavljajte uređaj s otvorenim vratima bez nadzora kako biste izbjegli da ih slučajno nagazite.
- Prije održavanja uređaj isključite, a utikač izvadite iz utičnice električnog napajanja.
- Za čišćenje uređaja ne koristite prskalice vode i/ili pare pod tlakom.
- Ako uređaj ima ventilacijske otvore na dnu, oni se ne smiju pokrivati, npr. tepihom.
- Uređaj se treba priključiti na vodovodnu mrežu pomoću isporučenog novog kompleta cijevi. Stari komplet cijevi ne smije se ponovno upotrijebiti.

# **2.** SIGURNOSNE UPUTE

## **2.1** Instalacija

**UPOZORENJE!**
Samo kvalificirana osoba smije postaviti ovaj uređaj.

- Odstranite svu ambalažu.
- Ne postavljajte i ne koristite oštećeni uređaj.
- Zbog sigurnosti, ne koristite uređaj prije postavljanja u ugradbeni ormarić.
- Slijedite upute za postavljanje isporučene s uređajem.
- Prilikom pomicanja uređaja uvijek budite pažljivi jer je uređaj težak. Uvijek nosite zaštitne rukavice i zatvorenu obuću.
- Uređaj nemojte postavljati na mjesta na kojima je temperatura manja od 0 °C.
- Ugradite uređaj na sigurno i prikladno mjesto koje udovoljava zahtjevima instalacije.

YouTube **www.youtube.com/electrolux**
**www.youtube.com/aeg**

How to install your 60 cm Dishwasher Sliding Hinge

## **2.2** Električni priključak


**UPOZORENJE!**
Opasnost od požara i strujnog udara.

- Uređaj mora biti uzemljen.
- Provjerite jesu li parametri na natpisnoj pločici kompatibilni s električnim vrijednostima mrežnog napajanja.
- Uvijek koristite pravilno montiranu utičnicu sa zaštitom od strujnog udara.
- Ne koristite adaptere s više utičnica i produžne kabele.
- Pazite da ne oštetite utikač i kabel napajanja. Ako je potrebno zamijeniti

električni kabel, to mora izvršiti ovlašteni servisni centar.
- Utikač kabela napajanja uključite u utičnicu tek po završetku postavljanja. Provjerite postoji li nakon montaže pristup utikaču.
- Ne povlačite kabel napajanja kako biste izvukli utikač iz utičnice. Uvijek uhvatite i povucite utikač.
- Ovaj uređaj opremljen je kabelom napajanja od 13 A. Ako je potrebno zamijeniti osigurač električnog utikača, upotrijebite osigurač ASTA (BS 1362) od 13 A (samo UK i Irska).

## **2.3** Spajanje na dovod vode

- Ne oštećujte crijeva za vodu.
- Prije priključka na nove cijevi, cijevi koje dugo nisu korištene, nakon popravka ili instalacije novih uređaja (mjerila itd.), pustite da voda teče dok nije čista i bistra.
- Provjerite da nema vidljivih curenja tijekom i nakon prve uporabe uređaja.
- Crijevo za dovod vode ima sigurnosni ventil i oblogu s unutarnjim električnim kabelom.

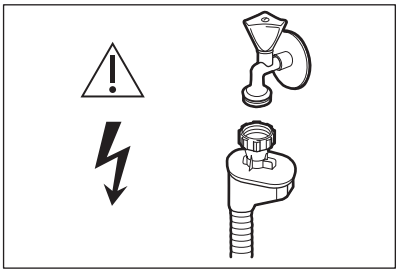

**UPOZORENJE!**
Opasan napon.

- Ako je crijevo za dovod vode oštećeno, odmah zatvorite slavinu za vodu iskopčajte utikač iz strujne utičnice. Za zamjenu crijeva za dovod vode kontaktirajte ovlašteni servisni centar.

## **2.4** Primjena

- Ne stavljajte zapaljive predmete ili predmete namočene zapaljivim sredstvima u, pored ili na uređaj.
- Deterdženti za perilicu posuđa su opasni. Slijedite sigurnosne upute na ambalaži deterdženta.
- Ne pijte i ne igrajte se s vodom u uređaju.
- Ne vadite posuđe iz uređaja prije završetka programa. Neki deterdžent može ostati na posuđu.
- Ne stavljajte predmete i ne vršite pritisak na otvorena vrata uređaja.
- Uređaj može ispuštati vruću paru ako otvorite vrata dok je program u tijeku.

## **2.5** Unutarnje osvjetljenje

**UPOZORENJE!**
Opasnost od ozljede.

- Što se tiče žarulje(a) unutar ovog proizvoda i rezervnih žarulja koje se prodaju zasebno: Ove žarulje namijenjene su da izdrže ekstremne fizičke uvjete u kućanskim uređajima, poput temperature, vibracija, vlage ili namijenjene su signalizaciji informacija o radnom stanju uređaja. Nisu namijenjene za druge primjene i nisu pogodne za osvjetljenje u kućanstvu.
- Za zamjenu unutarnjeg osvjetljenja obratite se ovlaštenom servisu.

## **2.6** Servis

- Za popravak uređaja kontaktirajte ovlašteni servis. Koristite samo originalne rezervne dijelove.
- Imajte na umu da samo-popravak ili neprofesionalni popravak mogu imati sigurnosne posljedice i mogu poništiti jamstvo.
- Sljedeći rezervni dijelovi bit će dostupni 7 godina nakon ukidanja modela: motor, crikulacijska i odvodna pumpa, grijači i grijaći elementi, uključujući toplinske pumpe, cjevovode i srodnu opremu, uključujući crijeva, ventile, filtre i aquastop, strukturne i unutarnje dijelove sklopova vrata, tiskane pločice, elektroničke zaslone, tlačne prekidače, termostate i senzore, softver i upravljačke programe, uključujući softver za ponovno pokretanje. Imajte na umu da su neki od tih rezervnih dijelova dostupni samo profesionalnim serviserima i da nisu svi rezervni dijelovi relevantni za sve modele.


- Sljedeći rezervni dijelovi bit će dostupni 10 godina nakon ukidanja modela: šarke i brtve na vratima, druge brtve, mlaznice, filtri za odvod, unutarnje police i plastične periferne jedinice poput košara i poklopaca.
- Uređaj isključite iz električne mreže.
- Prerežite električni kabel i bacite ga.
- Uklonite bravicu vrata kako biste spriječili da se djeca i kućni ljubimci zatvore u uređaj.

## **2.7** Odlaganje

**UPOZORENJE!**
Opasnost od ozljede ili gušenja.


# **3.** OPIS PROIZVODA

Grafički prikaz u nastavku samo je općeniti pregled proizvoda. Za detaljnije informacije pogledajte druga poglavlja i/ili dokumente isporučene s uređajem.

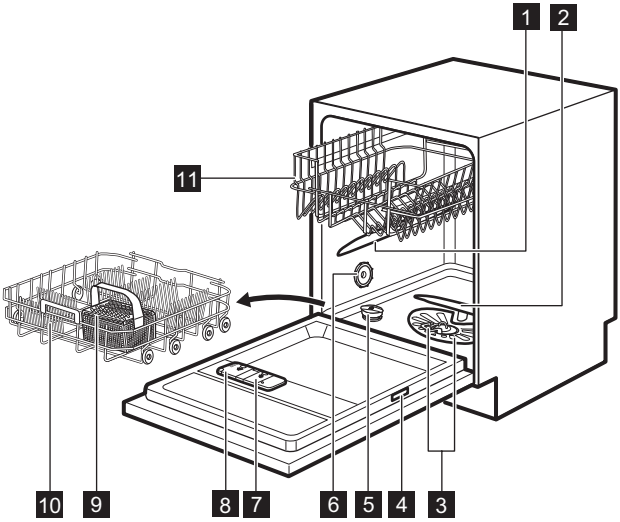


1 Gornja mlaznica
2 Donja mlaznica
3 Filtri
4 Natpisna pločica
5 Spremnik soli
6 Ventilacijski otvor
7 Spremnik sredstva za ispiranje
8 Spremnik za deterdžent
9 Košara za pribor za jelo
10 Donja košara
11 Gornja košara

# 4. UPRAVLJAČKA PLOČA

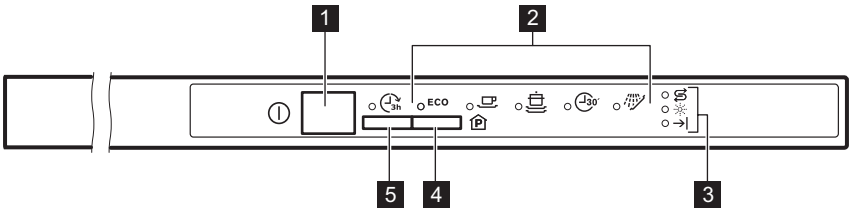


1 Tipka za uključivanje/isključivanje
2 Indikatori programa
3 Indikatori
4 Programska tipka
5 Tipka Delay

## 4.1 Indikatori

| Indikator | Opis |
|---|---|
| →\| | Indikator završetka programa. |
| ✳ | Indikator sredstva za ispiranje. On je uvijek isključen dok program radi. |
| ⇄ | Indikator za sol. On je uvijek isključen dok program radi. |

# 5. PROGRAMI

Redoslijed programa u tablici ne mora odražavati njihov redoslijed na upravljačkoj ploči.

| Program | Stupanj zaprljanosti Vrsta punjenja | Faze programa | Potrošnja 1) | | |
|---|---|---|---|---|---|
| | | | Trajanje (min) | Energija (kWh) | Voda (l) |
| ECO 2) | Normalno zaprljano Posuđe i pribor za jelo | • Pretpranje • Pranje 50 °C • Ispiranja • Sušenje | 227 3)/ 227 4) | 1.039 3)/ 1.036 4) | 11 |
| | Jako zaprljano Posuđe, pribor za jelo, tave i posude | • Pretpranje • Pranje 70 °C • Ispiranja • Sušenje | 160 | 1.052 - 1.285 | 11.1 - 13.6 |

| Program | Stupanj zaprljanosti Vrsta punjenja | Faze programa | Potrošnja 1) | | |
|---|---|---|---|---|---|
| | | | Trajanje (min) | Energija (kWh) | Voda (l) |
| | Normalno zaprljano Posuđe i pribor za jelo | • Pretpranje<br>• Pranje 65 °C<br>• Ispiranja<br>• Sušenje | 90 | 0.886 - 1.083 | 9.6 - 11.7 |
| 30' 5) | Svježe zaprljano posuđe Posuđe i pribor za jelo | • Pranje 60 °C ili 65 °C<br>• Ispiranja | 30 | 0.556 - 0.680 | 9.2 - 11.2 |
| 6) | Sve | • Pretpranje | 15 | 0.012 - 0.015 | 3.4 - 4.2 |

1) Tlak i temperatura vode, oscilacije u napajanju električne mreže, opcije te količina posuđa mogu promijeniti vrijednosti.

2) Ovaj program nudi najučinkovitije iskorištavanje vode i uštedu energije za uobičajeno zaprljano posuđe i pribor za jelo. Ovo je standardni program za ustanove za testiranje. Ovaj se program koristi za ocjenu usklađenosti s Uredbom Komisije za ekodizajn (EU) 2019/2022.

3) U skladu s Uredbom 1016/2010

4) U skladu s Uredbom 2019/2022

5) Ovaj je program prikladan za pranje lagano zaprljanog punjenja ili pola punjenja u kratkom vremenu.

6) Pomoću ovog programa možete brzo isprati ostatke hrane s posuđa i spriječiti stvaranje neugodnih mirisa u uređaju. Uz ovaj program nemojte koristiti deterdžent.

### **5.1** Informacije za ustanove za testiranje

Kako biste primili potrebne informacije o provedbi testova značajki (npr. u skladu s EN60436), pošaljite poruku elektroničke pošte na:

**info.test@dishwasher-production.com**

U vašem zahtjevu priložite broj proizvoda (PNC) s natpisne pločice.

Za sva druga pitanja u vezi vaše perilice posuđa pogledajte servisnu knjižicu isporučenu s vašim uređajem.

# **6.** POSTAVKE

### **6.1** Način rada za odabir programa i korisnički način rada

Kad je uređaj u načinu rada za odabir programa, moguće je postaviti program i ući u korisnički način rada.

**Postavke dostupne u korisničkom načinu rada:**

- Razina omekšivača vode u skladu s tvrdoćom vode.
- Uključenje ili isključenje zvučnog signala za završetak programa.
- Uključenje ili isključenje AirDry

**Zbog toga što uređaj pohranjuje spremljene postavke, nije ga potrebno konfigurirati prije svakog ciklusa.**

#### Kako postaviti način rada za odabir programa

Uređaj je u načinu rada za odabir programa kad indikator programa **ECO** bljeska.

Nakon uključenja, uređaj je standardno u načinu rada za odabir programa. Ako nije, postavite način rada za odabir programa na sljedeći način:

Pritisnite i držite tipku programa dok je uređaj u načinu rada 'Odabir programa'.

## Kako ući u korisnički način rada

Provjerite je li uređaj u načinu rada 'Odabir programa'.

Za ulazak u korisnički način rada, pritisnite i držite pritisnutu tipku programa dok indikator **ECO** ne počne bljeskati, a indikatori i stalno svijetle.

## 6.2 Omekšivač vode

Omekšivač vode uklanja minerale iz vode koji bi imali negativan utjecaj na rezultate pranja i na uređaj.

Što je više tih minerala, to je voda tvrđa. Tvrdoća vode mjeri se sljedećim ekvivalentnim ljestvicama.

Omekšivač vode treba podesiti u skladu s tvrdoćom vode na vašem području. Podatke možete dobiti od lokalnog vodoopskrbnog poduzeća. Važno je postaviti ispravnu razinu omekšivača vode kako bi se osigurali dobri rezultati pranja.

**Tvrdoća vode**

| Njemački stupnjevi (°dH) | Francuski stupnjevi (°fH) | mmol/l | Clarke stupnjevi | Razina omekšivača vode |
|---|---|---|---|---|
| 47 - 50 | 84 - 90 | 8.4 - 9.0 | 58 - 63 | 10 |
| 43 - 46 | 76 - 83 | 7.6 - 8.3 | 53 - 57 | 9 |
| 37 - 42 | 65 - 75 | 6.5 - 7.5 | 46 - 52 | 8 |
| 29 - 36 | 51 - 64 | 5.1 - 6.4 | 36 - 45 | 7 |
| 23 - 28 | 40 - 50 | 4.0 - 5.0 | 28 - 35 | 6 |
| 19 - 22 | 33 - 39 | 3.3 - 3.9 | 23 - 27 | 5 **1)** |
| 15 - 18 | 26 - 32 | 2.6 - 3.2 | 18 - 22 | 4 |
| 11 - 14 | 19 - 25 | 1.9 - 2.5 | 13 - 17 | 3 |
| 4 - 10 | 7 - 18 | 0.7 - 1.8 | 5 - 12 | 2 |
| <4 | <7 | <0.7 | < 5 | 1 **2)** |

**1)** Tvorničke postavke.

**2)** Nemojte koristiti sol na ovoj razini.

**Neovisno o vrsti korištenog deterdženta, postavite odgovarajuću razinu tvrdoće vode kako biste održali indikator punjenja soli aktivnim.**

Višenamjenske tablete koje sadrže sol nisu dovoljno učinkovite kako bi omekšale tvrdu vodu.

**Postupak obnavljanja**

Za ispravan rad omekšivača vode, smolu u uređaju za omekšavanje potrebno je redovito obnavljati. Taj je postupak je automatski i dio je normalnog rada perilice posuđa.

Kad se propisana količina vode (vidi vrijednosti u tablici) koristi od prethodnog postupka obnavljanja, novi proces obnavljanja započet će između završnog ispiranja i završetka programa.

| Razina omekšiva-ča vode | Količina vode (l) |
|---|---|
| 1 | 250 |
| 2 | 100 |
| 3 | 62 |
| 4 | 47 |
| 5 | 25 |
| 6 | 17 |
| 7 | 10 |
| 8 | 5 |
| 9 | 3 |
| 10 | 3 |

U slučaju visoke postavke omekšivača vode, također se može dogoditi u sredini programa, prije ispiranja (dva puta tijekom programa). Početak obnavljanja nema utjecaja na trajanje ciklusa, osim ako se dogodi u sredini programa ili na kraju programa s kratkom fazom sušenja. U tim slučajevima, obnavljanje produžava ukupno trajanje programa za dodatnih 5 minuta.

Nakon toga, u istom ciklusu ili na početku sljedećeg programa može započeti ispiranje omekšivača vode koje traje 5 minuta. Ova aktivnost povećava ukupnu potrošnju vode programa za dodatne 4 litre i ukupnu potrošnju energije programa za dodatna 2 Wh. Ispiranje omekšivača završava se potpunim ispuštanjem vode.

Svako izvedeno ispiranje sa sredstvom za ispiranje (moguće više od jednog u istom ciklusu) može produžiti trajanje programa za još 5 minuta, kada se pojavi u bilo kojem trenutku na početku ili u sredini programa.

Sve vrijednosti potrošnje navedene u ovom odjeljku određene su u skladu s trenutno važećim standardom u laboratorijskim uvjetima s tvrdoćom vode 2,5 mmol/l u skladu s Uredbom 2019/2022 (omekšivač vode: razina 3). Tlak i temperatura vode kao i promjene u opskrbi mrežom mogu promijeniti vrijednosti.

### Kako postaviti razinu omekšivača vode

Provjerite da je uređaj u korisničkom načinu rada.

1. Pričekajte dok se indikatori i ne isključe a indikator →| bljeska. Indikator **ECO** još uvijek bljeska. Isprekidano bljeskanje indikatora →| prikazuje trenutnu postvavku.
   - npr. 5 bljeskova + pauza + 5 bljeskova = razina 5.
2. Za promjenu postavke pritiščite tipku programa. Svaki put kad pritisnete tipku programa povećava se broj razine. Nakon dostizanja razine 10, brojenje ponovno počinje od razine 1.
3. Za potvrdu postavke pritisnite tipku za uključivanje/isključivanje.

## 6.3 Zvučni signali

Zvučni signali oglašavaju se kad dođe do kvara uređaja. Zvučne signale nije moguće isključiti.

Zvučni signal oglašava se i po završetku programa. Po zadanim postavkama, taj zvučni signal je isključen ali ga je moguće uključiti.

### Način uključivanja zvučnog signala za završetak programa

Provjerite da je uređaj u korisničkom načinu rada.


1. Odmah pritisnite tipku programa.

- Indikatori ECO i su uključeni.
- Indikator trepće.

2. Pričekajte da se indikatori ECO i isključe. Indikator još uvijek bljeska.
   - Indikator prikazuje trenutačnu postavku: indikator isključen = Zvučni signal isključen.
3. Za promjenu postavke pritisnite tipku programa.
   - indikator uključen = Zvučni signal uključen.
4. Za potvrdu postavke pritisnite tipku za uključivanje/isključivanje.

## 6.4 AirDry

Opcija AirDry poboljšava rezultate sušenja uz manju potrošnju energije.

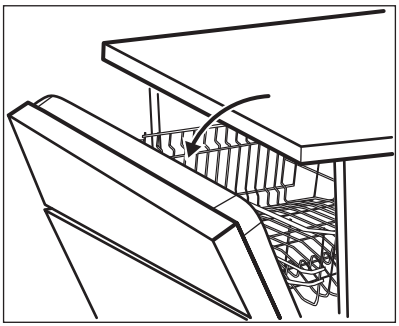

Tijekom faze sušenja, vrata se automatski otvaraju i ostaju pritvorena.

**OPREZ!**
Ne pokušavajte zatvoriti vrata uređaja tijekom 2 minute nakon automatskog otvaranja. To može prouzročiti oštećenja uređaja.

AirDry automatski se aktivira sa svim programima osim (ako je primjenjivo).

**OPREZ!**
Ako djeca imaju pristup uređaju, preporučuje se isključiti AirDry jer otvaranje vrata može predstavljati opasnost.

### Kako isključiti AirDry

Provjerite je li uređaj u korisničkom načinu rada.

1. Dvaput pritisnite tipku programa.
   - Indikatori ECO i uključeni su.
   - Indikator bljeska.
2. Pričekajte da se indikatori ECO i isključe. Indikator još uvijek bljeska.
   - Indikator prikazuje trenutačnu postavku: isklj = AirDry je isključeno.
3. Za promjenu postavke pritisnite tipku programa.
   - uklj =AirDry je uključeno.
4. Za potvrdu postavke pritisnite tipku za uključivanje/isključivanje.

# 7. PRIJE PRVE UPOTREBE

1. **Provjerite odgovara li trenutna postavka omekšivača vode tvrdoći vode. Ako nije, prilagodite razinu omekšivača vode.**
2. Napunite spremnik za sol.
3. Napunite spremnik sredstva za ispiranje.
4. Otvorite slavinu.
5. Pokrenite program za uklanjanje svih zaostalih ostataka koji mogu biti u

uređaju. Ne koristite deterdžent i ne stavljajte posuđe u košare.

Nakon pokretanja programa, uređaj puni smolu u omekšivač vode, do 5 minuta. Faza pranja započinje tek kada se ovaj postupak dovrši. Postupak se periodički ponavlja.


## 7.1 Spremnik za sol

**OPREZ!**
Koristite samo grubu sol namijenjenu za perilice posuđa. Fina sol povećava rizik od korozije.


Sol se koristi za nadopunu smole u omekšivač vode te kako bi se osigurali dobri rezultati pranja u svakodnevnoj uporabi.

### Kako puniti spremnik za sol

1. Okrenite poklopac spremnika za sol u smjeru suprotnom od smjera kazaljke na satu i skinite ga.
2. Stavite 1 litru vode u spremnik za sol (samo prvi put).
3. Spremnik za sol napunite s 1 kg soli (dok se ne napuni).

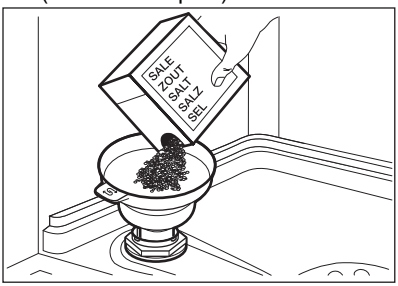



4. Pažljivo protresite cijev za ručicu, da zrnca uđu unutra.
5. Uklonite sol oko otvora spremnika za sol.

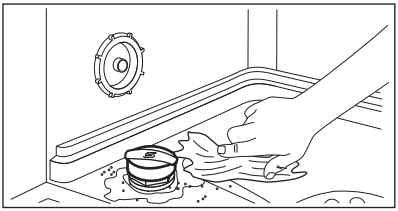

6. Okrenite čep spremnika za sol u smjeru kazaljke na satu kako biste ga zatvorili.

**OPREZ!**
Voda i sol mogu izlaziti iz spremnika za sol tijekom punjenja. Nakon što napunite spremnik za sol odmah pokrenite program kako biste spriječili koroziju.

## 7.2 Kako napuniti spremnik sredstva za ispiranje

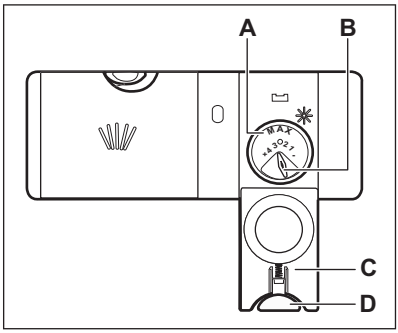


**OPREZ!**
Koristite isključivo sredstva za ispiranje posebno napravljena za perilice posuđa.

1. Pritisnite tipku (**D**) za otvaranje poklopca (**C**).
2. Ulijte sredstvo za ispiranje u spremnik (**A**) dok tekućina ne dosegne razinu napunjenosti 'max'.
3. Proliveno sredstvo za ispiranje uklonite upijajućom krpom kako biste spriječili stvaranje prevelike količine pjene.
4. Zatvorite poklopac. Provjerite da se tipka za otpuštanje zaključava na mjestu.

Možete okrenuti birač ispuštene količine (**B**) između položaja 1 (najmanja količina) i položaja 4 ili 6 (najveća količina).

# 8. SVAKODNEVNA UPORABA


1. Otvorite slavinu.
2. Za uključivanje uređaja pritisnite tipku za uključivanje/isključivanje.

Provjerite je li uređaj u načinu rada 'Odabir programa'.

- Ako je indikator soli uključen, napunite spremnik za sol.
- Ako je indikator sredstva za ispiranje uključen, napunite spremnik sredstva za ispiranje.

3. Napunite košare.
4. Dodajte deterdžent.
5. Postavite i pokrenite odgovarajući program koji odgovara vrsti i zaprljanosti punjenja.

## 8.1 Upotreba deterdženta

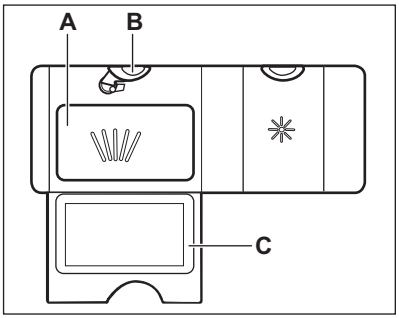


1. Pritisnite tipku (**B**) za otvaranje poklopca (**C**).
2. Stavite deterdžent u prašku ili tablete u odjeljak (**A**).
3. Ako program ima fazu omekšavanja, stavite malu količinu deterdženta u unutarnji dio vrata uređaja.
4. Zatvorite poklopac. Provjerite da se tipka za otpuštanje zaključava na mjestu.

## 8.2 Uporaba kombiniranih tableta s deterdžentom

Kada upotrebljavate tablete koje sadrže sol i sredstvo za ispiranje, nemojte puniti spremnik za sol i spremnik sredstva za ispiranje.

1. Omekšivač vode postavite na najnižu razinu.
2. Postavite spremnik sredstva za ispiranje u najniži položaj.

## 8.3 Odabir i pokretanje programa

### Pokretanje programa

1. Vrata uređaja držite odškrinuta.
2. Za uključivanje uređaja pritisnite tipku za uključivanje/isključivanje. Provjerite je li uređaj u načinu rada 'Odabir programa'.
3. Pritišćite programsku tipku sve dok indikator programa kojeg želite odabrati ne počne bljeskati.
4. Za pokretanje programa zatvorite vrata uređaja.

### Pokretanje programa s odgodom početka

1. Postavite program.
2. Pritisnite Delay za odgodu početka programa pranja za 3 sata.

Uključen je indikator .

3. Za pokretanje odbrojavanja zatvorite vrata uređaja.

Tijekom odbrojavanja nije moguće promijeniti program.

Kada odbrojavanje završi, indikator odgode se isključuje i program započinje.

### Otvaranje vrata dok uređaj radi

Otvaranje vrata dok je program u tijeku zaustavlja uređaj. To može utjecati na potrošnju energije i trajanje programa. Nakon zatvaranja vrata, uređaj nastavlja raditi od točke u kojoj je prekinuo rad.

Ako se vrata otvore na dulje od 30 sekundi tijekom faze sušenja, program u tijeku će se završiti. To se ne događa ako vrata otvorite funkcijom AirDry.

Ne pokušavajte zatvoriti vrata uređaja u roku od 2 minute nakon što ih AirDry automatski otvori jer to može uzrokovati oštećenje uređaja.
Ako su nakon toga vrata zatvorena najmanje 3 minute, program u tijeku se završava.

### Poništavanje odgode početka

Pritisnite i držite tipku programa dok je uređaj u načinu rada 'Odabir programa'. Kada poništite odgodu početka, morate ponovno postaviti program.

### Otkazivanje programa

Pritisnite i držite tipku programa dok je uređaj u načinu rada 'Odabir programa'.

Prije pokretanja novog programa provjerite nalazi li se deterdžent u spremniku za deterdžent.

### Završetak programa

Kada program završi, uključuje se indikator →|.

1. Pritisnite tipku za uključivanje/ isključivanje ili pričekajte dok se uređaj automatski ne prebaci u stanje pripravnosti. Ako otvorite vrata prije aktivacije stanja pripravnosti, uređaj se automatski isključuje.
2. Zatvorite slavinu.

# 9. SAVJETI

## 9.1 Općenito

Slijedite dolje navedene savjete kako biste osigurali optimalne rezultate pranja i sušenja u svakodnevnoj uporabi i zaštitili okoliš.

- Pranje posuđa u perilici posuđa prema uputama u korisničkom priručniku obično troši manje vode i energije nego ručno pranje posuđa.
- Perilicu posuđa napunite do punog kapaciteta za uštedu vode i energije. Za najbolje rezultate pranja, složite posuđe u košare prema uputama u korisničkom priručniku i nemojte ih pretrpati.
- Ne ispirite posuđe ručno prije stavljanja u perilicu. To povećava potrošnju vode i energije. Kada je potrebno, odaberite program s fazom pretpranja.
- Veće ostatke hrane otklonite s posuđa i ispraznite šalice i čaše prije nego što ih stavite u uređaj.
- Prije pranja u uređaju namočite ili malo očistite posuđe sa zalijepljenom ili zapečenom hranom.
- Pazite da se predmeti u košarama međusobno ne dodiruju ili ne prekrivaju. Samo tako voda može u potpunosti doprijeti i oprati suđe.
- Možete odvojeno upotrebljavati deterdžent za perilice posuđa, sredstvo za ispiranje i sol za perilice posuđa ili možete upotrebljavati višenamjenske tablete s deterdžentom (npr. "Sve u 1"). Slijedite upute na pakiranju.
- Odaberite program prema količini napunjenosti i stupnju zaprljanosti. Program **ECO** pruža najučinkovitiju upotrebu potrošnje vode i energije.
- Za sprečavanje nakupljanja kamenca unutar uređaja:
  - Kad god je potrebno nadopunite spremnik za sol.
  - Koristite preporučene doze deterdženta i sredstva za ispiranje.
  - Provjerite odgovara li trenutna postavka omekšivača vode tvrdoći vode.
  - Slijedite upute u poglavlju **"Održavanje i čišćenje"**.

## 9.2 Upotreba soli, sredstva za ispiranje i deterdženta

- Upotrebljavajte samo sol, sredstvo za ispiranje i deterdžent za perilice posuđa. Ostali proizvodi mogu prouzročiti oštećenja na uređaju.
- Ipak, u područjima s vrlo tvrdom vodom preporučujemo uporabu samo običnog deterdženta (u prašku, gelu, tabletama bez dodatnih sredstava), sredstva za ispiranje i soli za perilice posuđa odvojeno, za optimalne rezultate pranja i sušenja.
- Barem jednom mjesečno pokrenite čistač uređaja koji je posebno prikladan za tu svrhu.
- Deterdžent u tabletama ne otapa se do kraja prilikom korištenja kratkih programa. Kako bi se spriječila pojava tragova deterdženta na posuđu preporučujemo upotrebu sredstva za pranje u tabletama samo za duže programe pranje.
- Uvijek upotrijebite ispravnu količinu deterdženta. Nedovoljna doza deterdženta može rezultirati lošim rezultatima pranja i snimanjem tvrdoćom vode ili mrljama na posuđu. Upotreba previše deterdženta s mekom ili omekšanom vodom rezultira ostacima deterdženta na posuđu. Na temelju tvrdoće vode, prilagodite količinu deterdženta. Pogledajte upute na pakiranju deterdženta.
- Uvijek upotrijebite ispravnu količinu sredstva za ispiranje. Nedovoljno doziranje sredstva za ispiranje smanjuje rezultate sušenja. Upotreba previše sredstva za ispiranje rezultira plavkastim slojevima na posuđu.
- Provjerite je li razina sredstva za ispiranje ispravna. Ako je razina previsoka, povećana količina soli u vodi može rezultirati hrđom na priboru za jelo.

## 9.3 Što napraviti ako želite prestati upotrebljavati kombinirane tablete

Prije nego što započnete odvojeno upotrebljavati deterdžent, sol i sredstvo za ispiranje učinite sljedeće:

1. Postavite najvišu razinu omekšivača vode.
2. Provjerite jesu li spremnik za sol i spremnik sredstvo za ispiranje puni.
3. Pokrenite najkraći program s fazom ispiranja. Ne dodajte deterdžent i ne punite košare.
4. Kada program završi, podesite omekšivač vode prema tvrdoći vode u vašem području.
5. Podesite ispuštenu količinu sredstva za ispiranje.

## 9.4 Punjenje košara

- Uvijek upotrijebite cijeli prostor košara.
- Uređaj koristite samo za pranje posuđa predviđenog za pranje u perilici posuđa.
- U uređaju nemojte prati predmete izrađene od drveta, rogova, aluminija, kositra i bakra jer bi mogli puknuti, iskriviti se, promijeniti boju ili se oštetiti.
- U uređaj nemojte prati predmete koji mogu apsorbirati vodu (spužve, kućanske krpe).
- Stavite šuplje predmete (šalice, čaše i lonce) otvorom okrenutim prema dolje.
- Stakleni predmeti ne smiju se međusobno dodirivati.
- Lagano posuđe stavite u gornju košaru. Pazite da se posuđe slobodno ne miče.
- Pribor za jelo i male predmete stavite u košaru za pribor za jelo.
- Prije početka programa provjerite mogu li se mlaznice slobodno kretati.

## 9.5 Prije pokretanja programa

Prije pokretanja odabranog programa, uvjerite se da:

- su filtri čisti i pravilno postavljeni.
- je poklopac spremnika za sol čvrsto zatvoren.
- mlaznice nisu začepljene.
- u uređaju ima dovoljno soli za perilicu posuđa i sredstva za ispiranje (osim ako koristite višenamjenske tablete).
- je položaj predmeta u košari ispravan.
- je program prikladan za vrstu rublja i stupanj zaprljanosti.

- Upotrebljava se odgovarajuća količina deterdženta.

### 9.6 Pražnjenje košara

1. Ostavite posuđe da se ohladi prije nego ga izvadite iz uređaja. Vrući predmeti mogu se lako oštetiti.
2. Prvo ispraznite donju košaru, zatim gornju košaru.

Nakon završetka programa, na unutarnjim površinama uređaja još se može zadržavati voda.


# 10. ČIŠĆENJE I ODRŽAVANJE

**UPOZORENJE!**
Prije održavanja, uređaj isključite i utikač izvucite iz utičnice mrežnog napajanja.


Nečisti filtri i začepljene mlaznice smanjuju rezultate pranja. Redovno ih provjeravajte i ako je potrebno očistite ih.


### 10.1 Čišćenje filtara

Sustav filtra sastoji se od 3 dijela.

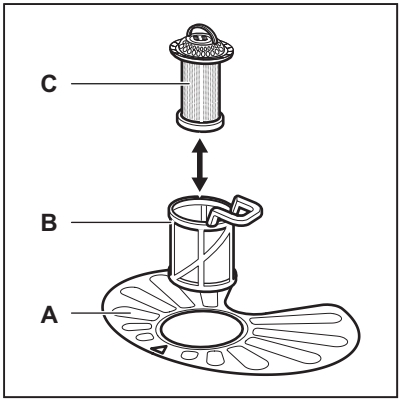



1. Okrenite filtar (**B**) u smjeru suprotnom od smjera kazaljki na satu i skinite ga.

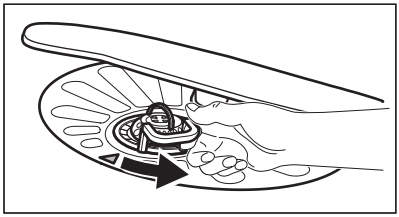


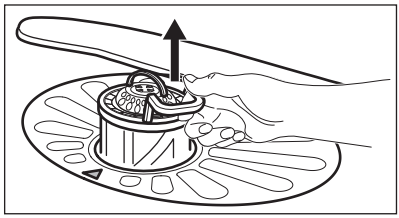


2. Izvadite filtar (**C**) iz filtra (**B**).
3. Skinite plosnati filtar (**A**).

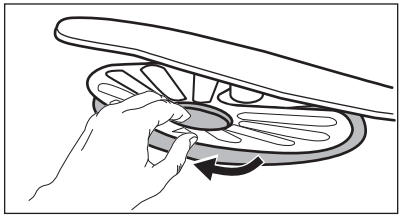


4. Operite filtre.

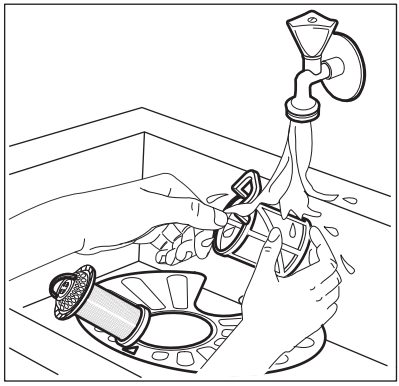

5. Provjerite da u ili oko ruba dna nema ostataka hrane ili prljavštine.
6. Vratite plosnati filtar na mjesto (**A**). Osigurajte da je pravilno postavljen ispod 2 vodilice.

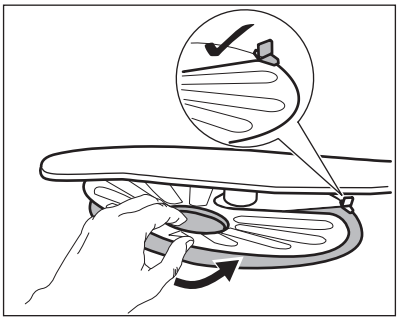

7. Sastavite filtre (**B**) i (**C**).
8. Vratite filtar (**B**) u plosnati filtar (**A**). Okrenite ga u smjeru kazaljki na satu dok se ne zaključa.

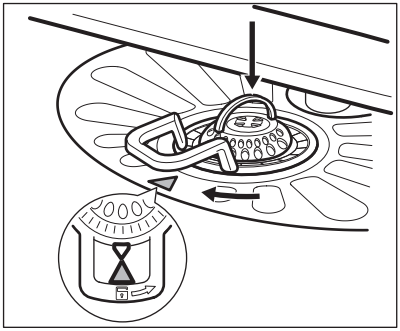

**OPREZ!**
Neispravan položaj filtara može uzrokovati slabe rezultate pranja i oštećenje uređaja.

## **10.2** Čišćenje mlaznica

Ne uklanjajte mlaznice. Ako se otvori u mlaznicama začepe, uklonite ostatke zaprljanja tankim oštrim predmetom.

## **10.3** Vanjsko čišćenje

- Uređaj očistite vlažnom mekom krpom.
- Koristite isključivo neutralni deterdžent.
- Nikada ne koristite abrazivna sredstva, jastučiće za ribanje ili otapala.

## **10.4** Unutrašnje čišćenje

- Mekom i vlažnom krpom pažljivo očistite uređaj uključujući i gumenu brtvu na vratima.
- Ako redovito upotrebljavate program kratkog trajanja, može doći do taloženja masnoća i kamenca unutar uređaja. Kako bi se to spriječilo, preporučujemo da najmanje 2 puta mjesečno pokrenete program s dugim trajanjem.
- Za održavanje najboljih značajki vašeg uređaja preporučujemo da jednom mjesečno koristite posebno sredstvo za čišćenje perilica posuđa. Pažljivo slijedite upute na pakiranju proizvoda.

## **10.5** Uklanjanje stranih predmeta

Nakon svake uporabe perilice posuđa provjerite filtre i nosač filtra. Strani predmeti (npr. komadi stakla, plastike, kosti ili čačkalice, itd.) smanjuju učinak pranja i mogu oštetiti odvodnu pumpu.

1. Rastavite sustav filtra prema uputama u ovom poglavlju.
2. Rukom uklonite strane predmete.

**OPREZ!**
Ako ne možete ukloniti predmete, obratite se ovlaštenom serviseru.

3. Sastavite filtre prema uputama u ovom poglavlju.

# 11. OTKLANJANJE POTEŠKOĆA

**UPOZORENJE!**
Nepravilno popravljanje uređaja može predstavljati opasnost za sigurnost korisnika. Sve popravke mora provoditi kvalificirano osoblje.

**Većinu problema moguće je riješiti bez potrebe kontaktiranja ovlaštenog servisnog centra.**

Informacije u vezi s mogućim problemima potražite u donjoj tablici.

Kod nekih kvarova, namjenski indikator isprekidano bljeska kako bi ukazao na kvar i šifru alarma.

| Problem i šifra alarma | Mogući uzrok i rješenje |
|---|---|
| Uređaj ne možete uključiti. | • Provjerite je li kabel glavnog napajanja uključen u utičnicu.<br>• Provjerite da u kutiji s osiguračima nema oštećenog osigurača. |
| Program ne započinje s radom. | • Provjerite jesu li vrata uređaja zatvorena.<br>• Ako je postavljena odgoda početka, poništite postavku ili pričekajte završetak odbrojavanja.<br>• Uređaj ponovno puni smolu unutar omekšivača vode. Postupak traje približno 5 minuta. |
| Uređaj se ne puni vodom.<br>• Indikator →\| povremeno 1 put bljesne.<br>• Zvučni signal isprekidano se 1 put oglasi. | • Provjerite je li slavina otvorena.<br>• Provjerite da tlak u dovodu vode nije prenizak. Ovu informaciju potražite kod lokalnog distributera vode.<br>• Provjerite da slavina nije začepljena.<br>• Provjerite da filtar u dovodnom crijevu nije začepljen.<br>• Provjerite da dovodno crijevo nije prignječeno ili savijeno. |
| Uređaj ne izbacuje vodu.<br>• Indikator →\| povremeno 2 puta bljesne.<br>• Zvučni signal isprekidano se 2 puta oglasi. | • Provjerite da sifon nije začepljen.<br>• Provjerite je li unutarnji sustav filtra začepljen.<br>• Provjerite da odvodno crijevo nije prignječeno ili savijeno. |
| Uključen je uređaj za zaštitu od poplave.<br>• Indikator →\| povremeno 3 puta bljesne.<br>• Zvučni signal isprekidano se 3 puta oglasi. | • Zatvorite slavinu.<br>• Provjerite je li uređaj pravilno postavljen.<br>• Provjerite jesu li košare napunjene prema uputama u korisničkom priručniku. |

| Problem i šifra alarma | Mogući uzrok i rješenje |
|---|---|
| Neispravnost senzora za otkrivanje razine vode.<br>• Indikator →\| povremeno 4 puta bljesne.<br>• Zvučni signal isprekidano se 4 puta oglasi. | • Provjerite jesu li filtri čisti.<br>• Isključite i uključite uređaj. |
| Neispravnost pumpe za pranje ili odvodne pumpe.<br>• Indikator →\| povremeno 5 puta bljesne.<br>• Zvučni signal isprekidano se 5 puta oglasi. | • Isključite i uključite uređaj. |
| Temperatura vode unutar uređaja je previsoka ili je došlo do neispravnosti senzora temperature.<br>• Indikator →\| povremeno 6 puta bljesne.<br>• Zvučni signal isprekidano se 6 puta oglasi. | • Vodite računa da temperatura ulazne vode ne prelazi 60 °C.<br>• Isključite i uključite uređaj. |
| Tehnička pogreška u radu uređaja.<br>• Indikator →\| povremeno 12 puta bljesne.<br>• Zvučni signal isprekidano se 12 puta oglasi. | • Isključite i uključite uređaj. |
| Razina vode unutar uređaja je previsoka.<br>• Indikator →\| povremeno 15 puta bljesne.<br>• Zvučni signal isprekidano se 15 puta oglasi. | • Isključite i uključite uređaj.<br>• Provjerite jesu li filtri čisti.<br>• Provjerite je li odvodno crijevo postavljeno na pravoj visini od poda. Proučite upute za postavljanje. |
| Tijekom rada uređaj se više puta zaustavlja i pokreće. | • To je normalno. To osigurava optimalne rezultate pranja i uštedu energije. |
| Program predugo traje. | • Ako je postavljena opcija odgode početka, poništite postavku odgode ili pričekajte završetak odbrojavanja. |
| Postoji malo curenje iz vrata uređaja. | • Uređaj nije dobro niveliran. Otpustite ili pritegnite prilagodljivu nožicu (ako je primjenjivo).<br>• Vrata uređaja nisu centrirana u unutrašnjosti. Podesite stražnju nožicu (ako je primjenjivo). |

| Problem i šifra alarma | Mogući uzrok i rješenje |
|---|---|
| Vrata uređaja teško se zatvaraju. | • Uređaj nije dobro niveliran. Otpustite ili pritegnite prilagodljivu nožicu (ako je primjenjivo).<br>• Dijelovi posuđa i pribora za jelo strše iz košara. |
| Iz uređaja se čuje zvuk zveckanja/kucanja. | • Posuđe i pribor za jelo u košarama nisu ispravno raspoređeni. Pogledajte letak za punjenja košara.<br>• Pazite da se mlaznice mogu slobodno vrtjeti. |
| Uređaj uzrokuje iskakanje zaštitne sklopke. | • Jakost struje nije dovoljna za istodobnu opskrbu svih uređaja u upotrebi. Provjerite amperažu utičnice i kapacitet mjerača ili isključite jedan od uređaja koji radi.<br>• Interni električni kvar uređaja. Kontaktirajte ovlašteni servisni centar. |

Za druge moguće uzroke pogledajte **"Prije prve uporabe"**, **"Svakodnevna uporaba"** ili **"Savjeti i preporuke"**.

Kad ste provjerili uređaj, isključite ga pa ponovno uključite. Ako i dalje dolazi do kvara, obratite se servisnom centru.

Za šifre alarma koje nisu opisane u tablici, kontaktirajte ovlašteni servisni centar.

**UPOZORENJE!**
Ne preporučujemo uporabu uređaja dok problem u potpunosti nije otklonjen. Odspojite utikač iz napajanja i nemojte ga ponovno uključivati sve dok niste sigurni da uređaj ispravno radi.

## **11.1** Rezultati pranja i sušenja nisu zadovoljavajući

| Problem | Mogući uzrok i rješenje |
|---|---|
| Slabi rezultati pranja. | • Pogledajte **"Svakodnevna uporaba"**, **"Savjeti"** i letak za punjenja košara.<br>• Koristite intenzivnije programe pranja.<br>• Čistite mlaznice i filtar. Pogledajte poglavlje **„Održavanje i čišćenje“**. |

| Problem | Mogući uzrok i rješenje |
|---|---|
| Slabi rezultati sušenja. | • Posuđe i pribor predugo su ostavljeni u zatvorenom uređaju.<br>• Nema sredstva za ispiranje ili njegova količina nije dovoljna. Spremnik sredstva za ispiranje postavite na višu razinu.<br>• Plastične predmete možda je potrebno osušiti ručnikom.<br>• Za najbolju učinkovitost čišćenja uključite AirDry.<br>• Preporučujemo da uvijek koristite sredstvo za ispiranje, čak i u kombinaciji s višenamjenskim tabletama. |
| Bijele crte i mrlje ili plavičasti slojevi na čašama i posuđu. | • Ispuštena količina sredstva za ispiranje je prevelika. Postavite količinu sredstva za ispiranje na nižu razinu.<br>• Količina deterdženta bila je prevelika. |
| Na čašama i posuđu ostaju mrlje i osušene kapljice vode. | • Ispuštena količina sredstva za ispiranje nije dovoljna. Postavite količinu sredstva za ispiranje na višu razinu.<br>• Uzrok može biti kvaliteta sredstva za ispiranje. |
| Posuđe je mokro. | • Za najbolju učinkovitost čišćenja uključite AirDry.<br>• Program nema fazu sušenja ili ima fazu sušenja s niskom temperaturom.<br>• Spremnik sredstva za ispiranje je prazan.<br>• Uzrok može biti kvaliteta sredstva za ispiranje.<br>• Uzrok može biti kvaliteta kombiniranog deterdženta u tabletama. Isprobajte drugu marku ili aktivirajte spremnik sredstva za ispiranje i koristite sredstvo za ispiranje zajedno s kombiniranim deterdžentom u tabletama. |
| Unutrašnjost uređaja mokra je. | • Ne radi se o kvaru uređaja, već je tome uzrok vlaga u zraku koja se kondenzira na stjenkama. |
| Neuobičajena pjena tijekom pranja. | • Koristite isključivo deterdžent za perilice posuđa.<br>• U spremniku sredstva za ispiranje postoji curenje. Kontaktirajte ovlašteni servisni centar. |
| Tragovi hrđe na priboru za jelo. | • U vodi za pranje korišteno je previše soli. Pogledajte poglavlje **“Omekšivač vode”**.<br>• Pribor za jelo od srebra i nehrđajućeg čelika nije postavljen odvojeno. Izbjegavajte postavljanje predmeta od srebra i nehrđajućeg čelika međusobno blizu. |
| Na kraju programa postoje ostaci deterdženta u spremniku. | • Tableta s deterdžentom se zaglavila u spremniku i zato nije potpuno ispravna vodom.<br>• Voda ne može isprati deterdžent iz spremnika. Pazite da mlaznica nije blokirana ili začepljena.<br>• Pazite da predmeti u košarama ne sprječavaju otvaranje poklopca spremnika za deterdžent. |

| Problem | Mogući uzrok i rješenje |
|---|---|
| Unutrašnjost uređaja neugodno miriše. | • Pogledajte **“Unutrašnje čišćenje”**. |
| Naslage kamenca na posuđu i priboru za jelo, u unutrašnjosti uređaja i na unutrašnjosti vrata. | • Razina soli je niska; provjerite indikator za dodavanje soli.<br>• Poklopac spremnika za sol je labav.<br>• Voda iz slavine je tvrda. Pogledajte poglavlje **“Omekšivač vode”**.<br>• Čak i uz kombinirane tablete koristite sol i postavite regeneraciju omekšivača vode. Pogledajte poglavlje **“Omekšivač vode”**.<br>• Ako naslage kamenca i dalje postoje, očistite uređaj sredstvom za čišćenje uređaja koje je posebno prikladno za tu svrhu.<br>• Isprobajte drugi deterdžent.<br>• Obratite se proizvođaču deterdženta. |
| Posuđe i pribor za jelo bez sjaja su, promijenjenih boja i otkrhnuti. | • Pazite da u uređaju perete samo predmete koji su prikladni za pranje u perilici posuđa.<br>• Pažljivo punite i praznite košaru. Pogledajte letak za punjenja košara.<br>• Osjetljive predmete stavite u gornju košaru. |

Za druge moguće uzroke pogledajte **"Prije prve uporabe"**, **"Svakodnevna uporaba"** ili**"Savjeti"**.

# **12.** TEHNIČKI PODACI

| | | |
|---|---|---|
| Dimenzije | Širina / visina / dubina (mm) | 596 / 818 - 898 / 550 |
| Priključak na električnu mrežu **1)** | Napon (V) | 220 - 240 |
| | Frekvencija (Hz) | 50 |
| Tlak dovoda vode | Min. / maks. bar (MPa) | 0.5 (0.05) / 8 (0.8) |
| Dovod vode | Hladna ili topla voda **2)** | maks. 60 °C |
| Kapacitet | Broj kompleta posuđa | 13 |
| Potrošnja: | Način rada 'Left On' (W) | 5.0 |
| | Način rada Off (W) | 0.50 |

**1)** Pogledajte nazivnu pločicu za ostale vrijednosti.

**2)** Ako topla voda dolazi iz alternativnih izvora energije (npr. solarni paneli), upotrijebite toplu vodu kako biste smanjili potrošnju energije.

### **12.1** Poveznica na bazu podataka EU EPREL

QR kod na energetskoj naljepnici isporučenoj s uređajem pruža internetsku poveznicu za registraciju ovog uređaja u EU EPREL bazi podataka. Energetsku naljepnicu držite za referencu zajedno s korisničkim priručnikom i svim ostalim dokumentima koji se isporučuju s ovim uređajem.

Informacije o performansama proizvoda moguće je pronaći u EU EPREL bazi podataka putem poveznice https://eprel.ec.europa.eu kao i naziv modela i broj proizvoda koji možete pronaći na natpisnoj pločici uređaja Pogledajte poglavlje "Opis proizvoda".

Za detaljnije informacije o energetskoj oznaci, posjetite stranicu www.theenergylabel.eu.

## **13.** BRIGA ZA OKOLIŠ

Reciklirajte materijale sa simbolom . Ambalažu za recikliranje odložite u prikladne spremnike. Pomozite u zaštiti okoliša i ljudskog zdravlja, kao i u recikliranju otpada od električnih i elektroničkih uređaja. Uređaje označene simbolom ne bacajte zajedno s kućnim otpadom. Proizvod odnesite na lokalno reciklažno mjesto ili kontaktirajte nadležnu službu.

# CONTENTS

**1.** SAFETY INFORMATION....24
**2.** SAFETY INSTRUCTIONS....26
**3.** PRODUCT DESCRIPTION....28
**4.** CONTROL PANEL....29
**5.** PROGRAMMES....29
**6.** SETTINGS....30
**7.** BEFORE FIRST USE....33
**8.** DAILY USE....34
**9.** HINTS AND TIPS....36
**10.** CARE AND CLEANING....38
**11.** TROUBLESHOOTING....39
**12.** TECHNICAL INFORMATION....43

# WE'RE THINKING OF YOU

Thank you for purchasing an Electrolux appliance. You've chosen a product that brings with it decades of professional experience and innovation. Ingenious and stylish, it has been designed with you in mind. So whenever you use it, you can be safe in the knowledge that you'll get great results every time.
Welcome to Electrolux.
**Visit our website to:**

Get usage advice, brochures, trouble shooter, service and repair information:
**www.electrolux.com/support**

Register your product for better service:
**www.registerelectrolux.com**

Buy Accessories, Consumables and Original spare parts for your appliance:
**www.electrolux.com/shop**

# CUSTOMER CARE AND SERVICE

Always use original spare parts.
When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.
The information can be found on the rating plate.

⚠ Warning / Caution-Safety information

ⓘ General information and tips

Environmental information

Subject to change without notice.

# 1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result

of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

## **1.1** Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## **1.2** General Safety

- This appliance is intended to be used in household and similar applications such as:
  - farm houses; staff kitchen areas in shops, offices and other working environments;
  - by clients in hotels, motels, bed & breakfast and other residential type environments.
- Do not change the specification of this appliance.
- The operating water pressure (minimum and maximum) must be between 0.5 (0.05) / 8 (0.8) bar (MPa)
- Follow the maximum number of 13 place settings.

- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Put the cutlery in the cutlery basket with the sharp ends pointing down or put them in the cutlery drawer in a horizontal position with the sharp edges down.
- Do not leave the appliance with the open door unattended to avoid stepping accidentally onto it.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- If the appliance has ventilation openings in the base, they must not be covered e.g. by a carpet.
- The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused.

# **2.** SAFETY INSTRUCTIONS

## **2.1** Installation

**WARNING!**
Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not use the appliance before installing it in the built-in structure due to safety manner.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature is less than 0 °C.
- Install the appliance in a safe and suitable place that meets installation requirements.

YouTube **www.youtube.com/electrolux**
**www.youtube.com/aeg**

How to install your 60 cm Dishwasher Sliding Hinge

## **2.2** Electrical connection


**WARNING!**
Risk of fire and electric shock.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to

be replaced, this must be carried out by our Authorised Service Centre.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- This appliance is fitted with a 13 A mains plug. If it is necessary to change the mains plug fuse, use only a 13 A ASTA (BS 1362) fuse (UK and Ireland only).

## 2.3 Water connection

- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.
- The water inlet hose has a safety valve and a sheath with an inner mains cable.

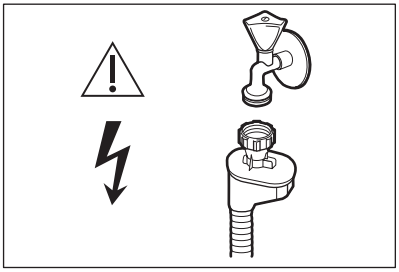

**WARNING!**
Dangerous voltage.

- If the water inlet hose is damaged, immediately close the water tap and disconnect the mains plug from the mains socket. Contact the Authorised Service Centre to replace the water inlet hose.

## 2.4 Use

- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Dishwasher detergents are dangerous. Follow the safety instructions on the detergent packaging.
- Do not drink and play with the water in the appliance.
- Do not remove the dishes from the appliance until the programme is complete. Some detergent may remain on the dishes.
- Do not store items or apply pressure on the open door of the appliance.
- The appliance can release hot steam if you open the door while a programme operates.

## 2.5 Internal lighting

**WARNING!**
Risk of injury.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- To replace the internal lighting, contact the Authorised Service Centre.

## 2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- The following spare parts will be available for 7 years after the model has been discontinued: motor, circulation and drain pump, heaters and heating elements, including heat pumps, piping and related equipment

including hoses, valves, filters and aquastops, structural and interior parts related to door assemblies, printed circuit boards, electronic displays, pressure switches, thermostats and sensors, software and firmware including reset software. Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.

- The following spare parts will be available for 10 years after the model has been discontinued: door hinge and seals, other seals, spray arms, drain filters, interior racks and plastic peripherals such as baskets and lids.


## 2.7 Disposal

**WARNING!**
Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

# 3. PRODUCT DESCRIPTION


The graphics below is just a general product overview. For more detailed information, refer to other chapters and/or documents provided with the appliance.

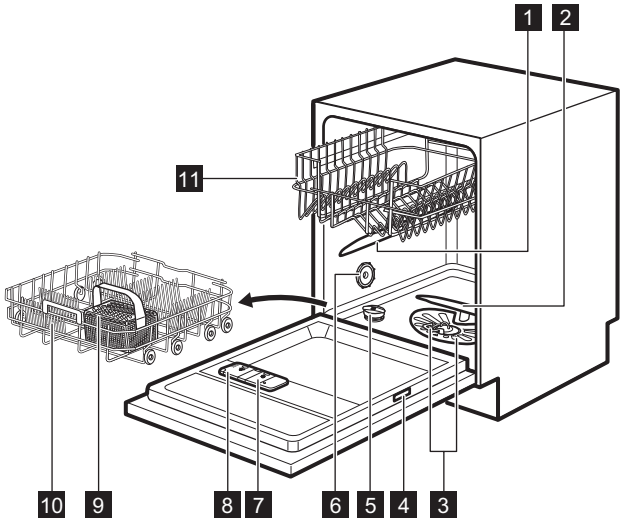


1 Upper spray arm
2 Lower spray arm
3 Filters
4 Rating plate
5 Salt container
6 Air vent
7 Rinse aid dispenser
8 Detergent dispenser
9 Cutlery basket
10 Lower basket

11 Upper basket

# 4. CONTROL PANEL

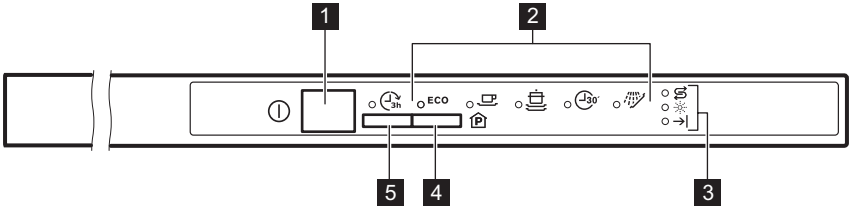


1 On/off button
2 Programme indicators
3 Indicators
4 Programme button
5 Delay button

## 4.1 Indicators

| Indicator | Description |
|---|---|
| →\| | End indicator. |
| | Rinse aid indicator. It is always off while the programme operates. |
| | Salt indicator. It is always off while the programme operates. |

# 5. PROGRAMMES

The order of the programmes in the table may not reflect their sequence on the control panel.

| Programme | Degree of soil Type of load | Programme phases | Consumption values 1) | | |
|---|---|---|---|---|---|
| | | | Duration (min) | Energy (kWh) | Water (l) |
| ECO 2) | Normal soil Crockery and cutlery | • Prewash<br>• Wash 50 °C<br>• Rinses<br>• Dry | 227 3)/ 227 4) | 1.039 3)/ 1.036 4) | 11 |
| | Heavy soil Crockery, cutlery, pots and pans | • Prewash<br>• Wash 70 °C<br>• Rinses<br>• Dry | 160 | 1.052 - 1.285 | 11.1 - 13.6 |

| Programme | Degree of soil Type of load | Programme phases | Consumption values 1) | | |
|---|---|---|---|---|---|
| | | | Duration (min) | Energy (kWh) | Water (l) |
| | Normal soil Crockery and cutlery | • Prewash<br>• Wash 65 °C<br>• Rinses<br>• Dry | 90 | 0.886 - 1.083 | 9.6 - 11.7 |
| 30' 5) | Fresh soil Crockery and cutlery | • Wash 60 °C or 65 °C<br>• Rinses | 30 | 0.556 - 0.680 | 9.2 - 11.2 |
| 6) | All | • Prewash | 15 | 0.012 - 0.015 | 3.4 - 4.2 |

1) The pressure and the temperature of the water, the variations of the mains supply, the options and the quantity of dishes can change the values.

2) This programme offers the most efficient use of water and energy consumption for crockery and cutlery with normal soil. This is the standard programme for test institutes. This programme is used to assess compliance with the Ecodesign Comission Regulation (EU) 2019/2022.

3) In accordance with the 1016/2010 regulation

4) In accordance with the 2019/2022 regulation

5) This programme is suitable for washing a load or a half load with fresh or light soil in a short time.

6) With this programme, you can quickly rinse off food remains from dishes and prevent odours forming in the appliance. Do not use detergent with this programme.

## 5.1 Information for test institutes

To receive the necessary information for conducting performance tests (e.g. according to EN60436), send an email to:

**info.test@dishwasher-production.com**

In your request please include the product number code (PNC) found on the rating plate.

For any other questions regarding your dishwasher please refer to the service book provided with your appliance.

# 6. SETTINGS

## 6.1 Programme selection mode and user mode

When the appliance is in programme selection mode it is possible to set a programme and to enter the user mode.

**Settings available in the user mode:**

- The level of water softener according to the water hardness.
- Activation or deactivation of the acoustic signal for the end of a programme.
- Activation or deactivation of AirDry.

**As the appliance stores the saved settings, there is no need to configure it before every cycle.**

### How to set the programme selection mode

The appliance is in programme selection mode when the programme indicator **ECO** flashes.

After activation, the appliance is in programme selection mode by default. If not, set the programme selection mode the following way:

Press and hold the programme button until the appliance is in programme selection mode.

## How to enter user mode

Make sure the appliance is in programme selection mode.

To enter the user mode, press and hold the programme button until the indicator **ECO** flashes and the indicators and are on.

## 6.2 The water softener

The water softener removes minerals from the water supply, which would have a negative effect on the washing results and on the appliance.

The higher the content of these minerals, the harder your water is. Water hardness is measured in equivalent scales.

The water softener should be adjusted according to the hardness of the water in your area. Your local water authority can advise you on the hardness of the water in your area. It is important to set the right level of the water softener to assure good washing results.

**Water hardness**

| German degrees (°dH) | French degrees (°fH) | mmol/l | Clarke degrees | Water softener level |
|---|---|---|---|---|
| 47 - 50 | 84 - 90 | 8.4 - 9.0 | 58 - 63 | 10 |
| 43 - 46 | 76 - 83 | 7.6 - 8.3 | 53 - 57 | 9 |
| 37 - 42 | 65 - 75 | 6.5 - 7.5 | 46 - 52 | 8 |
| 29 - 36 | 51 - 64 | 5.1 - 6.4 | 36 - 45 | 7 |
| 23 - 28 | 40 - 50 | 4.0 - 5.0 | 28 - 35 | 6 |
| 19 - 22 | 33 - 39 | 3.3 - 3.9 | 23 - 27 | 5 **1)** |
| 15 - 18 | 26 - 32 | 2.6 - 3.2 | 18 - 22 | 4 |
| 11 - 14 | 19 - 25 | 1.9 - 2.5 | 13 - 17 | 3 |
| 4 - 10 | 7 - 18 | 0.7 - 1.8 | 5 - 12 | 2 |
| <4 | <7 | <0.7 | < 5 | 1 **2)** |

**1)** Factory setting.

**2)** Do not use salt at this level.

**Regardless of the type of detergent used, set the proper water hardness level to keep the salt refill indicator active.**

Multi-tabs containing salt are not effective enough to soften hard water.

**Regeneration process**

For the correct water softener operation, the resin of the softener device needs to be regenerated regularly. This process is automatic and is the part of the normal dishwasher operation.

When the prescribed quantity of water (see values in the table) has been used since the previous regeneration process, a new regeneration process will be initiated between the final rinse and the programme end.

| Water softener level | Amount of water (l) |
|---|---|
| 1 | 250 |
| 2 | 100 |
| 3 | 62 |
| 4 | 47 |
| 5 | 25 |
| 6 | 17 |
| 7 | 10 |
| 8 | 5 |
| 9 | 3 |
| 10 | 3 |

In case of the high water softener setting, it may occur also in the middle of the programme, before the rinse (twice during a programme). Regeneration initiation has no impact on the cycle duration, unless it occurs in the middle of a programme or at the end of a programme with a short drying phase. In that cases, the regeneration prolongs the total duration of a programme by additional 5 minutes.

Subsequently, the rinsing of the water softener that lasts 5 minutes may begin in the same cycle or at the beginning of the next programme. This activity increases the total water consumption of a programme by additional 4 litres and the total energy consumption of a programme by additional 2 Wh. The rinsing of the softener ends with a complete drain.

Each performed softener rinse (possible more than one in the same cycle) may prolong the programme duration by another 5 minutes when it occurs at any point at the beginning or in the middle of a programme.

All the consumption values mentioned in this section are determined in accordance with the currently applicable standard in laboratory conditions with water hardness 2.5mmol/L according to the 2019/2022 regulation (water softener: level 3).
The pressure and the temperature of water as well as the variations of the mains supply can change the values.

### How to set the water softener level

Make sure the appliance is in user mode.

1. Wait until the indicators and are off and the indicator flashes. The indicator ECO still flashes. The intermittent flashing of the indicator shows the current setting.
   - e.g. 5 flashes + pause + 5 flashes = level 5.
2. Press the programme button repeatedly to change the setting. Each pressing of the programme button increases the level number. After reaching level 10, the count starts again from level 1.
3. Press on/off to confirm the setting.

## 6.3 Acoustic signals

Acoustic signals sound when a malfunction of the appliance occurs. It is not possible to deactivate these acoustic signals.

There is also an acoustic signal that sounds when the programme is completed. By default this acoustic signal is deactivated but it is possible to activate it.


### How to activate the acoustic signal for the end of programme

Make sure the appliance is in user mode.

1. Press the programme button immediately.
   - The indicator ECO and ⏱ are on.
   - The indicator ☕ flashes.
2. Wait until the indicator ECO and ⏱ are off. The indicator ☕ still flashes.
   - The →| indicator shows the current setting: →| indicator off = Acoustic signal off.
3. Press the programme button to change the setting.
   - →| indicator on = Acoustic signal on.
4. Press on/off confirm the setting.

## 6.4 AirDry

AirDry improves the drying results with less energy consumption.

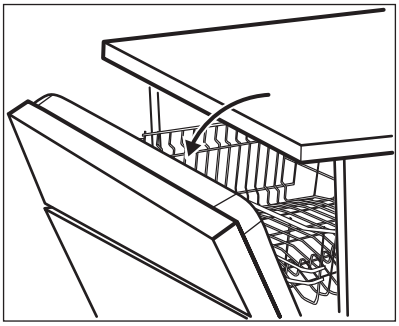

During the drying phase, the door opens automatically and remains ajar.

**CAUTION!**
Do not try to close the appliance door within 2 minutes after automatic opening. This can cause damage to the appliance.

AirDry is automatically activated with all programmes excluding ≈ (if applicable).

**CAUTION!**
If children have access to the appliance, it is advised to deactivate AirDry as opening the door may pose a danger.

### How to deactivate AirDry

Make sure the appliance is in user mode.

1. Press the programme button twice.
   - The indicators ECO and ☕ are on.
   - The indicator ⏱ flashes.
2. Wait until the indicators ECO and ☕ are off. The indicator ⏱ still flashes.
   - The →| indicator shows the current setting: →| off = AirDry is deactivated.
3. Press the programme button to change the setting.
   - →| on = AirDry is activated.
4. Press on/off to confirm the setting.

# 7. BEFORE FIRST USE

1. **Make sure that the current level of the water softener agrees with the hardness of the water supply. If not, adjust the level of the water softener.**
2. Fill the salt container.
3. Fill the rinse aid dispenser.
4. Open the water tap.
5. Start a programme to remove any processing residuals that can still be inside the appliance. Do not use detergent and do not put dishes in the baskets.

After starting the programme, the appliance recharges the resin in the water softener for up to 5 minutes. The washing phase starts only after this procedure is complete. The procedure is repeated periodically.


## 7.1 The salt container

**CAUTION!**
Use rough salt designed for dishwashers only. Fine salt increases the risk of corrosion.


The salt is used to recharge the resin in the water softener and to assure good washing results in daily use.

### How to fill the salt container

1. Turn the cap of the salt container counterclockwise and remove it.
2. Put 1 litre of water in the salt container (only for the first time).
3. Fill the salt container with 1 kg of salt (until it is full).

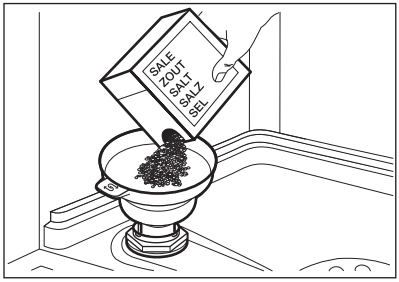



4. Carefully shake the funnel by its handle to get the last granules inside.
5. Remove the salt around the opening of the salt container.

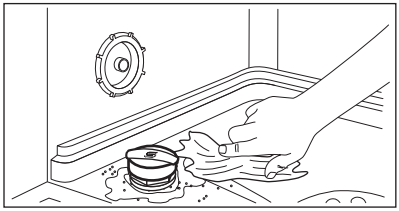

6. Turn the cap of the salt container clockwise to close the salt container.

**CAUTION!**
Water and salt can come out of the salt container when you fill it. After you fill the salt container, immediately start a programme to prevent corrosion.

## 7.2 How to fill the rinse aid dispenser

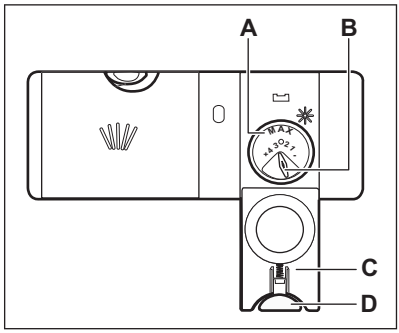


**CAUTION!**
Only use rinse aid designed specifically for dishwashers.

1. Press the release button (**D**) to open the lid (**C**).
2. Pour the rinse aid in the dispenser (**A**) until the liquid reaches the fill level 'max'.
3. Remove the spilled rinse aid with an absorbent cloth to prevent excessive foam formation.
4. Close the lid. Make sure that the release button locks into position.

You can turn the selector of the released quantity (**B**) between position 1 (lowest quantity) and position 4 or 6 (highest quantity).

# 8. DAILY USE


1. Open the water tap.
2. Press the on/off button to activate the appliance.

Make sure that the appliance is in programme selection mode.

- If the salt indicator is on, fill the salt container.
- If the rinse aid indicator is on, fill the rinse aid dispenser.

3. Load the baskets.
4. Add the detergent.
5. Set and start the correct programme for the type of load and the degree of soil.

## 8.1 Using the detergent

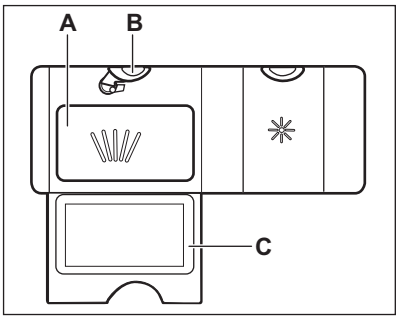


1. Press the release button (**B**) to open the lid (**C**).
2. Put the detergent, in powder or tablets, in the compartment (**A**).
3. If the programme has a prewash phase, put a small quantity of detergent on the inner part of the appliance door.
4. Close the lid. Make sure that the release button locks into position.

## 8.2 Using the multi-tablets

When you use tablets, that contain salt and rinse aid, do not fill the salt container and the rinse aid dispenser.

1. Adjust the water softener to the lowest level.
2. Set the rinse aid dispenser to the lowest position.

## 8.3 Setting and starting a programme

### Starting a programme

1. Keep the appliance door ajar.
2. Press the on/off button to activate the appliance. Make sure that the appliance is in programme selection mode.
3. Press the programme button repeatedly until the indicator of the programme you want to select starts flashing.
4. Close the appliance door to start the programme.

### Starting a programme with delay start

1. Set a programme.
2. Press Delay to delay the start of the programme by 3 hours.

The indicator is on.

3. Close the appliance door to start the countdown.

During the countdown, it is not possible to change the programme.

When the countdown is complete, the delay indicator is off and the programme starts.

### Opening the door while the appliance operates

Opening the door while a programme is running stops the appliance. It may affect the energy consumption and the programme duration. After closing the door, the appliance continues from the point of interruption.

If the door is opened for more than 30 seconds during the drying phase, the running programme ends. It does not happen if the door is opened by AirDry function.

Do not try to close the appliance door within 2 minutes after AirDry automatically opens it as this may cause damage to the appliance.
If, afterwards, the door is closed for at least 3 minutes, the running programme ends.

### Cancelling the delay start

Press and hold the programme button until the appliance is in programme selection mode.
When you cancel the delay start, you have to set the programme again.

### Cancelling the programme

Press and hold the programme button until the appliance is in programme selection mode.
Make sure that there is detergent in the detergent dispenser before you start a new programme.

### End of the programme

When the programme is completed the indicator →| is on.

1. Press the on/off button or wait for the appliance to switch to standby mode. If you open the door before the activation of standby mode, the appliance is automatically deactivated.
2. Close the water tap.

# 9. HINTS AND TIPS

## 9.1 General

Follow the hints below to ensure optimal cleaning and drying results in daily use and to protect the environment.

- Washing dishes in the dishwasher as instructed in the user manual usually consumes less water and energy than washing dishes by hand.
- Load the dishwasher to its full capacity to save water and energy. For best cleaning results, arrange items in the baskets as instructed in the user manual and do not overload the baskets.
- Do not pre-rinse dishes by hand. It increases the water and energy consumption. When needed, select a programme with a prewash phase.
- Remove larger residues of food from the dishes and empty cups and glasses before putting them inside the appliance.
- Soak or slightly scour cookware with firmly cooked-on or baked-on food before washing it in the appliance.
- Make sure that items in the baskets do not touch or cover each other. Only then can the water completely reach and wash the dishes.
- You can use dishwasher detergent, rinse aid and salt separately or you can use the multi-tablets (e.g. "All in 1"). Follow the instructions on the packaging.
- Select a programme according to the type of load and the degree of soil. **ECO** offers the most efficient use of water and energy consumption.
- To prevent limescale buildup inside the appliance:
  - Refill the salt container whenever necessary.
  - Use the recommended dosage of the detergent and rinse aid.
  - Make sure that the current level of the water softener agrees with the hardness of the water supply.
  - Follow the instructions in the chapter **"Care and cleaning"**.

## 9.2 Using salt, rinse aid and detergent

- Only use salt, rinse aid and detergent for dishwasher. Other products can cause damage to the appliance.
- In areas with hard and very hard water we recommend to use plain dishwasher detergent (powder, gel, tablets containing no additional agents), rinse aid and salt separately for optimal cleaning and drying results.
- At least once a month run the appliance with the use of appliance cleaner which is particularly suitable for this purpose.
- Detergent tablets do not fully dissolve with short programmes. To prevent detergent residues on the tableware, we recommend that you use the tablets with long programmes.
- Always use the correct quantity of detergent. Insufficient dosage of detergent can result in poor cleaning

results and hard-water filming or spotting on the items. Using too much detergent with soft or softened water results in detergent residues on the dishes. Adjust the amount of detergent based on the water hardness. Refer to the instructions on the detergent packaging.
- Always use the correct quantity of rinse aid. Insufficient dosage of rinse aid decreases the drying results. Using too much rinse aid results in bluish layers on the items.
- Make sure that the water softener level is correct. If the level is too high, the increased quantity of salt in the water might result in rust on cutlery.

## 9.3 What to do if you want to stop using multi-tablets

Before you start to use separately detergent, salt and rinse aid do the following procedure.

1. Set the highest level of the water softener.
2. Make sure that the salt and rinse aid containers are full.
3. Start the shortest programme with a rinsing phase. Do not add detergent and do not load the baskets.
4. When the programme is completed, adjust the water softener according to the water hardness in your area.
5. Adjust the released quantity of rinse aid.

## 9.4 Loading the baskets

- Always use the whole space of the baskets.
- Use the appliance to wash dishwasher-safe items only.
- Do not wash in the appliance items made of wood, horn, aluminium, pewter and copper as they could crack, warp, get discoloured or pitted.
- Do not wash in the appliance items that can absorb water (sponges, household cloths).
- Put hollow items (cups, glasses and pans) with the opening facing downwards.
- Make sure that glasses do not touch each other.
- Put light items in the upper basket. Make sure that the items do not move freely.
- Put cutlery and small items in the cutlery basket.
- Make sure that the spray arms can move freely before you start a programme.

## 9.5 Before starting a programme

Before you start the selected programme, make sure that:

- The filters are clean and correctly installed.
- The cap of the salt container is tight.
- The spray arms are not clogged.
- There is enough salt and rinse aid (unless you use multi-tablets).
- The arrangement of the items in the baskets is correct.
- The programme is suitable to the type of load and the degree of soil.
- The correct quantity of detergent is used.

## 9.6 Unloading the baskets

1. Let the tableware cool down before you remove it from the appliance. Hot items can be easily damaged.
2. First remove items from the lower basket, then from the upper basket.



After the programme is completed, water can still remain on the inside surfaces of the appliance.


# 10. CARE AND CLEANING

**WARNING!**
Before maintenance, deactivate the appliance and disconnect the mains plug from the main socket.


Dirty filters and clogged spray arms decrease the washing results. Make a check regularly and, if necessary, clean them.


## 10.1 Cleaning the filters

The filter system is made of 3 parts.

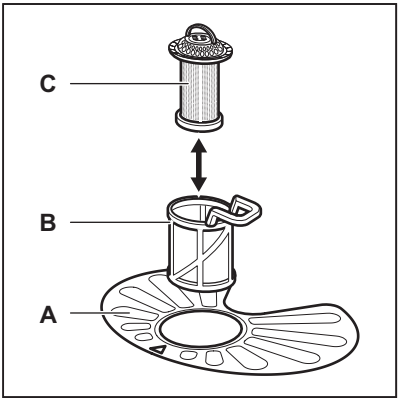



1. Turn the filter (**B**) counterclockwise and remove it.

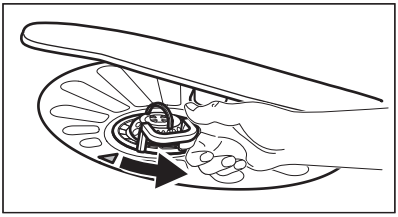


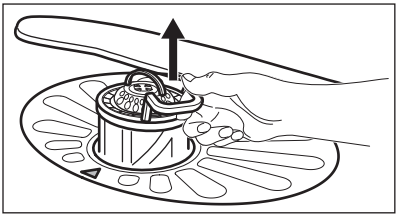


2. Remove the filter (**C**) out of filter (**B**).
3. Remove the flat filter (**A**).

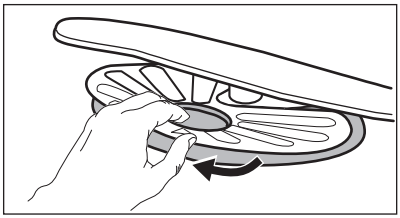


4. Wash the filters.

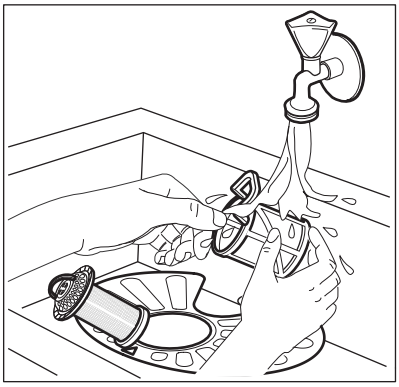

5. Make sure that there are no residues of food or soil in or around the edge of the sump.
6. Put back in place the flat filter (**A**). Make sure that it is correctly positioned under the 2 guides.

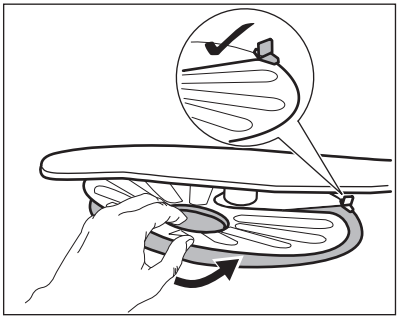

7. Reassemble the filters (**B**) and (**C**).
8. Put back the filter (**B**) in the flat filter (**A**). Turn it clockwise until it locks.

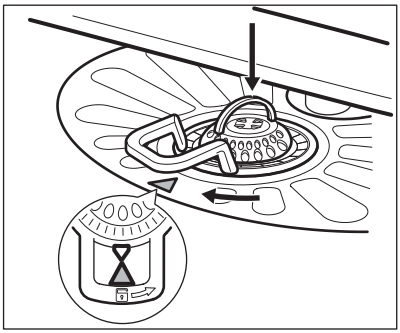

**CAUTION!**
An incorrect position of the filters can cause bad washing results and damage to the appliance.

## 10.2 Cleaning the spray arms

Do not remove the spray arms. If the holes in the spray arms are clogged, remove remaining parts of soil with a thin pointed object.

## 10.3 External cleaning

- Clean the appliance with a moist soft cloth.
- Only use neutral detergents.
- Do not use abrasive products, abrasive cleaning pads or solvents.

## 10.4 Internal cleaning

- Carefully clean the appliance, including the rubber gasket of the door, with a soft damp cloth.
- If you regularly use short duration programmes, these can leave deposits of grease and limescale inside the appliance. To prevent this, we recommend to run long duration programmes at least 2 times per month.
- To maintain the performance of your appliance at its best, we recommend to use monthly a specific cleaning product for dishwashers. Follow carefully the instructions on the packaging of the product.

## 10.5 Removal of foreign objects

Check the filters and the sump after each use of the dishwasher. Foreign objects (e.g. pieces of glass, plastic, bones or toothpicks, etc) decrease the cleaning performance and can cause damage to the drain pump.

1. Disassemble the filters system as instructed in this chapter.
2. Remove any foreign objects by hand.

**CAUTION!**
If unable to remove the objects, contact an Authorised Service Centre.

3. Reassemble the filters as instructed in this chapter.

# 11. TROUBLESHOOTING

**WARNING!**
Improper repair of the appliance may pose a danger to the safety of the user. Any repairs must be performed by qualified personnel.

**The majority of problems that can occur can be solved without the need to contact an Authorised Service Centre.**

Refer to the below table for information on possible problems.

With some problems, the dedicated indicator flashes intermittently to indicate a malfunction and the alarm code.

| Problem and alarm code | Possible cause and solution |
|---|---|
| You cannot activate the appliance. | • Make sure that the mains plug is connected to the mains socket.<br>• Make sure that there is no damaged fuse in the fuse box. |
| The programme does not start. | • Make sure that the appliance door is closed.<br>• If the delay start is set, cancel the setting or wait for the end of the countdown.<br>• The appliance recharges the resin inside the water softener. The duration of the procedure is approximately 5 minutes. |
| The appliance does not fill with water.<br>• The indicator →\| flashes 1 time intermittently.<br>• Acoustic signal sounds 1 time intermittently. | • Make sure that the water tap is open.<br>• Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority.<br>• Make sure that the water tap is not clogged.<br>• Make sure that the filter in the inlet hose is not clogged.<br>• Make sure that the inlet hose has no kinks or bends. |
| The appliance does not drain the water.<br>• The indicator →\| flashes 2 times intermittently.<br>• Acoustic signal sounds 2 times intermittently. | • Make sure that the sink spigot is not clogged.<br>• Make sure that the interior filter system is not clogged.<br>• Make sure that the drain hose has no kinks or bends. |
| The anti-flood device is on.<br>• The indicator →\| flashes 3 times intermittently.<br>• Acoustic signal sounds 3 times intermittently. | • Close the water tap.<br>• Make sure that the appliance is correctly installed.<br>• Make sure the baskets are loaded as instructed in the user manual. |
| Malfunction of the water level detection sensor.<br>• The indicator →\| flashes 4 times intermittently.<br>• Acoustic signal sounds 4 times intermittently. | • Make sure that the filters are clean.<br>• Switch the appliance off and on. |
| Malfunction of the wash pump or the drain pump.<br>• The indicator →\| flashes 5 times intermittently.<br>• Acoustic signal sounds 5 times intermittently. | • Switch the appliance off and on. |

| Problem and alarm code | Possible cause and solution |
|---|---|
| The temperature of the water inside the appliance is too high or malfunction of the temperature sensor occurred.<br>• The indicator →\| flashes 6 times intermittently.<br>• Acoustic signal sounds 6 times intermittently. | • Make sure that the temperature of the inlet water does not exceed 60°C.<br>• Switch the appliance off and on. |
| Technical malfunction of the appliance.<br>• The indicator →\| flashes 12 times intermittently.<br>• Acoustic signal sounds 12 times intermittently. | • Switch the appliance off and on. |
| The level of water inside the appliance is too high.<br>• The indicator →\| flashes 15 times intermittently.<br>• Acoustic signal sounds 15 times intermittently. | • Switch the appliance off and on.<br>• Make sure that the filters are clean.<br>• Make sure that the outlet hose is installed at the right height above the floor. Refer to the installation instructions. |
| The appliance stops and starts more times during operation. | • It is normal. It provides optimal cleaning results and energy savings. |
| The programme lasts too long. | • If the delayed start option is set, cancel the delay setting or wait for the end of the countdown. |
| Small leak from the appliance door. | • The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable).<br>• The appliance door is not centred on the tub. Adjust the rear foot (if applicable). |
| The appliance door is difficult to close. | • The appliance is not levelled. Loosen or tighten the adjustable feet (if applicable).<br>• Parts of the tableware are protruding from the baskets. |
| Rattling/knocking sounds from inside the appliance. | • The tableware is not properly arranged in the baskets. Refer to basket loading leaflet.<br>• Make sure that the spray arms can rotate freely. |
| The appliance trips the circuit-breaker. | • The amperage is insufficient to supply simultaneously all the appliances in use. Check the socket amperage and the capacity of the meter or turn off one of the appliances in use.<br>• Internal electrical fault of the appliance. Contact an Authorised Service Centre. |

Refer to **"Before first use"**, **"Daily use"**, or **"Hints and tips"** for other possible causes.

Once you have checked the appliance, deactivate and activate the appliance. If the problem occurs again, contact an Authorised Service Centre.

For alarm codes not described in the table, contact an Authorised Service Centre.

**WARNING!**
We do not recommend using the appliance until the problem has been completely fixed. Unplug the appliance and do not plug it in again until you are certain that it operates correctly.

## **11.1** The washing and drying results are not satisfactory

| Problem | Possible cause and solution |
|---|---|
| Poor washing results. | • Refer to **"Daily use"**, **"Hints and tips"** and basket loading leaflet.<br>• Use more intensive washing programmes.<br>• Clean spray arm jets and filter. Refer to **"Care and Cleaning"**. |
| Poor drying results. | • Tableware has been left for too long inside a closed appliance.<br>• There is no rinse aid or the dosage of rinse aid is not enough. Set the rinse aid dispenser to a higher level.<br>• Plastic items may need to be towel dried.<br>• For the best drying performance activate AirDry.<br>• We recommend to always use rinse aid, even in combination with multi-tablets. |
| There are whitish streaks or bluish layers on glasses and dishes. | • The release quantity of rinse aid is too much. Adjust the rinse aid level to a lower level.<br>• The quantity of detergent is too much. |
| There are stains and dry water drops on glasses and dishes. | • The released quantity of rinse aid is not sufficient. Adjust the rinse aid level to a higher level.<br>• The quality of the rinse aid can be the cause. |
| The dishes are wet. | • For the best drying performance activate AirDry.<br>• The programme does not have a drying phase or has a drying phase with low temperature.<br>• The rinse aid dispenser is empty.<br>• The quality of the rinse aid can be the cause.<br>• The quality of the multi-tablets can be the cause. Try a different brand or activate the rinse aid dispenser and use rinse aid and multi-tablets together. |
| The interior of the appliance is wet. | • This is not a defect of the appliance. it is caused by the humidity in the air that condenses on the walls. |
| Unusual foam during washing. | • Use the detergent for dishwashers only.<br>• There is a leak in the rinse aid dispenser. Contact an Authorised Service Centre. |

| Problem | Possible cause and solution |
|---|---|
| Traces of rust on cutlery. | • There is too much salt in the water used for washing. Refer to **"The water softener"**.<br>• Silver and stainless steel cutlery were placed together. Avoid to put silver and stainless steel items close together. |
| There are residues of detergent in the dispenser at the end of the programme. | • The detergent tablet got stuck in the dispenser and therefore was not completely washed away by water.<br>• Water cannot wash away the detergent from the dispenser. Make sure that the spray arm is not blocked or clogged.<br>• Make sure that items in the baskets do not impede the lid of the detergent dispenser from opening. |
| Odours inside the appliance. | • Refer to **"Internal cleaning"**. |
| Limescale deposits on the tableware, on the tub and on the inside of the door. | • The level of salt is low, check the refill indicator.<br>• The cap of the salt container is loose.<br>• Your tap water is hard. Refer to **"The water softener"**.<br>• Even using multi-functional tabs use salt and set regeneration of the water softener. Refer to **"The water softener"**.<br>• If lime scale deposits still remain, clean the appliance with appliance cleaners which are particularly suitable for this purpose.<br>• Try different detergent.<br>• Contact the detergent manufacturer. |
| Dull, discoloured or chipped tableware. | • Make sure that only dishwasher-safe items are washed in the appliance.<br>• Load and unload the basket carefully. Refer to basket loading leaflet.<br>• Place delicate items in the upper basket. |

Refer to **"Before first use"**, **"Daily use"** or **"Hints and tips"** for other possible causes.

# **12.** TECHNICAL INFORMATION

| | | |
|---|---|---|
| Dimensions | Width / height / depth (mm) | 596 / 818 - 898 / 550 |
| Electrical connection **1)** | Voltage (V) | 220 - 240 |
| | Frequency (Hz) | 50 |
| Water supply pressure | Min. / max. bar (MPa) | 0.5 (0.05) / 8 (0.8) |
| Water supply | Cold water or hot water **2)** | max 60 °C |

| | | |
|---|---|---|
| Capacity | Place settings | 13 |
| Power consumption | Left-on mode (W) | 5.0 |
| | Off-mode (W) | 0.50 |

**1)** Refer to the rating plate for other values.

**2)** If the hot water comes from alternative source of energy (e.g. solar panels), use the hot water supply to decrease energy consumption.

## **12.1** Link to the EU EPREL database

The QR code on the energy label supplied with the appliance provides a web link to the registration of this appliance in the EU EPREL database. Keep the energy label for reference together with the user manual and all other documents provided with this appliance.

It is possible to find information related to the performance of the product in the EU EPREL database using the link https://eprel.ec.europa.eu and the model name and product number that you can find on the rating plate of the appliance. Refer to the chapter "Product description".

For more detailed information about the energy label, visit www.theenergylabel.eu.

# **13.** ENVIRONMENTAL CONCERNS

Recycle materials with the symbol ♺. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

**www.electrolux.com/shop**



156946740-A-252020

CE