AG neovo

THE DISPLAY CHOICE
OF PROFESSIONALS™

SC-32 & SC-42 Security LED-Backlit Display

User Manual

www.agneovo.com

TABLE OF CONTENTS

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE INFORMATION

The product must be installed according to the currently valid installation regulations for EMC to guarantee the designed use and to prevent EMC problems.

The device supplied with this manual is according to the EC, EMC Directive, 2004/108/EC & LVD 2006/95/EC

SAFETY PRECAUTIONS

1. Do not modify the three-prong grounding type monitor power plug in any way.
2. Operate this unit only from the type of power source indicated on the label.
3. Do not block or cover ventilation openings on the back or bottom of the monitor cabinet.
4. Do not place this monitor near a radiator or heating vent.
5. Do not push objects of any kind through cabinet openings. This may result in fire or electrical shock.
6. Before adding attachments always ask a service technician to perform routine safety tests to determine that equipment is in safe operating condition. Ground potential tests should be part of the routine safety check made by the service technician.
7. Do not place monitor on an unstable cart, stand, or shelf where it may fall and injure personnel or damage equipment.

8. Route power cords so that they cannot be walked upon or tripped over. Do not allow anything to rest on the power cord.

9. Do not install monitor in wet areas, or where it may be exposed to rain or water. Do not spill liquid of any kind on the unit.

10. Unplug the power cord from the unit before cleaning the display. Use only a damp cloth. Do not use alcohol, spirits, or ammonia to clean the display. **DO NOT ATTEMPT TO CLEAN THE INTERIOR OF THIS UNIT- THIS ACTION MUST BE PERFORMED BY THE SERVICE TECHNICIAN AS REQUIRED DURING NORMAL MAINTENANCE.**

11. Refer all servicing to qualified service personnel. **REMOVAL OF BACK COVER BY UNAUTHORIZED PERSONNEL MAY EXPOSE THE USER TO DANGEROUS VOLTAGES OR OTHER HAZARDS**.

12. Unplug the unit immediately and notify the service technician.

    A. If liquid has been spilled into the display or the display has been exposed to rain or water.

    B. If the unit has been dropped or the cabinet damaged.

    C. If fuses continue to blow.

    D. If the power cord is damaged or frayed.

    E. If a distinct change from normal operation is apparent.

When replacement parts are required, be sure that the service technician uses components specified by the manufacturer which have the same characteristics as the original parts. **UNAUTHORIZED SUBSTITUTIONS MAY RESULT IN FIRE, ELECTRICAL SHOCK OR OTHER HAZARDS.**

Upon completion of any service or repairs, ask the technician to perform safety checks to determine that the equipment is in safe operating condition.

WARNING: SERIOUS SHOCK HAZARDS EXIST WITHIN THE COVERS OF THIS MONITOR. DO NOT OPEN THE COVERS UNDER ANY CIRCUMSTANCES, THERE ARE NO USER SERVICEABLE COMPONENTS INSIDE

1. Scope

This specification is used to define the performance of SC-32 & SC-42 series color TFT LCD monitor. This system also supports both video input and PC input. In video input mode, the system can automatically detect the NTSC signal and PAL signal. In PC mode, this system can support up to 1920 x 1080 VESA standard.

The user friendly OSD menu is also provided to make this system easy to operate.

2. Functional Specifications

2.1 Power Supply
The power supply spec is listed below,
  AC INPUT
            AC power input range：Rated voltage 100 – 240 Vac +/- 10%, 47~63Hz,
                                            2 Amps max.
        * Power consumption： 90W max.
* Power efficiency：80% typical at normal line input and full load

2.2 Video Characteristics

Composite Video (CVBS): 1.0 Vp-p (0.5 – 1.5Vpp), Automatic switching from 75 Ω
                                    unbalanced termination to Hi-Z with loop-through operation.

Y/C (S-video): 1.0 Vp-p (0.5 – 1.5Vpp), Automatic switching from 75 Ω unbalanced
                    termination to Hi-Z with loop-through operation.

2.3 PC Input
● **VGA Input**
Analog RGB: 0.707 Vp-p.
Support VESA Standard Timing

● **HDMI Input**
HDMI Compatible Interface
Digital Signal: TMDS.
HDCP: HDCP 1.1

2.4 Audio Input
Signal Level: 1.0 Vrms

2.5 Environmental

● **Temperature**

Operating: 0^0C to +40^0C
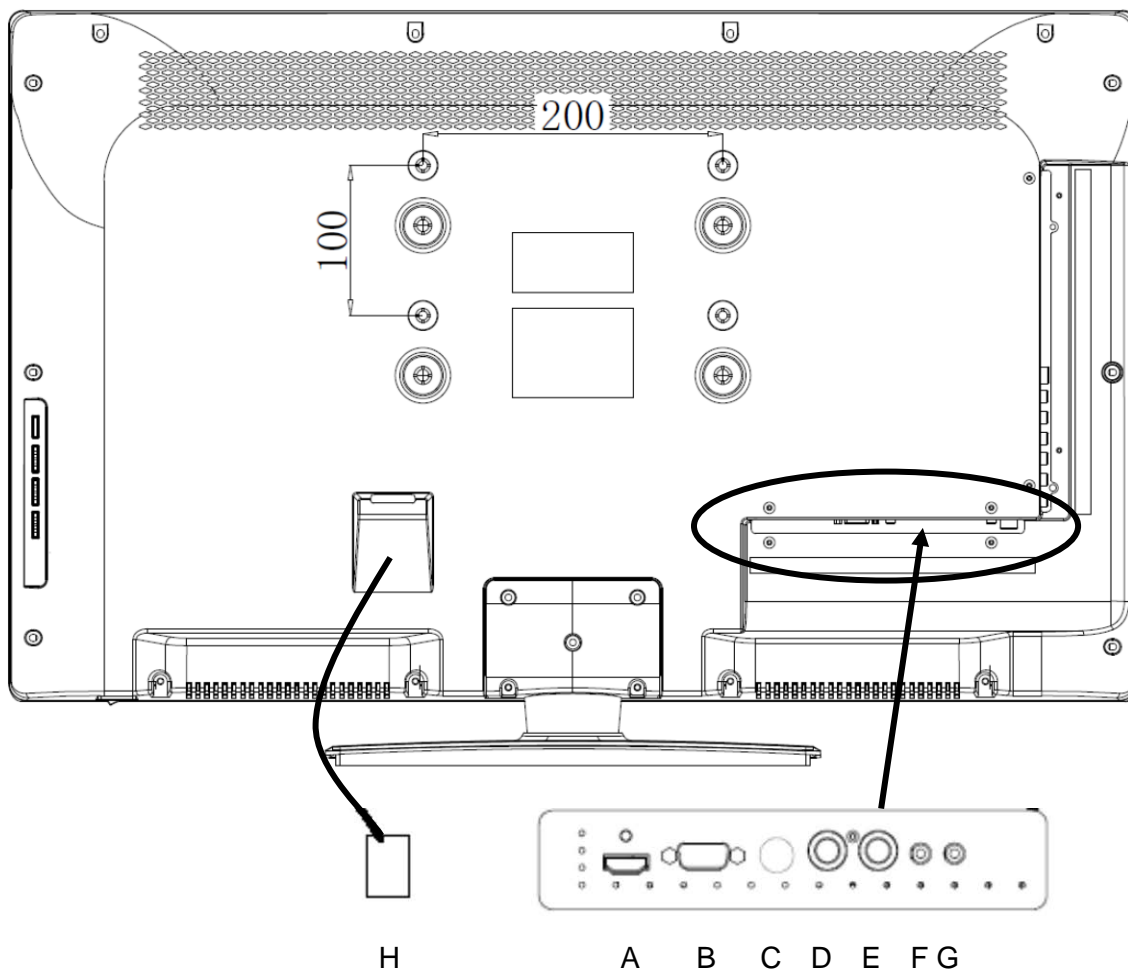
Storage: -20^0C to +60^0C

● **Humidity**

Operating: 10% to 85% (non-condensing)

Storage: 10% to 95% (non-condensing)

2.6 EDID

This series of displays support EDID, but does not support DDC2B function.

2.7 Connectors

A. HDMI INPUT: HDMI Connector

B. VGA INPUT: D-SUB 15 pins Connector

C. S-VIDEO (Y/C) INPUT: Mini-DIN 4 pins Connector

D. CVBS INPUT: BNC Connector

E. CVBS OUTPUT: BNC Connector

F. AUDIO INPUT: Phone Jack, Stereo

G. AUDIO OUTPUT: Phone Jack, Stereo

H. AC Input: Power cable (AC Power Plug IEC 320,C14)

Set up sequence

    1. Make sure the power of PC and/or Video source were turned off.

    2. Plug the Video signal and VGA cable to monitor.

    3. Turns the PC and/or Video source power on.

    4. Plug the AC power cord onto AC Socket.

    (Use reverse sequence to teardown the monitor)

3. Controls and indicators

SC-32 & SC-42 MONITOR
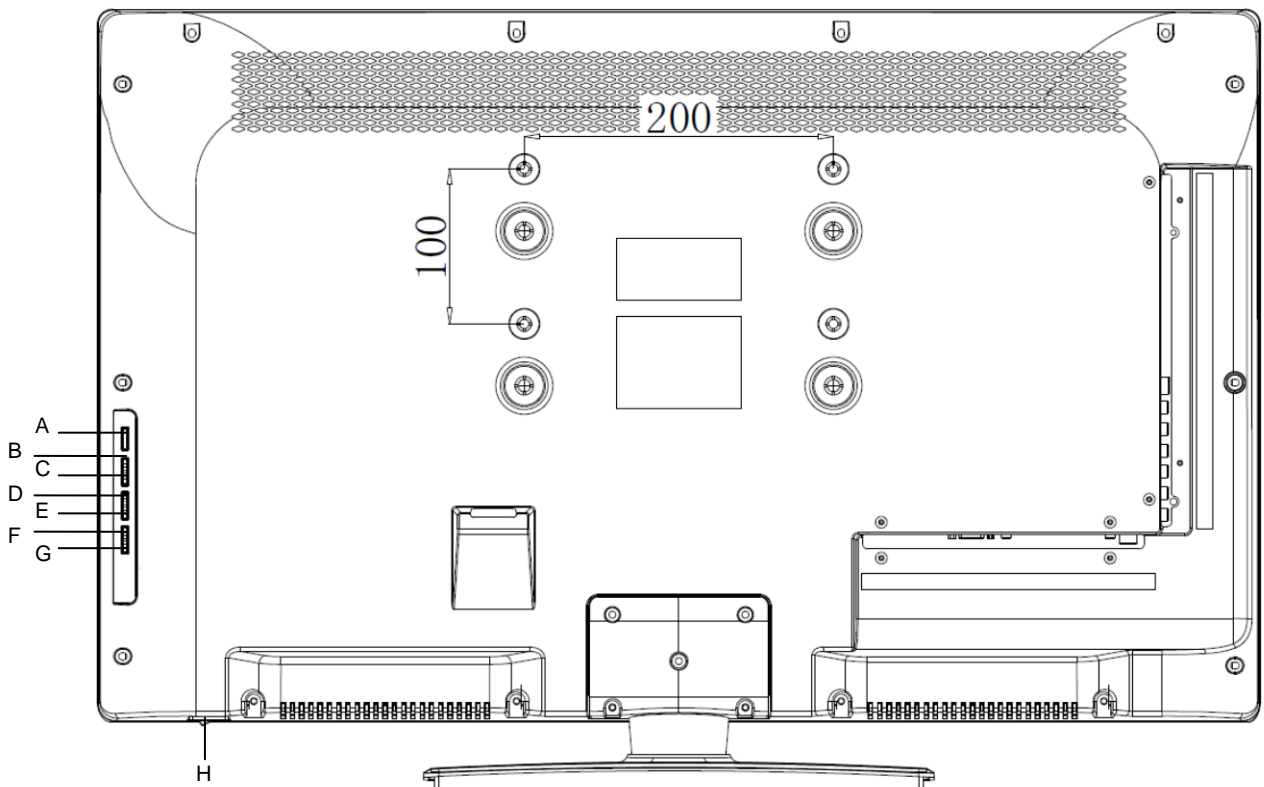
A. " ⏻ " **Power button**

Press the button to turn ON or turn OFF the monitor

B. " ⤵ " **Source button**

Press the button to show source menu. Select DHMI, S-Video, VGA and VIDEO input signal

C. " ⬚ " **Menu button**

Press the button to show the OSD main menu.
As a confirmation key during the OSD operation.

D. " ▲ " **Up button**

Press the buttons to scrolling the cursor to desired function.

E. " ▼ " **Down buttons**

Press the buttons to scrolling the cursor to desired function.

F. " ▶ " **Volume+ buttons**

Press the buttons to increase volume
Press the buttons to increase the value of selected function in sub OSD menu.

G. " ◀ " **Volume- button**

Press the buttons to decrease volume
Press the buttons to decrease the value of selected function in sub OSD menu.

H. Power Switch

Press the Switch to turn ON or turn OFF the monitor Power

POWER LED Indication
- Green - Power on
- LED light off - Power switch off
- Red - Power off
- Red + Flash Green - Sleep mode (PC mode only)

Remote control

Power: Power On or Off the monitor

Mute: Mute the audio

Key Lock: Lock and unlock push buttons

Menu/ Left/ Right/ Up/ Down/ OK/ Exit:
Monitor OSD control

◄ ► : Hot key for volume control

Auto: VGA mode picture Adjust

VIDEO: Select Video source

S-VIDEO: Select S-Video source

Info: Display Monitor source information

HDMI: Select HDMI source.

VGA: Select VGA source.

SDI: Reserve

4. OSD Menu

Hot key：

Quick adjust keys from front panel hot keys：
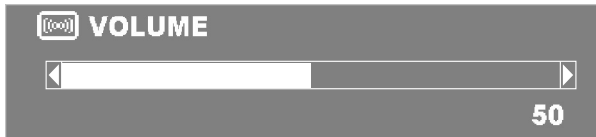
VOLUME
50

VOLUME :

Press ◀ or ▶ button to select the function and press ◀ / ▶ buttons to adjust the volume, the press ⧉ button to exit OSD menu.

KEY LOCK : Push ⧉ for 6 sec to enable this function.

KEY LOCK

KEY UN-LOCK : Push ⧉ for 6 sec to disable this function.

KEY UN-LOCK

VGA & HDMI mode：

OSD Menu structure：

Use the ⏏ to select the VGA, HDMI, CVBS, or S-VIDEO, the menu structure within each varies, refer to sections below on how to set-up each option.

VGA / HDMI mode：

Press ⧉ to bring up the MAIN MENU Page. The following page will appear

Press ▲/ ▼buttons to select an icon, then Press ⧉to change the values in the sub menu.

VGA MAIN MENU
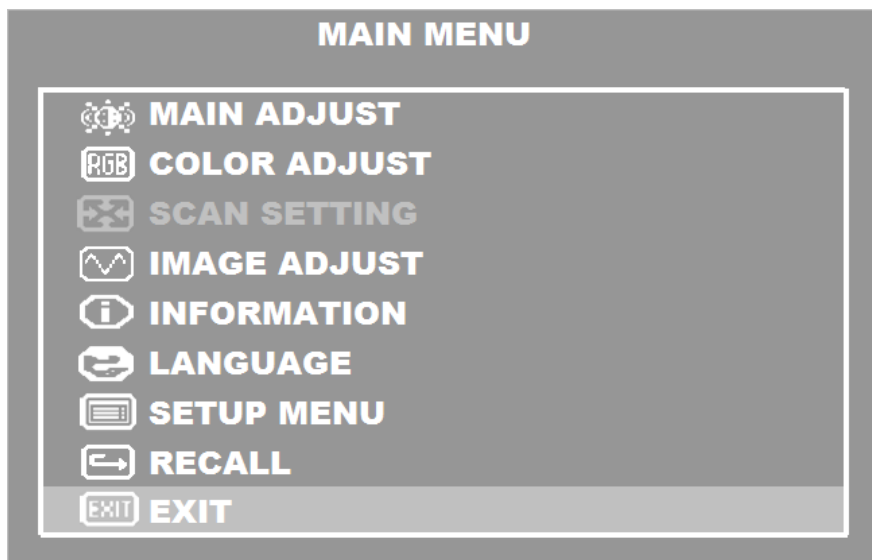
HDMI MAIN MENU
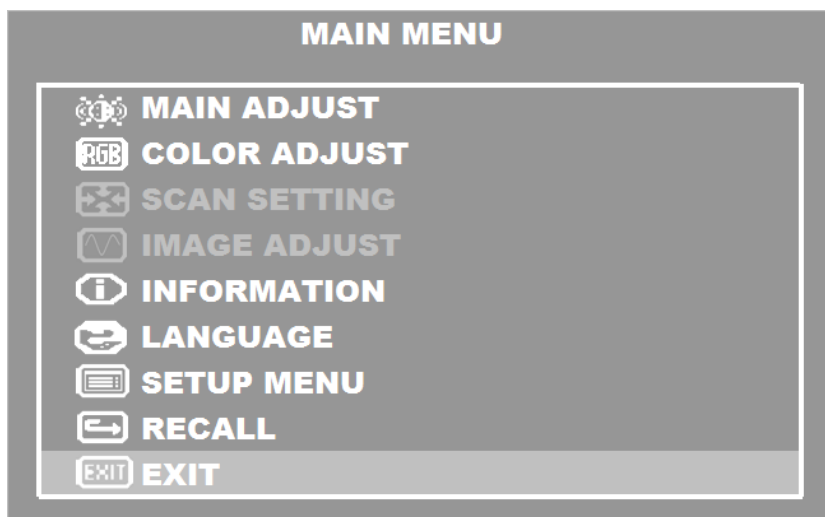
MAIN ADJUST：

```
                    MAIN ADJUST

        VIVID MODE          USER
        BRIGHTNESS          50
        CONTRAST            40
        VOLUME              50
        EXIT
```

1. Press ▲ / ▼ to select an icon.

2. Press 🗗 to select item,

3. Press ◀ / ▶ t to adjust the value

4. Press 🗗 to return

VIVID MODE：Select the VIVID MODE (0~3 and USER)
USER, 0: TEXT, 1: PHOTO, 2: MOVIE, 3: GAME

BRIGHTNESS：Adjust the brightness value

CONTRAST：Adjust the contrast value

VOLUME：Adjust the volume

EXIT：Press 🗗 to return to the main menu

[RGB] COLOR ADJUST：

Set the color temperature of the LCD monitor for the CIE coordinate 9300˚k or 6500˚k or USER MODE

```
                    COLOR ADJUST

    ┌──────────────────────────────────────────┐
    │  [RGB] COLOR ADJUST                        │
    │        ◀          6500          ▶          │
    │  [R] RED                        41         │
    │  [G] GREEN                      36         │
    │  [B] BLUE                       34         │
    │  [EXIT] EXIT                               │
    └──────────────────────────────────────────┘
```
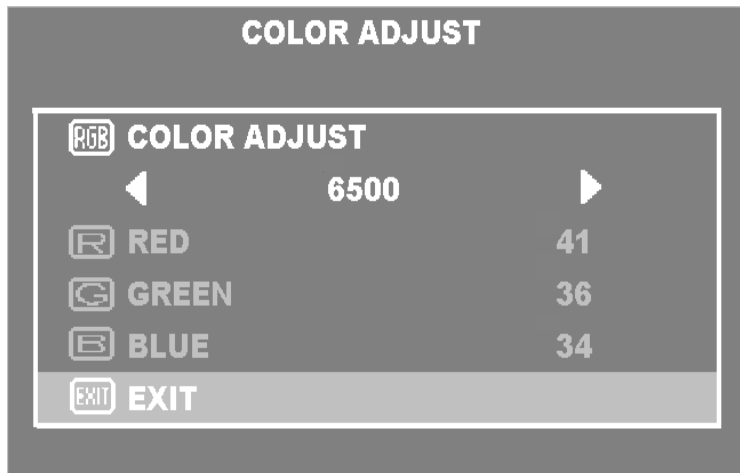
1. Press ▲ / ▼ to select an icon

2. Press ⊡ to select adjust item,

3. Press ◀ / ▶ to adjust the value

4. Press ⊡ to return

USER COLOR：Adjust the color temperature.

[R] RED：Adjust the RED value for user mode.

[G] GREEN：Adjust the GREEN value for user mode.

[B] BLUE：Adjust the BLUE value for user mode.

[EXIT] EXIT：Press ⊡ to return to the main menu

IMAGE ADJUST (VGA ONLY)：
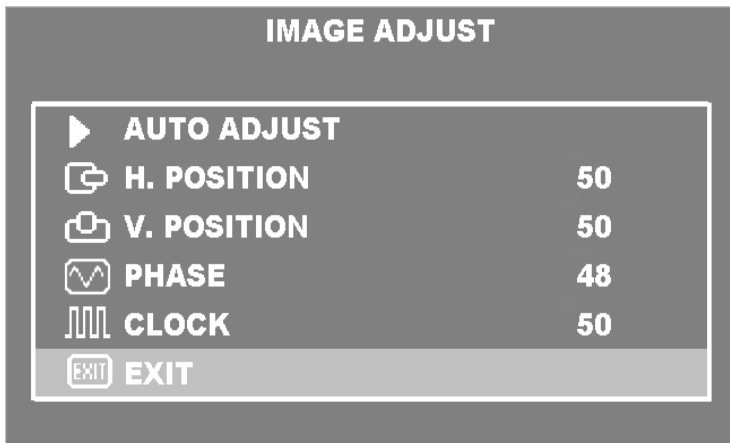
```
                IMAGE ADJUST

   ▶   AUTO ADJUST
   ⊡   H. POSITION              50
   ⊡   V. POSITION              50
   ⟨⟩   PHASE                   48
   ⠿   CLOCK                    50
   EXIT EXIT
```

1. Press ▲ / ▼ to select an icon

2. Press ⊡ to select adjust item

3. Press ◀ / ▶ to adjust the value

4. Press ⊡ to return

AUTO ADJUST：Press ⊡ to auto adjust the H. Position,

                  V. Position, Phase, Clock

H. POSITION：Adjust the horizontal position value

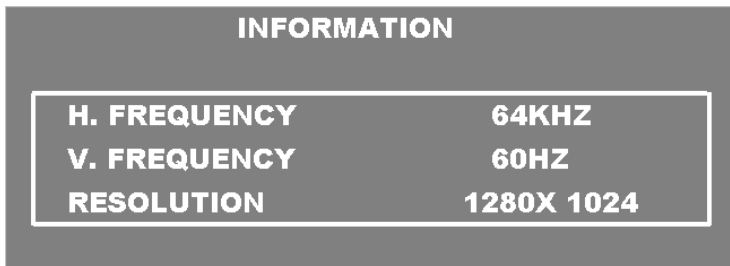V. POSITION：Adjust the vertical position value

PHASE：Adjust the phase value

CLOCK：Adjust the clock value

EXIT：Press ⊡ to return to the main menu

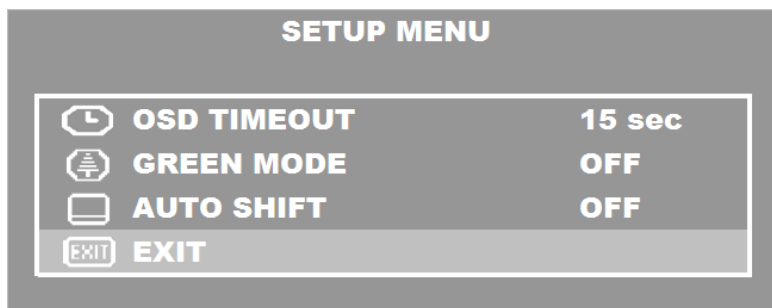**INFORMATION：**

Press ⊡ to get the VGA timing information

INFORMATION	
H. FREQUENCY	64KHZ
V. FREQUENCY	60HZ
RESOLUTION	1280X 1024

LANGUAGE： Press ⊡ to enter the sub-menu

LANGUAGE
ENGLISH
FRANÇIS
DEUTSCH
ESPAÑOL
ITALIANO
DUTCH
PORTUGUêS
EXIT EXIT

1. Press ▲ / ▼ to select language
2. Press ⊡ to enter

SETUP MENU：

SETUP MENU	
OSD TIMEOUT	15 sec
GREEN MODE	OFF
AUTO SHIFT	OFF
EXIT EXIT	

1. Press ▲ / ▼ to select an icon
2. Press ⊡ to select adjust item
3. Press ◄ / ► to adjust the value
4. Press ⊡ to return

⬡ OSD TIMEOUT：Adjust the OSD Show time (5 ~120 sec)

⬡ GREEN MODE：Off or On (5 min~10 min)
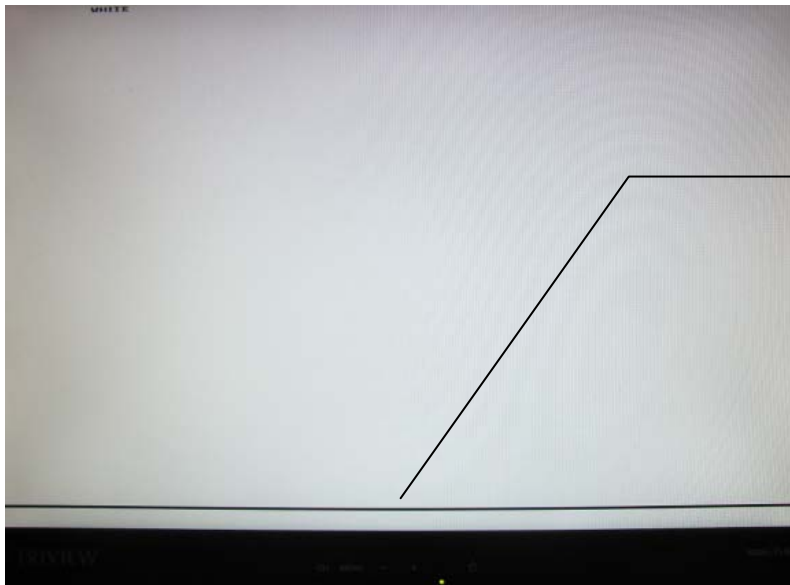
OFF – No function

ON – Screen will reduce back light to 80% within (5 min to 10 min)

　　Screen will back to normal when any button is being touched.

⬚ AUTO SHIFT：Adjust AUTO SHIFT ON/OFF

OFF – No Function

ON – Every one hour there will one scan line from top to bottom (Every 1 second

　　down one scan line) to prevent panel sticking.

Anti-Burn-in^{TM} scan line

[EXIT] EXIT：Press ⬓ to return to the main menu

➡ **RECALL**：

Brightness, Contrast, Volume, Vivid Mode, OSD Timeout, Green Mode, Auto Shift return to default Value.

Video mode：

Press ⬚ to bring up the MAIN MENU Page. The following page will appear

Press ▲ / ▼ to select an icon, then Press ⬚ to change the values in the sub menu.

```
                    MAIN MENU

         ⬡ MAIN ADJUST
         RGB COLOR ADJUST
         ⬚ SCAN SETTING
         ⟍⟋ IMAGE ADJUST
         ⓘ INFORMATION
         ⬚ LANGUAGE
         ▦ SETUP MENU
         ⬚ RECALL
         EXIT EXIT
```
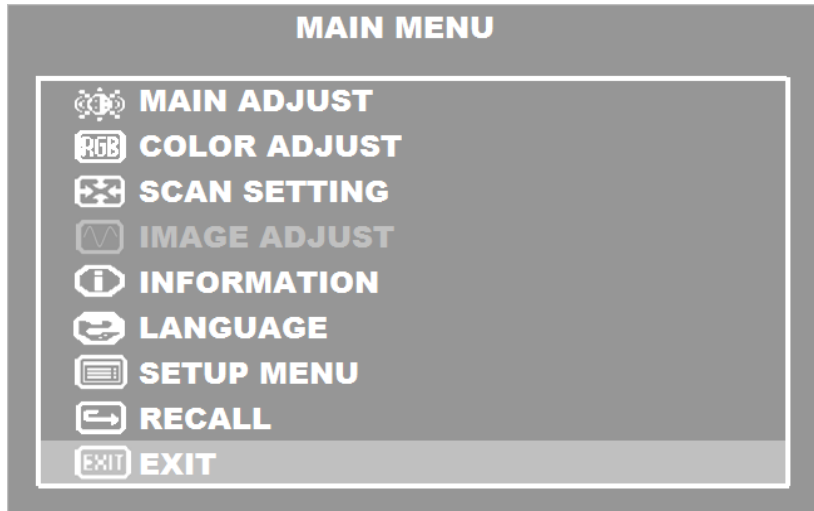
MAIN ADJUST：

```
                    MAIN ADJUST

        VIVID MODE          USER
        BRIGHTNESS          50
        CONTRAST            40
        SHARPNESS           49
        SATURATION          50
        TINT                50
        VOLUME              49
        EXIT
```

1. Press ▲ / ▼ to select an icon

2. Press 🗗 to select item

3. Press ◀ / ▶ to adjust the value

4. Press 🗗 to return

VIVID MODE：Select the VIVID MODE (0~3 and USER)
USER, 0: TEXT, 1: PHOTO, 2: MOVIE, 3: GAME

BRIGHTNESS：Adjust the brightness value.

CONTRAST：Adjust the contrast value.

SHARPNESS：Adjust Image sharp.

SATURATION：Adjust Image saturation.

TINT：Adjust Image tint. (NTSC only).

VOLUME：Adjust the volume .

EXIT：Press 🗗 to return to the main menu.

RGB **COLOR ADJUST**：
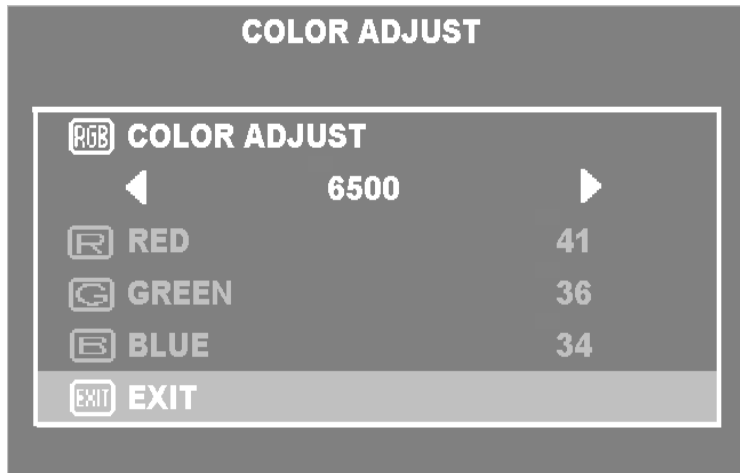
Set the color temperature of the LCD
monitor for the CIE coordinate 9300˚k or 6500˚k or USER MODE

COLOR ADJUST

RGB **COLOR ADJUST**

◀ **6500** ▶

R RED 41
G GREEN 36
B BLUE 34
EXIT EXIT

1. Press ▲ / ▼ to select an icon

2. Press ⊡ to select adjust item,

3. Press ◀ / ▶ t to adjust the value

4. Press ⊡ to return

USER COLOR：Adjust the color temperature.

R RED：Adjust the RED value for user mode.
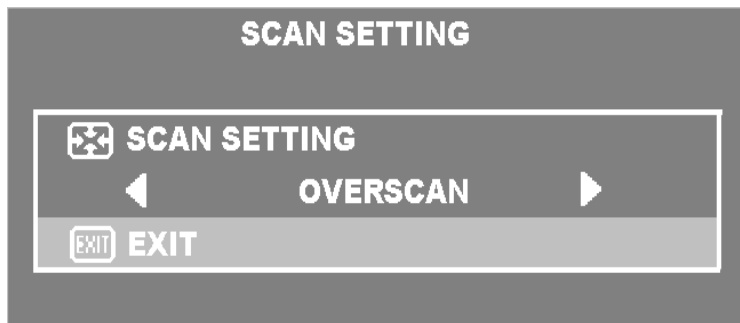
G GREEN：Adjust the GREEN value for user mode.

B BLUE：Adjust the BLUE value for user mode.

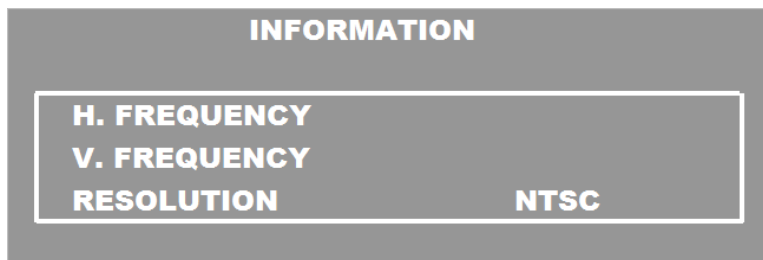EXIT EXIT：Press ⊡ to return to the main menu

SCAN SETTING：

```
                    SCAN SETTING

         SCAN SETTING
         ◄         OVERSCAN         ►
         EXIT EXIT
```

1. Press ⊞ to select the sub-menu
2. Press ◄ / ► to select Scan Setting state.
3. Press ⊞ to return

INFORMATION：

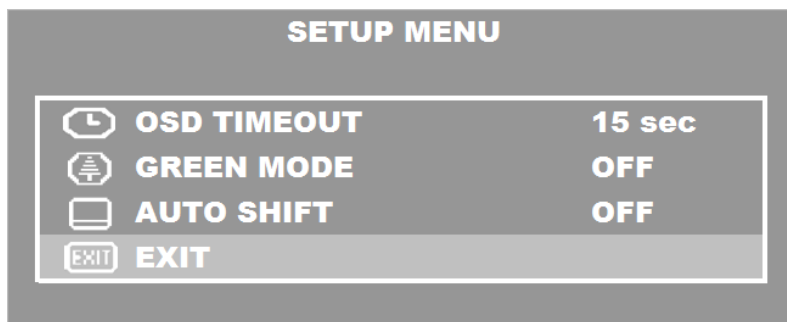Press ⊞ to get the timing information

```
                    INFORMATION

         H. FREQUENCY
         V. FREQUENCY
         RESOLUTION                    NTSC
```

LANGUAGE： Press ⊞ to enter the sub-menu

```
                    LANGUAGE

              ENGLISH
              FRANÇIS
              DEUTSCH
              ESPAÑOL
              ITALIANO
              DUTCH
              PORTUGUêS
         EXIT EXIT
```

1. Press ▲ / ▼ to select language
2. Press ⊞ to enter

⊞ SETUP MENU：

```
              SETUP MENU

    🕐 OSD TIMEOUT          15 sec
    🖩 GREEN MODE           OFF
    ▢ AUTO SHIFT           OFF
    EXIT EXIT
```

1. Press ▲ / ▼ to select an icon

2. Press ⊓ to select adjust item

3. Press ◀ / ▶ to adjust the value

4. Press ⊓ to return

🕐 OSD TIMEOUT：Adjust the OSD Show time (5 ~120 sec)

🖩 GREEN MODE：Off or On (5 min~10 min)
　　OFF – No function
　　ON – Screen will reduce back light to within (5 min to 10 min)
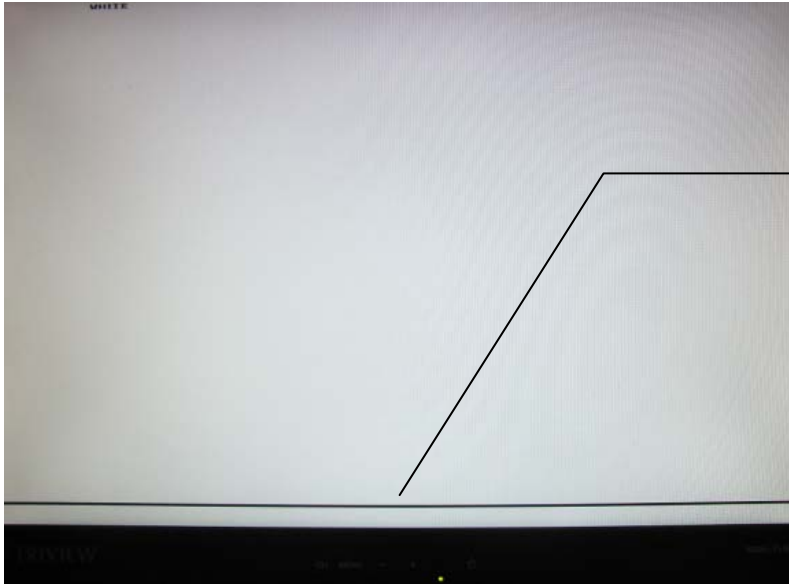　　　　Screen will back to normal when any button is being touched.

⬜ AUTO SHIFT：Adjust AUTO SHIFT ON/OFF

OFF – No Function

ON – Every one hour there will one scan line from top to bottom

(Every 1 second down one scan line) to prevent panel sticking.

Anti-Burn-in™ scan line

EXIT EXIT：Press ⬚ to return to the main menu.

RECALL：

Brightness, Contrast, Sharpness, Saturation, Tint, Volume, Vivid Mode, OSD Timeout, Green Mode, Auto Shift return to default Value.

5. Regulatory Agency

5.1 Safety Approvals

This series design shall meet the standards of the following domestic and foreign agencies:

 CE LVD   : EN60950

5.2 EMI/EMS Emission Approvals

This series design shall meet following EMI/EMS specifications:

FCC Compliance: FCC Rules and Regulations, Part 15, subpart B, Class B.

CE COMPLIANCE: EN55022 class B, EN55024, EN50130-4

6. Mechanical

6.1 Cabinet
Material: Plastic

Finish: Black
6.2 Dimensions
WxDxH mm

SC-32:
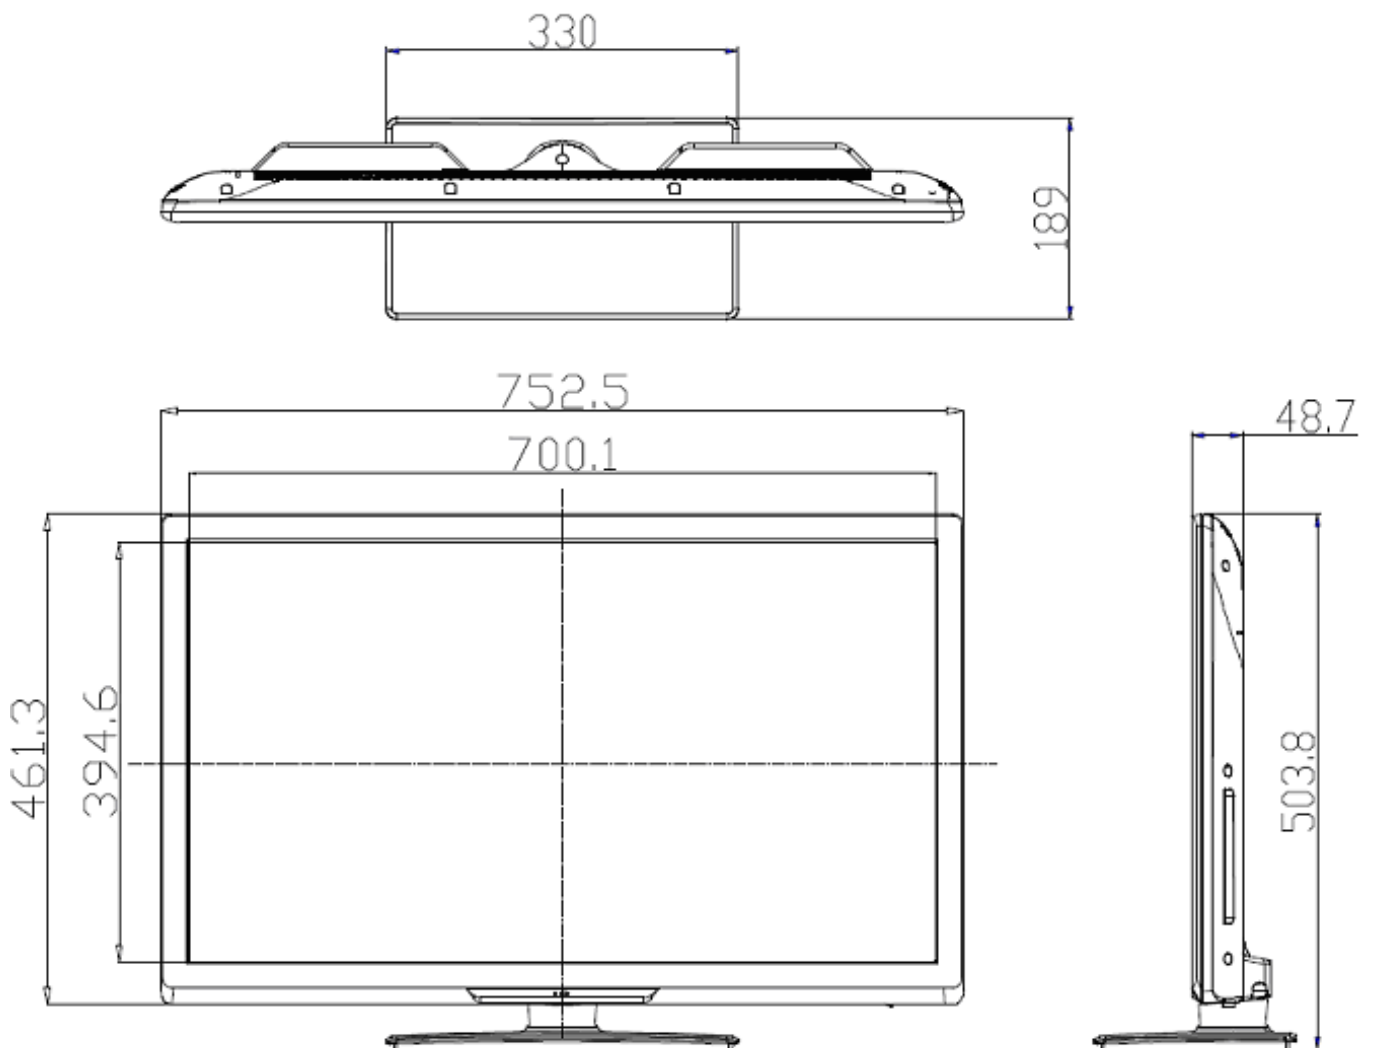752.5x48.7x461.3mm (Without base)
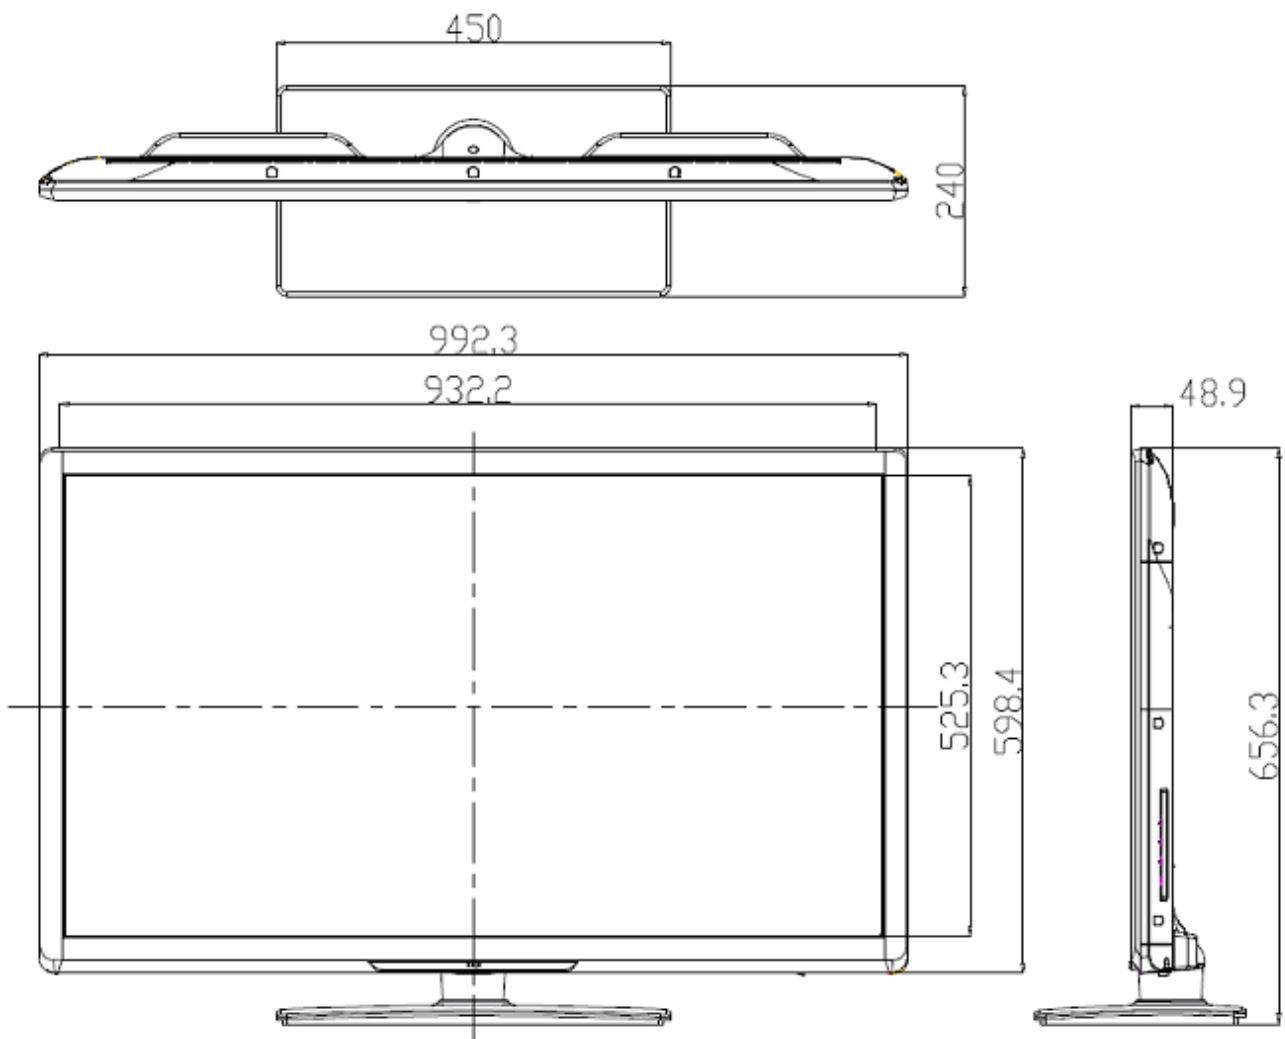
752.5x189x503.8mm (With base)
SC-42:
992.3x48.9x598.4 mm (Without base)

992.3x240x656.3 mm (With base)

SC-32:

SC-42:

6.3 Packaging Dimensions
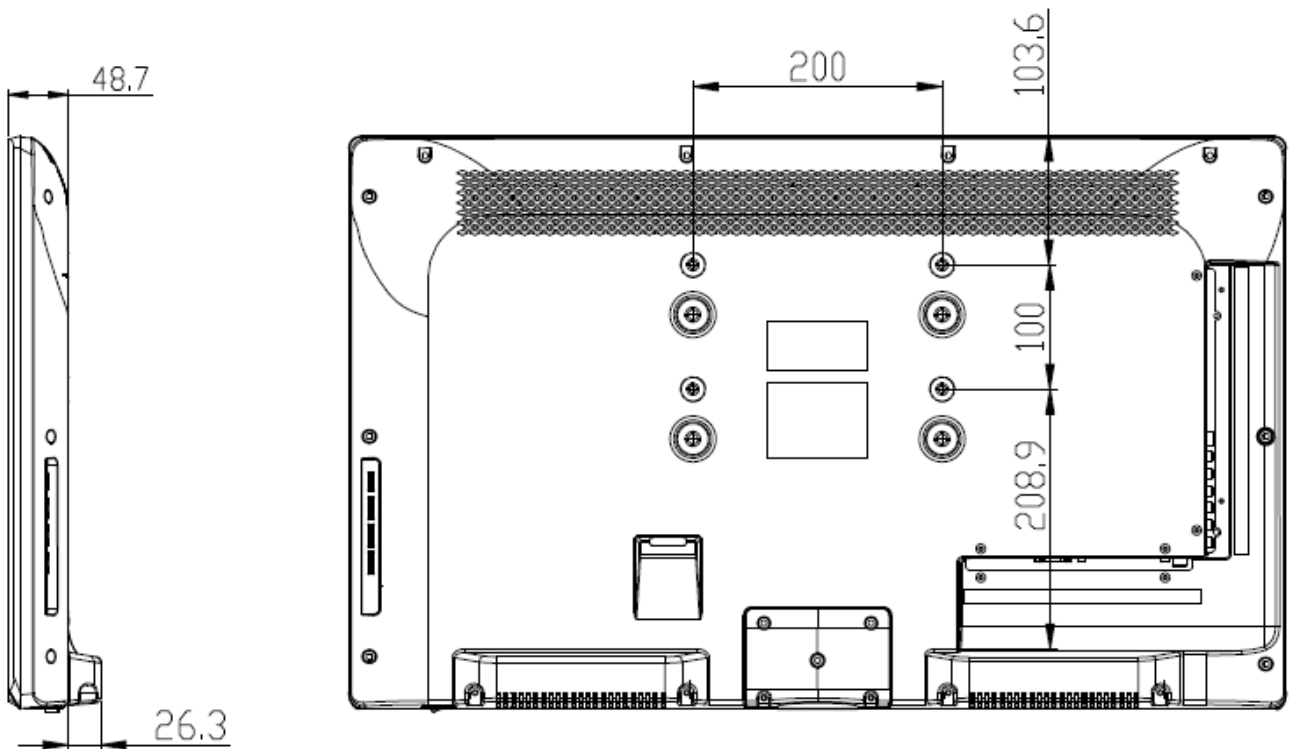**WxHxD mm**

SC-32: 807x548x118 mm
SC-42: 1073x703x142 mm

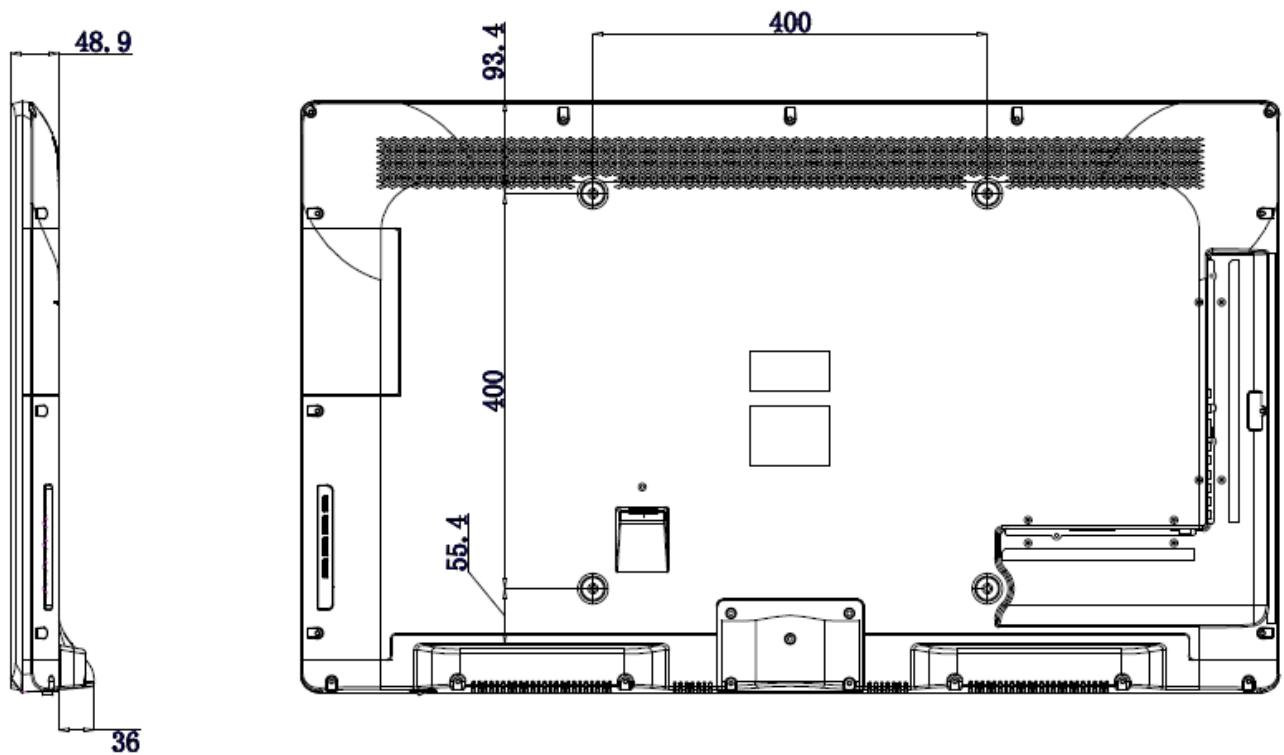# Wall mount notes:

SC-32

VESA Hole：200x100mm

To avoid interference with speaker area, please notice the dimension 208.9mm and 26.3mm as indicated in the drawing.

.

SC-42

VESA Hole：400x400mm

To avoid interference with speaker area, please notice the dimension 55.4mm and 36mm as indicated in the drawing.

Company Address: 5F-1, No. 3-1, Park Street, Nangang District, Taipei, 11503, Taiwan.

27