


Go Read assembly 1-4

1

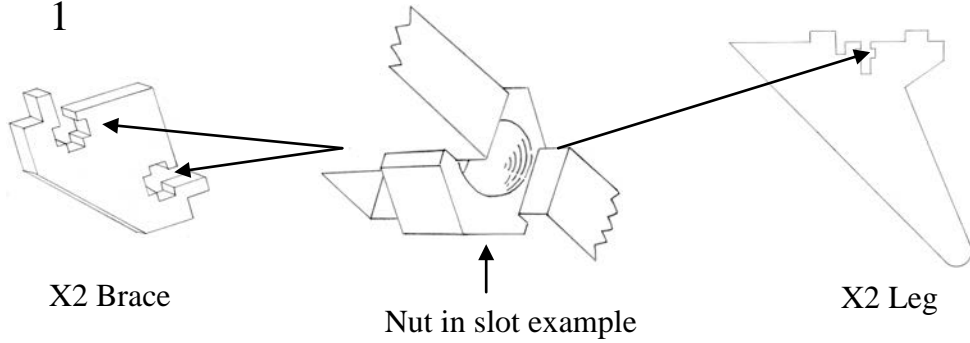

X2 Brace


Nut in slot example

X2 Leg


Slide the 6 nuts into the slots in the Brace and Legs. If tight, simple slide in from the opposite side of the component.

2

First secure the 2 X Brace to the Surface panel with the thumb screws and the nuts already fitted. Once secure slide the Front Shelf into position and secure with 2 thumb screws. Finally press the plastic Rivets into the holes.

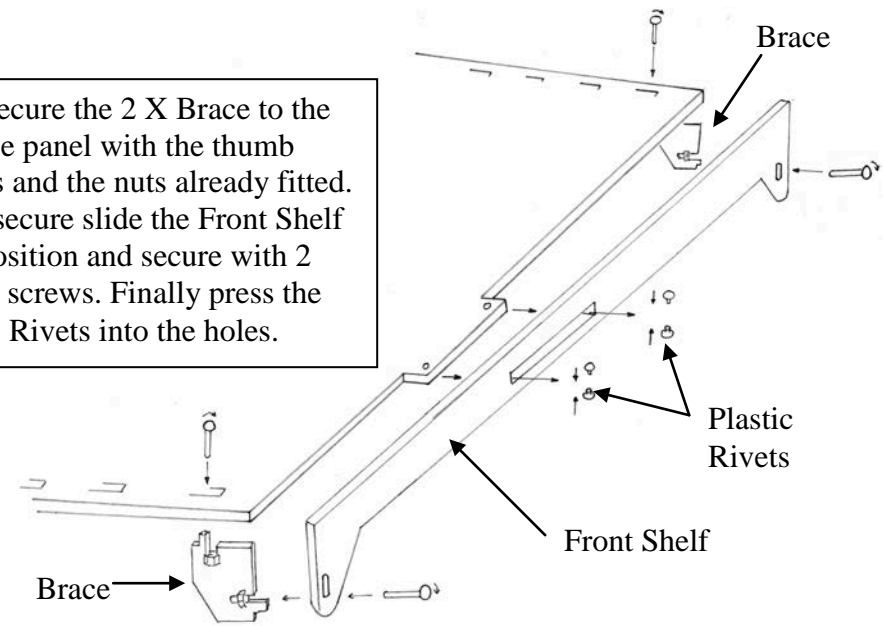


4

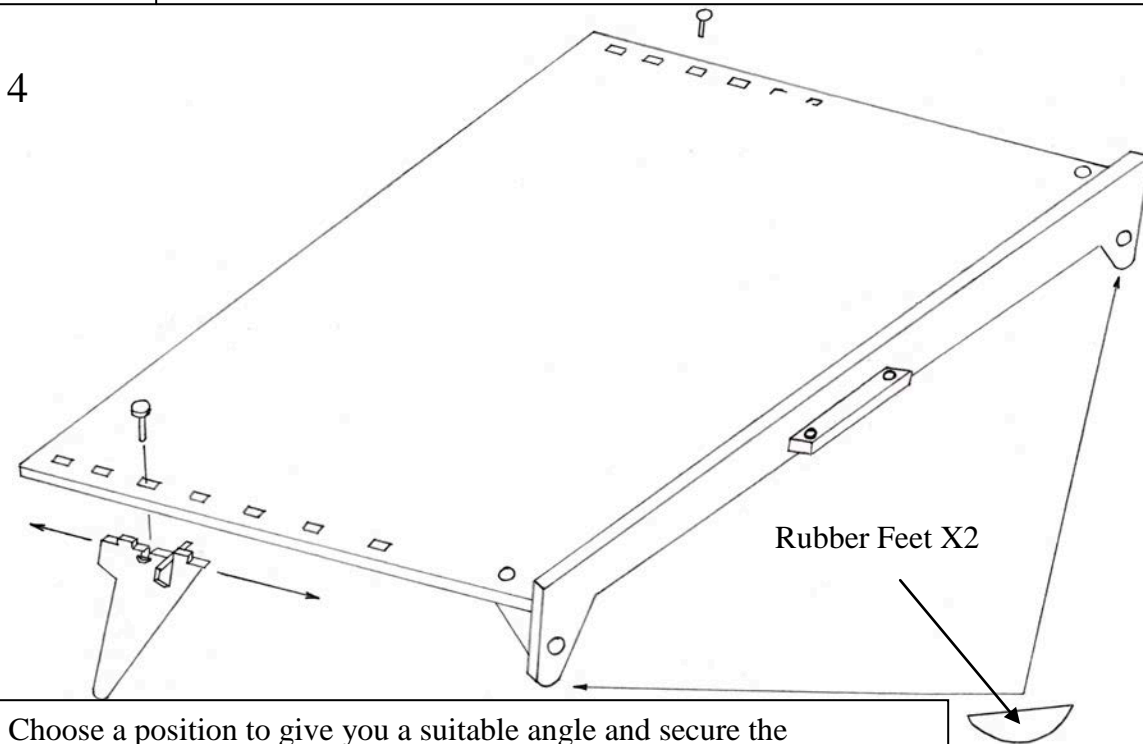

Choose a position to give you a suitable angle and secure the Leg/Saddle assemblies in position with thumb screws. Attach the 2 self adhesive rubber feet under the Front Shelf

YouTube assembly video: <https://youtu.be/tRBb7fvLkhE>

3

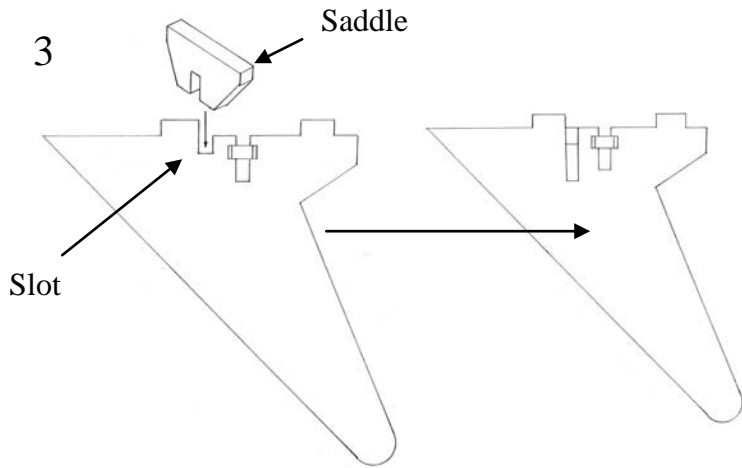

Slot

Saddle

Slide the Saddle into the slot in the 2 Legs

WARNING. Product contains small parts and not suitable for small children.