bouncepad®


LINK


Assembly Instructions

Tools Required to Fix From Above:

- Pencil
- Drill + drill bits
- 16mm Hole Saw

Sheet Code: BP-IM-074_REV2
Release Date: 08/04/2022
Copyright 2022 Spotspot Ltd. (T/A
Bouncepad) all rights reserved.
Confidential, no part of this publication
may be reproduced or transmitted in any
form without the written permission of the
copyright holder.

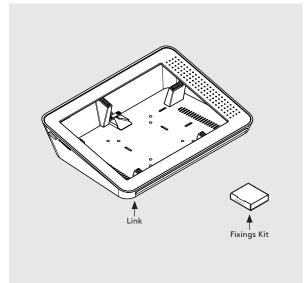


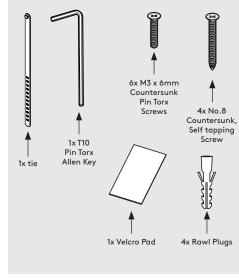





In the Box



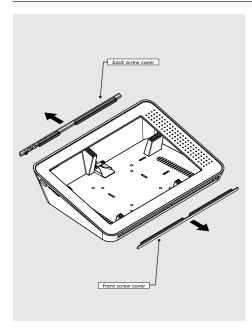

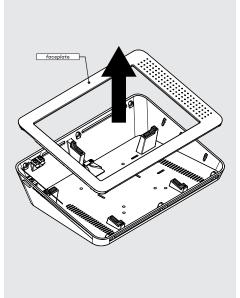

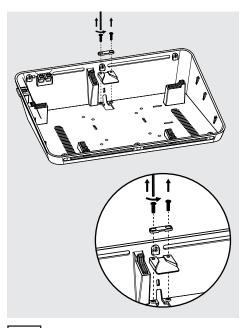


1


Remove Front and Back Screw Covers.

Remove Faceplate.


Remove Cable Lock.

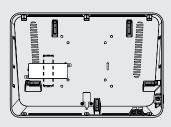


TEXAS POEGAF-Lightning-PD

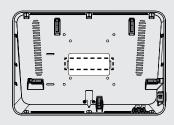


REDPARKGigabit+PoE Adapter L6-NETPOE

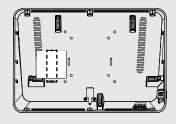



BELKIN Ethernet + Power

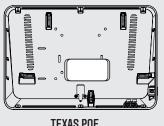

TEXAS POE GAT-USBC-PD

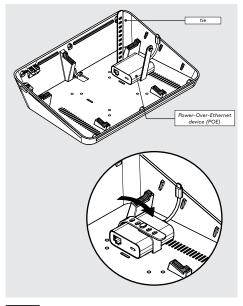

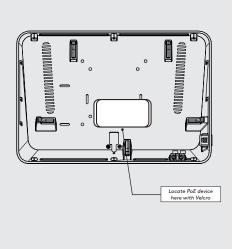


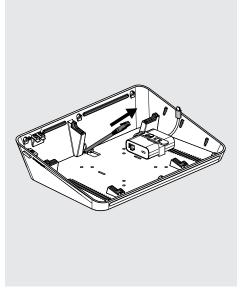



Insert the tie through the cable slots and then clasp over the POE device.

Specifically for Texas PoE GAT-USB-PD use velcro pad for attachment

7 Feed the ethernet cable through the cable exit.

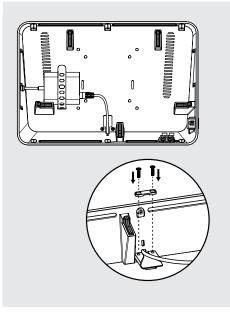

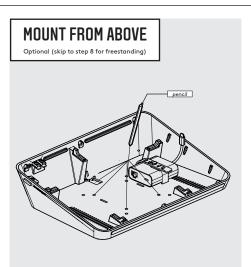


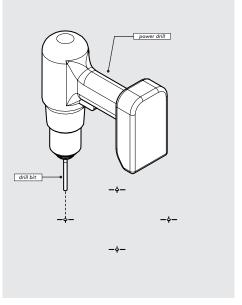

Connect the ethernet cable to the POE and secure the cable with the cable lock.


A1 Use a pencil to mark pilot hole locations.

A2 Use a drill bit suitable for your surface and make 4x pilot holes

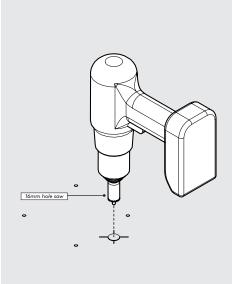


If running a ethernet or USB cable through the surface use a hole saw in the cable exit position.


A3

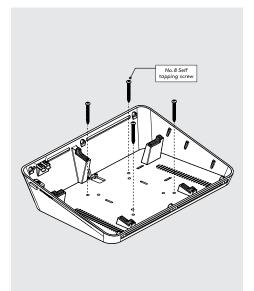



Secure the Link to the surface with 4x No.8 Self tapping screws. Rawl plugs are provided if required.

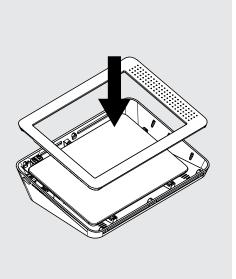

Connect the USB cable to the tablet, then place inside the enclosure. Reattach the faceplate.

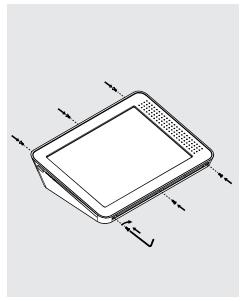

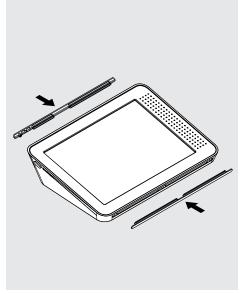

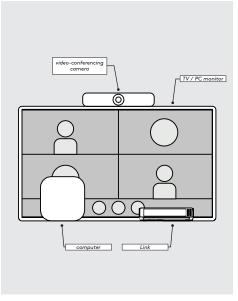

10


Use 6x M3 Screws to secure faceplate.

11

Reattach the front and back screw covers

12

Set up the video-conferencing software and peripherals as per the provider's instructions.

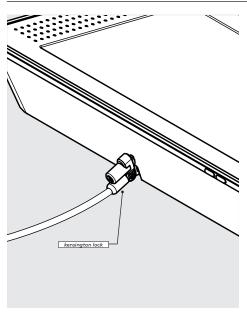

13

For additional security, tether your Link with a Kensington security cable. *Security cable not provided.