

Original Floorstanding + Brother Printer Mount

Assembly Instructions






Tools Required:

- Socket Driver
- 10mm Spanner **or adjustable spanner*

Sheet Code: BP-IM-057_REV3




Release Date: 14/05/2025

Copyright 2025 SpotSpot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.

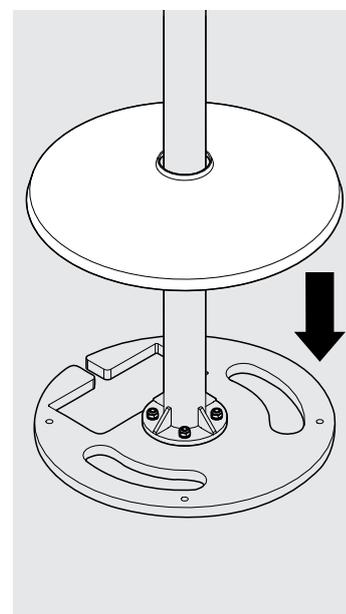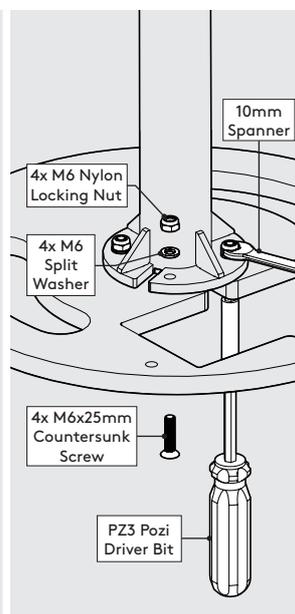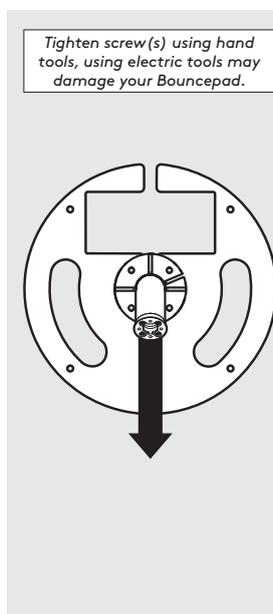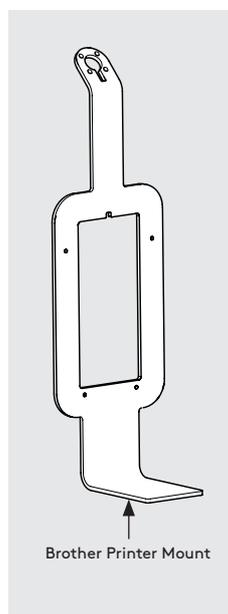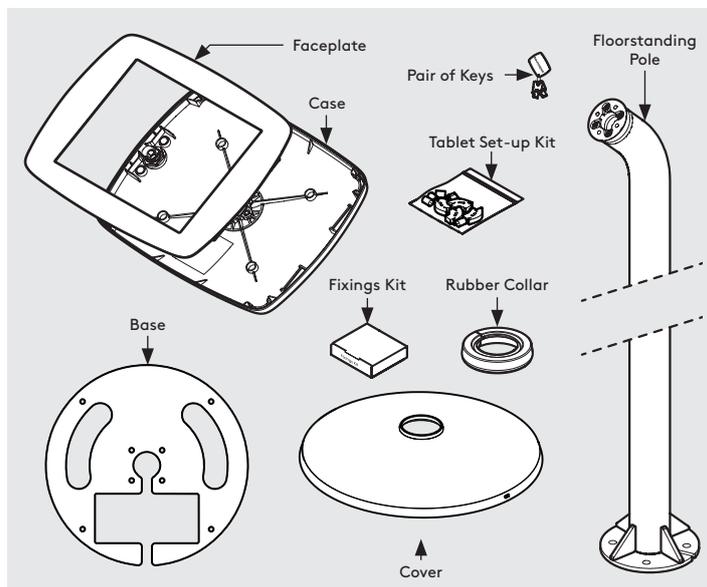

1 Orientate, locate & secure the Floorstanding Pole to the Base as shown. Ensure that all fixings are installed correctly.

2 Locate the Cover over the Floorstanding Pole.

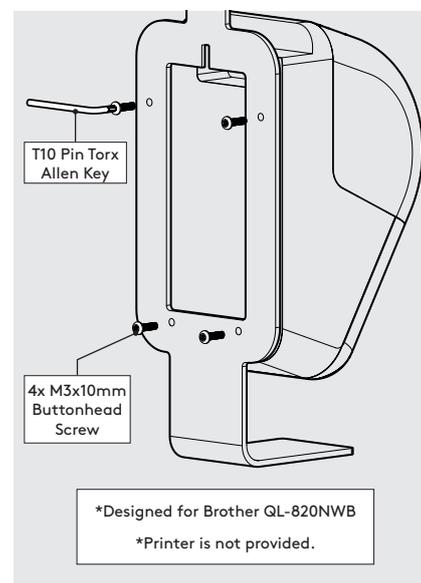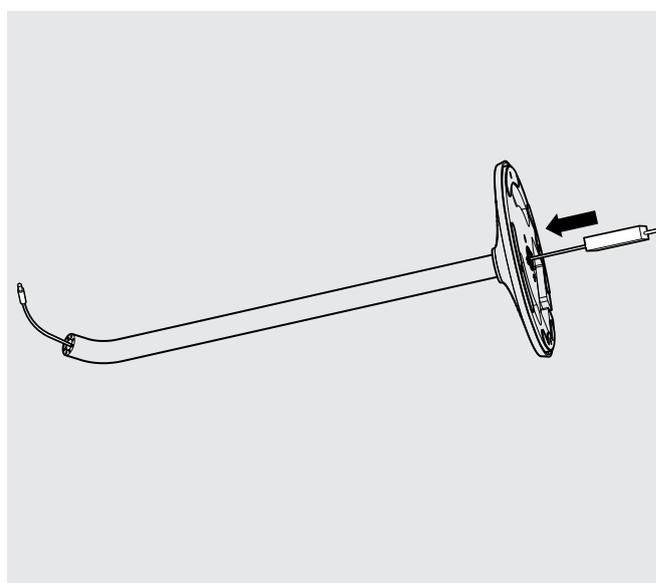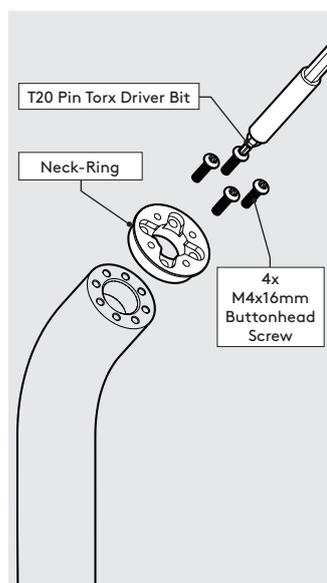


3 Remove Neck-Ring using T20 driver bit & Socket Driver.


4 Feed the Printer's Power Cable through the Floorstanding Pole.

5 Attach the Printer to the Printer Mount using M3x10mm Screws


*Designed for Brother QL-820NWB
*Printer is not provided.

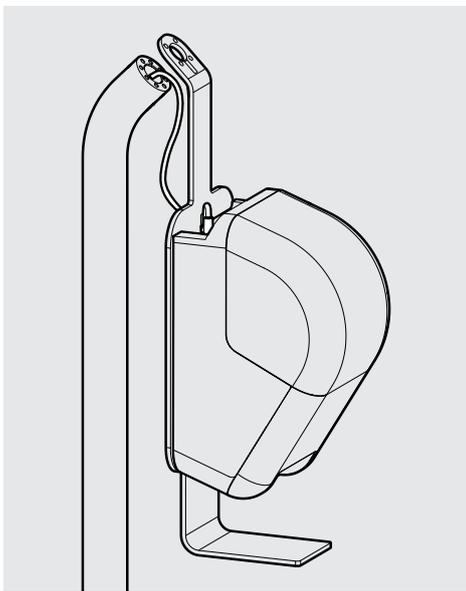


6 Feed Printer's Power Cable through Printer Mount & plug into the Printer.

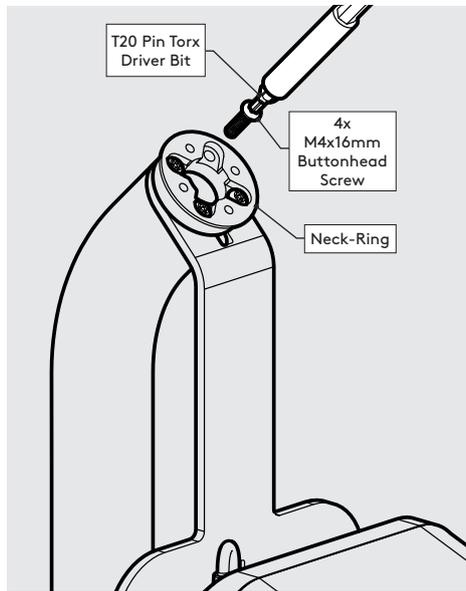


7 Re-attach Neck-Ring using the same Fixings.

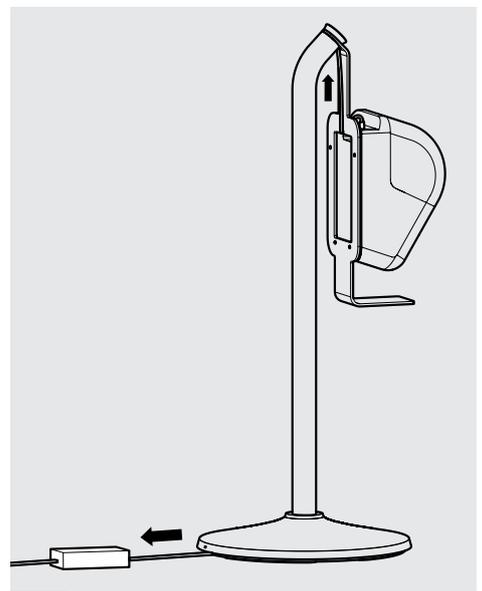


8 Pull Printer's Power Cable back to remove any slack near the Printer Mount.

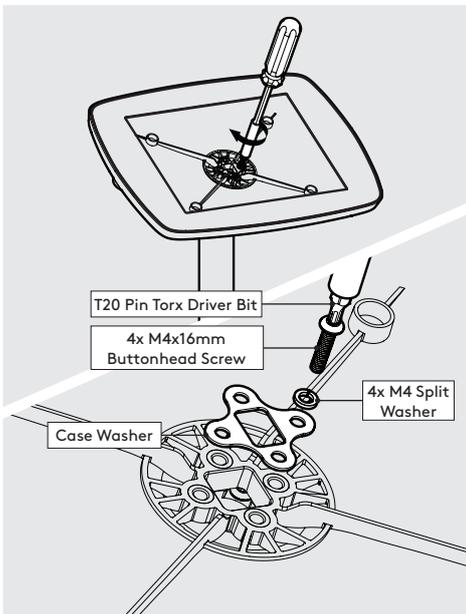


9 Locate & secure the Case onto the Floorstanding Pole as shown. Tighten by hand.

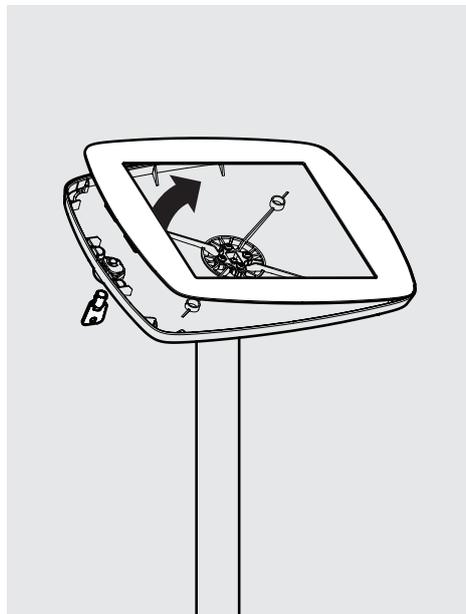


10 Unlock & remove the Faceplate from the Case.

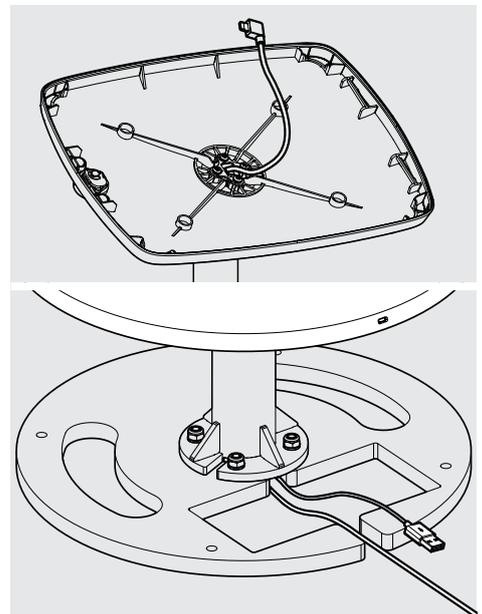


11 Feed the Tablet's Power Cable through the Case & Floorstanding Pole.

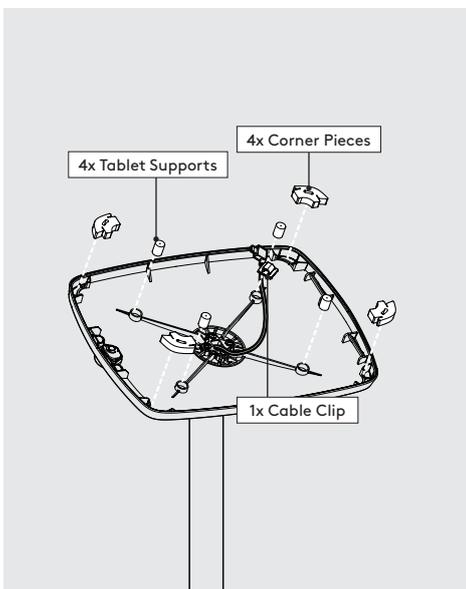


12 Install the Tablet Setup Kit. Each kit is specific per Tablet & Case.

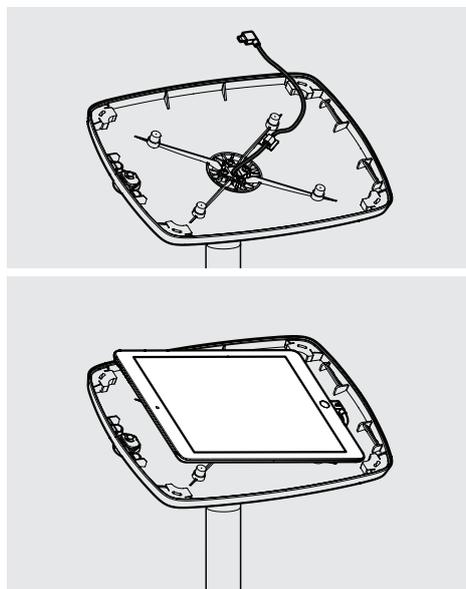


13 Install the Tablet into the Case & connect to Power Cable.

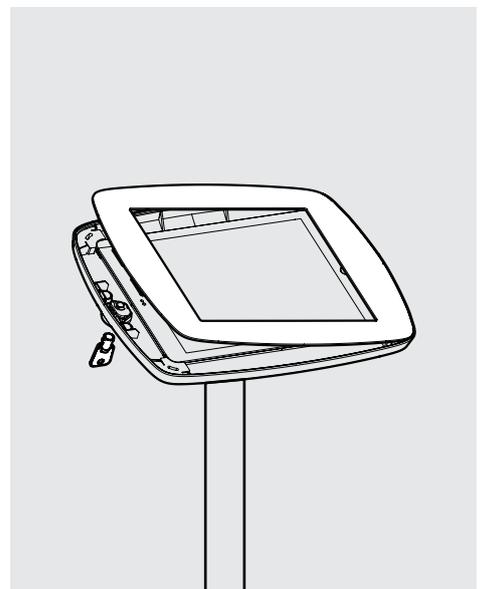


14 Locate and lock the Faceplate onto the Case.

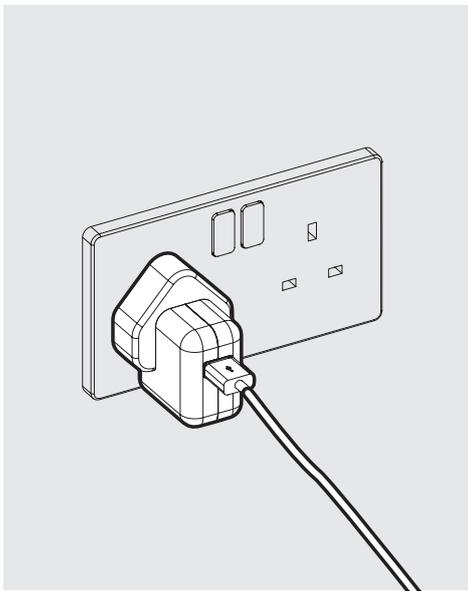


15.1 Connect the Power Cables to a mains power source.

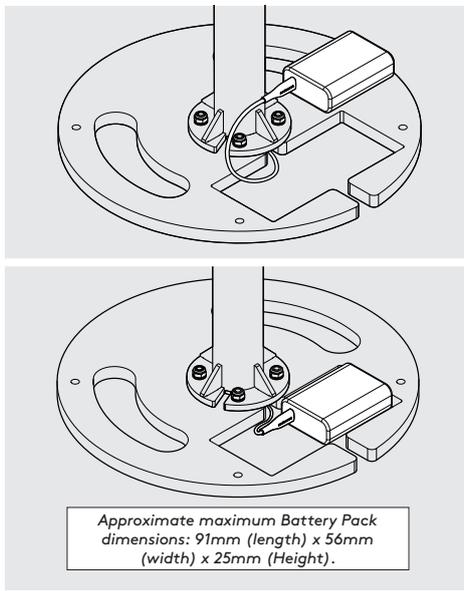


15.2 If installing a Battery Pack, connect the Tablet's Power Cable & locate into the Base.

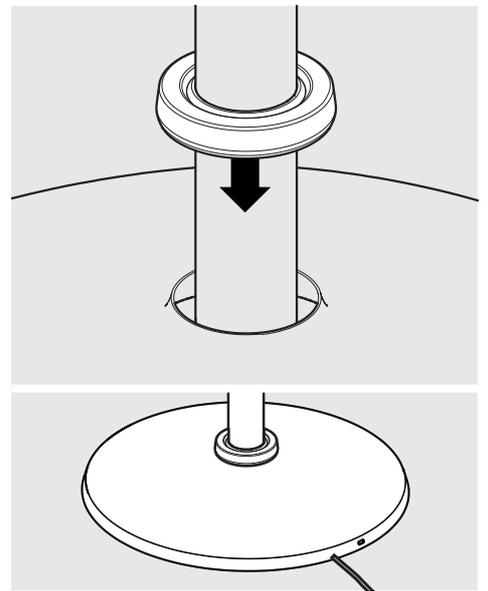

16 With the Cover on the ground, locate and fit the Rubber Collar.

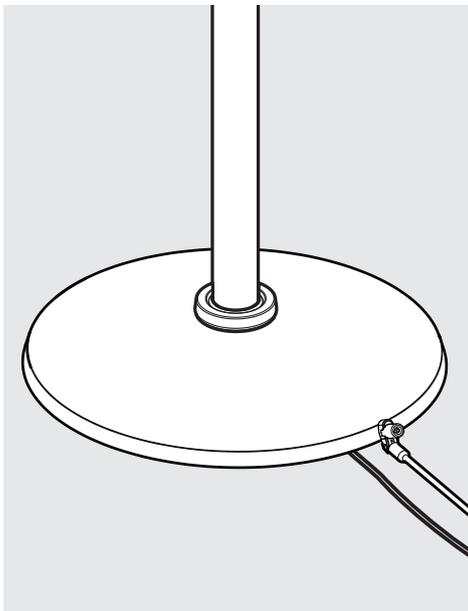

17 Use a Kensington® Microsaver product to tether to a secure object. (refer to your Kensington® instructions for full details)

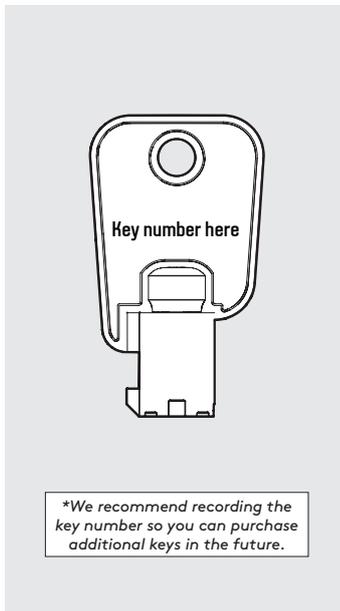

18 Installation is now complete.




Branding Mount

Assembly Instructions

Follow these instructions for the successful assembly of your Branding board to your Floorstanding.

Sheet Code: BP-OR-IM-011_REV2
Release Date: 01/04/2019

Copyright 2016 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.

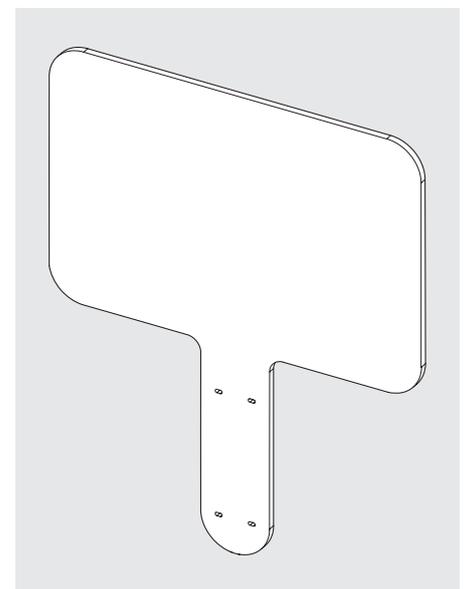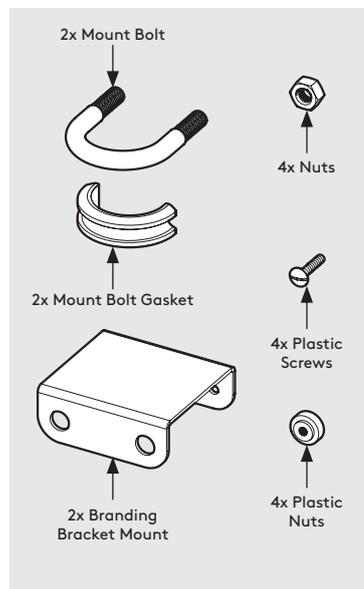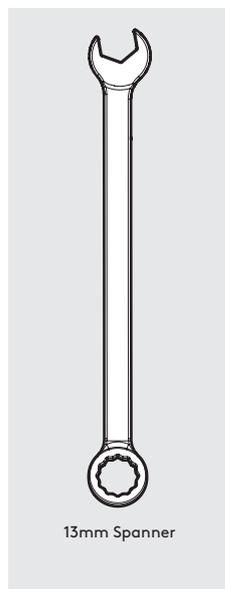

0


Tools required

0

Branding Mount - In the Box


A1

Follow 'A' steps if installing a Placard board

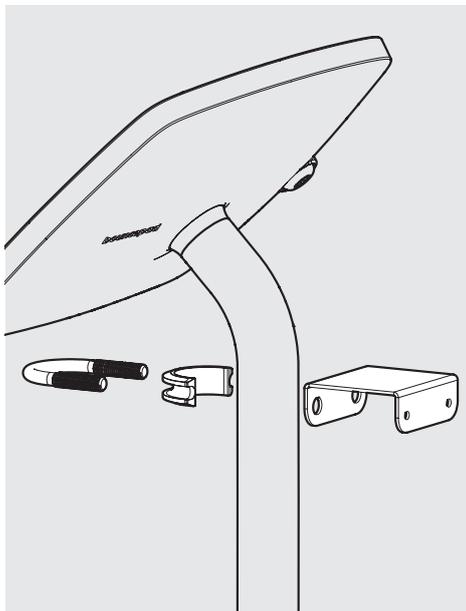


A2

Locate the top Bracket Mount & Mount Bolt to Floorstanding pole.

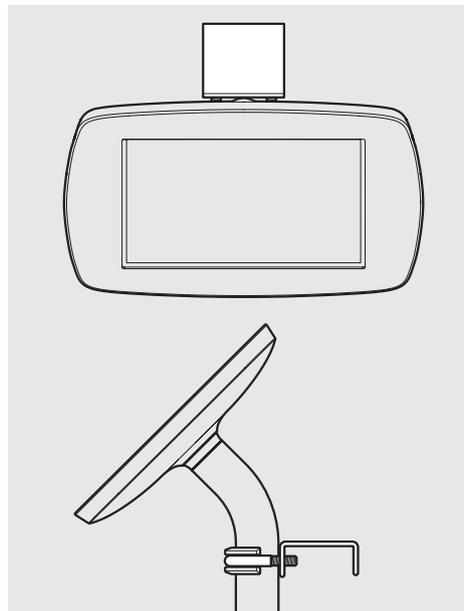


A3

Ensure that the Bracket Mount & Mount Bolt are positioned correctly as shown.

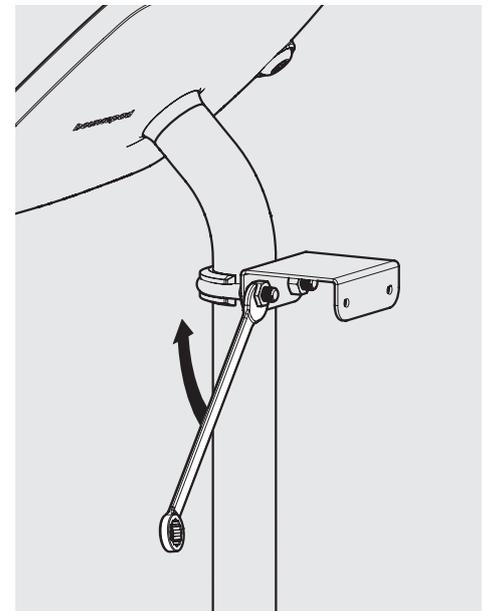


A4

Secure the Bracket Mount & Mount Bolt to the Floorstanding Pole with the supplied Nuts. Tighten evenly.

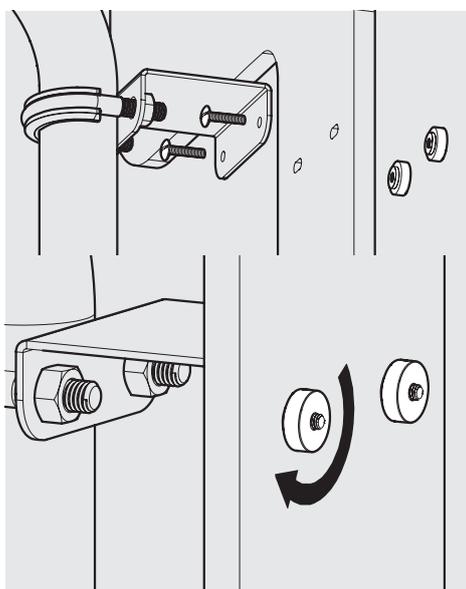


A5

Locate the Placard Board to the Bracket Mount. Secure with the supplied Plastic Screws & Nuts.

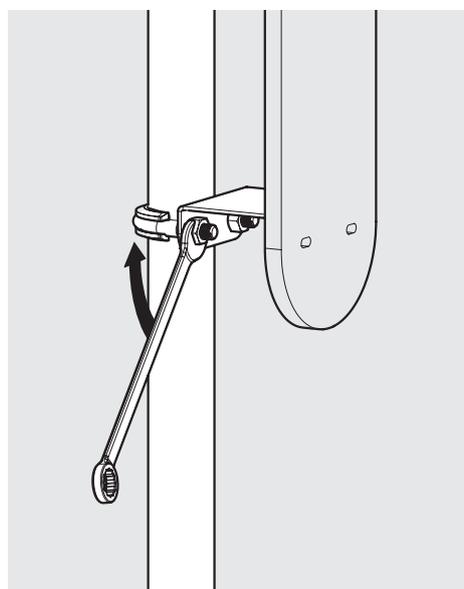


A6

Locate & secure the bottom Bracket Mount & Mount Bolt. Tighten the nuts evenly.

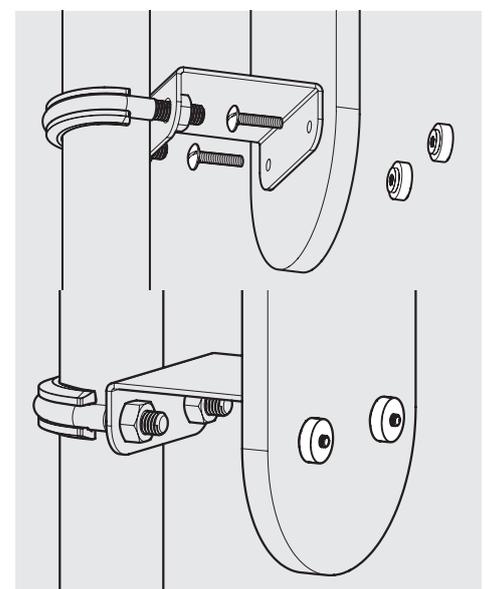


A7


Secure the bottom section of the Placard Board with the Plastic Screws & Nuts. Installation now complete.

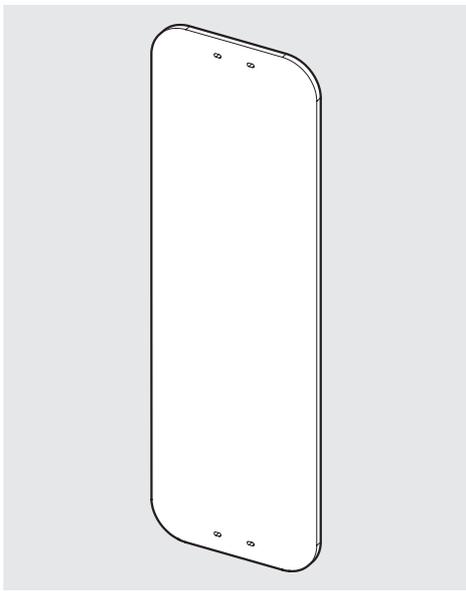


B1 Follow 'B' if installing a Front Board

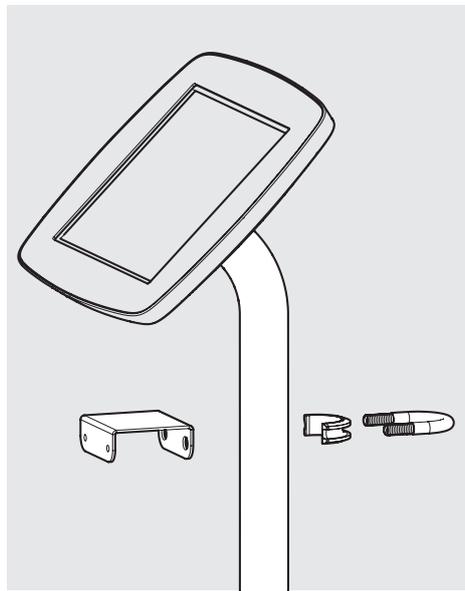


B2 Locate the top Bracket Mount & Mount Bolt to the Floorstanding pole.

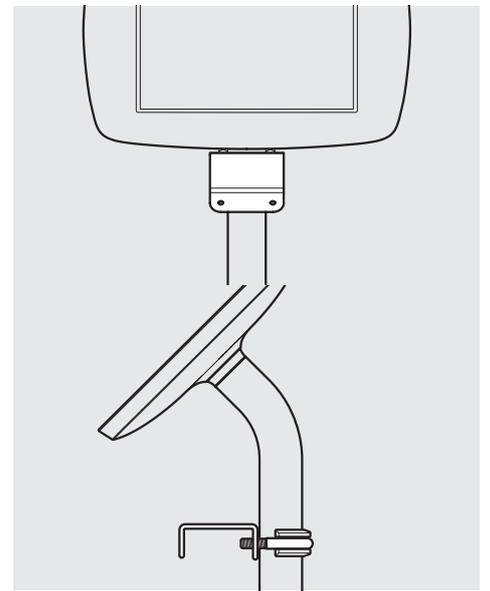


B3 Ensure the Bracket Mount & Mount Bolt are positioned correctly as shown.

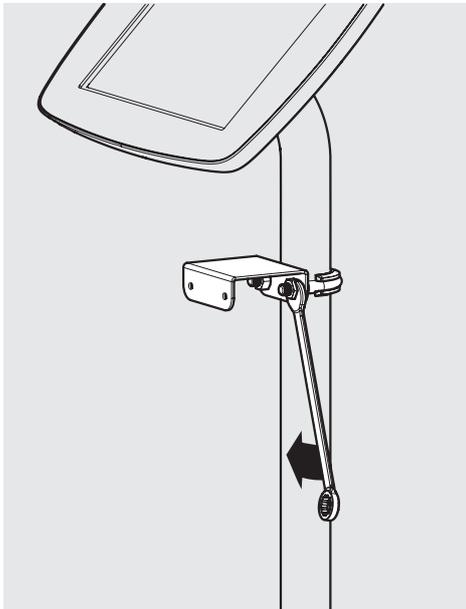


B4 Secure the Bracket Mount & Mount Bolt to the Floorstanding Pole with the supplied Nuts. Tighten evenly.

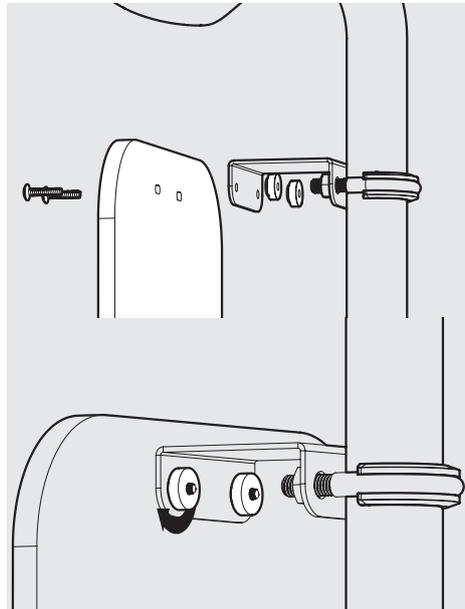

B5 Locate the Front Board to the Bracket Mount. Secure with the supplied Plastic Screws & Nuts.

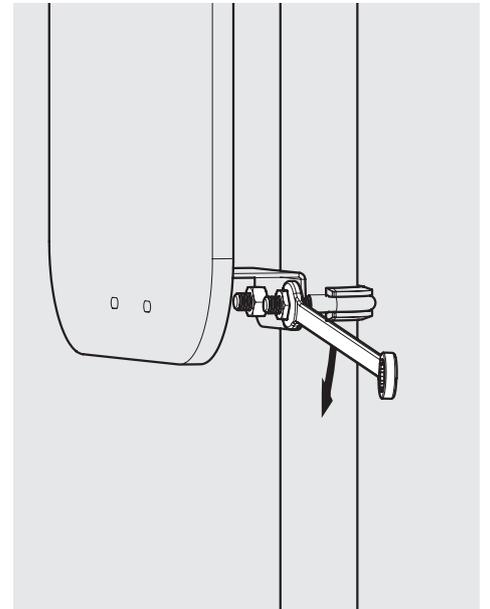

B6 Locate & secure the bottom Bracket Mount & Mount Bolt. Tighten the nuts evenly.

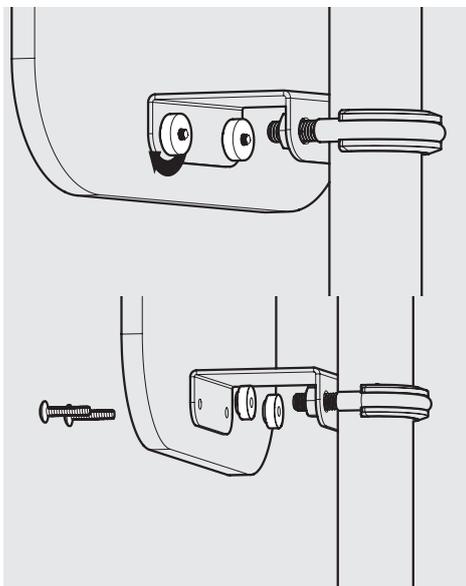

B7 Secure the bottom section of the Front Board with the Plastic Screws & Nuts. Installation now complete.