

USER'S MANUAL



UNIVERSAL SECURITY NOTEBOOK LOCK

RESET COMBINATION



1. Reset combination from 0-0-0-0.
2. Press down the Reset Button and turn 90° counterclockwise to set your own combination.
3. Turn the Reset Button 90° clockwise back to its original position.

Keep your combination in a safe and accessible place for future reference.

SECURE SPACER OPTIONS

Add the Secure spacer on the lock to fit the slot firmly.



Standard Slot

Secure spacer 1
(Thickness: 0.6 mm)



Nano Slot

Secure spacer 2
(Thickness: 1.0 mm)




Noble Slot

Secure spacer 3
(Thickness: 2.0 mm)


LOCK

1

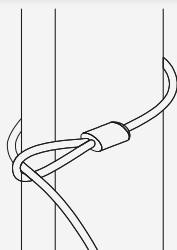

Wrap your cable around an immovable object, by crossing the lock body, through the loop, on the opposite end of the cable.


2

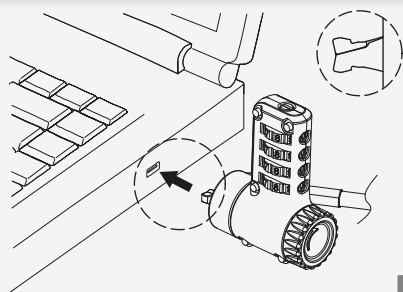

Insert the locking tip into the slot.


⚠ Before any operation, make sure the knob is in the original position.

3

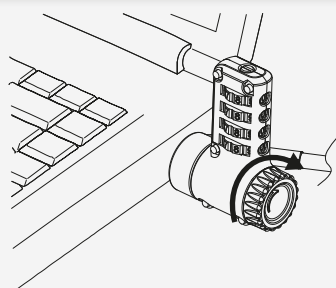


Turn the knob clockwise to its limit to make sure the tips are fully expanded.

4

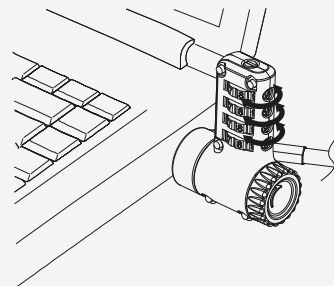


Scramble the dials to lock the device.

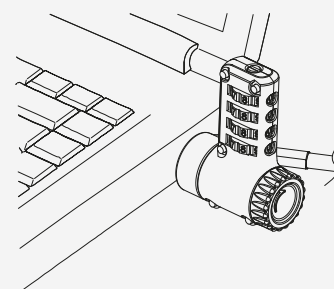


UNLOCK

1

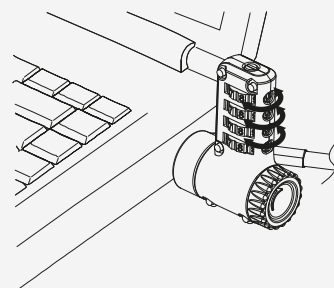


Turn the dials to the combination you set.

2

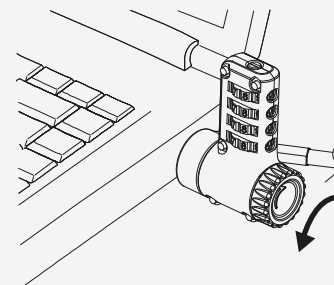

Turn the knob counterclockwise back to the original position.

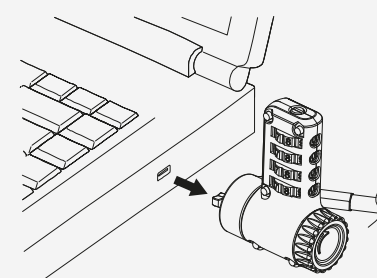

WWW.TECHLY.COM

RIPRISTINO COMBINAZIONE



1. Ripristinare la combinazione da 0-0-0-0.
2. Premere il tasto Reset con un cacciavite e ruotare di 90° in senso antiorario per impostare la combinazione desiderata.
3. Ruotare nuovamente di 90° in senso orario il tasto reset per ritornare nella posizione originale.

Tenere la combinazione in un posto sicuro e accessibile per esigenze future.

OPZIONI DI SPAZIO DI SICUREZZA

Aggiungere lo spazio di sicurezza sul lucchetto per bloccarlo in modo fermo allo slot.



Standard Slot

Spazio di sicurezza 1
(spessore: 0.6mm)



Nano Slot

Spazio di sicurezza 2
(spessore: 1.0mm)




Noble Slot

Spazio di sicurezza 3
(spessore: 2.0mm)


BLOCCAGGIO

1

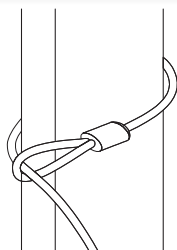

Avvolgere il cavo attorno ad un oggetto fisso, facendo scorrere il corpo del lucchetto attraverso il cappio presente nell'altra terminazione del cavo.


2

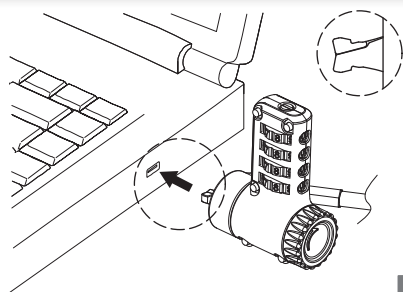

Inserire la punta di blocco nello slot.


⚠ Prima di qualsiasi operazione assicurarsi che il pomello sia nella posizione originale.

3

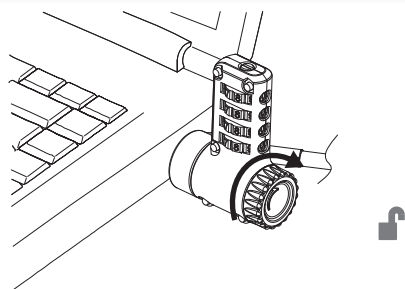


Ruotare il pomello in senso orario fino al limite consentito per assicurarsi che le punte siano completamente espanse.

4

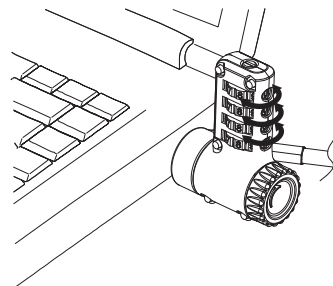


Rimescolare la combinazione per bloccare il dispositivo.

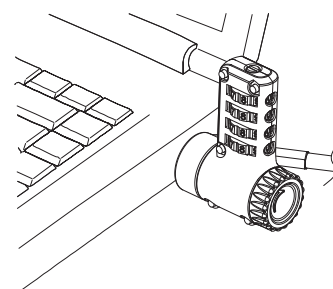


SBLOCCAGGIO

1

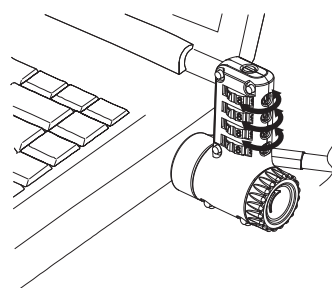

Ruotare i numeri fino ad ottenere la combinazione impostata.

2

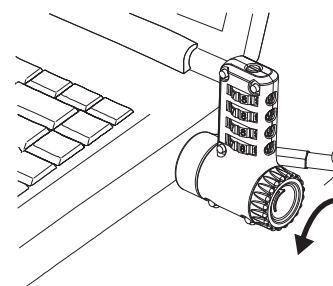

Ruotare il pomello in senso antiorario per ritornare alla posizione originale.

