bouncepad®

Original Twist

Assembly Instructions

Tools Required:

- Pencil
- Electric Drill

7mm Spanner *or adjustable spanne
 5.0mm Drillbit *if fixing from belance


2.5mm Drillbit *if fixing from above

16mm *if routing the tablet cable through your mounting surface


Socket Driver

Sheet Code: BP-IM-101_REV0
Release Date: 01/02/2025


Copyright 2025 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Confidential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.

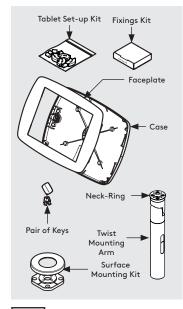



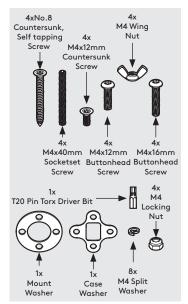





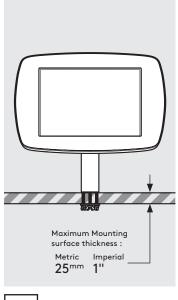


A Fol


Follow steps A if "Fixing from below".

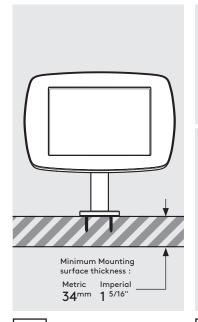




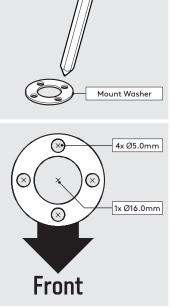


Using the Mount Washer, mark the drill hole locations as shown.

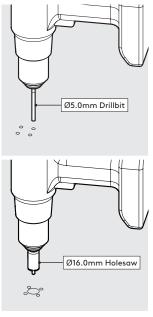

A2 Drill each hole - using the specified drill size.

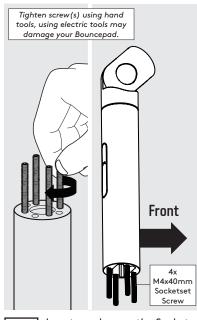


Locate and screw the Socket Screws into the Twist as shown.

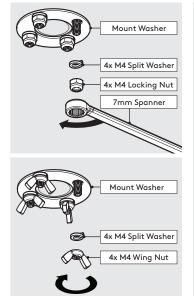



A4 Secure the Twist to the surface. Locking Nuts offer higher security.






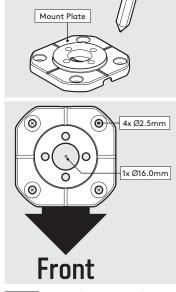





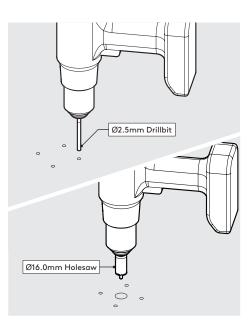


B2 Drill each hole - using the specified drill sizes.

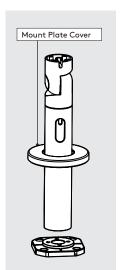

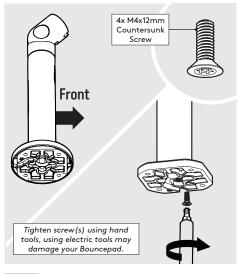

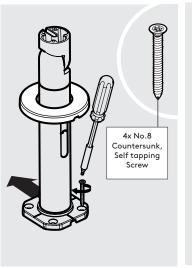

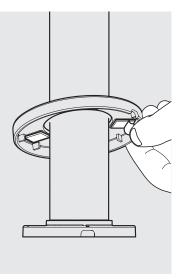


Locate the **B3** Cover onto the Twist.


Join the Twist & Mount Plate in the orientation shown.

Secure the Twist to the **B5** surface with the 4x Countersunk Fixings.


Adhere the Mount Cover **B6** onto the Mount Plate with the adhesive tabs.

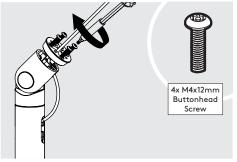


Feed Cable through Neck-Ring & cable channel. Use 4 x M4x12mm Buttonhead Screws to attach Neck-Ring.

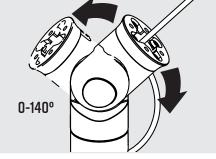

Feed Cable through channel. Test 2 rotate & tilt to ensure enough cable slack through the full range of tilt.

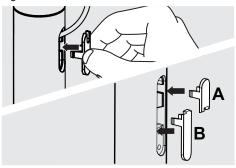


Fit cable all Cable Covers. Fit cover 'B' before cover 'A'.

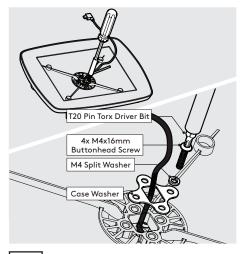

Locate and attach the Case to the Twist as shown.




Unlock & remove the Faceplate from 5 the Case.

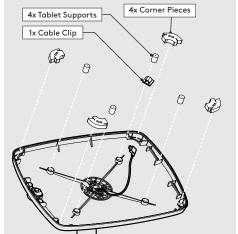

Install the Tablet Setup Kit. Each kit is specific per Tablet & Case.



Place the Tablet into the Case and connect to power.

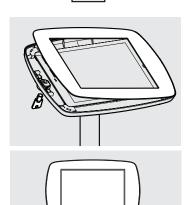

Locate & lock the Faceplate onto the Case.

8



Installation is now complete.