


# Installation Guide

## Installation Guide for QSR KIOSK





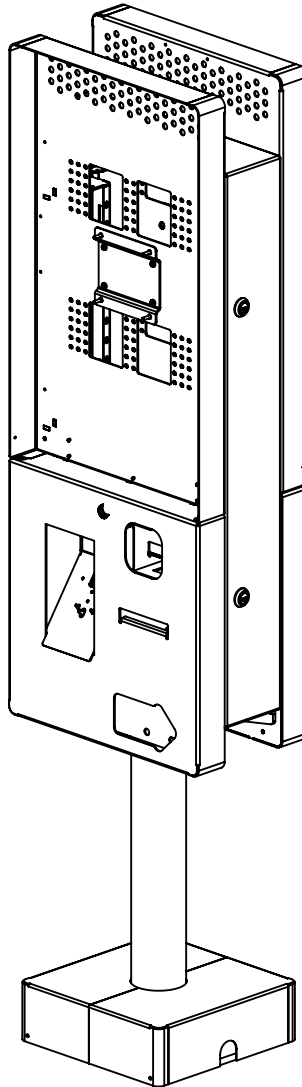




## CAUTION


- Please ensure that you read and understand the content of the installation guide before you begin the installation process.
- This product must be installed by a professional installer.
- This product is intended for indoor use only.
- It is the responsibility of the installer to use the appropriate fixings for the specific installation location. Please follow the fixing suppliers recommendations for installation. The fixings should be thread size M10 with steel grade 8.8 or better (min. yield strength of 600 N/mm<sup>2</sup>).
- Do not overtighten the fixings.
- This solution is designed for certified hardware and accessories. Always follow the installation guide from the hardware manufacturer for correct installation.
- Please don't power the hardware, until the entire solution is fully assembled.
- If these installation instructions are not followed precisely, it could lead to product failure and potential personal injury.
- Ergonomic Solutions / SpacePole inc. cannot be held responsible for any product failure or personal injury, if the installation instructions are not followed correctly.
- Ergonomic Solutions / SpacePole inc. cannot be held responsible for any product failure or personal injury, if any modifications have been made to the product by the customer.

## Tool list

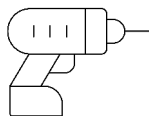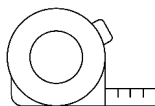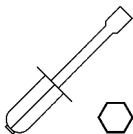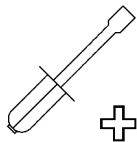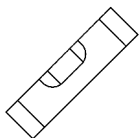


## Box content


**Note:** The product design may vary from the illustrations shown.

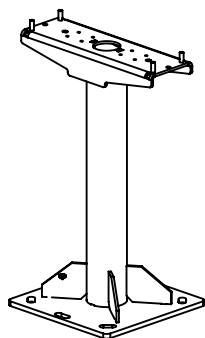


1x (A)

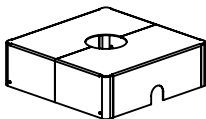


1x (B)

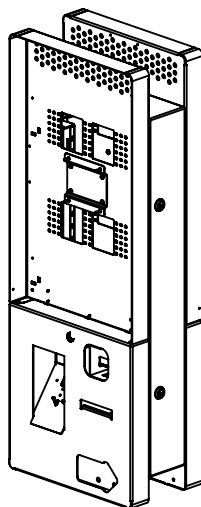

1x (C)

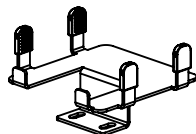

1x (D)

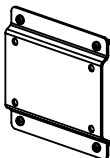



1x (E)



2x (F)



# Dimensions [mm]

Double version

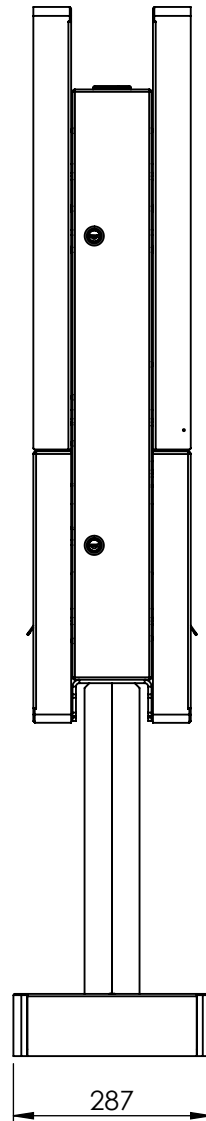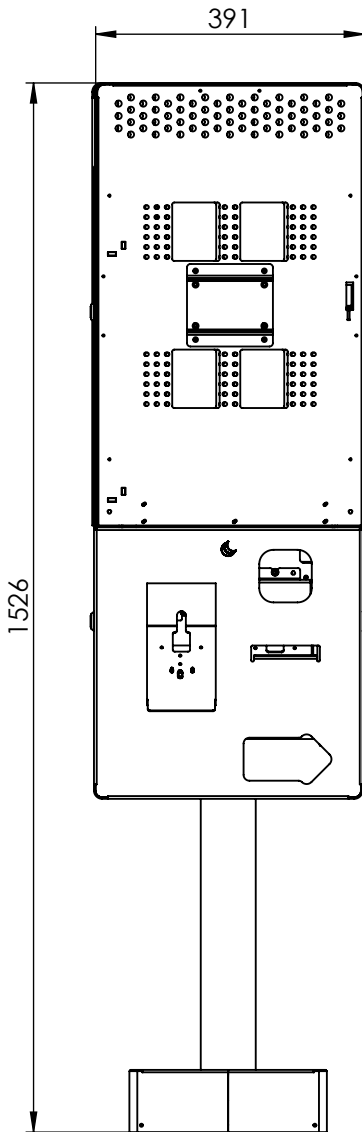

# Dimensions [mm]



Single version

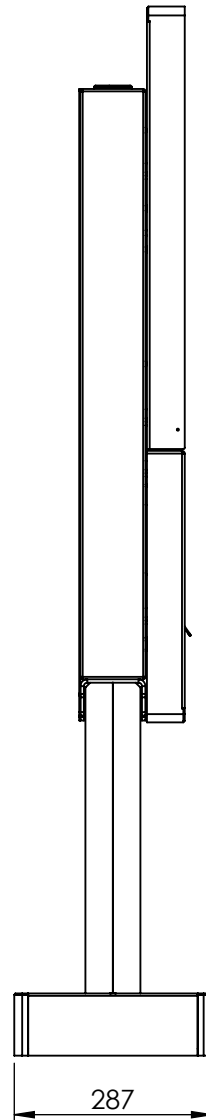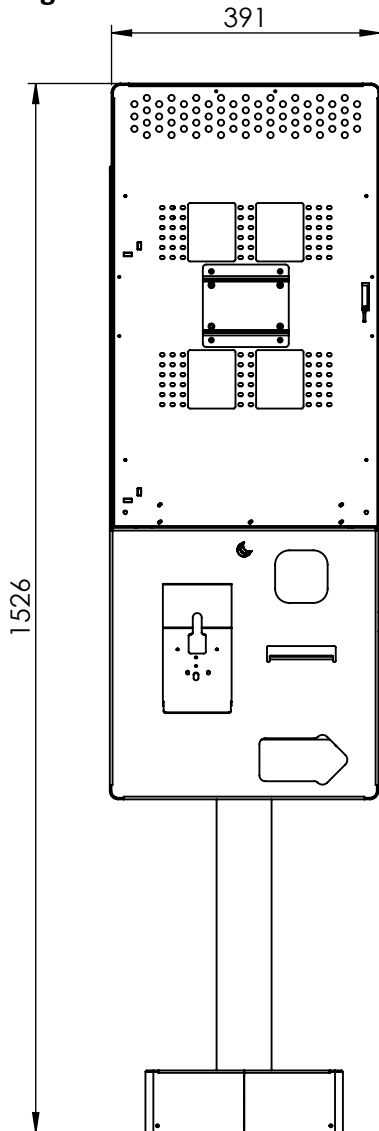

# Steps

## Step 1:


Place the floor stand **part A** in the desired installation location. Secure it to the floor using appropriate floor anchors or fasteners (not supplied). Verify that the stand is level before and after tightening the fasteners to ensure no movement has occurred during installation. Confirm that the floor stand is securely fixed, stable, and ready for the next assembly steps.

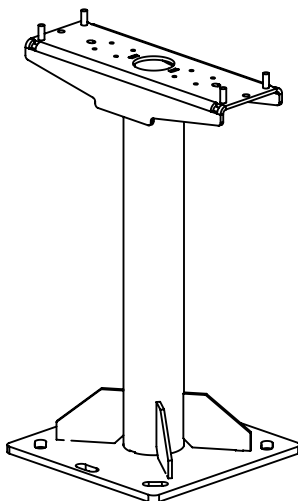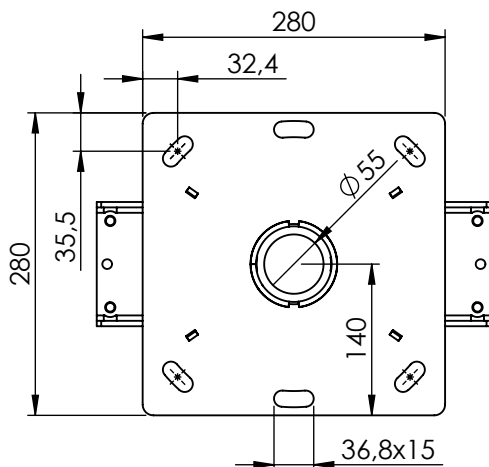

# Steps

## Step 2:


Open the enclosure **part C** using the included keys **part F**. Carefully place the enclosure onto the pre-installed floor pole. Ensure that the mounting holes in the enclosure align with the threaded studs. Secure the enclosure with 4 × M8 nuts, tightening one nut at each corner.

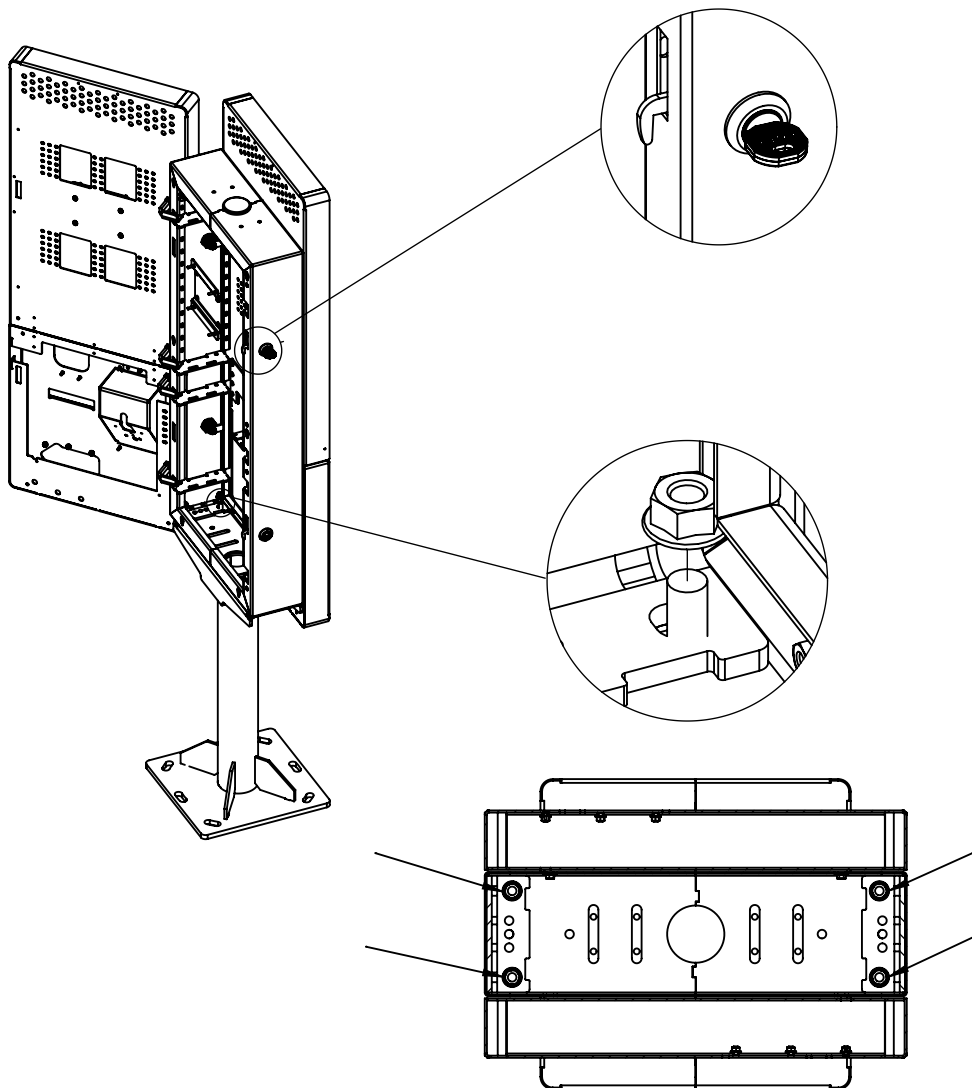

# Steps

## Step 3:


Position each printer bracket **part E** at the designated mounting points. Align the brackets precisely to ensure correct printer orientation and support. Insert and tighten the two screws per bracket

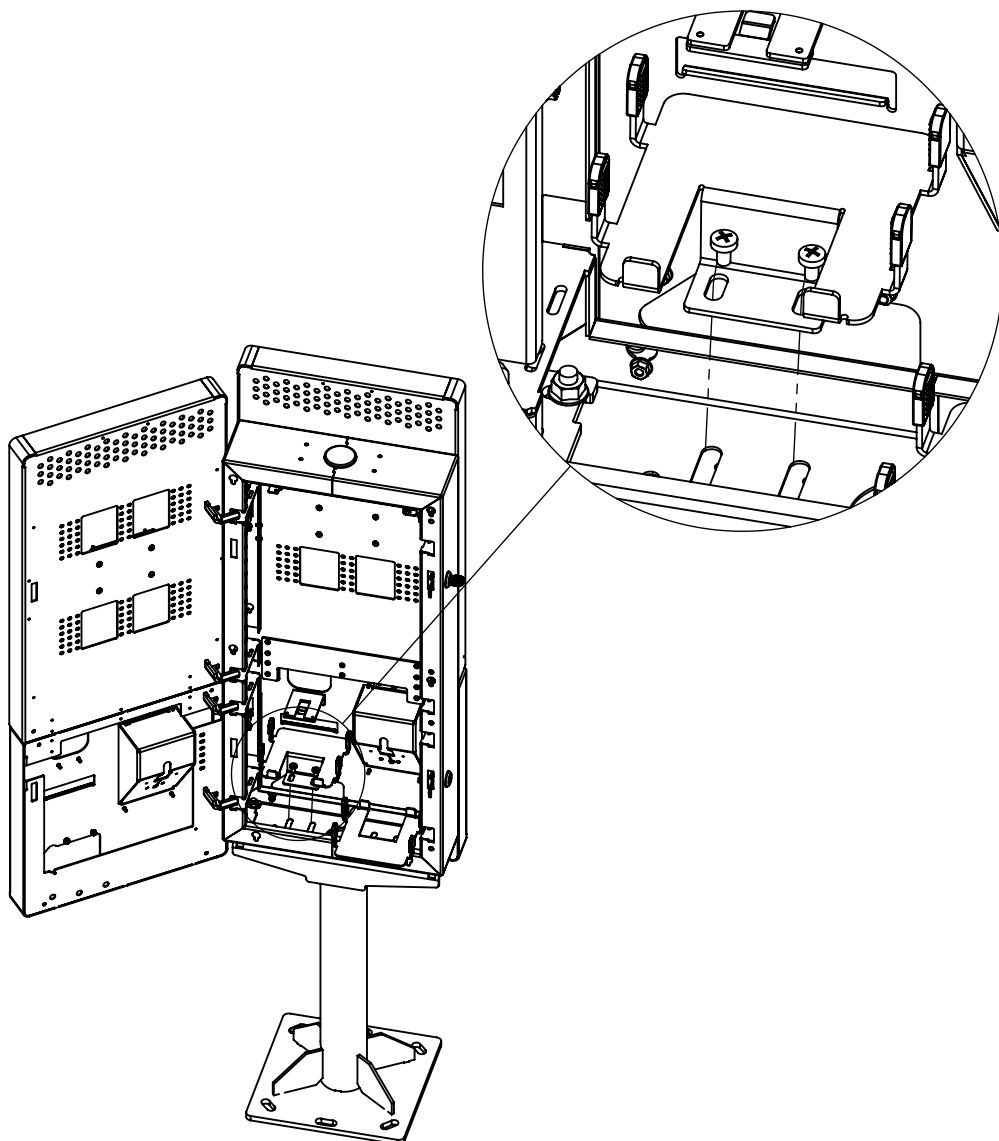

# Steps

## Step 4:


Place the MultiGrip plate (must be ordered separately) onto its designated mounting surface. Ensure it is correctly aligned with the mounting holes. Secure the MultiGrip plate by inserting the screws into the mounting holes and tightening them securely.

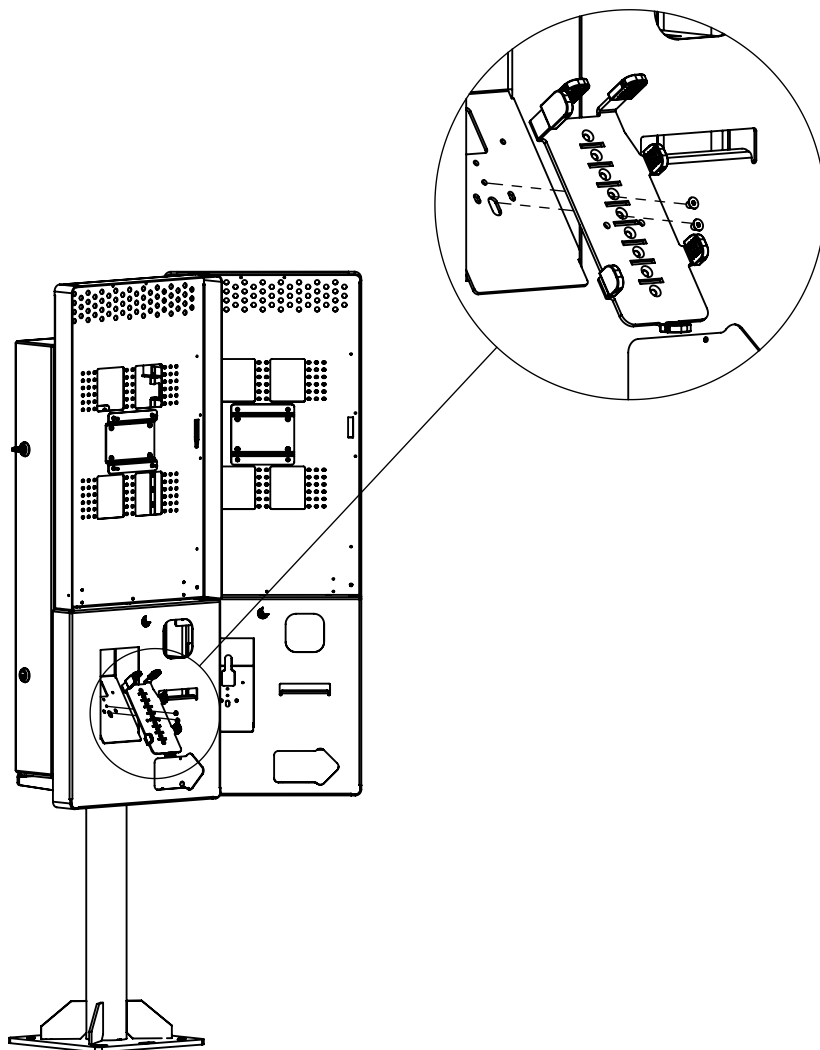

# Steps

## Step 5:


Carefully lower the printer onto the mounted brackets. Verify that the printer is seated securely and evenly across both brackets.

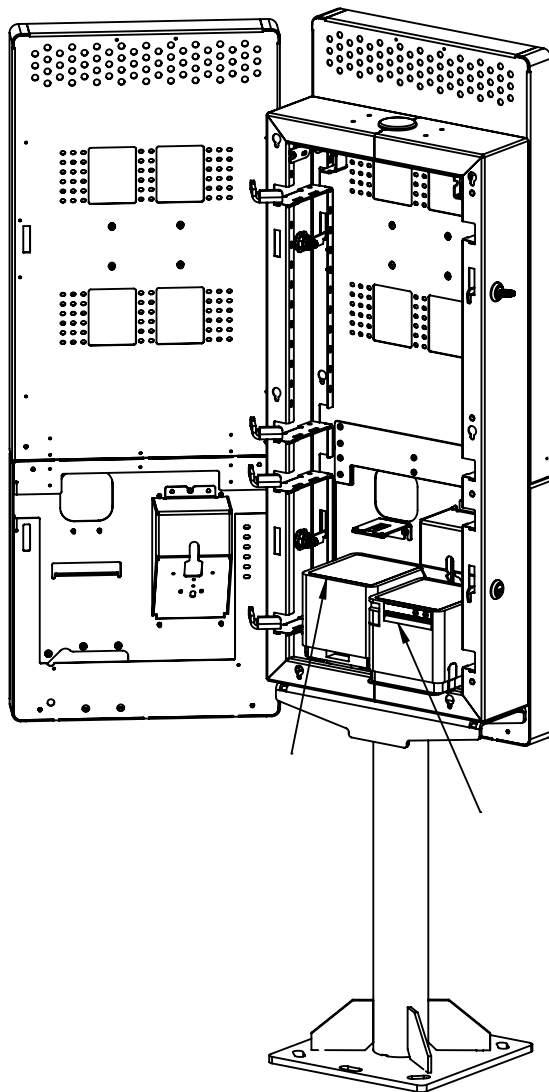

# Steps

## Step 6:


Secure the bracket **part F** to the back of the screen using 4 × M4 screws

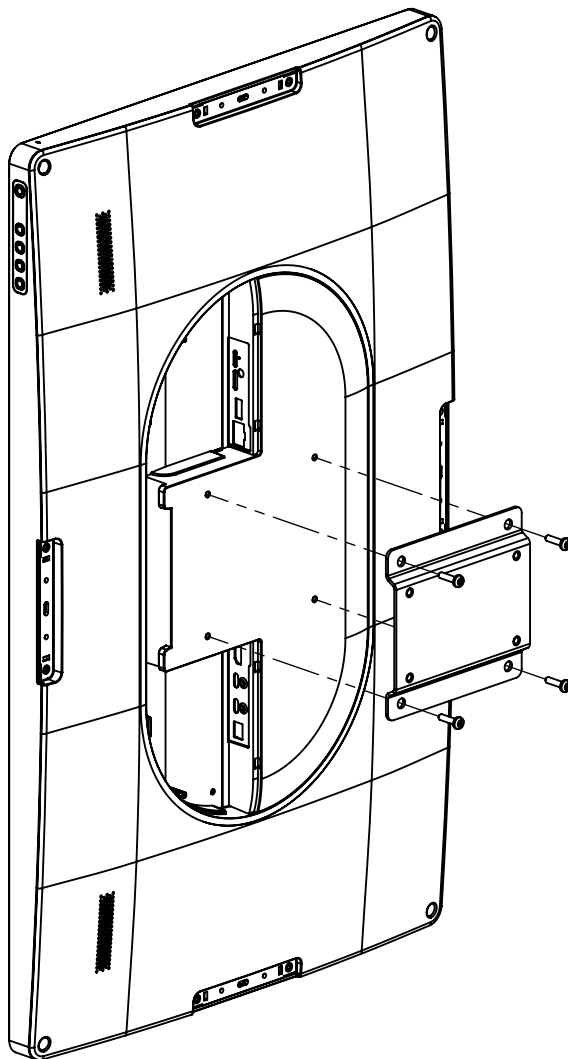

# Steps

## Step 7:


Position the screen on the designated mounting area of the door. Ensure the screen is correctly oriented and centered. Secure the screen using 4 x M5 screws. Confirm that the screen is firmly mounted. While monitoring the cable, gently close the door to ensure it moves freely without compressing or straining the cable.

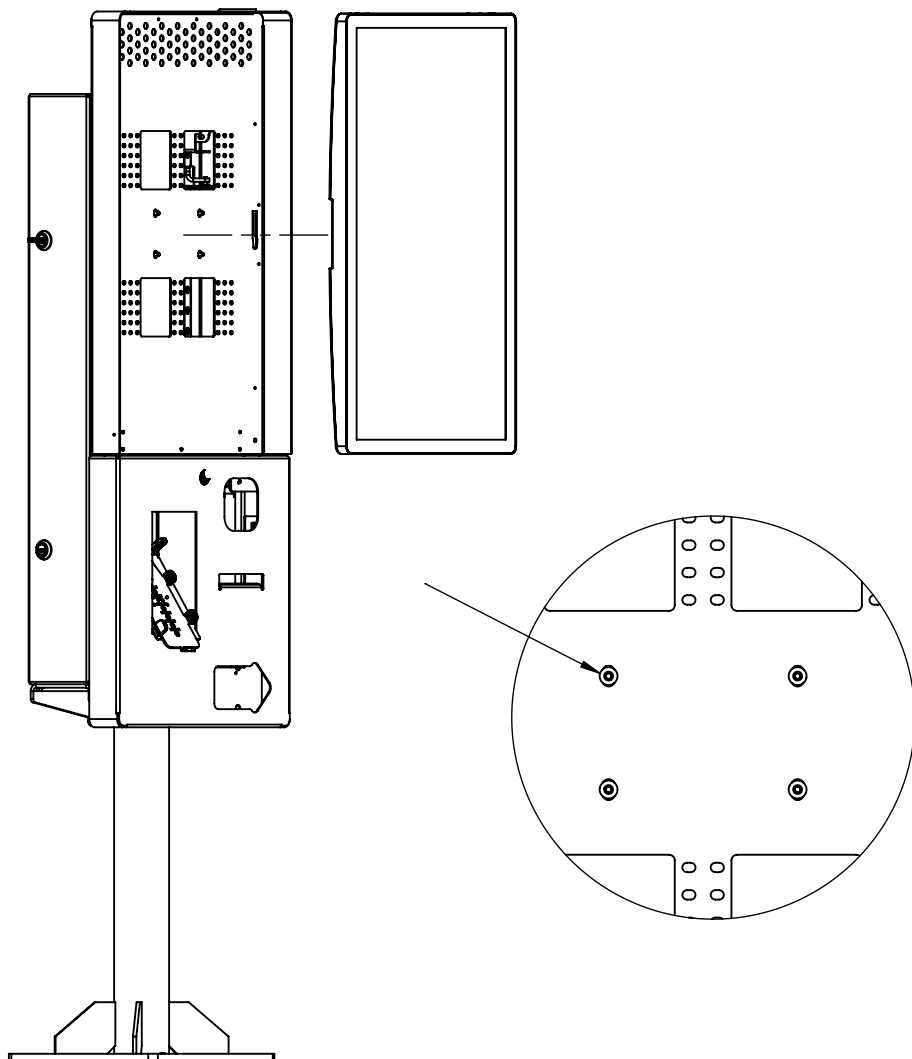

# Steps

## Step 8:

Loosen the two screws securing the lock bracket. Remove the lock bracket

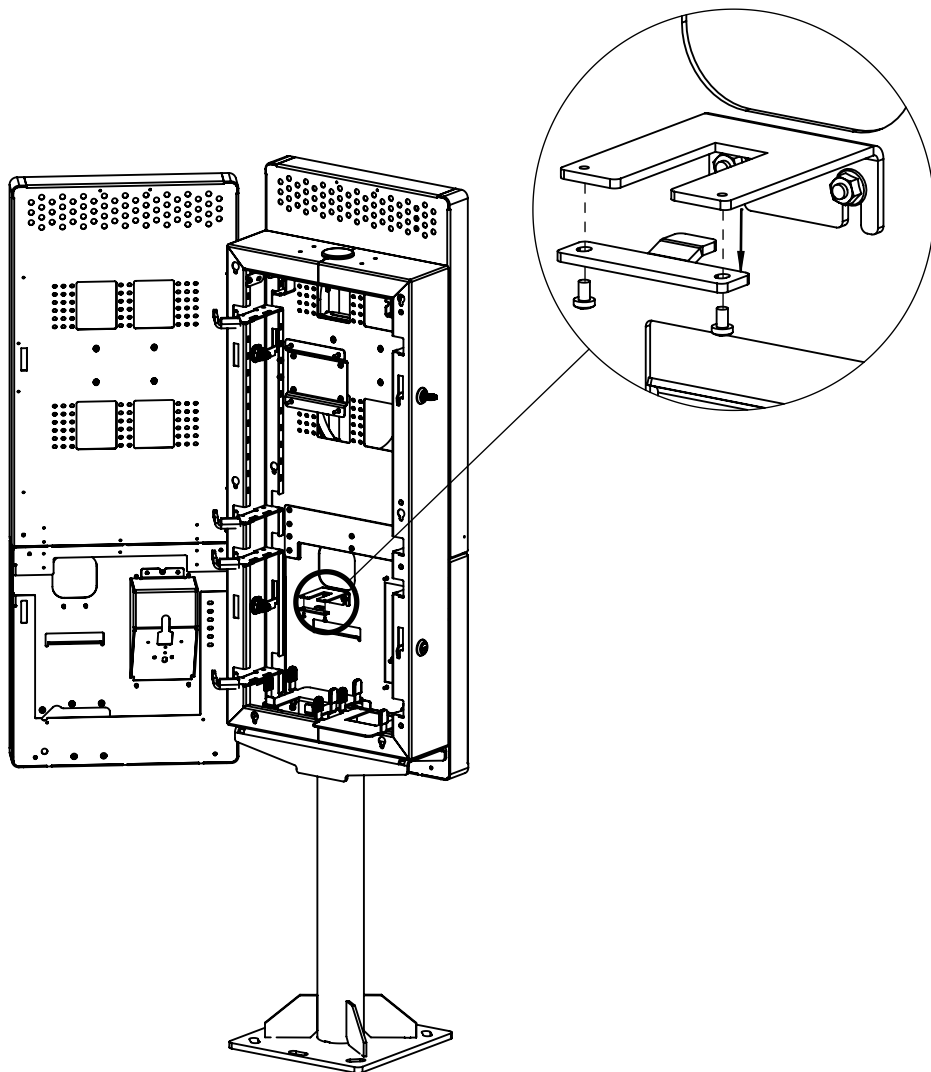

# Steps




## Step 9:

Place the barcode scanner into position. Route the scanner cable through the cable opening.

Reinstall the lock bracket and tighten the two screws to secure the barcode scanner

### Note:


**If the kiosk is equipped with an audio navigation unit, install it using the supplied screws**

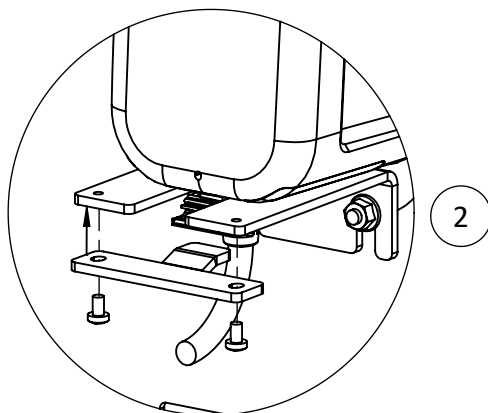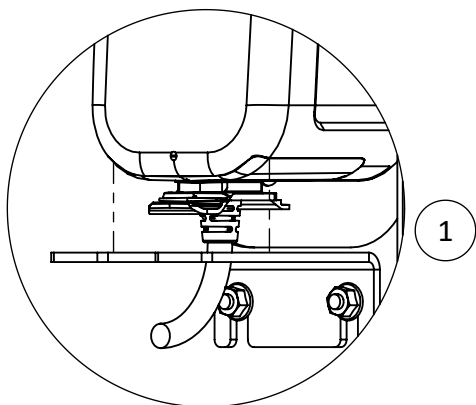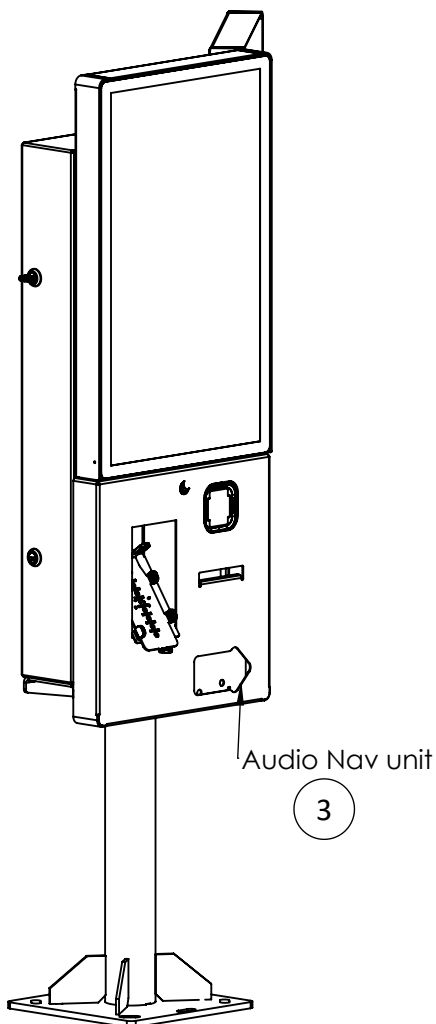

# Steps

## Step 10:


Route the cables along the backplate and secure them using cable clips (not supplied). Verify that all cables are properly retained and protected against mechanical strain.

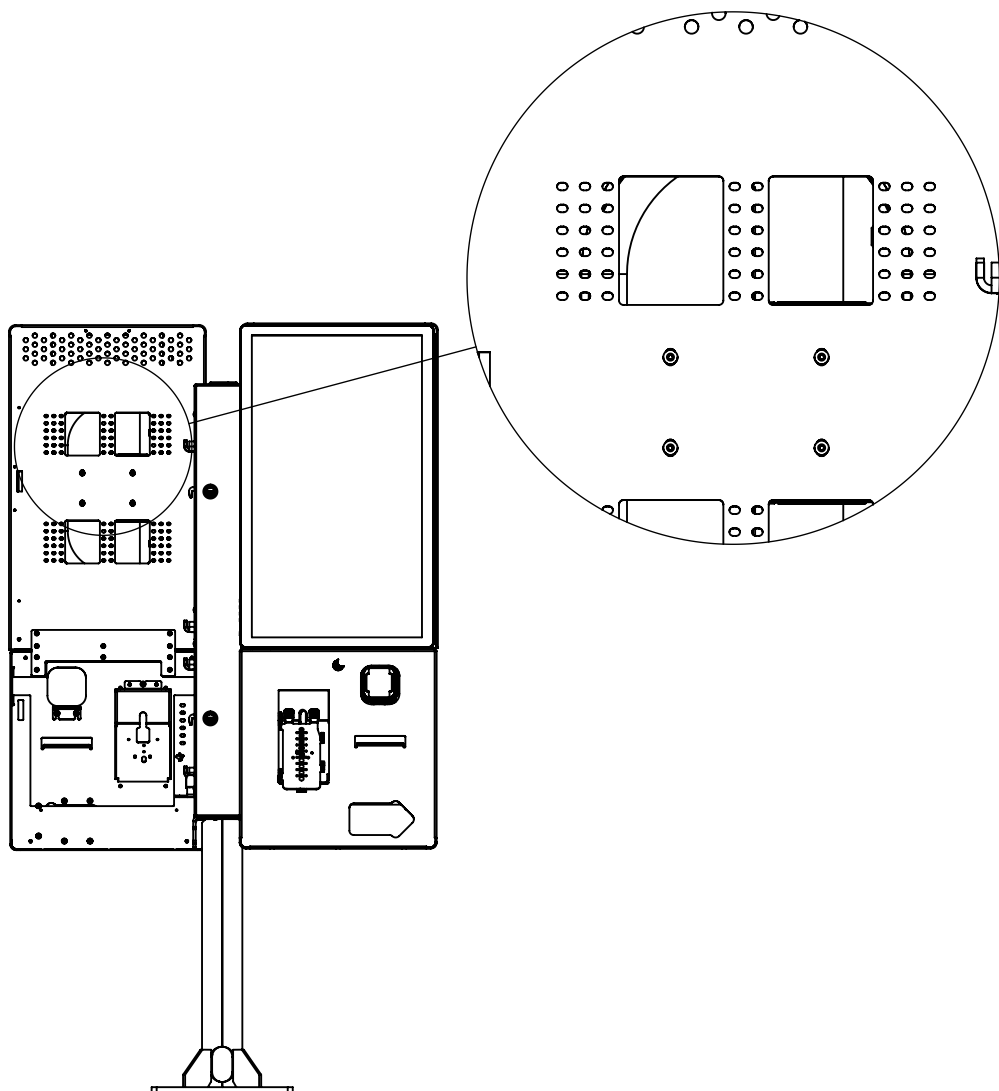

# Steps


## Step 11:

Install the flange cover **part B** after routing all cables through the pole. Secure the flange cover using the supplied screws and close the enclosure and lock it using the included key.

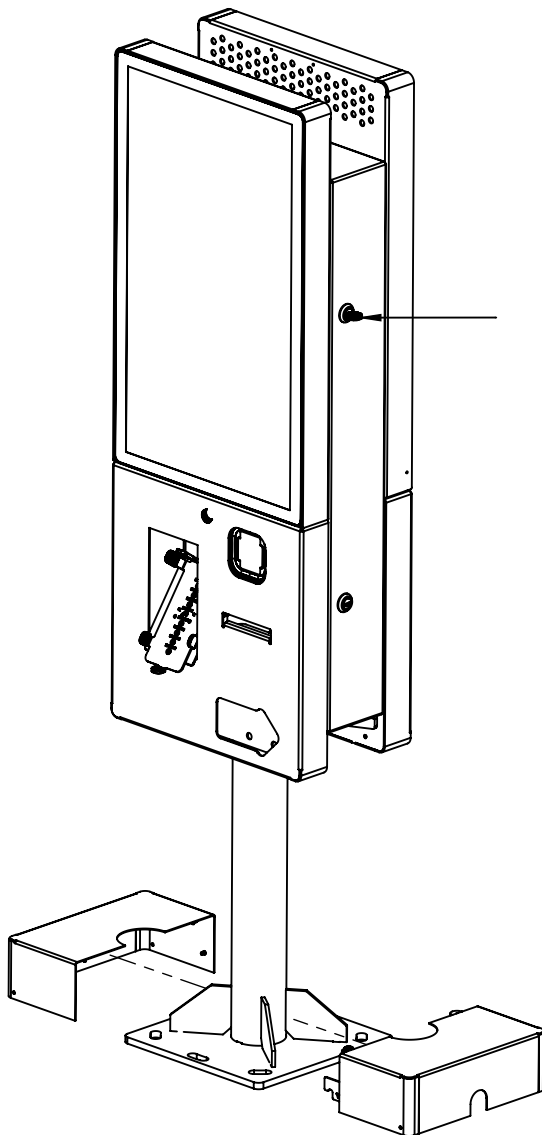

*This page intentionally left blank*

*This page intentionally left blank*

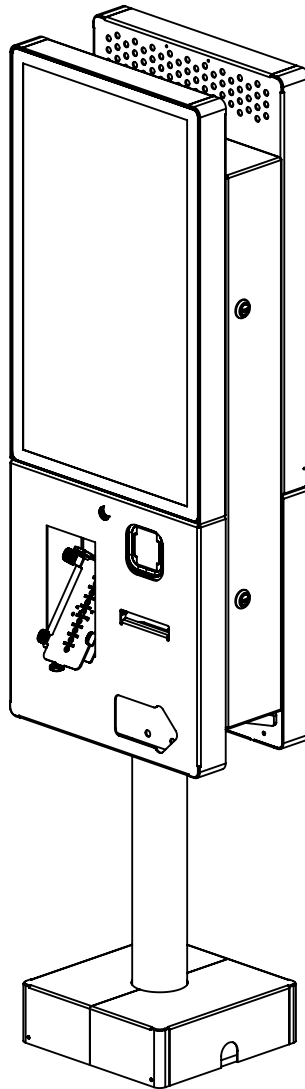

**Need help? Contact us**



**ergonomic<sup>®</sup>  
solutions**  
creators of SpacePole



**spacepole<sup>®</sup>**  
an ergonomic  
solutions company

[ergonomic.solutions/about/contact-us](https://ergonomic.solutions/about/contact-us)

[spacepole.com/about/contact-us](https://spacepole.com/about/contact-us)