



INSTALLATION INSTRUCTIONS

SLB-630 HANGER BRACKET

for Vivitek AV600, Kodak V600, V600Z, Delta AV600,


Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTSTM Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

(1)	SLB-630 Bracket	(4)	10 - 24 Thumb Nuts
(3)	M4 -16mm Screws	(3)	M4 Flatwashers
(3)	½" x .218" x ¼" Nylon Spacer		

INSTALLATION INSTRUCTIONS

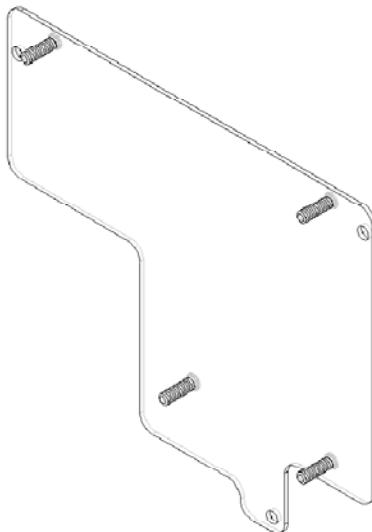

1. Turn projector upside down.
2. Place the three nylon spacers centered over the three threaded inserts in the bottom of the projector.
3. Place the SLB-630 bracket onto the three nylon spacers, lining up the three mounting holes in the SLB-630 bracket with the three threaded inserts and nylon spacers on the bottom of the projector and secure using the three M4 -16mm mounting screws and M4 Flatwashers. **CAUTION: When attaching the mount be careful not to overtighten screws.**
4. See RPA and/or Smart-LiftTM Instructions.