




SLB-710 HANGING BRACKET FOR TOSHIBA TLP 710 / 711 U

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTSTM Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at
1-800-582-6480

| | |
|-----------------------------|--------------------------------|
| (1) SLB-710 Hanging Bracket | (2) M4-7 x 12mm Machine Screws |
| (6) 10-24 Thumb Nuts | (2) M4 Flat Washers |
| (1) U-form wire bracket | (2) 10-24 Nylock Nuts |
| (4) Felt Squares | (2) # 10 Flatwasher |

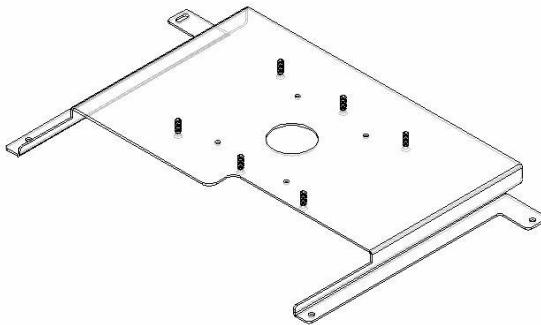

INSTALLATION INSTRUCTIONS

1. Lay projector upside down on work surface, align holes in longer tabs with two threaded inserts that are offset near adjust feet on each side.
2. Insert two machine screws (M4-7 x 12mm) and tighten moderately.
3. Place U-form wire bracket up around rear of projector and through holes in tabs of hanging bracket. Thread two nuts (10-24) onto u-form on each side and tighten moderately.
4. Review RPA instructions for final mounting.