

INSTALLATION INSTRUCTIONS

SSB-055, SSM-055, SLB-055 and SLM-055 Interface Brackets

SSB-055, SSM-055, SLB-055 and SLM-055 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information.


Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.



WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- (1) Interface Bracket
- (4) 10 - 24 Thumb Nuts**
- (1) All-Points Security Kit
- (2) $\frac{1}{2}''$ x .194" x $\frac{1}{2}''$ Nylon Spacers

- (2) M4 - 8mm Screws
- (4) M4 Flat washers
- (2) M4 - 20mm Screws

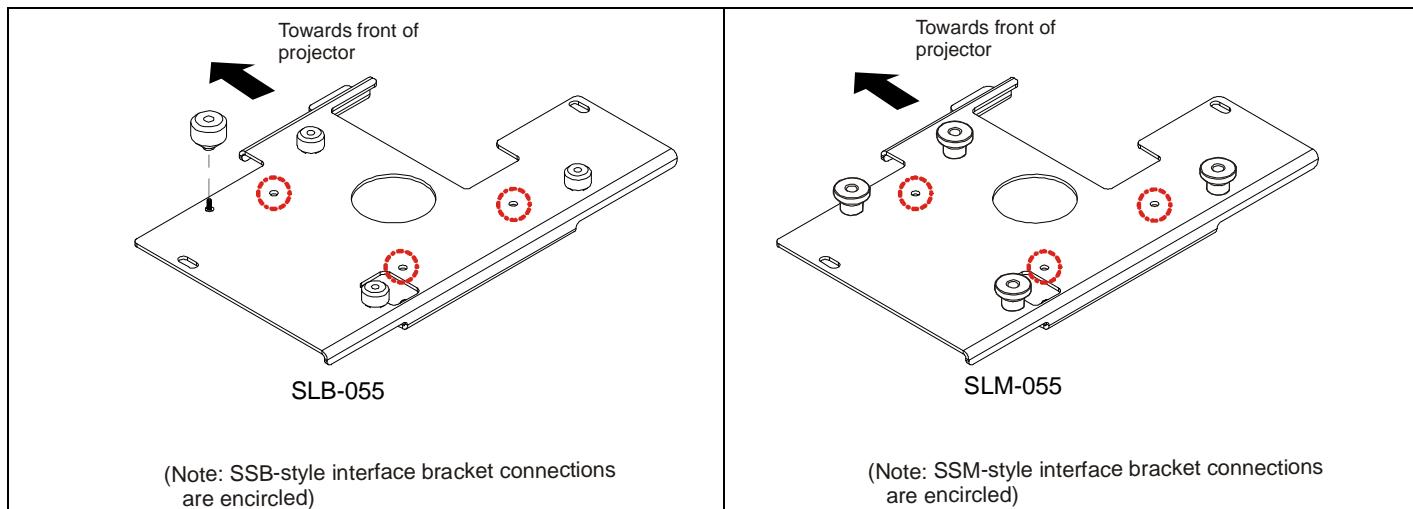

**Only used when installing SLB/SSB interface brackets.

NOTE: Specific to SSB-style and SSM-style interface bracket installation, all appropriate screws come pre-installed as reflected in the encircled locations above. DO NOT attempt to substitute and USE ONLY this pre-installed hardware for SSB-style and SSM-style interface bracket installation.

Installation Instructions



WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing interface bracket.

NOTE: Step 1 is only required when installing an SLB/SSB interface bracket. If an SLM/SSM bracket is being installed, proceed to step 2.

1. Screw thumb screws onto 10 - 24 x 5/8" Phillips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down.
3. Place the interface bracket on to the bottom of the projector and align the front and rear mounting holes in the bracket with the front and rear threaded inserts in the bottom of the projector.
4. Loosely begin to screw the M4 - 8mm mounting screws and M4 flat washers into front and rear mounting holes.
5. Place the $\frac{1}{2}''$ tall spacers the left and right side holes between the bracket and the threaded inserts in the projector.
6. Using the M4 -20mm mounting screws and M4 flat washers, position the screw through the center of the $\frac{1}{2}''$ nylon spacer, and secure interface bracket to projector and tighten all fasteners at this time.

NOTE: Security screws can be substituted when mounting interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

