


NetShelter Enclosure—Grounding Instructions

This information supercedes any and all enclosure grounding information in your *NetShelter SX Enclosure Unpacking, Installation, and Customization* manual.

Each enclosure should be grounded directly to the building ground using one of the designated grounding locations (two M6 threaded inserts) at the top or bottom of the enclosure.

- Use a Common Bonding Network Jumper kit (for example, Listed [KDER] Panduit RGCBNJ660PY or equivalent).
- Use paint-piercing washers between ground terminal and enclosure frame or remove paint on frame under ground terminals per NEC NFPA 70 Article 250.12.
- Torque screws to 6.9 N-m (60 in-lb).
- Do not ground one enclosure to another enclosure in a cascading style.

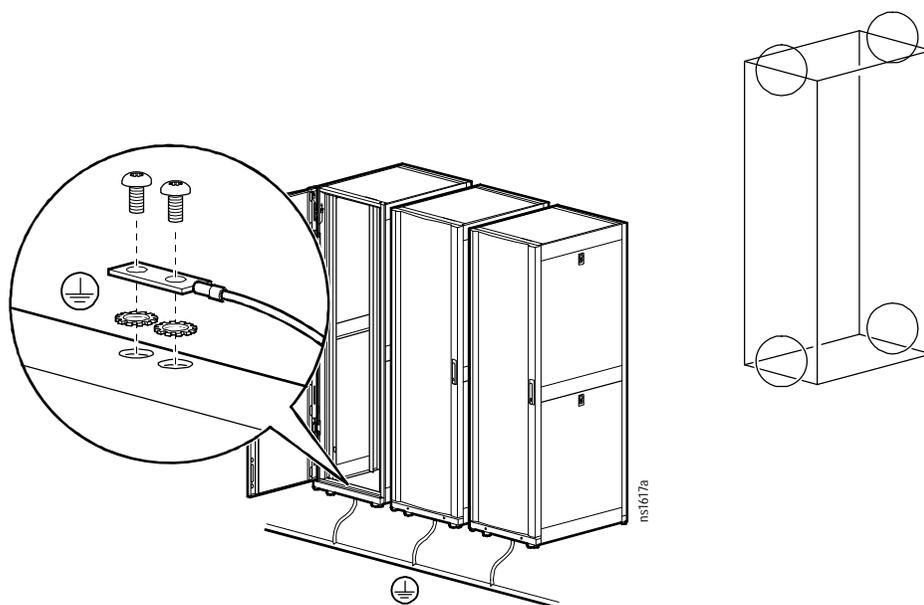

Customer support and warranty information is available at the APC Web site, www.apc.com.

© 2010 American Power Conversion. All rights reserved. All APC trademarks are property of American Power Conversion. Other trademarks are property of their respective owners.

990-4303
6/2010