






NEOMOUNTS PRO

BY NEWSTAR

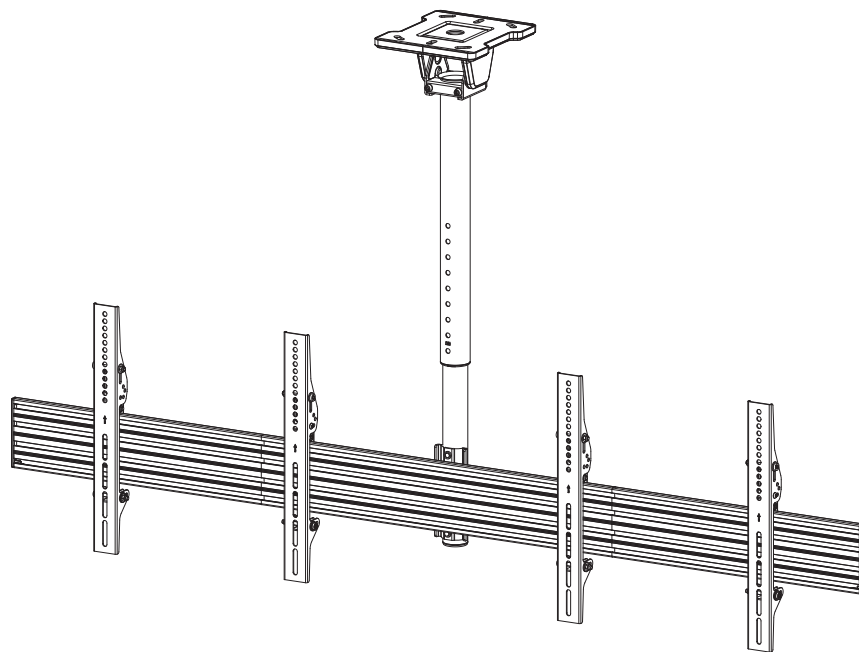

MENU BOARD CEILING MOUNT

This instruction is applicable to all the following models and related extended products

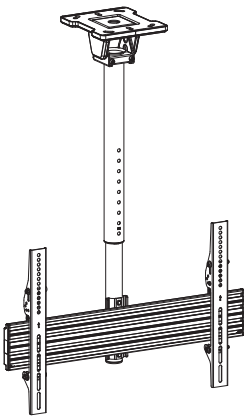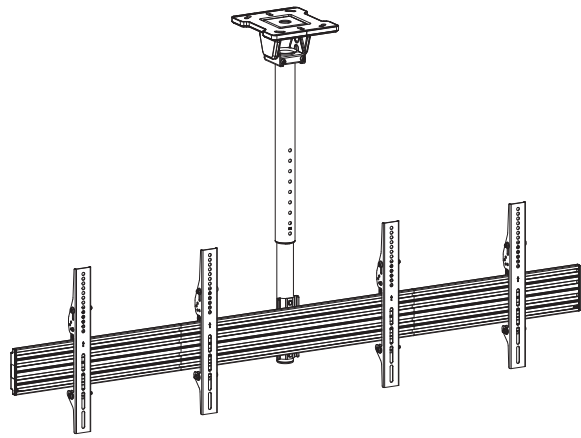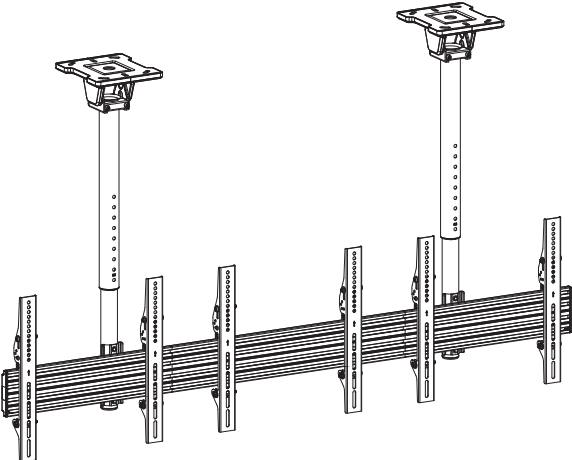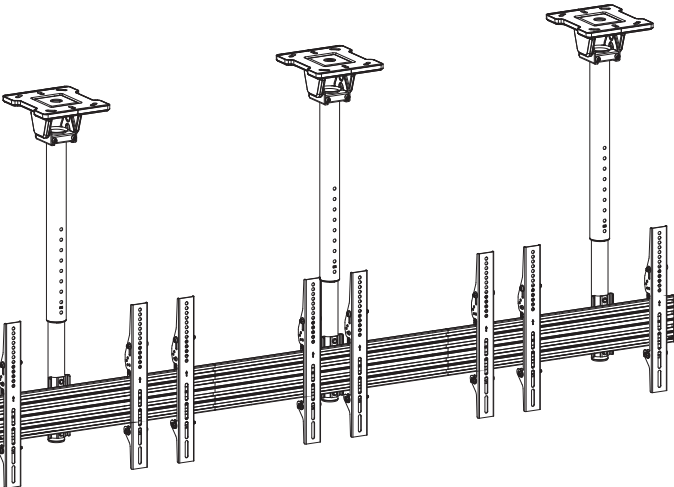NMPRO-C1 (With tilt arms) 	NMPRO-CMB2 (With tilt arms) Tilt arms 
NMPRO-CMB3 (With tilt arms) 	NMPRO-CMB4 (With tilt arms) 




⚠ WARNING




- Be sure to read this entire manual thoroughly and you fully understand all the instructions and warning before attempting to begin your installation.
- This products should only be installed by someone who has a basic knowledge of building constructio installations and fully undestnd these instrudtions.
- Always have someone assit you to lift and position your equipment.
- Tighten screws and bolts firmly, but do not over tighten. Over tightening can damage the item and greatly reduce their ability to hold.Please refer to suggested torque values where applicable in these instructions.

Parts list (NMPRO-C1)

A1	A2	A3	A4	X1	B1	B2	B3	B4	B5	B6	X1
M5X15	M6X15	M8X15	Ø6XØ6.2X1.5		M8X12	M8X50	M8X60	M6X85 Ø13XØ6.2X1.5	Ø16XØ8.2X1.5		
								  			
X4	X4	X4	X4	X5	X1	X2	X2	X4	X4		

C1	C2	X1	C3	C4	C5	C6	X1
	5mm 			Ø16XØ8.2X1.5 	Lag bolt 	Anchor 	
X1	X1		X2	X4	X4	X4	


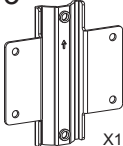
D1	D2	D3
		
X1	680mm*1	X1


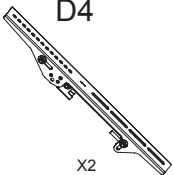
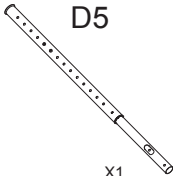

D4	D5	D6	D7	D8
				
X2	X1	X2	M5 X2	X2

Parts list (NMPRO-CMB2)

A1	A2	A3	A4	X2	B1	B2	B3	B4	B5	B6	X1
M5X15	M6X15	M8X15	Ø6XØ6.2X1.5		M8X12	M8X50	M8X60	M6X85 Ø16XØ6.2X1.5	Ø13XØ8.2X1.5		
								  			
X4	X4	X4	X4	X5	X1	X2	X2	X4	X4		

C1	C2	X1	C3	C4	C5	C6	X1
	3&5mm 			Ø16XØ8.2X1.5 	Lag bolt 	Anchor 	
X1	X1		X2	X4	X4	X4	


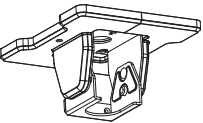
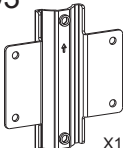
D1	D2	D3
		
X1	1000mm*1+480mm*2	X1

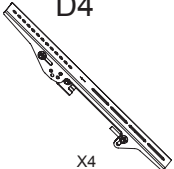
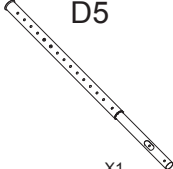

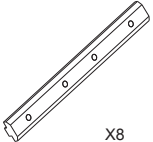
D4	D5	D6	D7	D8	D9
					
X4	X1	X2	X2	X4	X8

Parts list (NMPRO-CMB3)

A1	A2	A3	A4	X3	B1	B2	B3	B4	B5	B6	X2
M5X15	M6X15	M8X15	Ø6XØ6.2X1.5		M8X12	M8X50	M8X60	M6X85 Ø13XØ6.2X1.5	Ø16XØ8.2X1.5		
								  			
X4	X4	X4	X4	X5	X1	X2	X2	X4	X4		

C1	C2	X1	C3	C4	C5	C6	X2
	3&5mm			Ø16XØ8.2X1.5	Lag bolt	Anchor	
X1	X1		X2	X4	X4	X4	

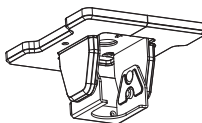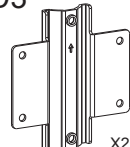
D1	D2	D3
		
X2	1000mm*3+480mm*1	X2

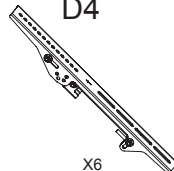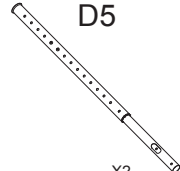

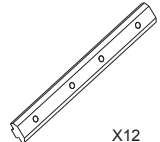
D4	D5	D6	D7	D8	D9
					
X6	X2	X4	X2	X6	X12

Parts list (NMPRO-CMB4)


A1	A2	A3	A4	X4	B1	B2	B3	B4	B5	B6	X3
M5X15 	M6X15 	M8X15 	Ø6XØ6.2X1.5 		M8X12 	M8X50 	M8X60 	M6X85 Ø13XØ6.2X1.5   	Ø16XØ8.2X1.5 		
X4	X4	X4	X4		X5	X1	X2	X2	X4	X4	

C1	C2	X1	C3	C4	C5	C6	X3
	3&5mm 			Ø16XØ8.2X1.5 	Lag bolt 	Anchor 	
X1	X1		X2	X4	X4	X4	


D1	D2	D3
		
X3	1000mm*4+480mm*1	X3

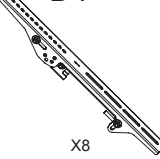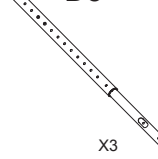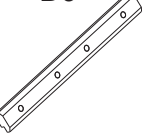D4	D5	D6	D7	D8	D9
			M5 		
X8	X3	X6	X2	X8	X12


Installation

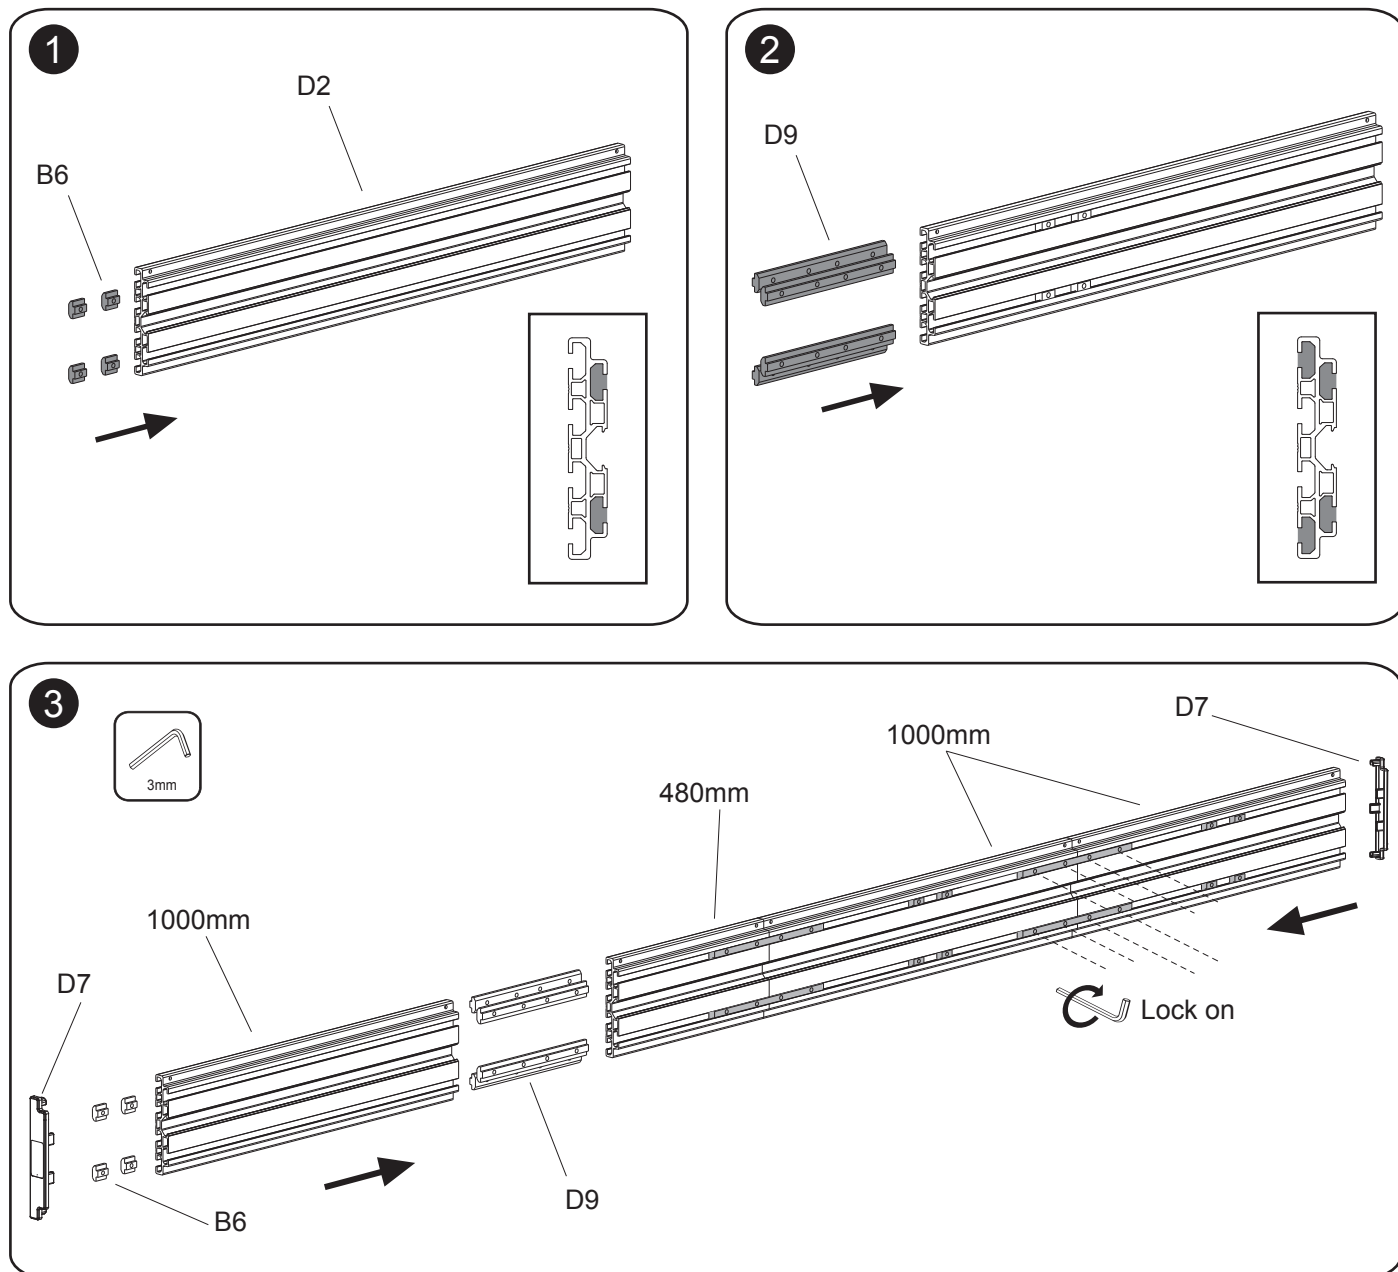

4

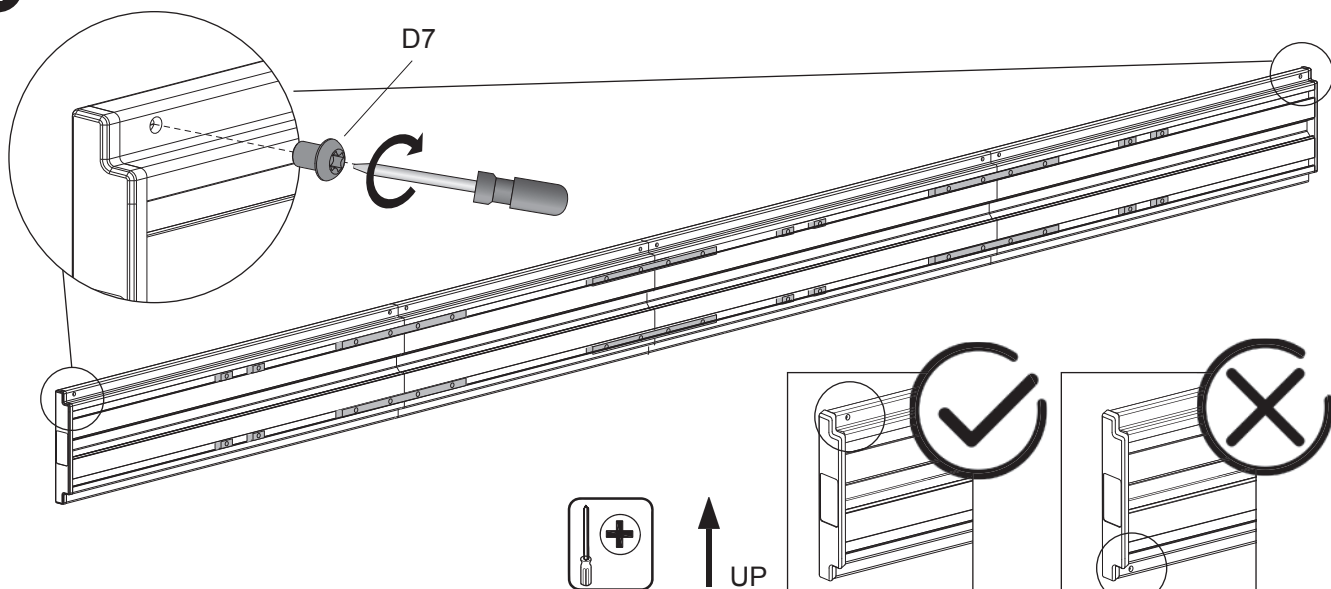


5

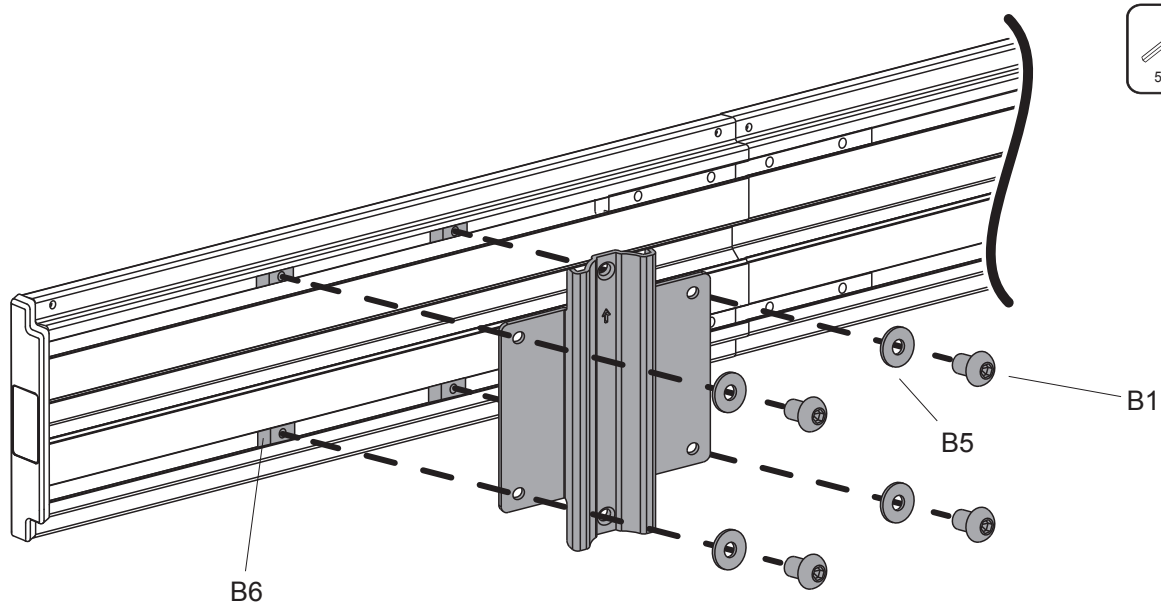


6

NMPRO-C1

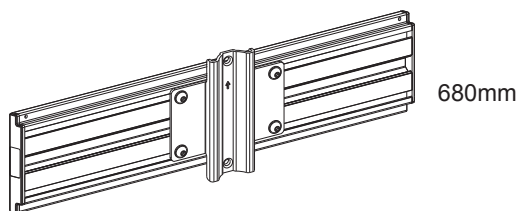


NMPRO-CMB2

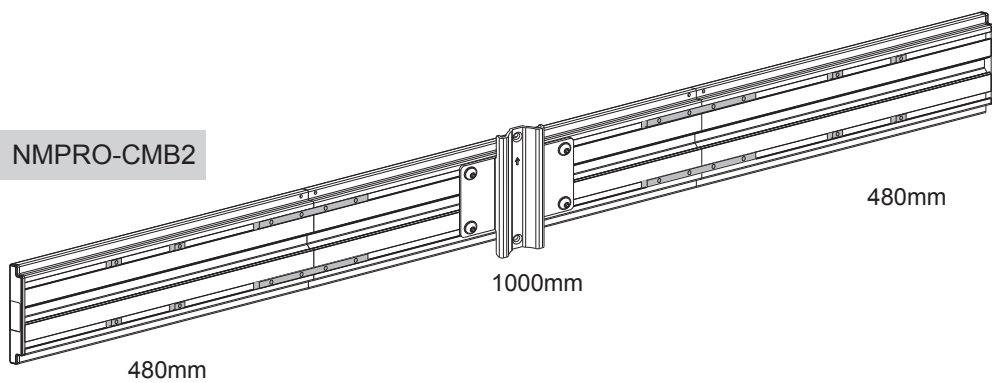


6




NMPRO-CMB3

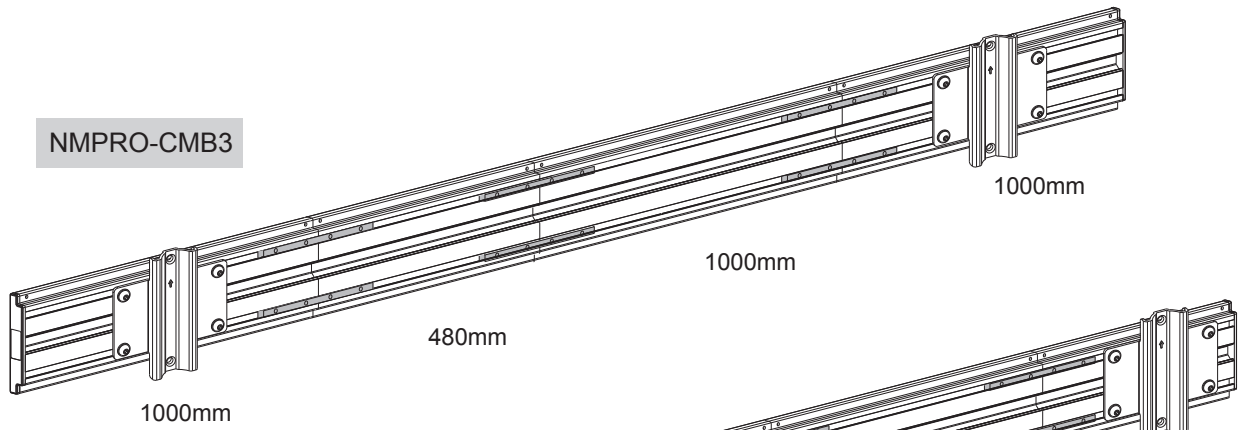

NMPRO-CMB4




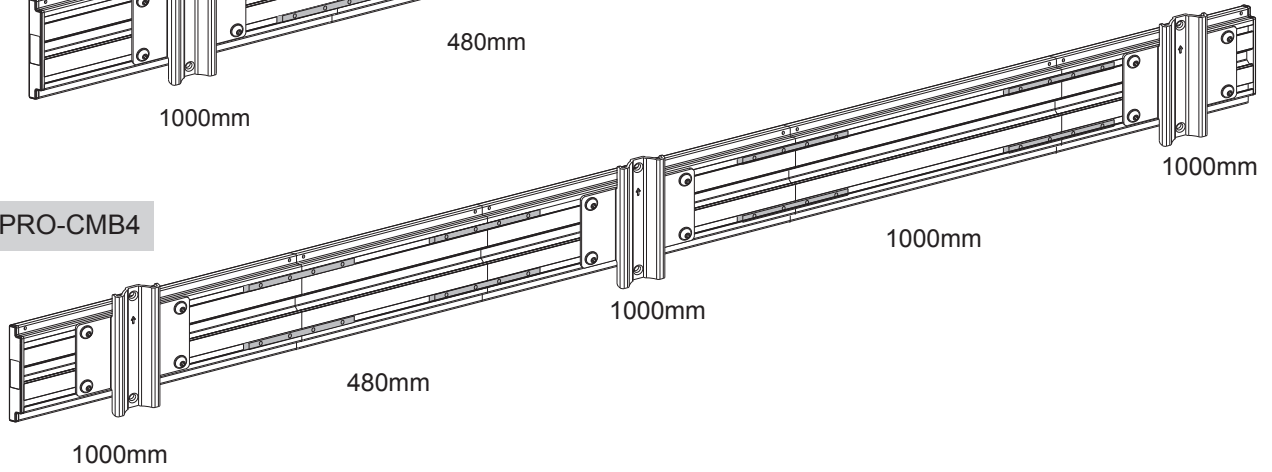


7

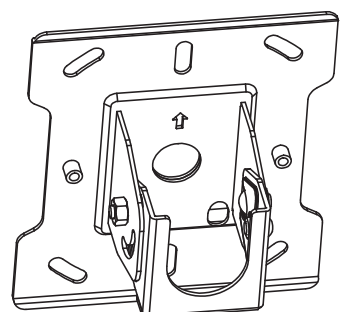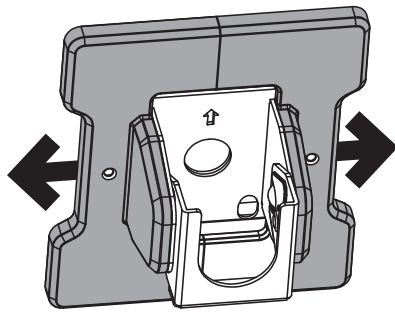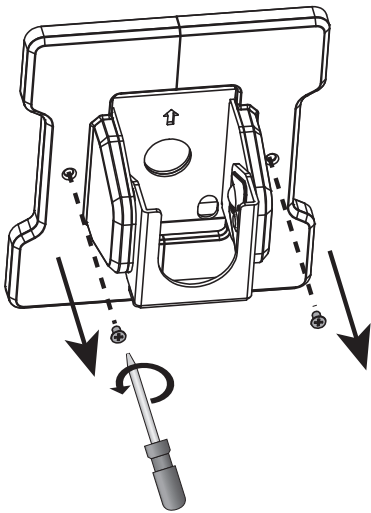


8

WOOD

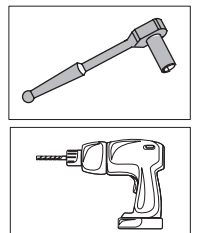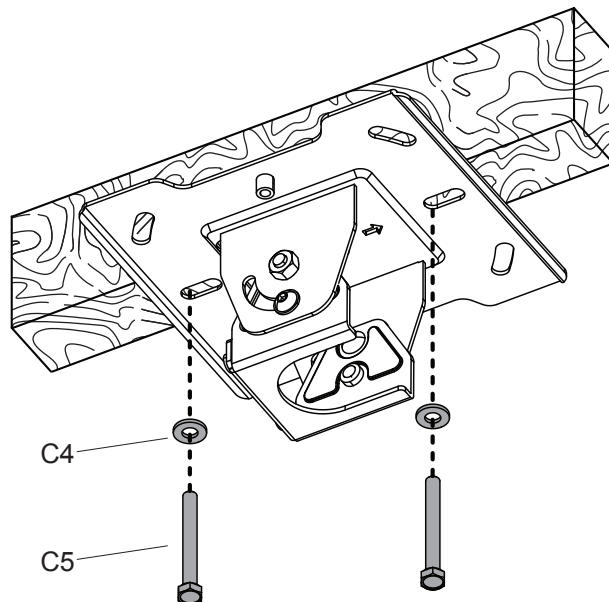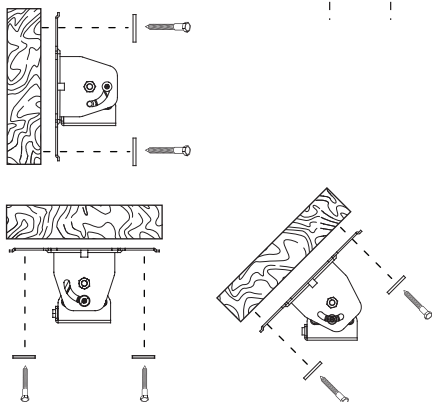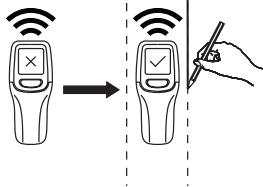


8

BRICK OR CONCRETE

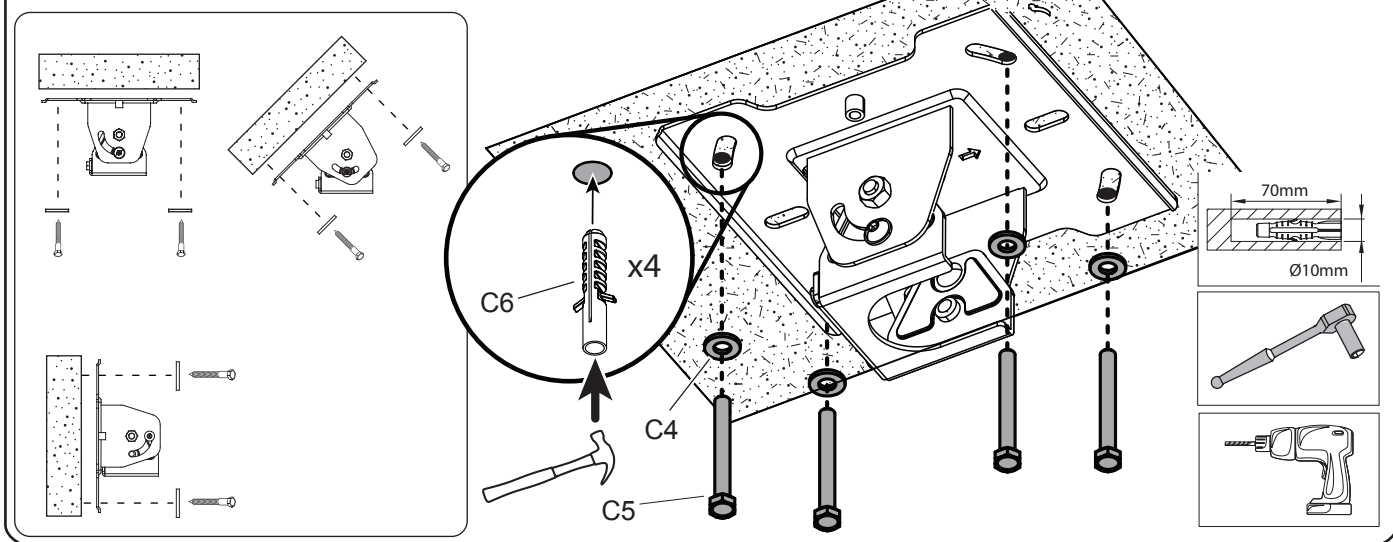


9

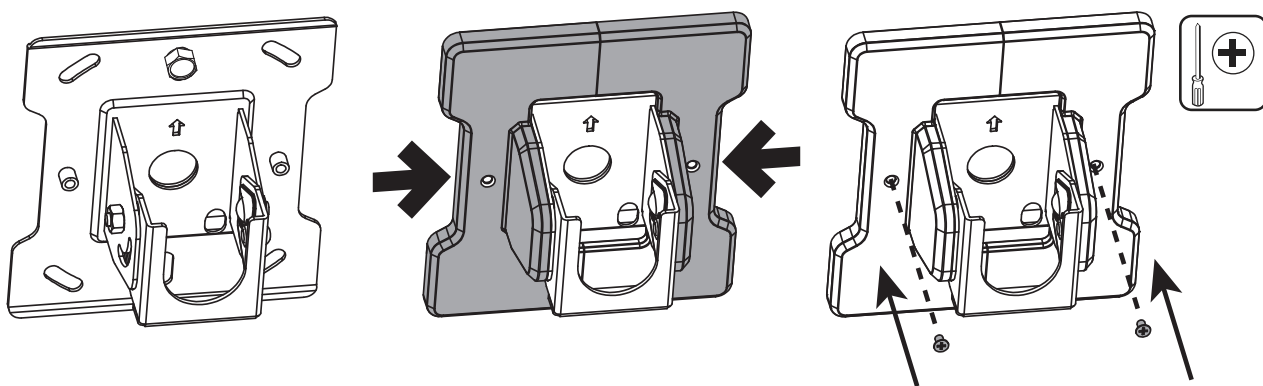


10


Configure Tube - a

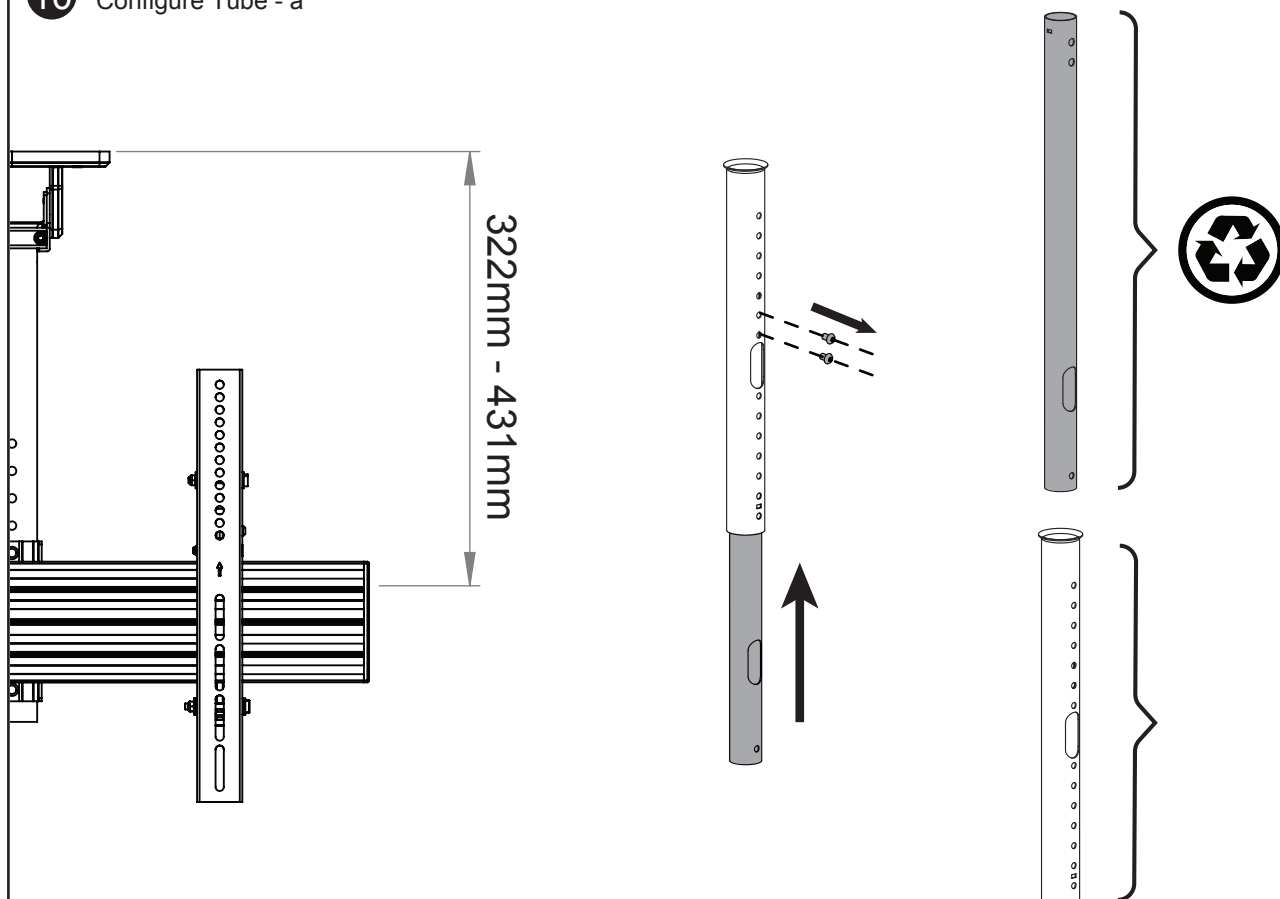

10 Configure Tube - b

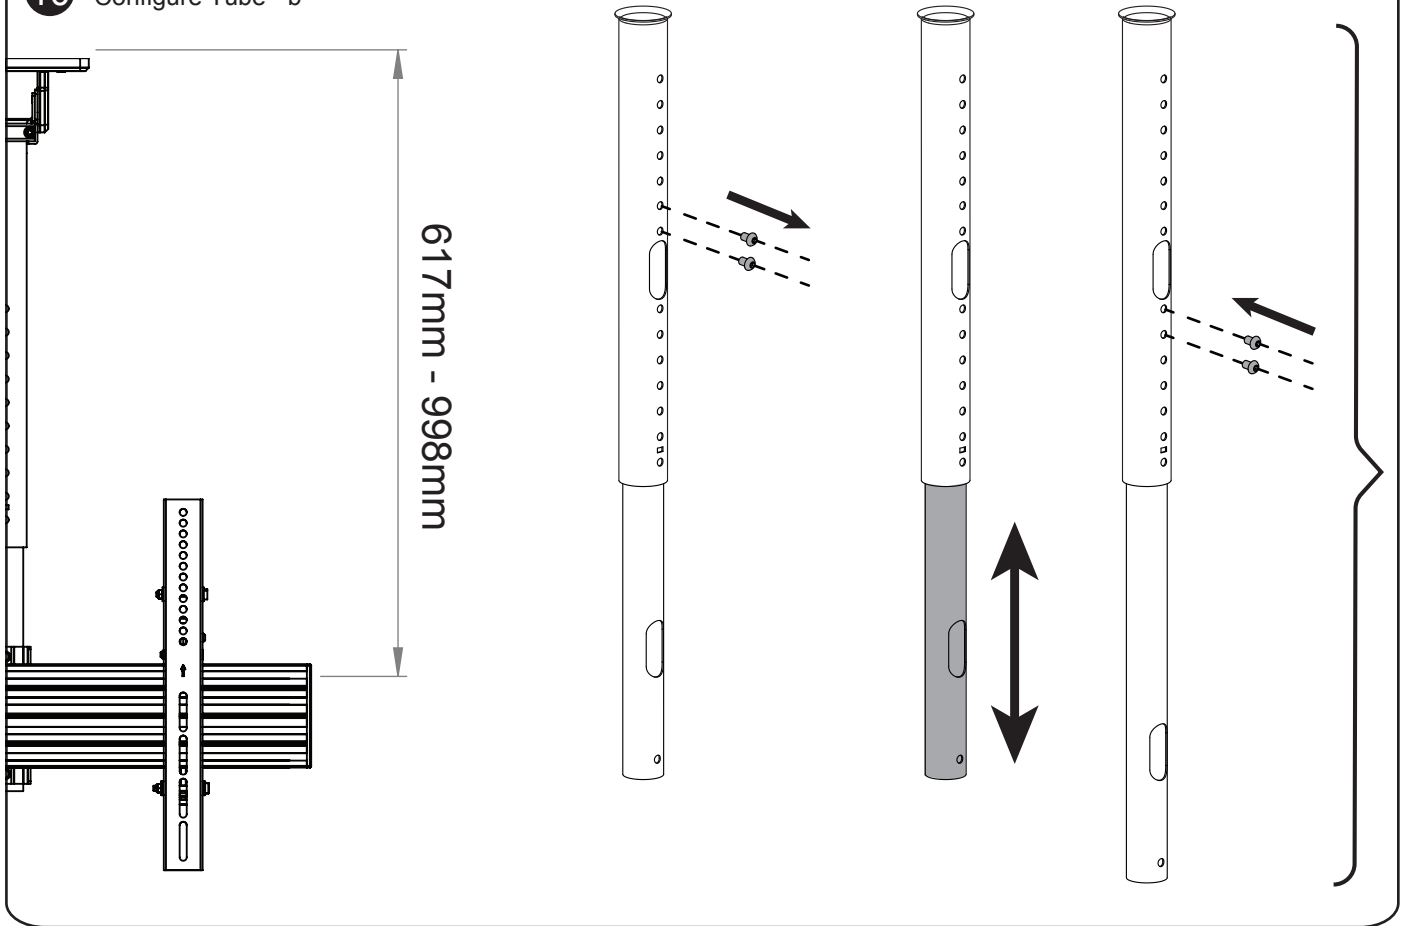


10

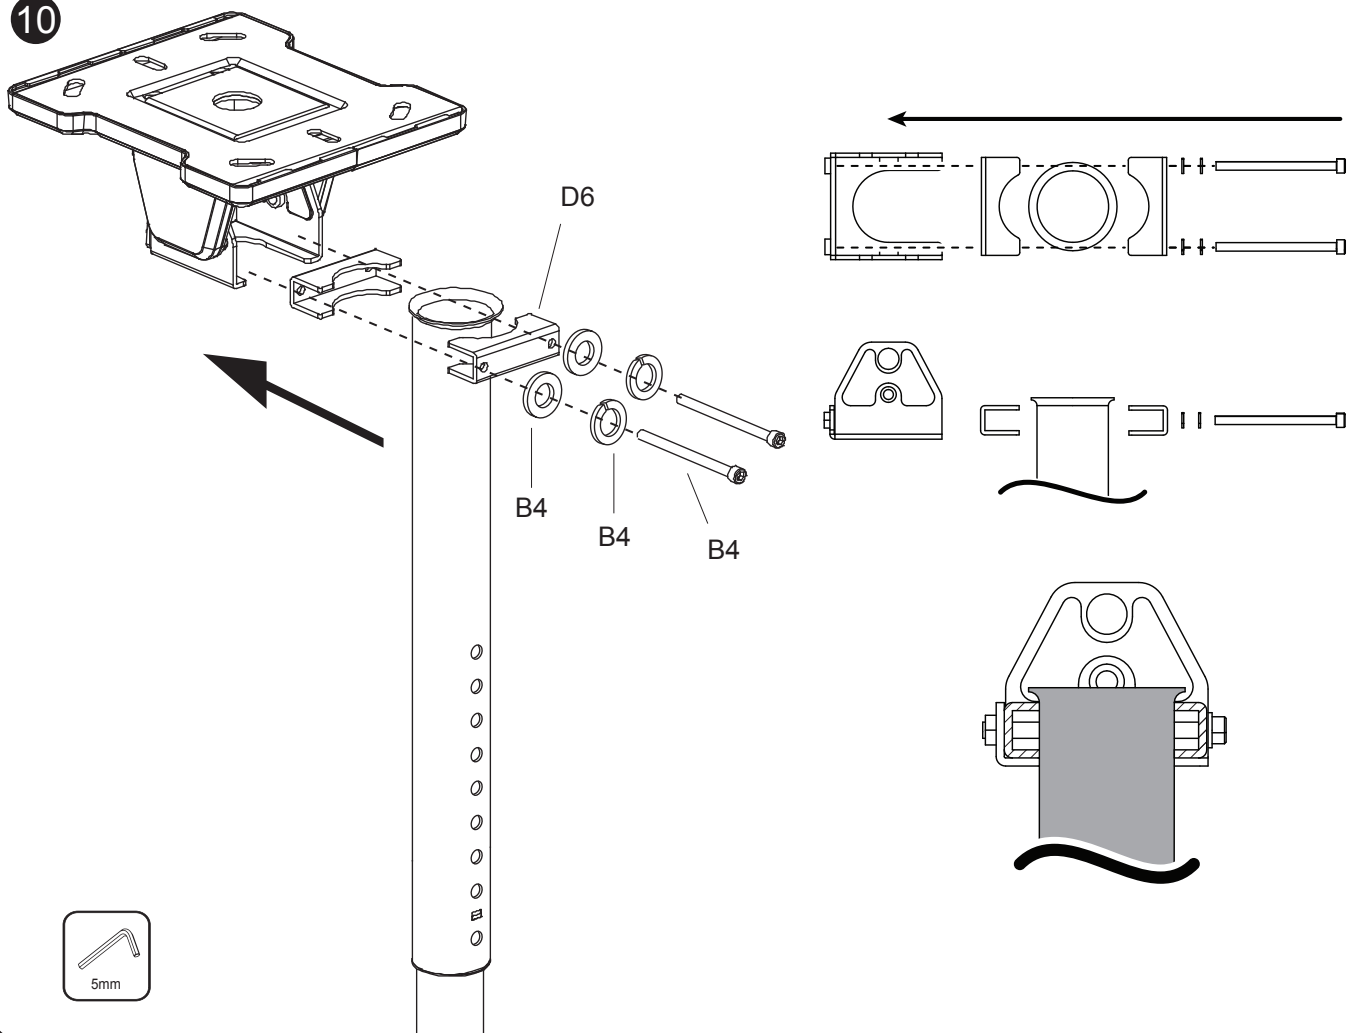


11


Mount rail - a

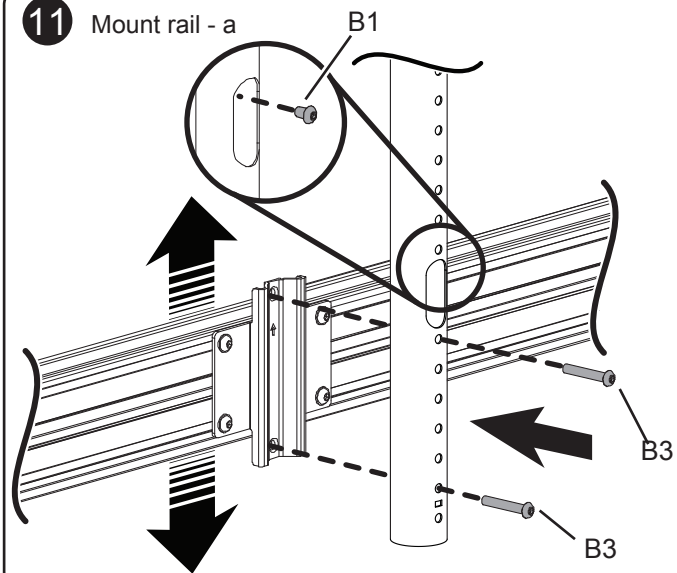


Mount rail - b

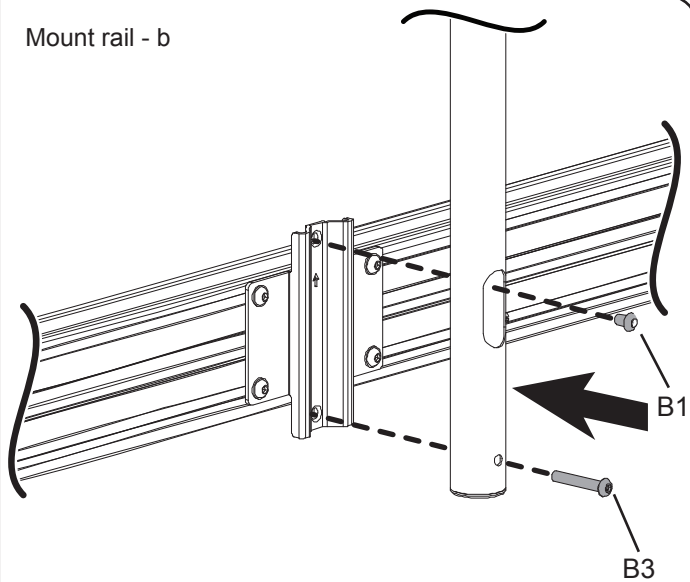


12

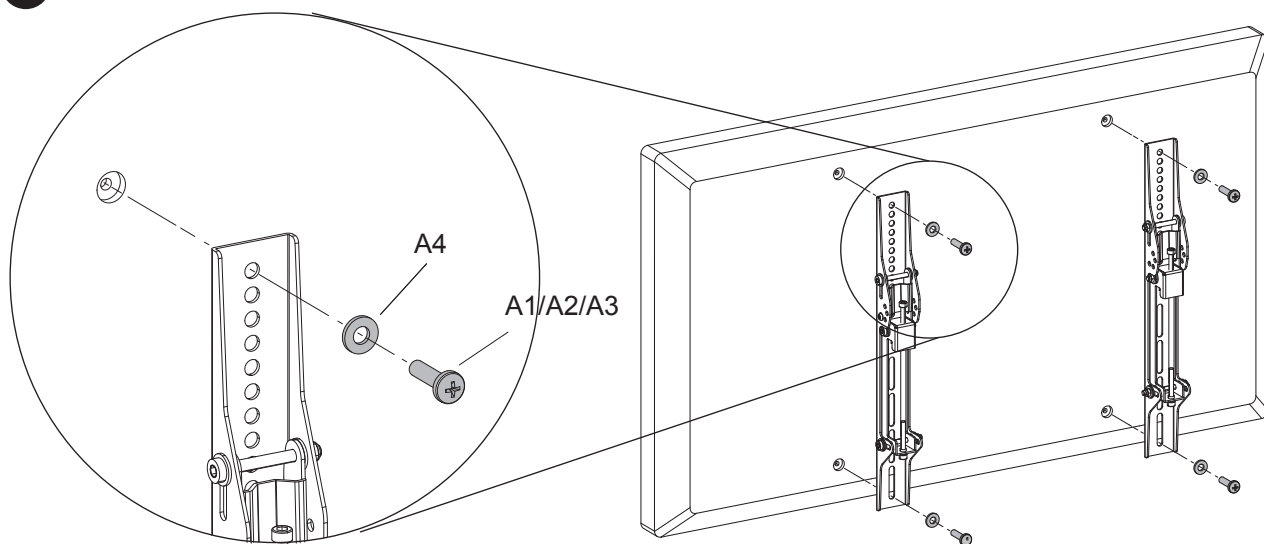



13

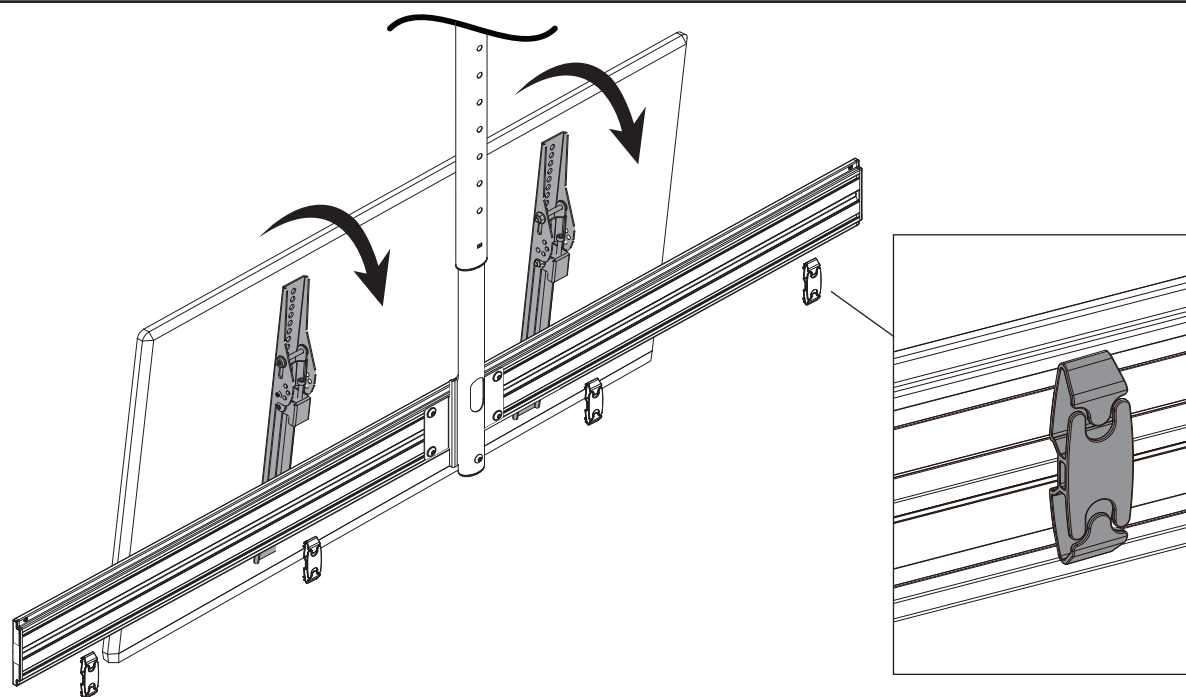


14

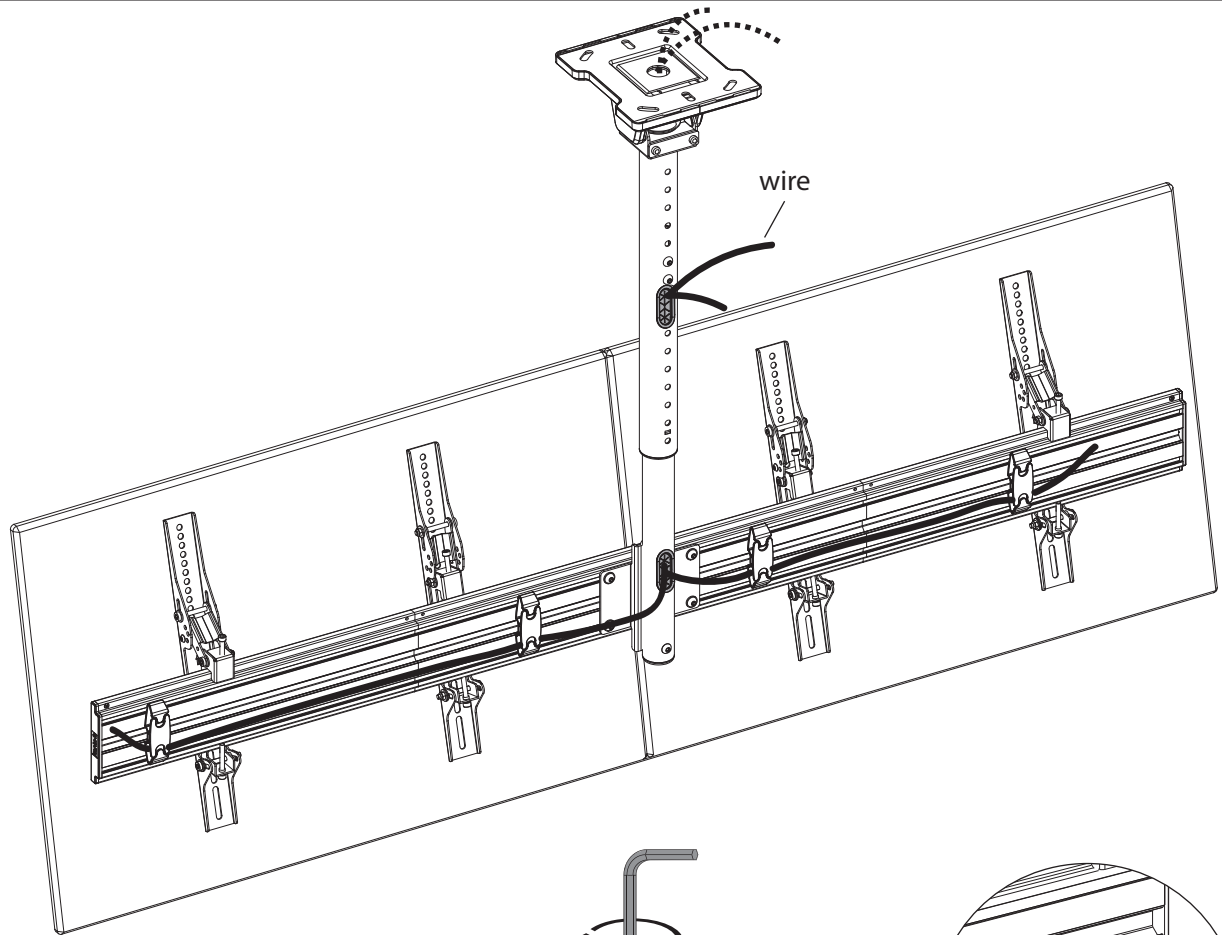

wire

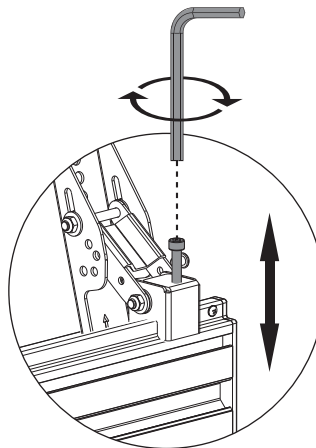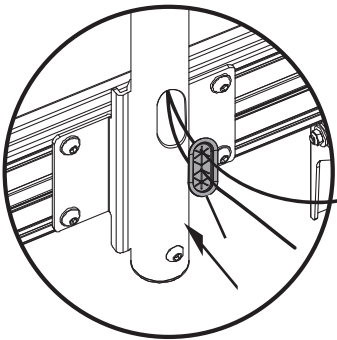

Height adjustment 10mm

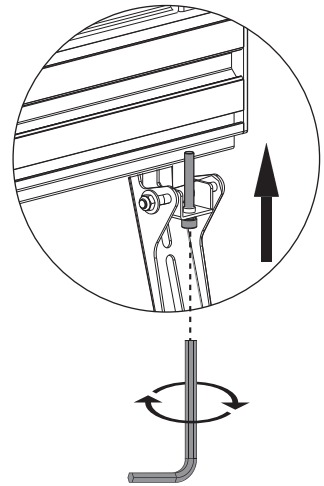

12

