

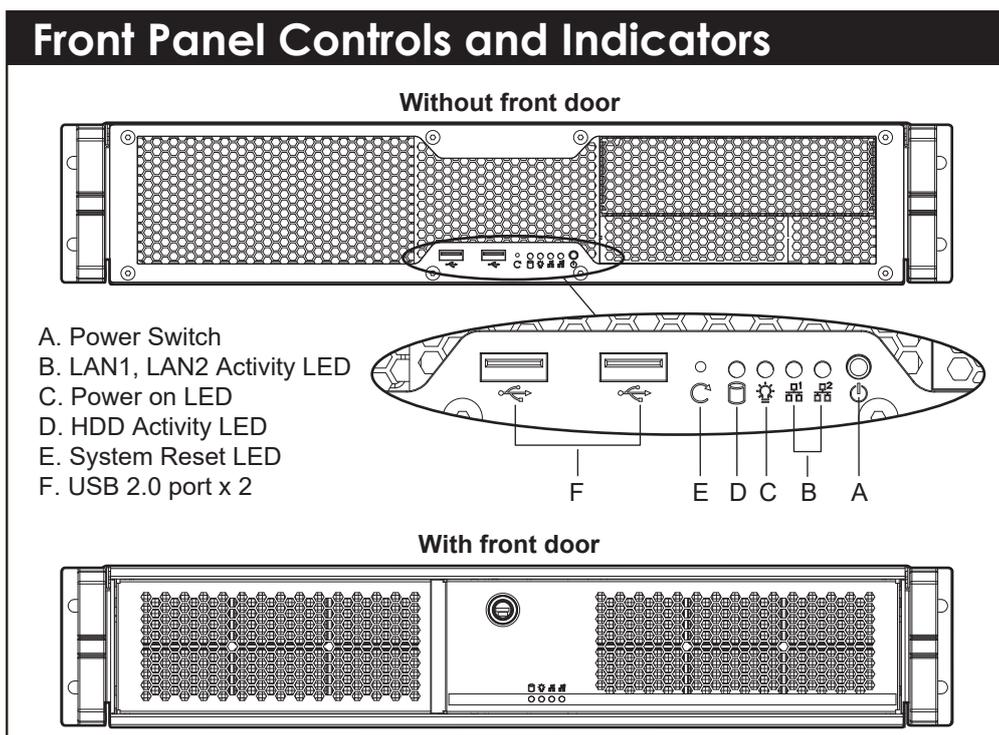


UNC-209SR-B QUICK INSTALLATION GUIDE

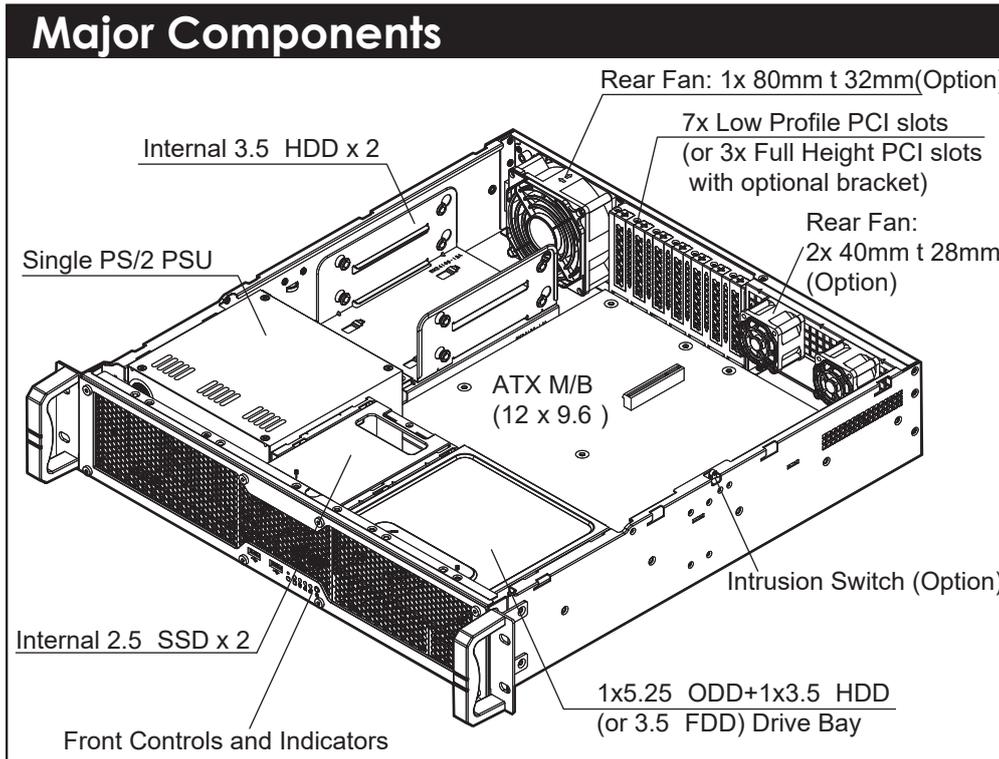


Maintaining Front Door Filter

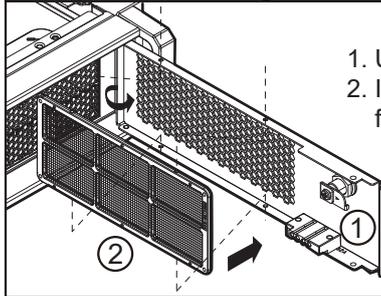


1. Unlock the front door and take out the filters to clean
2. Insert two filters on both left and right sides of the front door with four anchoring points

Rear Window Configuration

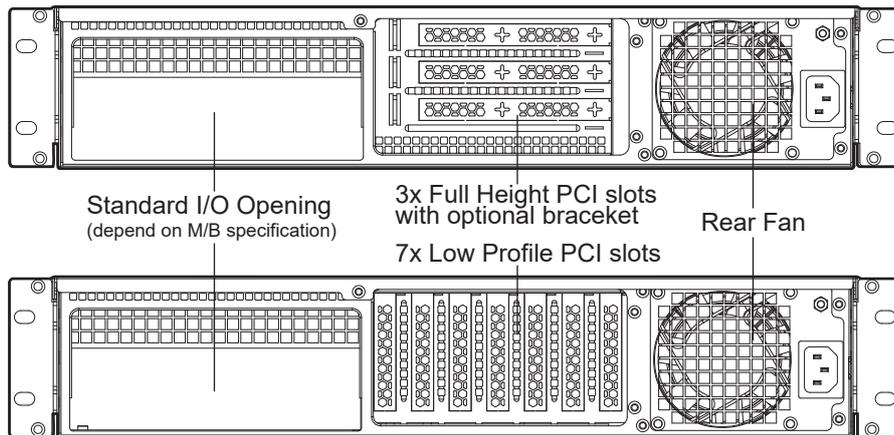

Top Cover Opening

Release three screws on left, right and rear sides of the top cover, and pull back to open it

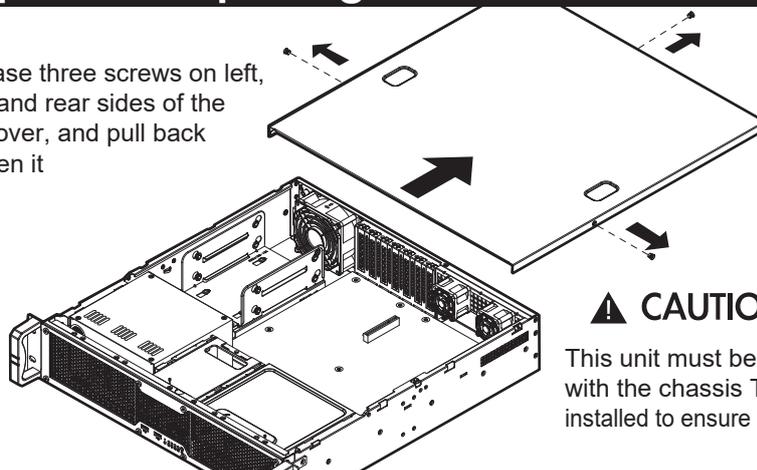


⚠ CAUTION ⚠

This unit must be operated with the chassis TOP COVER installed to ensure proper cooling


Installing Internal 3.5 HDD

1. Slide two internal 3.5 HDDs into the bay
2. Use eight quakeproof screws to fix 3.5 HDDs on both left and right sides of the bay
3. Slide the internal 3.5 HDD assembly on the chassis and use a screw to fix it with the chassis

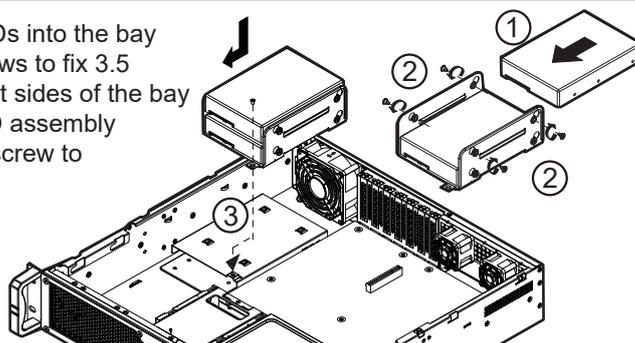


Installing PS/2 power supply

1. Use two screws to fix bracket on the PSU
2. Slide the PSU assembly into the chassis, and use two screws to fix it on the left side of the chassis

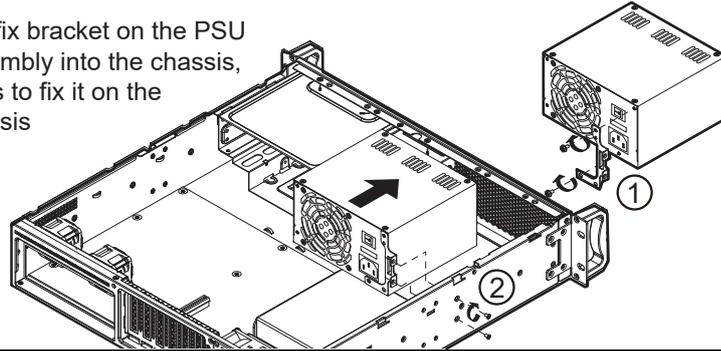

Installing Internal 2.5 SSD


1. Slide two internal 2.5 SSD into the bay
2. Use eight quakeproof screws to fix two SSD on both left and right sides of the bay
3. Slide the internal 2.5 SSD assembly into the chassis and use one screw to fix it on the chassis

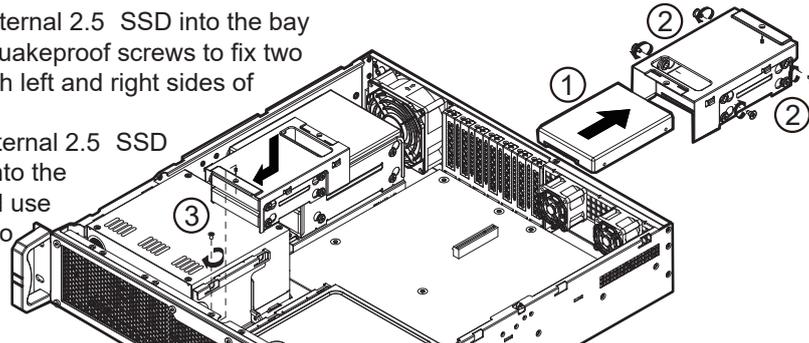

Installing 5.25 /3.5 Drive Bay(with 3.5 HDD or FDD)


Installing 5.25" ODD

1. Release two screws on top of the drive bay to take it out from the chassis
2. Release one screw at the right side of the drive bay
3. Take out the upper front cover
4. Slide the 5.25 ODD into the drive bay assembly
5. Use eight screws to fix on both left and right sides of the drive bay

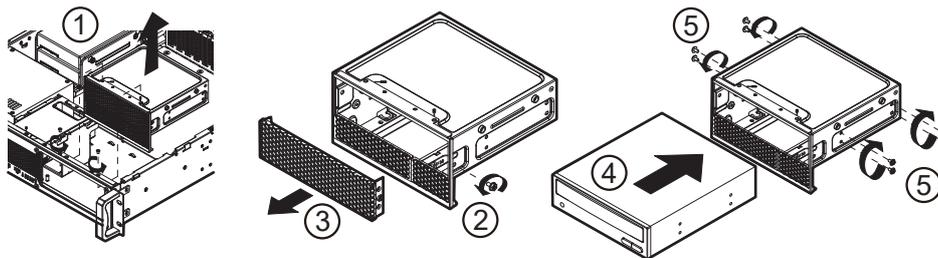


Installing 3.5" HDD

Slide 3.5 HDD into drive bay , and use four quakeproof screws to fix it at the bottom of the drive bay

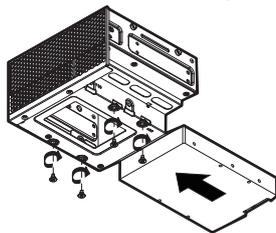

Installing FDD

1. Remove the lower front cover of the drive bay
2. Slide FDD into drive bay
3. Use four screws to fix it on both left and right sides of the drive bay

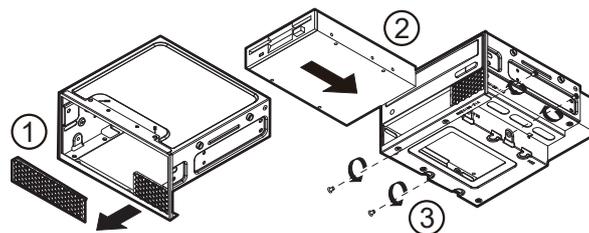


Installing 5.25"/3.5" Drive Bay


1. Slide the 5.25 /3.5 drive bay into the chassis
2. Use two screws to fix it on the chassis

Installing Rear Fan (2 x 40mm + 28mm)(Option)

Use two screws to fix the fan assembly
(fan+ finger guard) on rear window

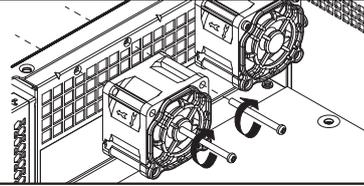

Installing Intrusion Switch

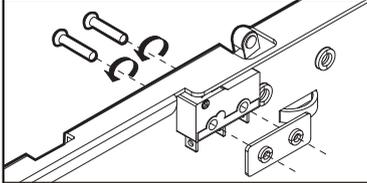

Use two screws to fix the intrusion switch
with a bracket on the chassis

 **CHIEFTEC**
IN THIS YOU CAN TRUST

Arena Electronic GmbH
Germany



MADE IN CHINA