



THE DISPLAY CHOICE OF PROFESSIONALS[®]

SC-Series Security LED-Backlit Display

www.agneovo.com

TABLE OF CONTENTS

• FCC information	3
• CE information	3
Safety Precautions	3
1. Scope	5
2. Functional specification	5
3. Controls and indicators	7
4. OSD Menu	10
5. Regulatory Agency	24
6. Mechanical	25

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with emission limits.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CE INFORMATION

The product must be installed according to the currently valid installation regulations for EMC to guarantee the designed use and to prevent EMC problems.

The device supplied with this manual is according to the EC, EMC Directive, 2004/108/EC & LVD 2006/95/EC

SAFETY PRECAUTIONS

- 1. Do not modify the three-prong grounding type monitor power plug in any way.
- 2. Operate this unit only from the type of power source indicated on the label.
- 3. Do not block or cover ventilation openings on the back or bottom of the monitor cabinet.
- 4. Do not place this monitor near a radiator or heating vent.
- 5. Do not push objects of any kind through cabinet openings. This may result in fire or electrical shock.
- 6. Before adding attachments always ask a service technician to perform routine safety tests to determine that equipment is in safe operating condition. Ground potential tests should be part of the routine safety check made by the service technician.
- 7. Do not place monitor on an unstable cart, stand, or shelf where it may fall and injure personnel or damage equipment.

- 8. Route power cords so that they cannot be walked upon or tripped over. Do not allow anything to rest on the power cord.
- 9. Do not install monitor in wet areas, or where it may be exposed to rain or water. Do not spill liquid of any kind on the unit.
- 10. Unplug the power cord from the unit before cleaning the display. Use only a damp cloth. Do not use alcohol, spirits, or ammonia to clean the display. **DO NOT ATTEMPT TO CLEAN THE INTERIOR OF THIS UNIT- THIS ACTION MUST BE PERFORMED BY THE SERVICE TECHNICIAN AS REQUIRED DURING NORMAL MAINTENANCE.**
- 11. Refer all servicing to qualified service personnel. **REMOVAL OF BACK COVER BY UNAUTHORIZED PERSONNEL MAY EXPOSE THE USER TO DANGEROUS VOLTAGES OR OTHER HAZARDS**.
- 12. Unplug the unit immediately and notify the service technician.
 - A. If liquid has been spilled into the display or the display has been exposed to rain or water.
 - B. If the unit has been dropped or the cabinet damaged.
 - C. If fuses continue to blow.
 - D. If the power cord is damaged or frayed.
 - E. If a distinct change from normal operation is apparent.

When replacement parts are required, be sure that the service technician uses components specified by the manufacturer which have the same characteristics as the original parts. UNAUTHORIZED SUBSTITUTIONS MAY RESULT IN FIRE, ELECTRICAL SHOCK OR OTHER HAZARDS.

Upon completion of any service or repairs, ask the technician to perform safety checks to determine that the equipment is in safe operating condition.

WARNING: SERIOUS SHOCK HAZARDS EXIST WITHIN THE COVERS OF THIS MONITOR. DO NOT OPEN THE COVERS UNDER ANY CIRCUMSTANCES, THERE ARE NO USER SERVICEABLE COMPONENTS INSIDE

1. Scope

This specification is used to define the performance of SC-17P, 19P, SC-22 & SC-24 series color TFT LCD monitor. This system also supports both video input and PC input. In video input mode, the system can automatically detect the NTSC signal and PAL signal. In PC mode, this system can support up to 1920 x 1080 VESA standard.

The user friendly OSD menu is also provided to make this system easy to operate.

2 Functional Specifications

2.1 Power Supply

The power supply spec is listed below,

AC INPUT

AC power input range : Rated voltage 100 – 240 Vac +/- 10%, 47~63Hz, 2 Amps max.

* Power consumption : 35W max.

* Power efficiency : 80% typical at normal line input and full load

2.2 Video Characteristics

Composite Video (CVBS): 1.0 Vp-p (0.5 – 1.5Vpp), Automatic switching from 75 Ω unbalanced termination to Hi-Z with loop-through operation.

Y/C (S-video): 1.0 Vp-p (0.5 – 1.5Vpp), Automatic switching from 75 Ω unbalanced termination to Hi-Z with loop-through operation.

2.3 PC Input

• VGA Input Analog RGB: 0.707 Vp-p. Support VESA Standard Timing

HDMI Input

HDMI Compatible Interface Digital Signal: TMDS. HDCP: HDCP 1.1

2.4 Audio Input

Signal Level: 1.0 Vrms

2.5 Environmental

• Temperature

Operating: 0° C to $+40^{\circ}$ C Storage: -20° C to $+60^{\circ}$ C


Humidity

Operating: 10% to 85% (non-condensing) Storage: 10% to 95% (non-condensing)

2.6 EDID

This series of displays support EDID, but does not support DDC2B function.

2.7 Connectors

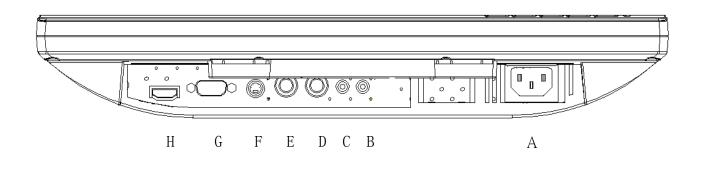

- A. AC INPUT: AC SOCKET
- B. AUDIO OUTPUT: Phone Jack, Stereo
- C. AUDIO INPUT: Phone Jack, Stereo
- D. CVBS OUTPUT: BNC Connector
- E. CVBS INPUT: BNC Connector
- F. S-VIDEO (Y/C) INPUT: Mini-DIN 4 pins Connector
- G. VGA INPUT: D-SUB 15 pins Connector
- H. HDMI INPUT: HDMI Connector


Set up sequence

- 1. Make sure the power of PC and/or Video source were turned off.
- 2. Plug the Video signal and VGA cable to monitor.
- 3. Turns the PC and/or Video source power on.
- 4. Plug the AC power cord onto AC Socket.

(Use reverse sequence to teardown the monitor)

3. Controls and indicators

SC-17P/SC-19P MONITOR

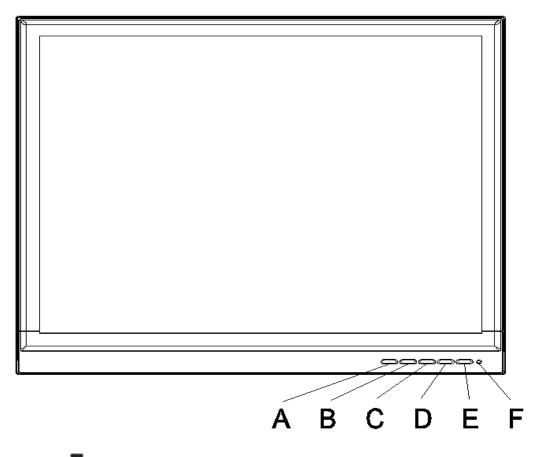

A. " 🔁 "Source button

• Press the button to show source menu. Select HDMI, S-Video, VGA and VIDEO input signal

B. " 🔻 "Down buttons

- Press the buttons to scrolling the cursor to desired function.
- Press the buttons to decrease the value of selected function in sub OSD menu.

C. "▲"Up button

- Press the buttons to scrolling the cursor to desired function.
- Press the buttons to increase the value of selected function in sub OSD menu.

D. " ^{CD} "Menu button

- Press the button to show the OSD main menu.
- As a confirmation key during the OSD operation.


E. "⁽¹⁾" Power button

Press the button to turn ON or turn OFF the monitor

F. POWER LED Indication

- Green Power on
- LED light off Power off
- Flash Green Sleep mode (PC mode only)

SC-22/SC-24 MONITOR

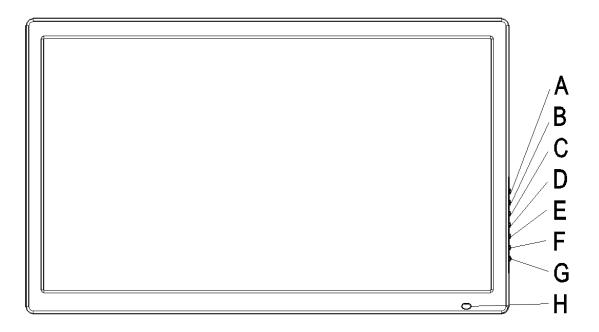

A. " 🚽 " Source button

• Press the button to show source menu. Select HDMI, S-Video, VGA and VIDEO input signal

B. " 🔺 " UP buttons

• Press the buttons to scrolling the cursor to desired function.

C. " **V** "Down button

• Press the buttons to scrolling the cursor to desired function.

D. " ▶ "Volume+ buttons

- Press the buttons to increase volume
- Press the buttons to increase the value of selected function in sub OSD menu.

E. " < "Volume- button

- Press the buttons to decrease volume
- Press the buttons to decrease the value of selected function in sub OSD menu.

F. "^{CD}"Menu button

- Press the button to show the OSD main menu.
- As a confirmation key during the OSD operation.

G. " ⁽¹⁾ " Power button

Press the button to turn ON or turn OFF the monitor


H. POWER LED Indication

- Green Power on
- LED light off Power off
- Flash Green Sleep mode (PC mode only)

4. OSD Menu

Hot key :

Quick adjust keys from front panel hot keys :

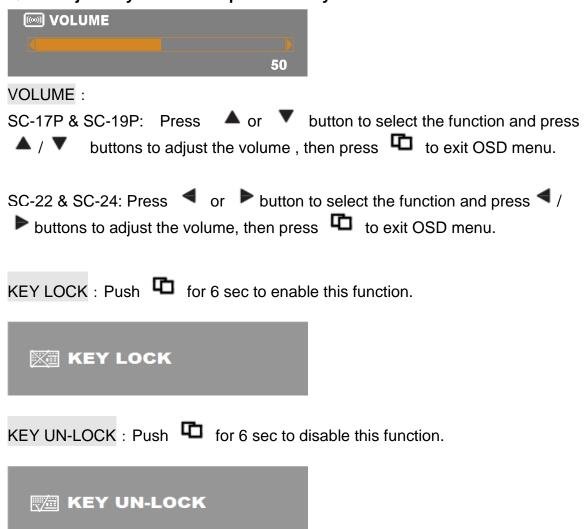

VGA & HDMI mode :

OSD Menu structure :

Use to select the VGA, HDMI, CVBS, or S-VIDEO, the menu structure within each varies, refer to sections below on how to set-up each option.

VGA / HDMI mode :


Press to bring up the MAIN MENU Page. The following page will appear

Press \blacktriangle / \checkmark to select an icon, then Press 1 to change the values in the sub menu.

VGA MAIN MENU

MAIN MENU				
(i) INFORMATION				
E LANGUAGE				

HDMI MAIN MENU

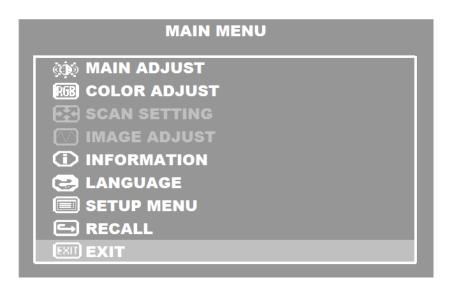



MAIN ADJUST :


MAIN ADJUST				
🔅 VIVID MODE	USER			
	50			
	40			
	50			

- 1. Press ▲ / ▼ to select an icon.
- 2. Press to select item,
- 3. SC-17P & SC-19P: Press ▲ / ▼ to adjust the value
 - SC-22 & SC-24: Press Image: SC-22 & SC-24: Press
- 4. Press to return
- VIVID MODE : Select the VIVID MODE (0~3 and USER) USER, 0: TEXT, 1: PHOTO, 2: MOVIE, 3: GAME
- BRIGHTNESS : Adjust the brightness value
- CONTRAST : Adjust the contrast value
- WOLUME : Adjust the volume
- EXIT EXIT : Press **D** to return to the main menu



COLOR ADJUST :

Set the color temperature of the LCD monitor for the CIE coordinate 9300°k or 6500°k or USER MODE

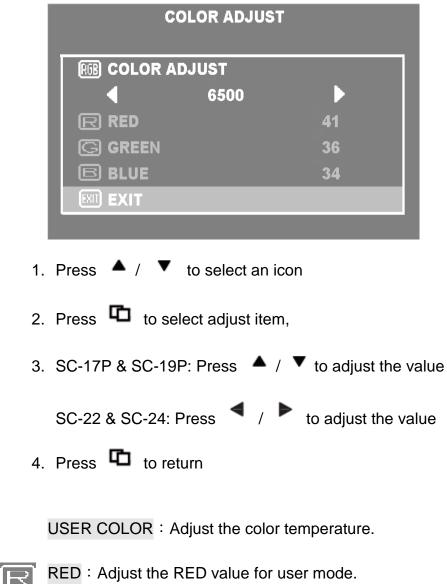

- GREEN : Adjust the GREEN value for user mode.
- BLUE : Adjust the BLUE value for user mode.
- EXIT : Press 陌 to return to the main menu

MAGE ADJUST (VGA ONLY) :

		DJUST		
	AUTO ADJUST		50	
	b V. POSITION		50	
) PHASE		48	
ЛЛ			50	
EX				
1. Pres	ss 🔺 / 🔻 to select	t an icon		
2. Pres	ss 🗅 to select adju	ist item		
3. SC-	17P & SC-19P: Press	▲ / ▼	to adjust	the value
SC-	22 & SC-24: Press	●	adjust the v	alue
4. Pres	ss 🗅 to return			
	DADJUST : Press	to auto	adjust the H	. Position,
С Н. РС	V. Positio DSITION:Adjust the	on, Phase, horizontal p		е
U. PC	SITION : Adjust the	vertical pos	ition value	
	SE:Adjust the phase	value		
	CK:Adjust the clock	value		
EXIT EXIT	: Press to to retur	n to the ma	ain menu	



Press 🖸	to get the VGA	timing information
---------	----------------	--------------------

INFORMA	TION
H. FREQUENCY	64KHZ
V. FREQUENCY	60HZ
RESOLUTION	1280X 1024



LANGUAGE : Press to enter the sub-menu

LANGUAGE		
ENGLISH		
FRANÇIS		
DEUTSCH		
ESPAÑOL		
ITALIANO		
DUTCH		
PORTUGUêS		
EXIT		

- 1. Press 🔺 / 🔻 to select language
- 2. Press to enter



SETUP MENU :

SETUP MENU	
OSD TIMEOUT GREEN MODE AUTO SHIFT EXIT	15 sec OFF OFF
1. Press ▲ / ▼ to select an ico	n
2. Press 🗅 to select adjust iten	n
3. SC-17P & SC-19P: Press 🔺 /	/ ▼ to adjust the value
SC-22 & SC-24: Press 4 /	to adjust the value
4. Press 🗅 to return	
OSD TIMEOUT : Adjust the OS	SD Show time (5 ~120 sec)

GREEN MODE : Off or On (5 min~10 min)


OFF – No function

ON – Screen will reduce back light to 80% within (5 min to 10 min) Screen will back to normal when any button is being touched.

AUTO SHIFT : Adjust AUTO SHIFT ON/OFF

OFF – No Function

ON – Every one hour there will one scan line from top to bottom (Every 1 second down one scan line) to prevent panel sticking.

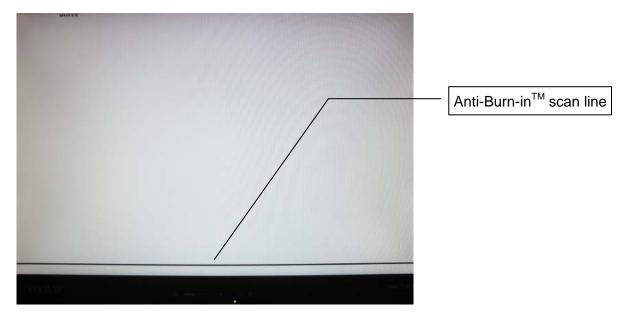

EXIT : Press **C** to return to the main menu



RECALL :

Brightness, Contrast, Volume, Vivid Mode, OSD Timeout, Green Mode, Auto Shift return to default Value.

Video mode :

Press to bring up the MAIN MENU Page. The following page will appear

Press \blacktriangle / \checkmark to select an icon, then Press \Box to change the values in the sub menu.

MAIN MENU				
୍ର୍ଭ୍ର୍ MAIN ADJUST				
SCAN SETTING				
🕥 IMAGE ADJUST				
(i) INFORMATION				
E LANGUAGE				

MAIN ADJUST :


MAIN ADJUST				
🔅 🔅 VIVID MODE	USER			
	50			
CONTRAST	40			
I SHARPNESS	49			
ROB SATURATION	50			
I TINT	50			
	49			


- 1. Press 🔺 / 🔻 to select an icon
- 2. Press to select item
- 3. SC-17P & SC-19P: Press ▲ / ▼ to adjust the value
 SC-22 & SC-24: Press ◀ / ▶ to adjust the value
- 4. Press to return

- VIVID MODE : Select the VIVID MODE (0~3 and USER) USER, 0: TEXT, 1: PHOTO, 2: MOVIE, 3: GAME
- BRIGHTNESS : Adjust the brightness value.
 - CONTRAST : Adjust the contrast value.
- SHARPNESS : Adjust Image sharp.
- **SATURATION** : Adjust Image saturation.
- TINT : Adjust Image tint. (NTSC only).
- **VOLUME** : Adjust the volume .
- EXIT EXIT : Press 🏚 to return to the main menu.

COLOR ADJUST :

Set the color temperature of the LCD monitor for the CIE coordinate 9300°k or 6500°k or USER MODE

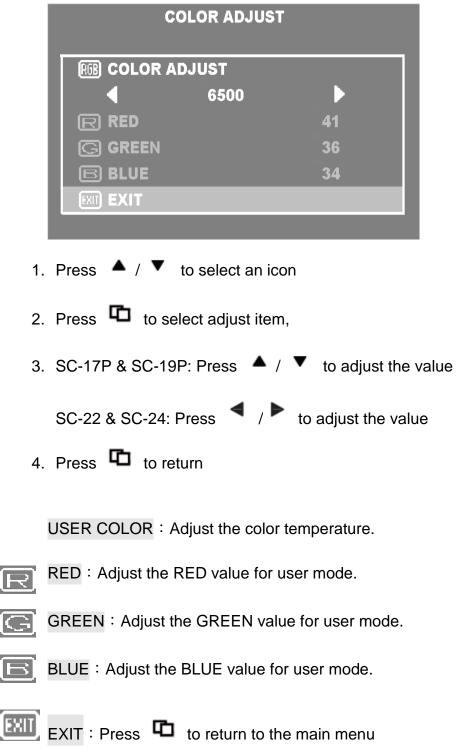

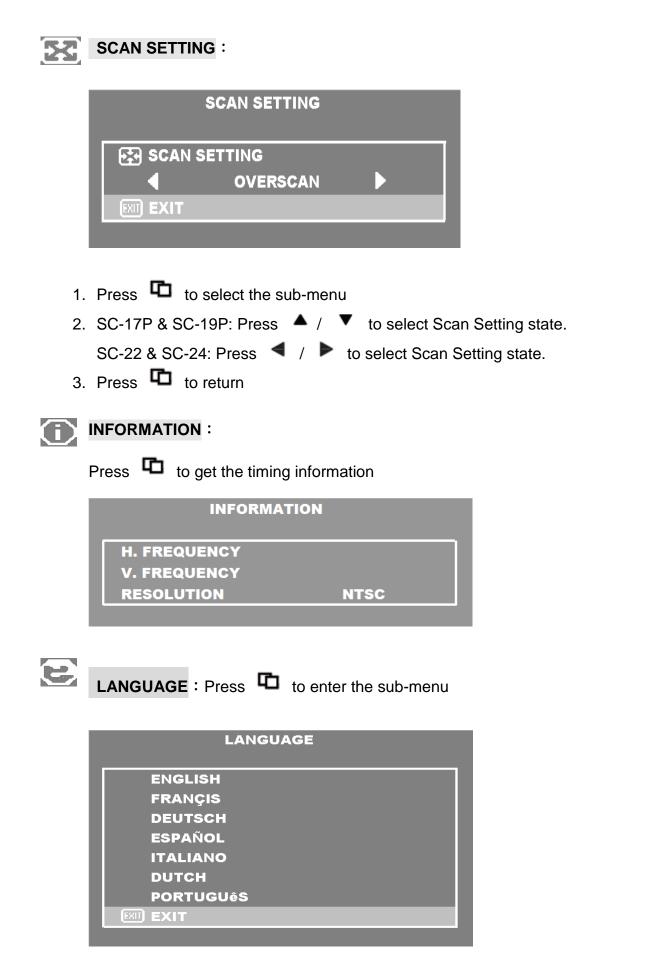

- 1. Press \blacktriangle / \checkmark to select language
- 2. Press to enter



SETUP MENU :


SETUP MEN	U
OSD TIMEOUT GREEN MODE	15 sec OFF
	OFF
 Press ▲ / ▼ to select an ico Press to select adjust item SC-17P & SC-19P: Press ▲ / SC-22 & SC-24: Press ▲ / Press to return 	n ▼ to adjust the value
OSD TIMEOUT : Adjust the OSD) Show time (5 ~120 sec)

- GREEN MODE : Off or On (5 min~10 min)
 - OFF No function
 - ON Screen will reduce back light to within (5 min to 10 min) Screen will back to normal when any button is being touched.

AUTO SHIFT : Adjust AUTO SHIFT ON/OFF

OFF – No Function

ON – Every one hour there will one scan line from top to bottom (Every 1 second down one scan line) to prevent panel sticking.

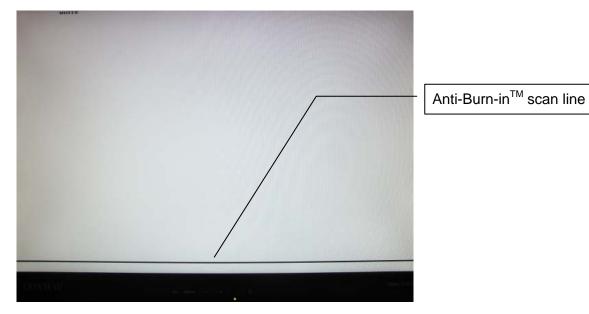

EXIT : Press **b** to return to the main menu.



RECALL:

Brightness, Contrast, Sharpness, Saturation, Tint, Volume, Vivid Mode, OSD Timeout, Green Mode, Auto Shift return to default Value.

5. Regulatory Agency

5.1 Safety Approvals

This series design shall meet the standards of the following domestic and foreign agencies:

CE LVD : EN60950

5.2 EMI/EMS Emission Approvals

This series design shall meet following EMI/EMS specifications: FCC Compliance: FCC Rules and Regulations, Part 15, subpart B, Class B. CE COMPLIANCE: EN55022 class B, EN55024, EN50130-4

6. Mechanical


6.1 Cabinet

Material: Plastic


Finish: Black

6.2 Dimensions

SC-17P & SC-19P Monitor

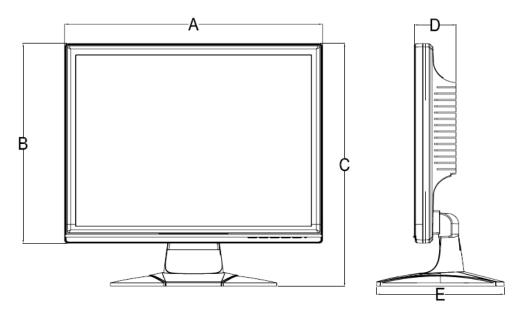

SC-22 & SC-24 Monitor

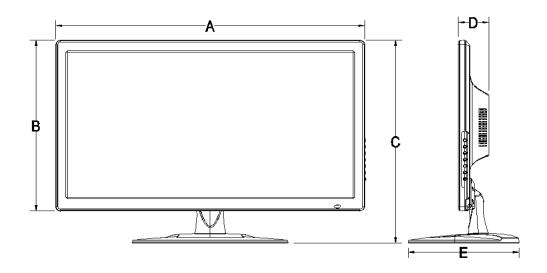

Model	Unit	А	В	С	D	Е
SC-17P	mm	372	317	384	60	184
SC-19P	mm	418	365	412	61	184
SC-22	mm	517	317	376	51	185
SC-24	mm	577	348	407	51	224

6.3 Packaging Dimensions

Model	Unit	W	L	Н
SC-17P	mm	450	138	467
SC-19P	mm	464	121	585
SC-22	mm	565	114	420
SC-24	mm	626	116	453

Company Address: 5F-1, No. 3-1, Park Street, Nangang District, Taipei, 11503, Taiwan.