

**N1WYHPE1**
**N1WYHPE2**

Subject to change without notice.


## CONTENTS


**1.** SAFETY INFORMATION..... 2
**2.** PRODUCT & ACCESSORIES INFORMATION..... 2
**3.** BEFORE INSTALLATION..... 3
**4.** INSTALLATION UNDER A WASHING MACHINE..... 4
**5.** INSTALLATION UNDER A TUMBLE DRYER..... 6
**6.** FINAL STEPS..... 8
**7.** FOR ITALY ONLY..... 8
**8.** ENVIRONMENTAL CONCERNS..... 8


## **1.** SAFETY INFORMATION


⚠ **WARNING!**

Do not stack 2 appliances on the pedestal.

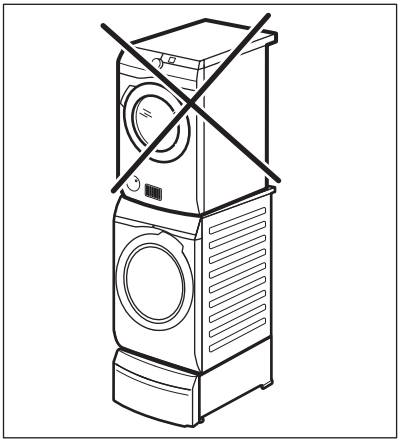

⚠ **WARNING!**

Do not install it alone.

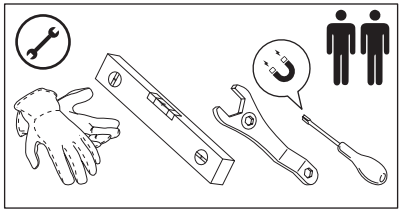

⚠ **WARNING!**


Before proceeding with installation, make sure there is enough room.

⚠ **WARNING!**


Before use of the appliance (washing machine or tumble dryer) make sure that all the rear brackets (2×) are fixed with screws.

## **2.** PRODUCT & ACCESSORIES INFORMATION

**1. Product dimension**

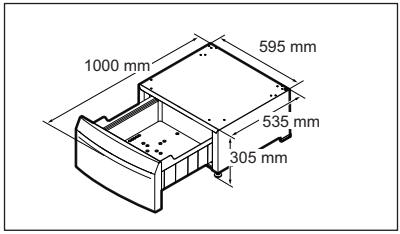


**2. Parts and accessories**

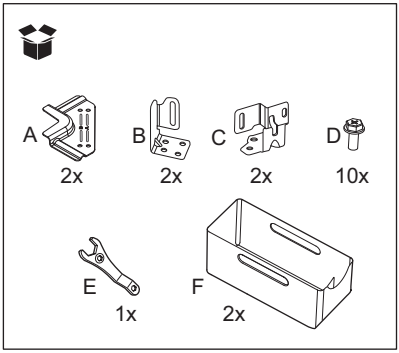



**a.** 2× front metal brackets.
**b.** 2× rear brackets for washing machine.
**c.** 2× rear brackets for tumble dryer.
**d.** 10× screws (8 are enough for tumble dryer installation).
**e.** 1× spanner to adjust the levelling feet.
**f.** 2× additional containers.

## 3. BEFORE INSTALLATION

1. Remove the pedestal and all accessories from the box.
2. Make sure that the rear rubber feet are mounted.

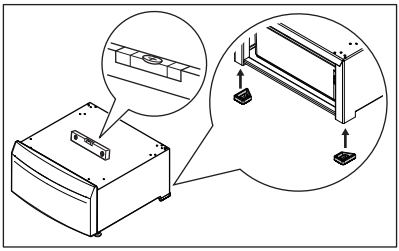

3. Adjust the front adjustable feet to make the pedestal stable. Make sure that the drawer does not touch the floor during opening.

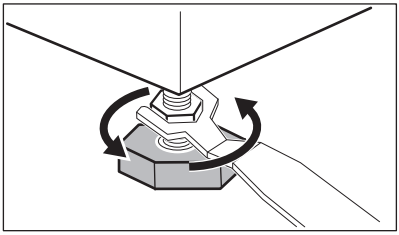


**⚠ WARNING!**

If you install the pedestal under a **brand new appliance:** unpack the appliance as indicated in the instructions supplied with it, then proceed to the next chapter.

**⚠ WARNING!**

If the **appliance is already connected:**

- Disconnect the mains plug from the mains socket.
- For **washing machine:**
  - Close the water tap.
  - Disconnect the inlet hose(s) from the water tap and let the water flow out from the inlet hose(s) and the drain hose and collect it in a shallow basin.
- For **tumble dryer:**
  - Empty the water container in a washbasin or, if available, activate the direct drain system to let the water flow out.

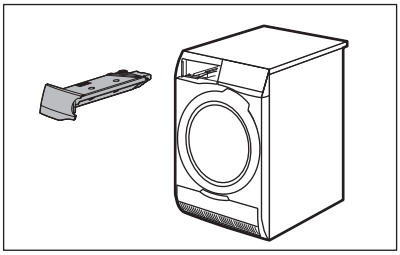


# 4. INSTALLATION UNDER A WASHING MACHINE

Please follow this section only if your appliance is a washing machine.
Your appliance is a tumble dryer? Go to "Installation under a tumble dryer".


## 4.1 Before we start

Check the backside of your appliance:

1. If the two holes provided at the bottom are on the flat surface as shown in figure **(1)**, follow **Instructions A**.

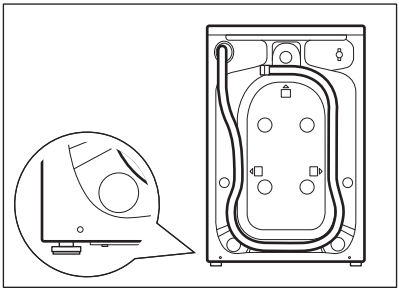


2. If the two holes provided at the bottom are on the embossed surface as shown in figure **(2)**, follow **Instructions B**.

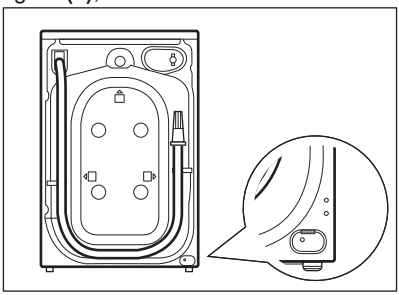


## 4.2 Assemble


1. Screw the front brackets **(component "A")** on the pedestal.

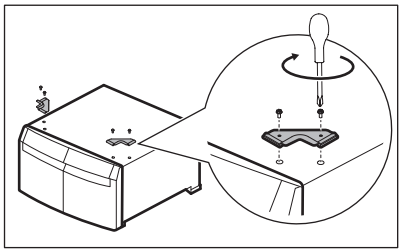

- If you follow **Instructions A**, please use **Holes row A**.

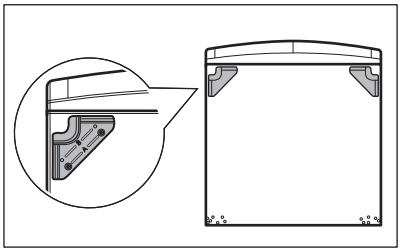


- If you follow **Instructions B**, please use **Holes row B**.

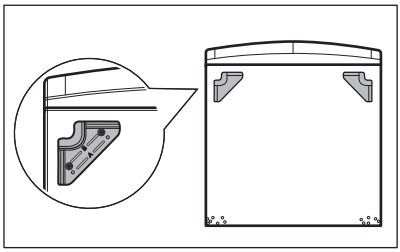


2. Gently lay the washing machine on the side of the detergent dispenser.

Lay it on a cardboard or on a piece of polystyrene avoiding scratches on the appliance.


3. Loosen the appliance adjustable feet at the same height to facilitate the interlocking in the front brackets of stand.

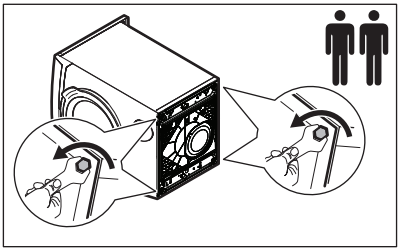


4. Lay the pedestal on the same side and let it slide under the appliance getting stuck the front feet in the front brackets correctly.

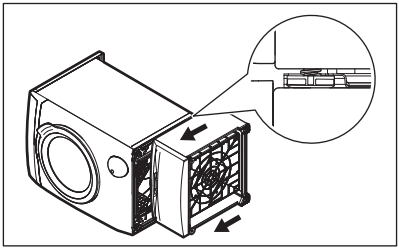


5. The rear fixing bracket **(component "B")** has two configuration sides: **side A** and **side B**:
   - If you follow **Instructions A**, please use **Side A**.

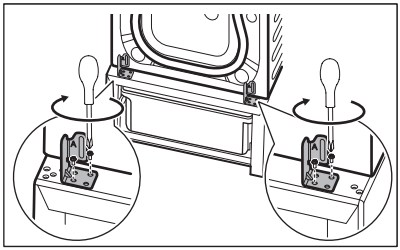


   - If you follow **Instructions B**, please use **Side B**.

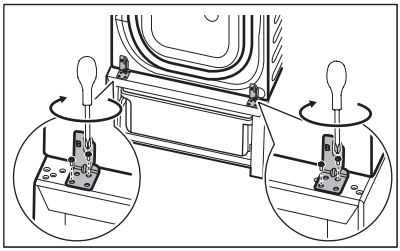

6. Use the screws supplied to secure the rear brackets **(component "B")** both on the washing machine and both on the pedestal.

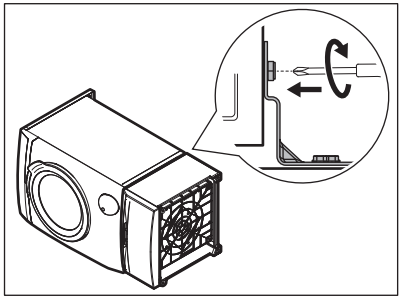

7. Put the pedestal and the washing machine in vertical position. Make sure that the screws are firmly screwed and, if necessary, adjust the appliance feet.

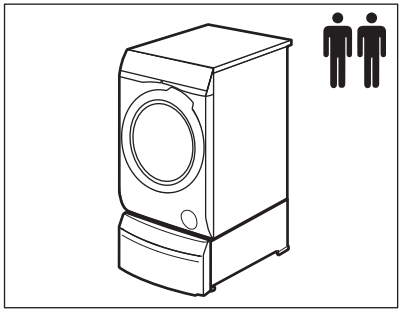


# 5. INSTALLATION UNDER A TUMBLE DRYER

Please follow this section only if your appliance is a tumble dryer.
Your appliance is a washing machine? go to "Installation under a washing machine".


## 5.1 Before we start

Check the backside of your tumble dryer:


1. If the it looks as shown in figure **(1)**, follow **Instructions A**.

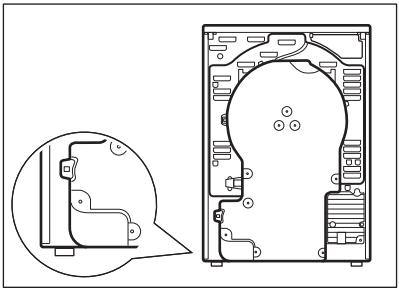

2. If the it looks as shown in figure **(2)**, follow **Instructions B**.

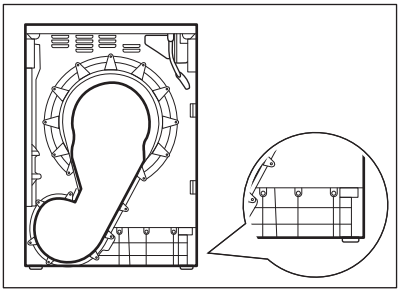



3. If the it looks as shown in figure **(3)**, follow **Instructions B**.

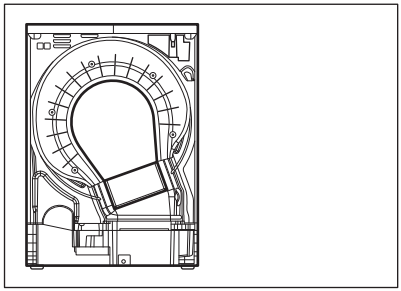


## 5.2 Assemble

1. Screw the front brackets **(component "A")** on the pedestal.
   There are two sets of punch holes, identified by **row A** and **row B**. Use the hole set **row B**.

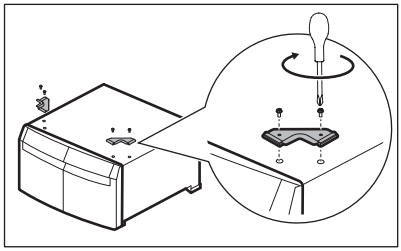


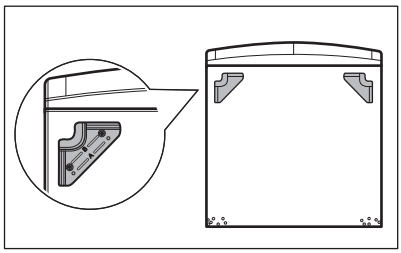


2. Unscrew the two bottom screws from the back of the appliance.

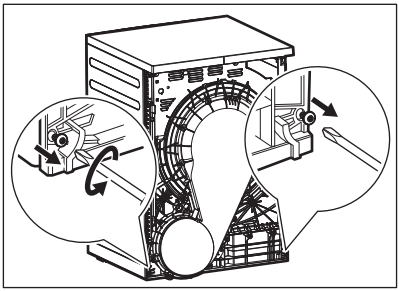



3. The rear fixing bracket **(component "B")** has two configurations:
   - If you follow **Instructions A**, please use **Side A**.

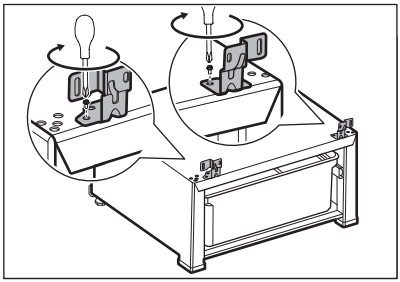

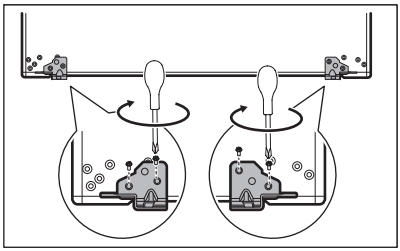


   - If you follow **Instructions B**, please use **Side B**.

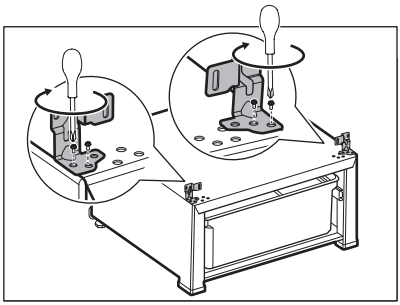


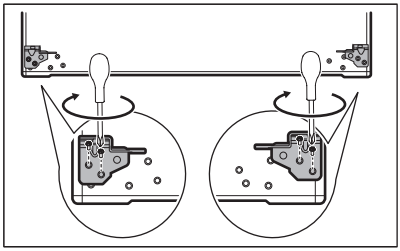

4. Lift the appliance and let it slide on the pedestal getting stuck the front feet in the front brackets correctly.

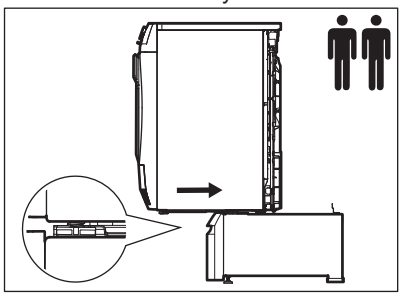


5. Screw the rear brackets **(component "C")** to the back of the appliance by using the screws previously removed.

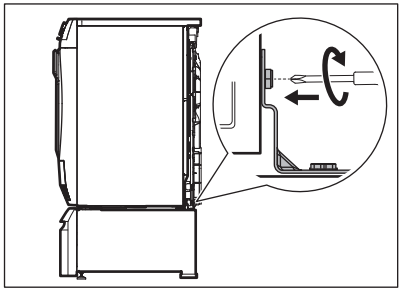


## 6. FINAL STEPS

1. Put the pedestal/appliance column in the desired place and level it by screwing the front stand feet. For a perfect levelling, use a spirit level.

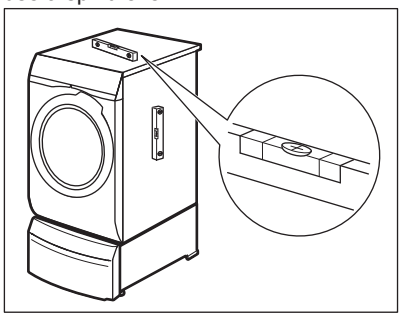

2. If available, you can insert the additional container(s) **(component "F")**.

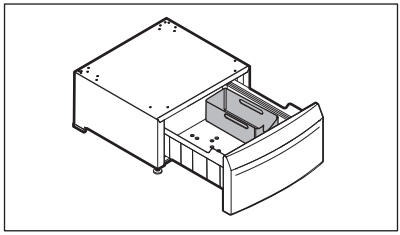

3. Connect the appliance as indicated in the instructions supplied with the appliance.

## 7. FOR ITALY ONLY

**Etichetta ambientale - Smaltimento rifiuti imballo**

| Tipologia di imballaggio | Codice materiale(da Decisione 97/129/CE) | Indicazioni per la raccolta differenziata (*) |
|---|---|---|
| Scatola prodotto | PAP 20 | CARTA |
| Imballo protettivo (**) | LDPE 4 | PLASTICA |

(**) Verifica le disposizioni del tuo Comune per la gestione dei rifiuti.

La presenza degli imballi può variare a seconda dei modelli.

## 8. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol ♺. Put the packaging in relevant containers to recycle it.




A25851301-A-072023