

Dell Pro 27 Adjustable Stand Monitor E2726HS

Teardown Instructions

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Contents

Safety instructions	4
Before working inside your monitor	5
After working inside your monitor	5
Disassembly and reassembly	6
Recommended tools	6
Screw list	6
Stand	7
Removing the stand	7
Installing the stand	8
Back cover	9
Removing the back cover	9
Installing the back cover	10
Speakers	11
Removing the speakers	11
Installing the speakers	12
LED board	13
Removing the LED board	13
Installing the LED board	14
Keypad board	15
Removing the keypad board	15
Installing the keypad board	16
Main chassis	17
Removing the main chassis	17
Installing the main chassis	18
Main board	19
Removing the main board	19
Installing the main board	20
Contacting Dell	21
Revision History	22

Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your monitor.

NOTE: Before using the monitor, read the safety information that is shipped with your monitor and printed on the product. Keep the documentation at a secure location for future reference.

CAUTION: The possible long-term effect of listening to audio at high volume through the headphones (on monitors that support it) can damage your hearing ability.

WARNING: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards and/or mechanical hazards.

- Place the monitor on a solid surface and handle it carefully.
 - The screen is fragile and can be damaged if dropped or pressed with a sharp object.
 - Ensure that your monitor is electrically rated to operate with the AC power available in your location.
 - Keep the monitor at room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
 - Connect the power cable from the monitor to a wall outlet that is near and accessible.
- Do not place or use the monitor on a wet surface or near water.
- Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
- Unplug the monitor when it is going to be left unused for an extended period.
- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
- Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions that are marked on the product.
- Certain monitors can be wall-mounted using the VESA mount that is sold separately. Ensure to use the correct VESA specifications as mentioned in the wall-mounting section of the User's Guide.

For information about safety instructions, see the *Safety, Environmental, and Regulatory Information (SERI)* document that is shipped with your monitor.

Before working inside your monitor

Steps

1. Save and close all open files and exit all running applications.
2. Turn off your monitor.
3. Disconnect your monitor and all attached devices from their electrical outlets.
4. Disconnect all attached network devices and peripherals, such as the keyboard, mouse, and dock from your monitor.
- ⚠ **WARNING:** To disconnect a network cable, first unplug the cable from your monitor and then unplug the cable from the network device.
5. Remove any media card and optical disc from your monitor, if applicable.

After working inside your monitor

⚠ **CAUTION:** Leaving stray or loose screws inside your monitor may severely damage it.

Steps

1. Replace all screws and ensure that no stray screws remain inside your monitor.
2. Connect any external devices, peripherals, or cables you removed before working on your monitor.
3. Reinsert any media cards, discs, or any other parts that you removed before working on your monitor.
4. Connect your monitor and all attached devices to their electrical outlets.
5. Turn on your monitor.

Disassembly and reassembly

⚠ **CAUTION:** The information in this section is intended for authorized service technicians in the EMEA region. Dell prohibits users from disassembling the monitor, and any damage that is caused by unauthorized servicing will not be covered under the warranty.

Recommended tools

Tool Description:

- Phillips screwdriver #0
- Phillips screwdriver #2
- Nut driver 5 mm
- Penknife

Screw list

- ① **NOTE:** When removing screws from a component, it is recommended to note the screw type, the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- ① **NOTE:** Some monitors have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- ① **NOTE:** Screw color may vary depending on the configuration ordered.

Table 1. Components and descriptions.

Component	Screw type	Quantity	Screw image
Back cover	M4x10	4	
Keypad board	M2x3.3	2	
Main chassis	M3x3	2	
Main Board	M3x6	3	
Main board groundwire	M4x8	1	
VGA connector	M3x8	2	

Stand

Removing the stand

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)

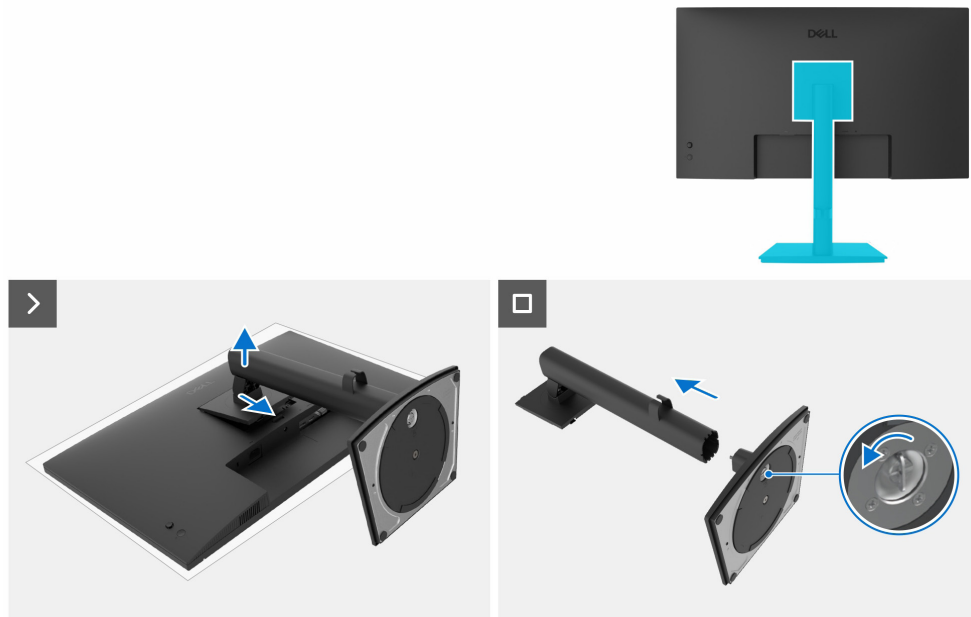


Figure 1. Removing the stand

Steps

1. Place the monitor on a soft cloth or cushion on the desk.
2. Hold and push the stand-release button.
3. Lift the stand up and away from the monitor.
4. Open the screw handle at the bottom of the stand base, and turn it anti-clockwise to unlock the riser with base.
5. Remove the stand riser from the stand base.

Installing the stand

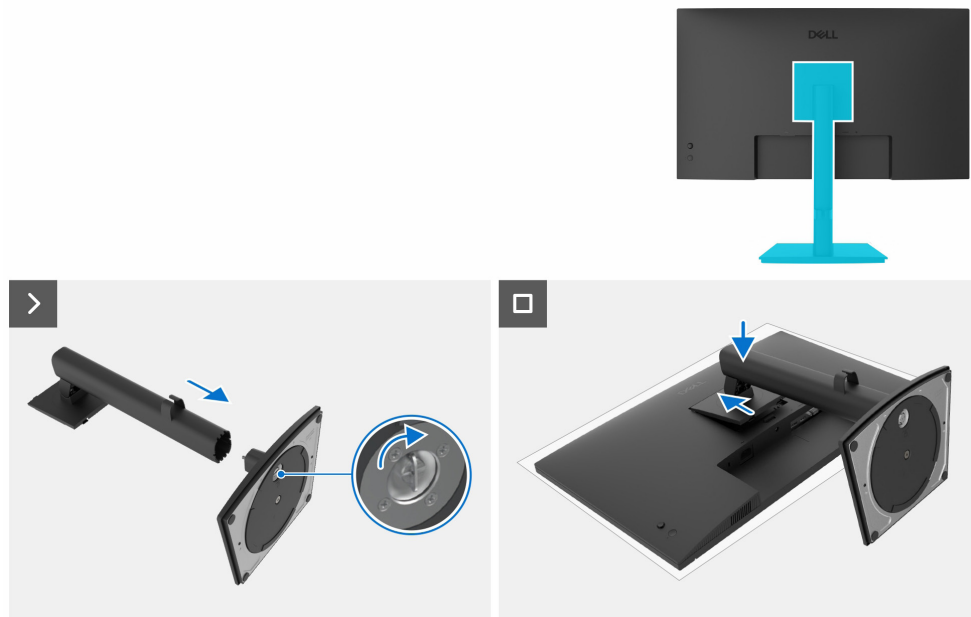


Figure 2. Installing the stand

Steps

1. Align the tabs on the stand base with the slots on the stand riser.
2. Insert the stand riser on the stand base firmly.
3. Open the screw handle at the bottom of the stand base, and rotate it clockwise to tighten the screw firmly. Close the screw handle.
4. Place the monitor on a soft cloth or cushion near the edge of the desk.
5. Align the stand assembly bracket to the monitor head.
6. Insert the stand assembly bracket into the monitor until it locks in place.

Next steps

1. Follow the procedure in [After working inside your monitor.](#)

Back cover

Removing the back cover

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)
2. Remove the [stand](#).

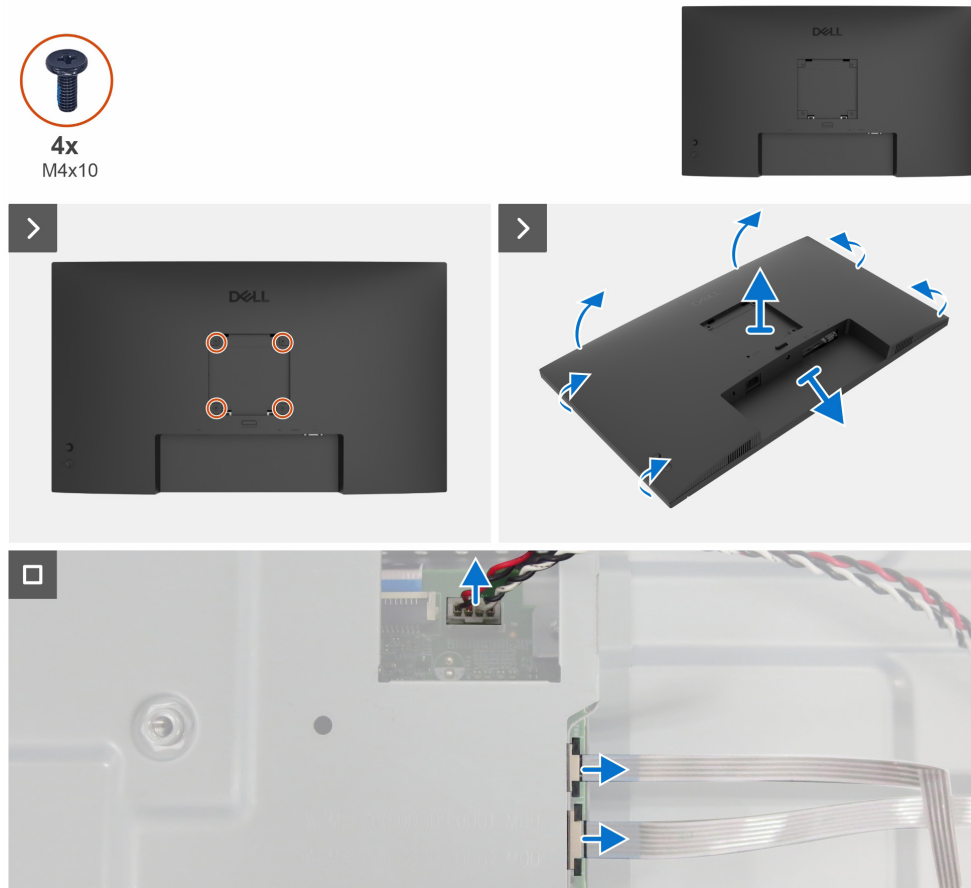


Figure 3. Removing the back cover

Steps

1. Remove the four screws (M4x10) to release the back cover.
2. Using both hands, gently pry the back cover off, starting from the top side, then moving to the left and right sides.
3. Partially lift the back cover from the bottom edge.
4. Disconnect the keypad cable, LED cable and speaker cable from the connectors on the main board.
5. Remove the back cover from the display assembly.

Installing the back cover

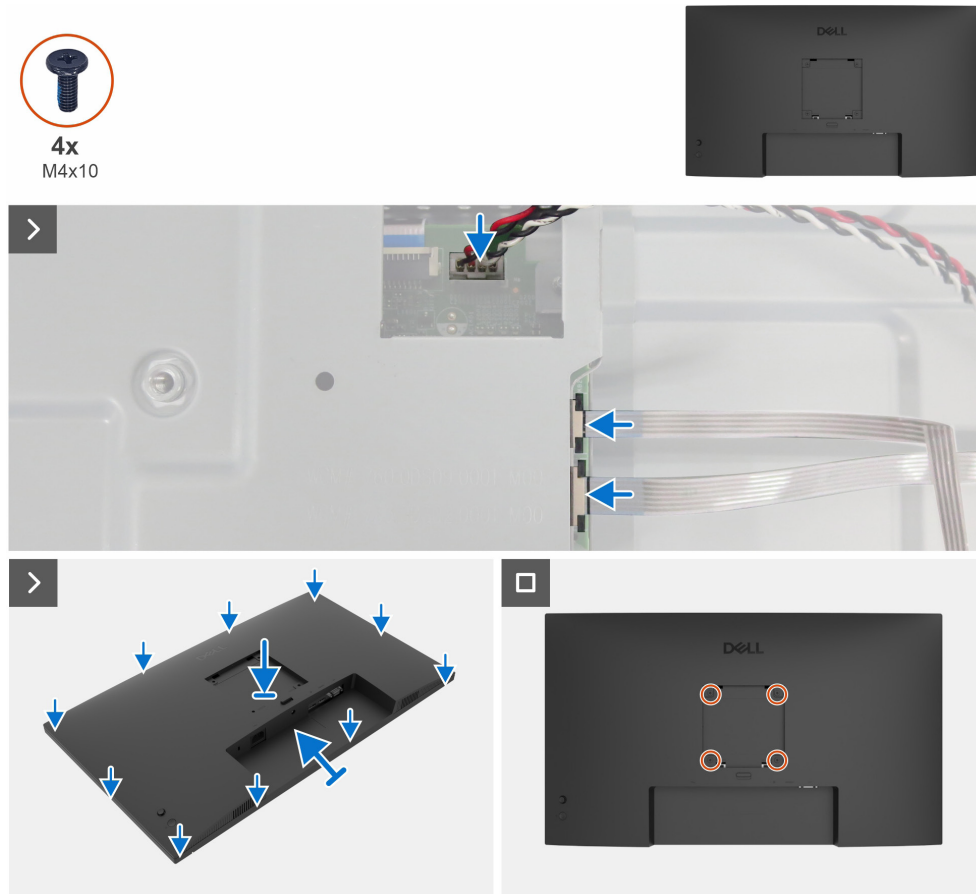


Figure 4. Installing the back cover

Steps

1. Connect the speaker cable, LED cable and keypad cable to the connectors on the main board.
2. Align the back cover with the main chassis, then press along the sides to snap the back cover into place.
3. Replace the four screws (M4x10) to secure the back cover to the monitor.

Next steps

1. Install the [stand](#).
2. Follow the procedure in [After working inside your monitor](#).

Speakers

Removing the speakers

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)
2. Remove the [stand](#).
3. Remove the [back cover](#).

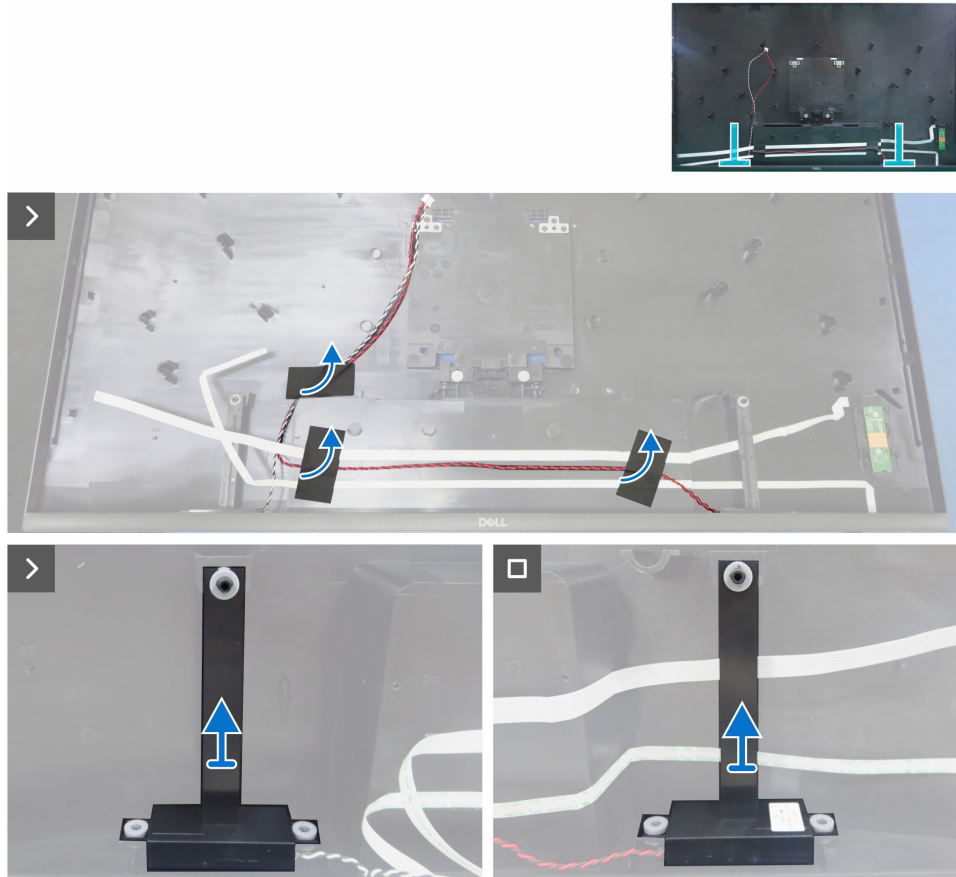


Figure 5. Removing the speakers

Steps

1. Peel the three tapes on the speaker cable.
2. Remove the two speakers from the locating pins on the back cover.

Installing the speakers

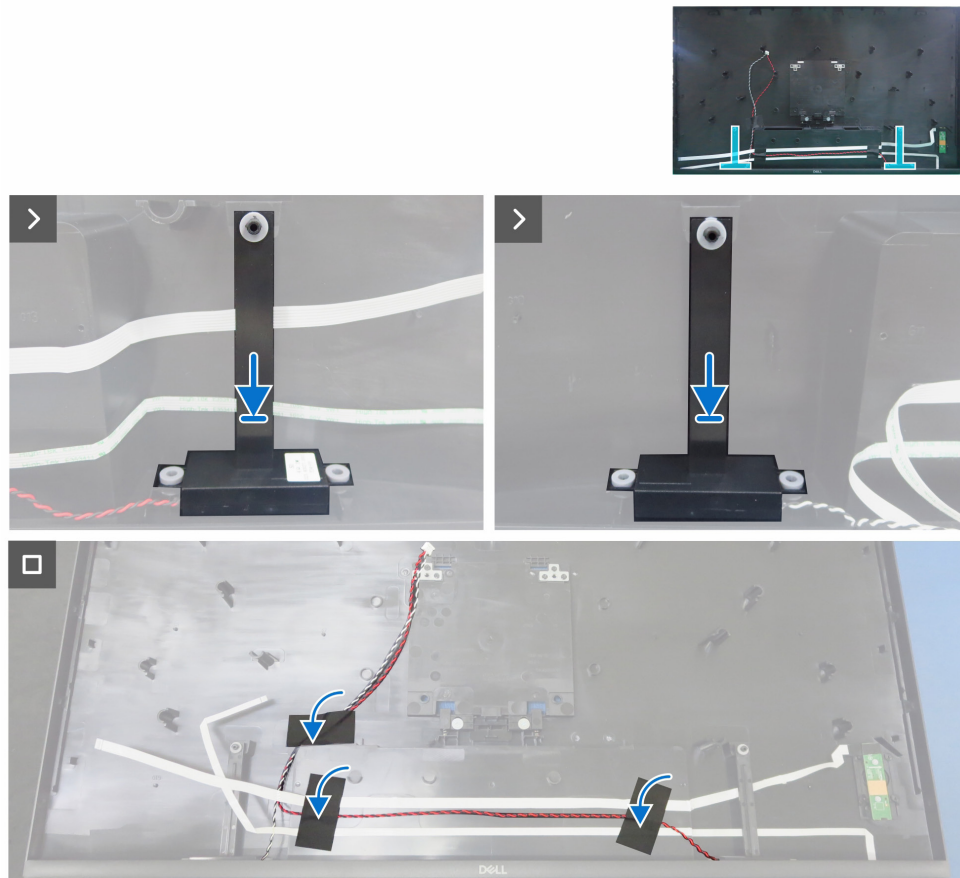


Figure 6. Installing the speakers

Steps

1. Align the holes on the two speakers to the locating pins on the back cover, and place it down.
2. Adhere the three tapes to secure the speaker cable to the back cover.

Next steps

1. Install the [back cover](#).
2. Install the [stand](#).
3. Follow the procedure in [After working inside your monitor](#).

LED board

Removing the LED board

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)
2. Remove the [stand.](#)
3. Remove the [back cover.](#)
4. Remove the [speakers.](#)

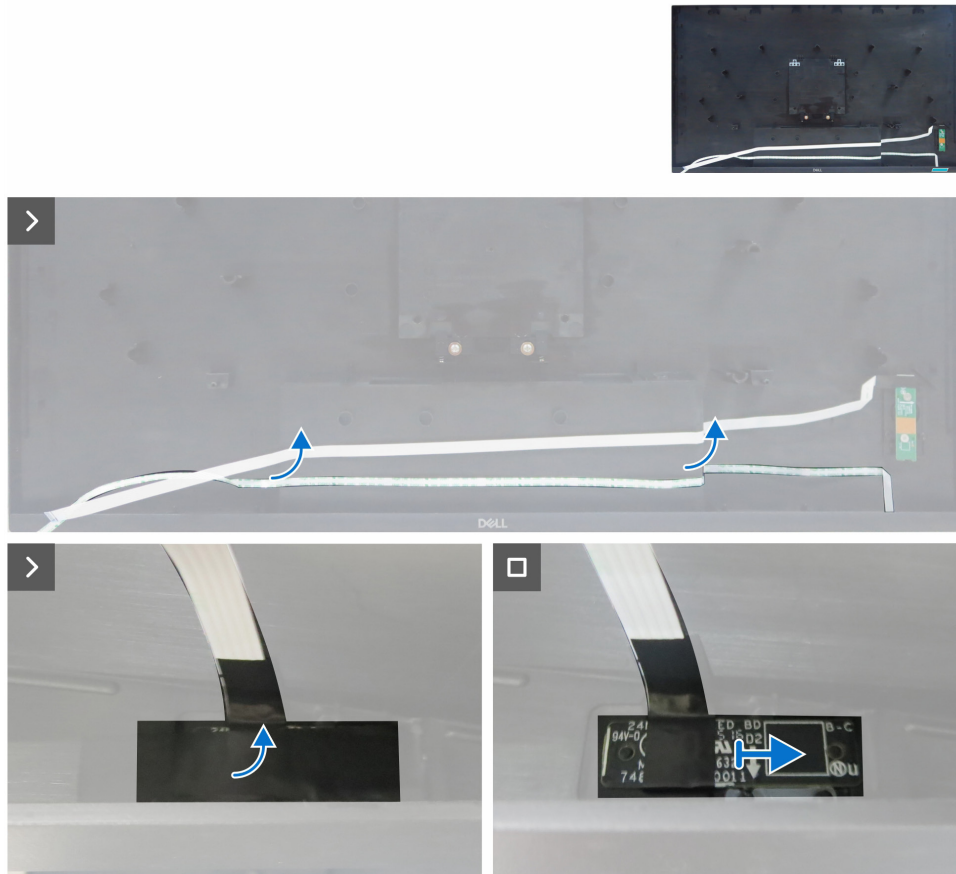


Figure 7. Removing the LED board

Steps

1. Peel the double-sided tape that secures the LED cable to the back cover.
2. Peel the mylar tape from the LED board.
3. Remove the LED board from the pins on the back cover.

Installing the LED board

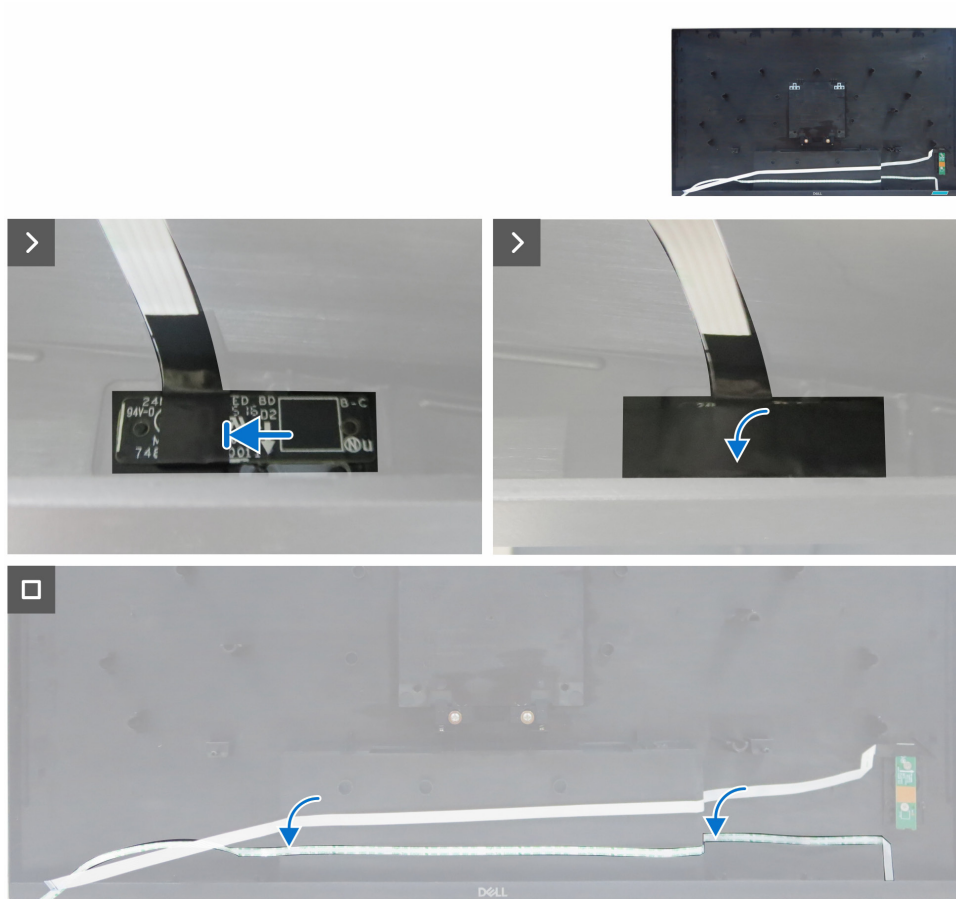


Figure 8. Installing the LED board

Steps

1. Align the holes on the LED board with the pins on the back cover, and place it in the slot.
2. Adhere the mylar tape to cover the LED board.
3. Adhere the double-sided tape to secure the LED cable to the back cover.

Next steps

1. Install the [speakers](#).
2. Install the [back cover](#).
3. Install the [stand](#).
4. Follow the procedure in [After working inside your monitor](#).

Keypad board

Removing the keypad board

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)
2. Remove the [stand.](#)
3. Remove the [back cover.](#)
4. Remove the [speakers.](#)
5. Remove the [LED board.](#)

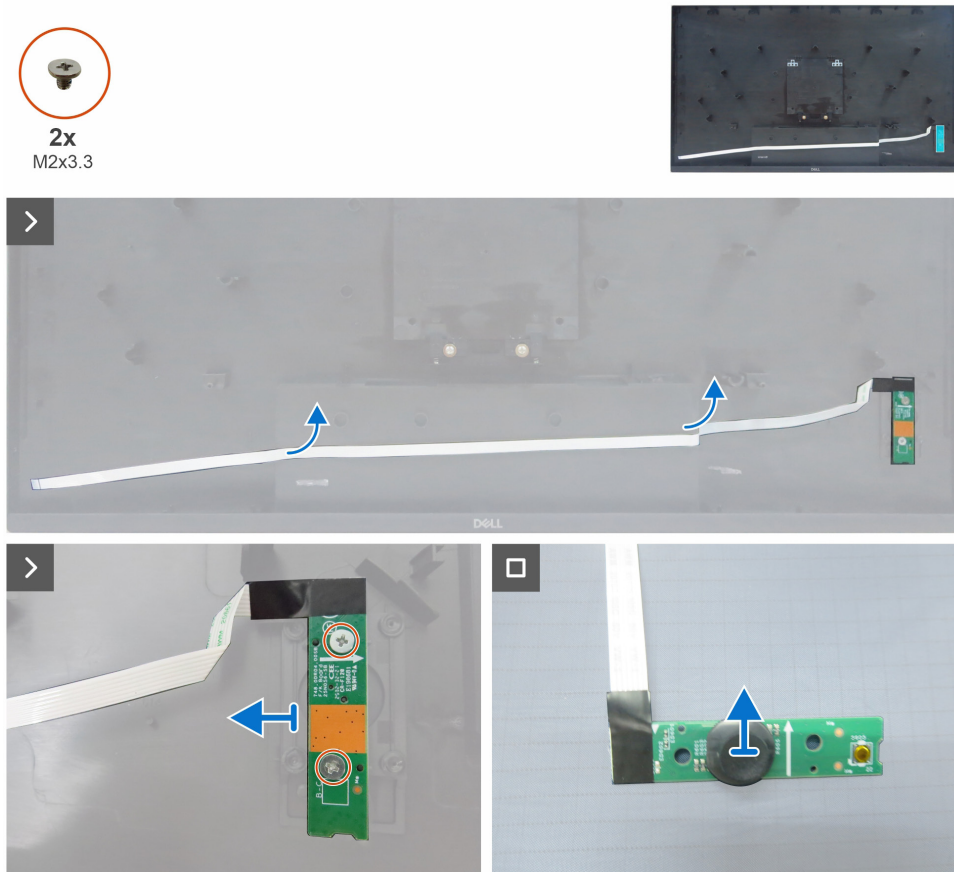


Figure 9. Removing the keypad board

Steps

1. Peel the double-sided tape that secures the keypad cable to the back cover.
2. Remove the two screws (M2x3.3) that secure the keypad board to the back cover.
3. Remove the keypad board from the pins on the back cover.
4. Remove the joystick key from the keypad board.

Installing the keypad board

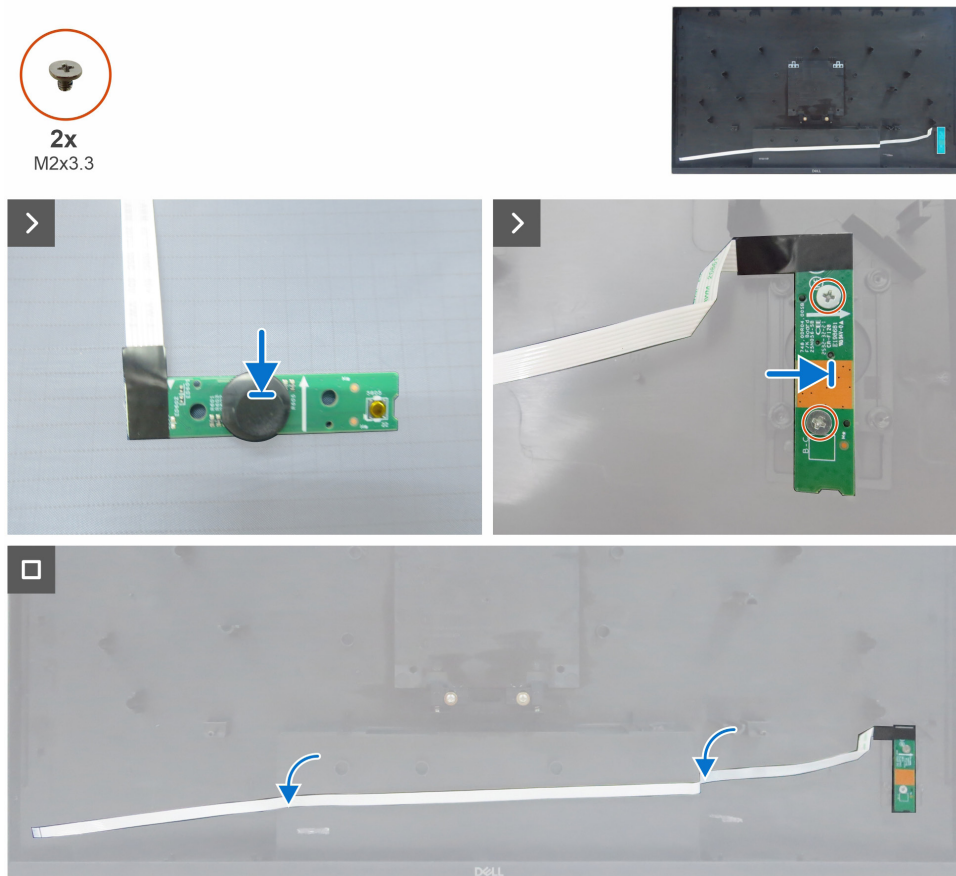


Figure 10. Installing the keypad board

Steps

1. Replace the joystick key to the keypad board.
2. Align the holes on the keypad board with the screw holes on the back cover, and place it down.
3. Replace the two screws (M2x3.3) that secure the keypad board to the back cover.
4. Adhere the double-sided tape to secure the keypad cable to the back cover.

Next steps

1. Install the [LED board](#).
2. Install the [speakers](#).
3. Install the [back cover](#).
4. Install the [stand](#).
5. Follow the procedure in [After working inside your monitor](#).

Main chassis

Removing the main chassis

Prerequisites

1. Follow the procedure in [Before working inside your monitor](#).
2. Remove the [stand](#).
3. Remove the [back cover](#).
4. Remove the [speakers](#).
5. Remove the [LED board](#).
6. Remove the [keypad board](#).

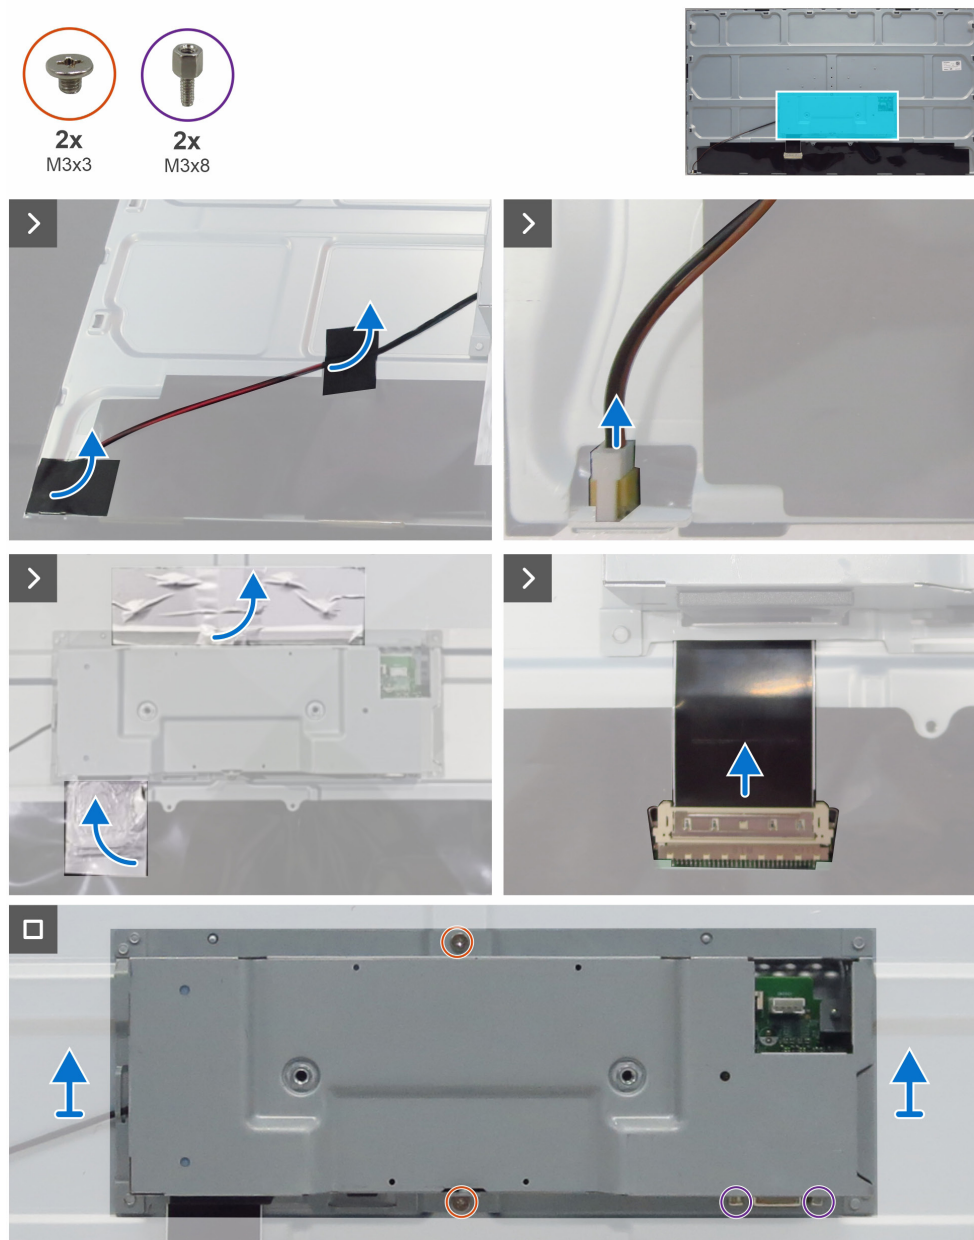


Figure 11. Removing the main chassis

Steps

1. Peel the acetate tapes and disconnect the lightbar cable from the connector on the display panel.
2. Peel the two aluminum foils from the LVDS connector and main chassis.
3. Remove the two screws (M3x3) that secure the main chassis to the display panel.
4. Remove the two screws (M3x8) that secure the VGA connector main chassis
5. Disconnect the LVDS cable from the connector on the display panel.
6. Lift and remove the main chassis from the display panel.

Installing the main chassis

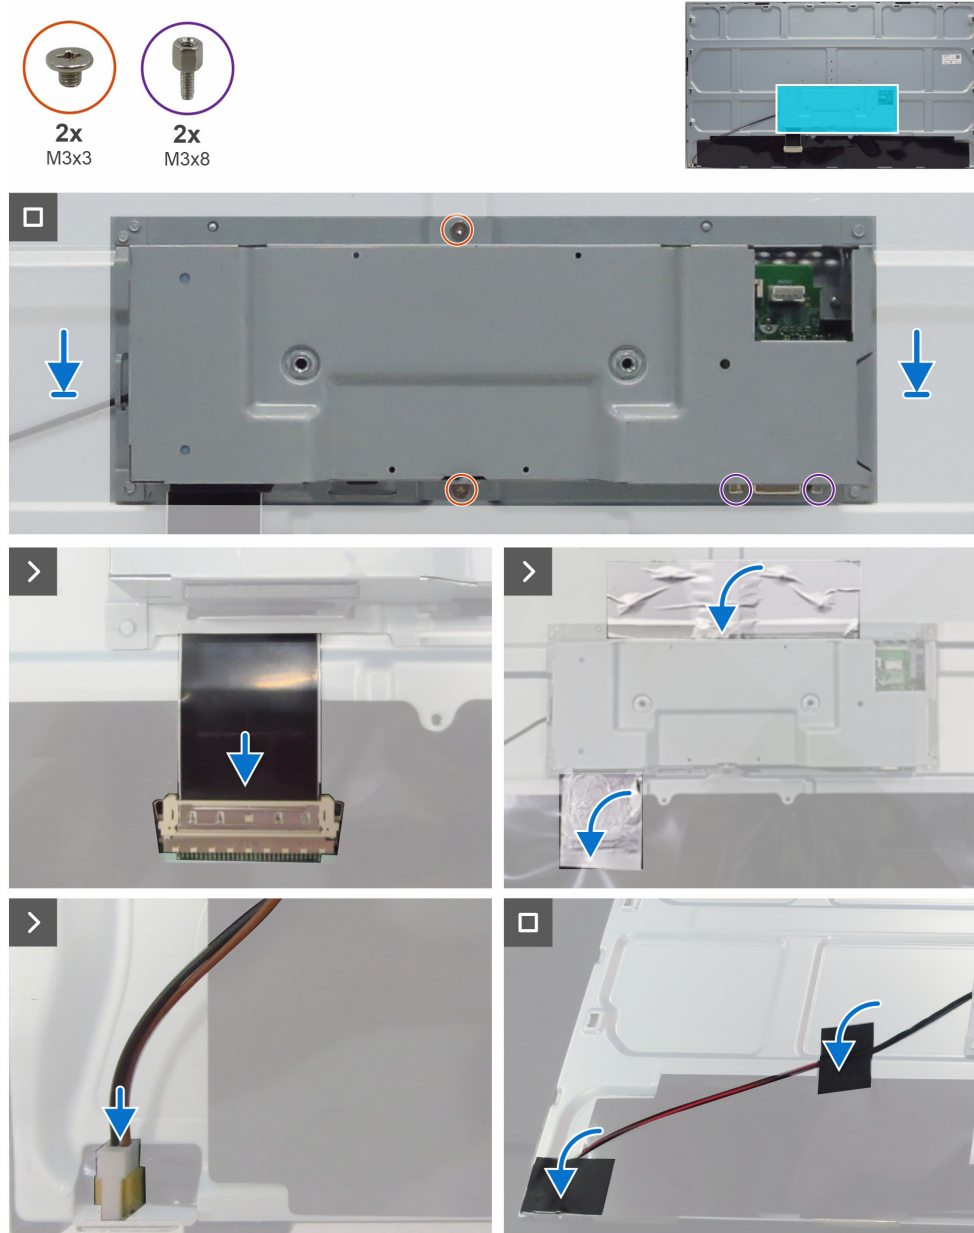


Figure 12. Installing the main chassis

Steps

1. Align the holes on the main chassis with the screw holes on the display panel, and place it down.
2. Replace the two screws (M3x8) to secure the VGA connector.
3. Replace the two screws (M3x3) that secure the main chassis to the display panel.
4. Connect the LVDS cable to the connector on the display panel.
5. Adhere the aluminum foil to cover the LVDS connector and main chassis.
6. Connect the lightbar cable to the display panel and adhere the acetate tapes on the lightbar cable.

Next steps

1. Install the [keypad board](#).
2. Install the [LED board](#).
3. Install the [speakers](#).
4. Install the [back cover](#).
5. Install the [stand](#).
6. Follow the procedure in [After working inside your monitor](#).

Main board

Removing the main board

Prerequisites

1. Follow the procedure in [Before working inside your monitor.](#)
2. Remove the [stand.](#)
3. Remove the [back cover.](#)
4. Remove the [speakers.](#)
5. Remove the [LED board.](#)
6. Remove the [keypad board.](#)
7. Remove the [main chassis.](#)

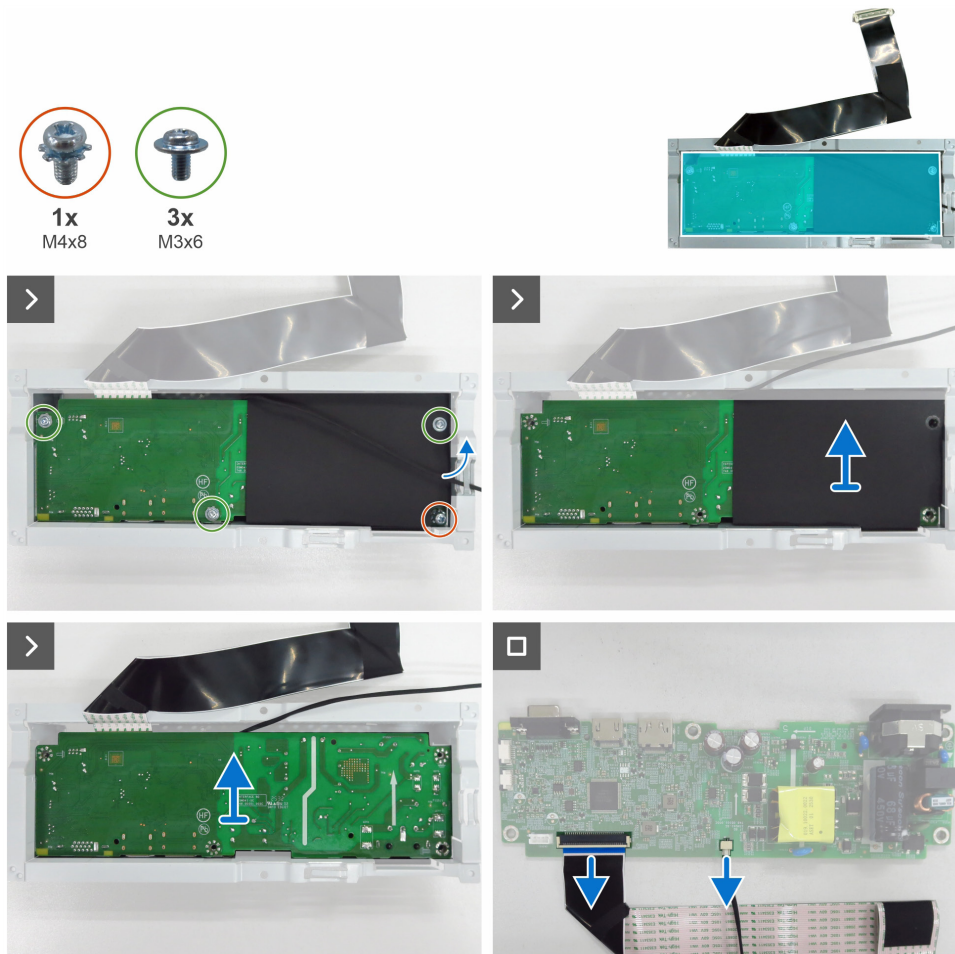


Figure 13. Removing the main board

Steps

1. Unroute the lightbar cable from the routing guides on the main chassis.
2. Remove the screw (M4x8) and the three screws (M3x6) that secure the Mylar sheet and main board to the main chassis.
3. Remove the Mylar sheet from the slot in the main chassis.
4. Remove the main board from the main chassis.
5. Disconnect the lightbar cable and LVDS cable from the connectors on the main board.

Installing the main board

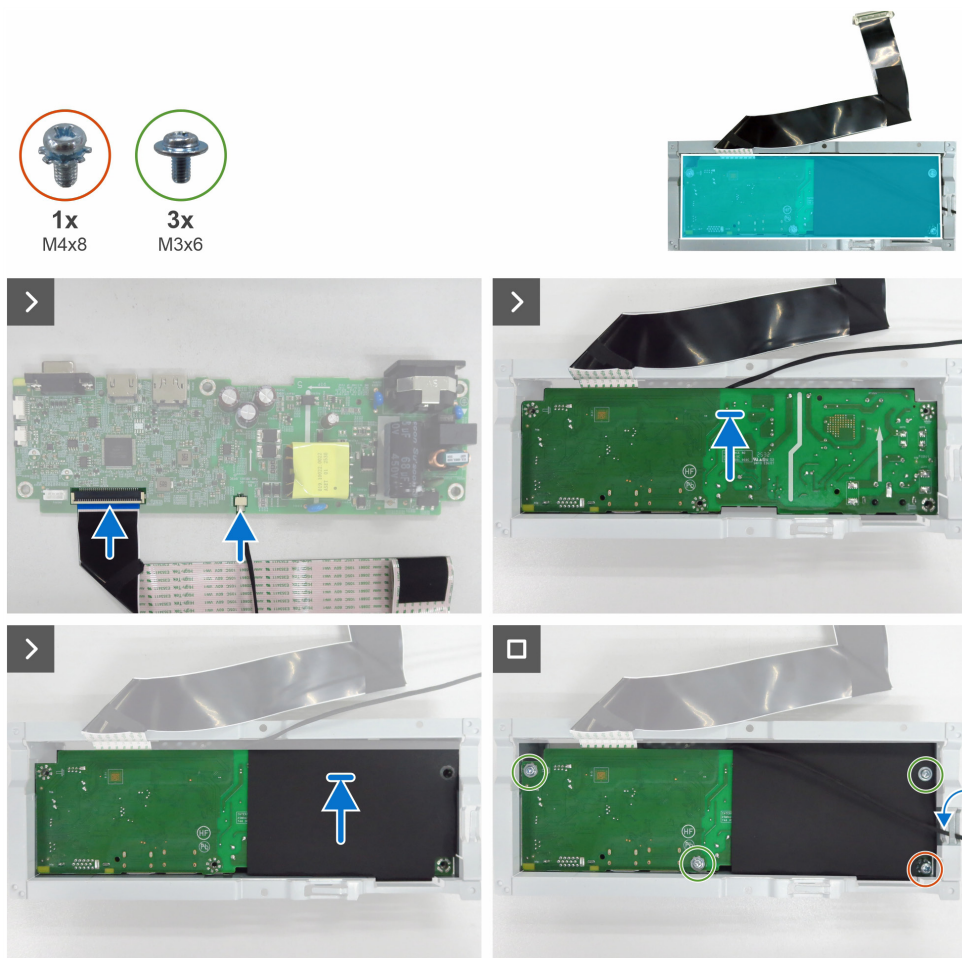


Figure 14. Installing the main board

Steps

1. Connect the LVDS cable and lightbar cable to the connectors on the main board.
2. Align the screw holes on the main board with the screw holes on the main chassis, and place it down.
3. Insert the Mylar sheet into the slot on the main chassis.
4. Replace the three screws (M3x6) and the screw (M4x8) to secure the main board to the main chassis.
5. Route the lightbar cable through the routing guides on the main chassis.

Next steps

1. Install the [main chassis](#).
2. Install the [keypad board](#).
3. Install the [LED board](#).
4. Install the [speakers](#).
5. Install the [back cover](#).
6. Install the [stand](#).
7. Follow the procedure in [After working inside your monitor](#).

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Contact Support at Dell Support Site](#).

- ① **NOTE:** Availability varies by country or region and product, and some services may not be available in your country or region.
- ① **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.

Revision History

The following table provides the revision history of this document:

Table 2. Revision history

Revision	Date	Description
A00	November 2025	Original publish date