SYSTEM X™

BT8380-060

VERTICAL COLUMN
HEIGHT 0.6M (23.62")

PARTS LIST
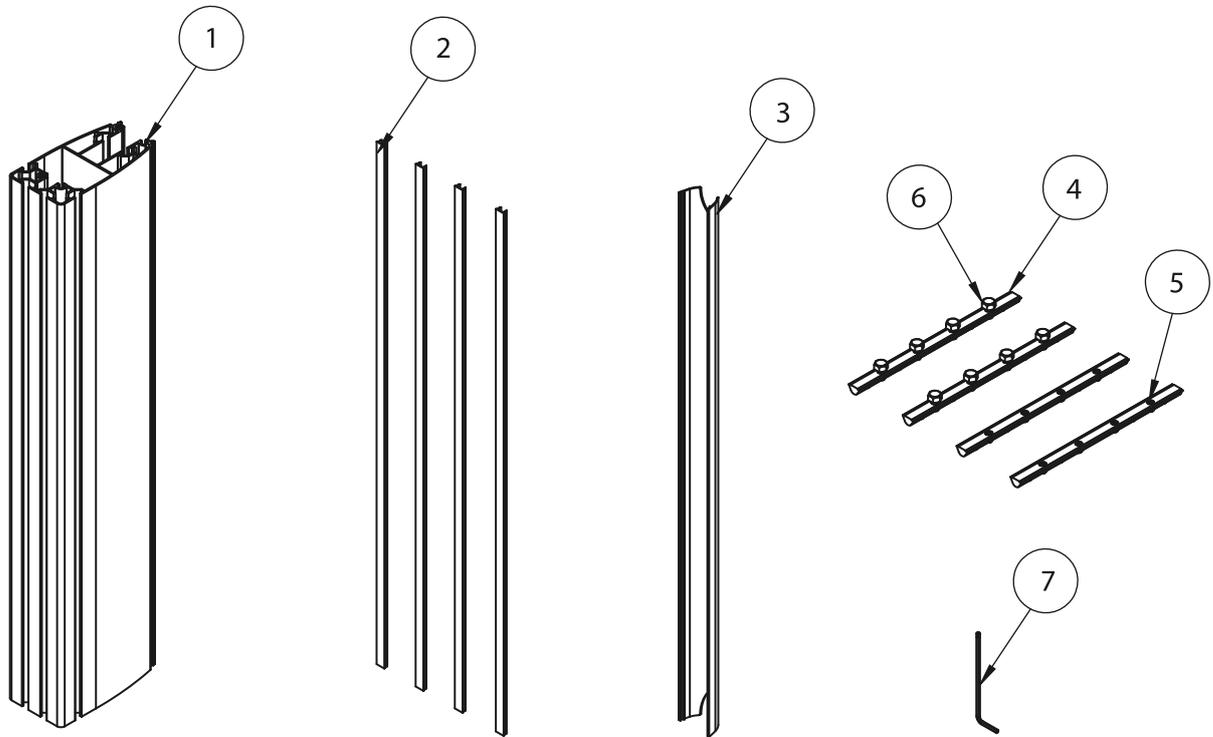
| ITEM	DESCRIPTION	QTY
1	COLUMN - L600mm	1
2	PLASTIC SLOT INSERT	4
3	CABLE COVER	1
4	JOINING BAR	4
5	M6 x 8mm GRUB SCREW	8
6	M6 x 10mm HEX HEAD BOLT	8
7	3AF HEX KEY	1

Designed to work in conjunction with B-Tech's System X range

INSTALLATION INSTRUCTIONS

1. CONNECT COLUMNS TOGETHER

i. Fix *item 4* halfway into the non-threaded end of a BT8380 column.

Note: Insert the joining bar *(item 4)* with grub screws *(item 5)* into the front channels of the column and the joining bar with hex bolts *(item 6)* into the back channels of the column.

Note: *Item 6* to be flush with the surface
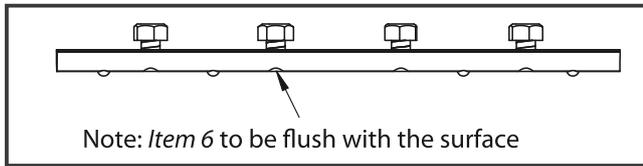
IMPORTANT: Joining bars should be inserted into the non-threaded end of the lower column.

4

4

6

5

NON-THREADED

COLUMN FRONT

---
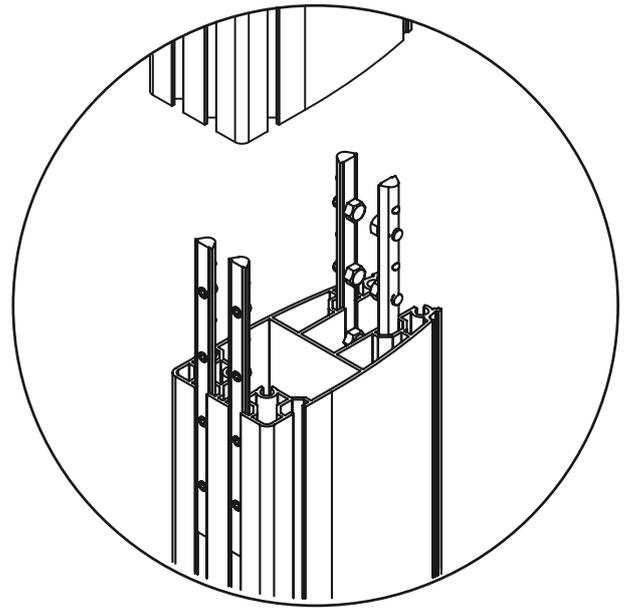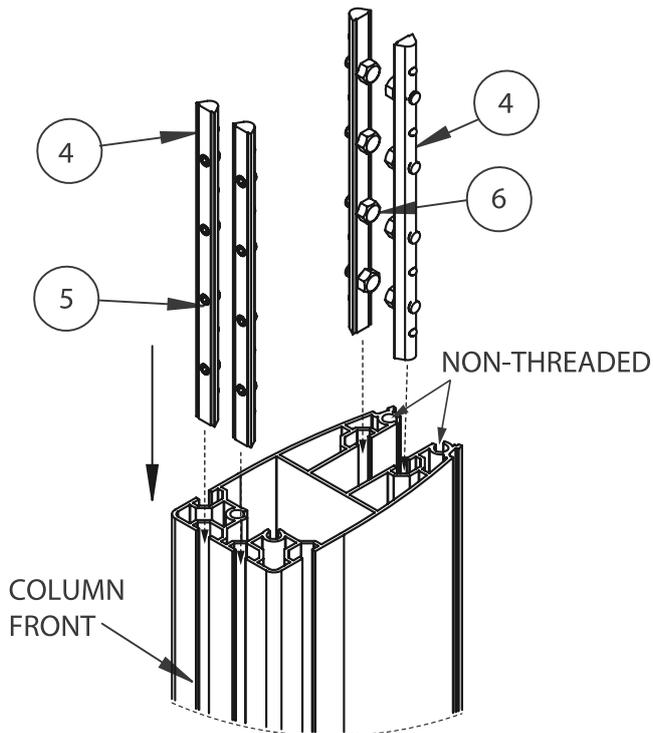
ii. Slide the top column onto the joining bars.
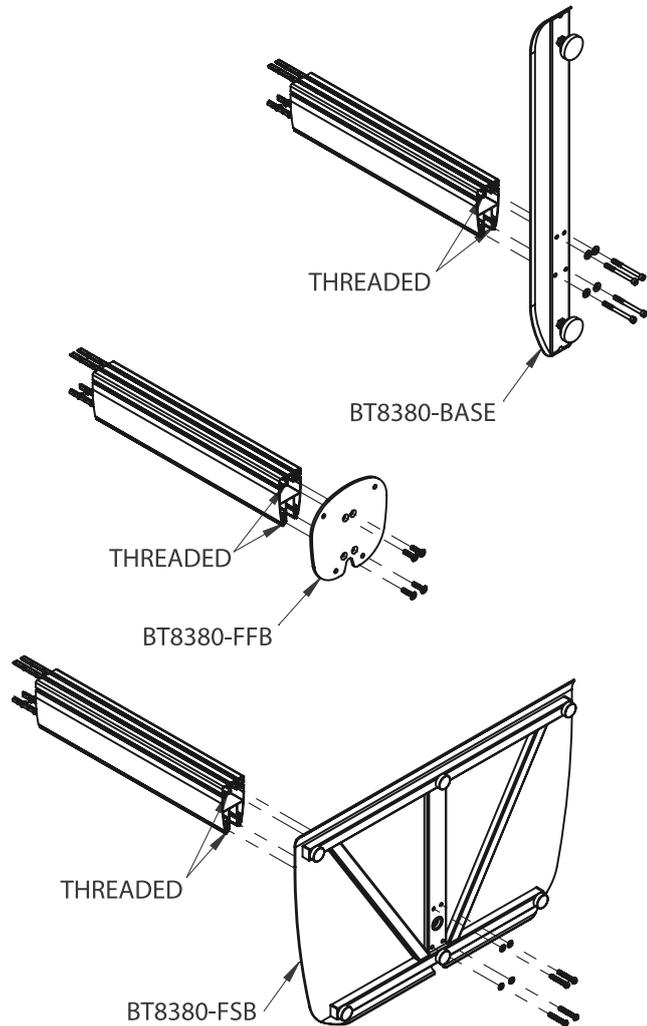
FRONT

BACK

1

5

4

4

1

4

6

1

4

5

6

1
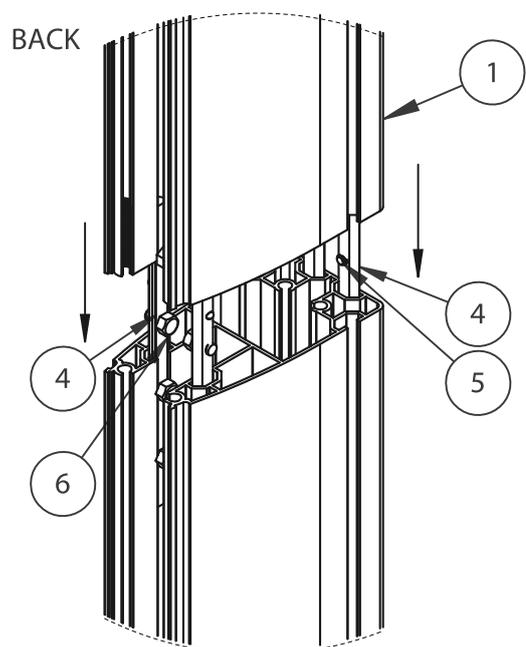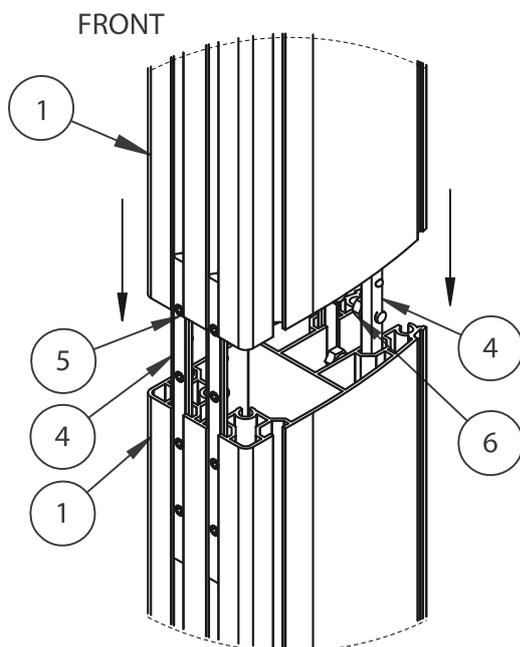
iii. On the front of the columns tighten *item 5* on *item 4* using *item 7*.
iv. On the back of the columns use a 10mm spanner to tighten *item 6*.

FRONT

BACK

10mm
SPANNER

⑤

⑦

⑥

BT8380-060

BT8380-180
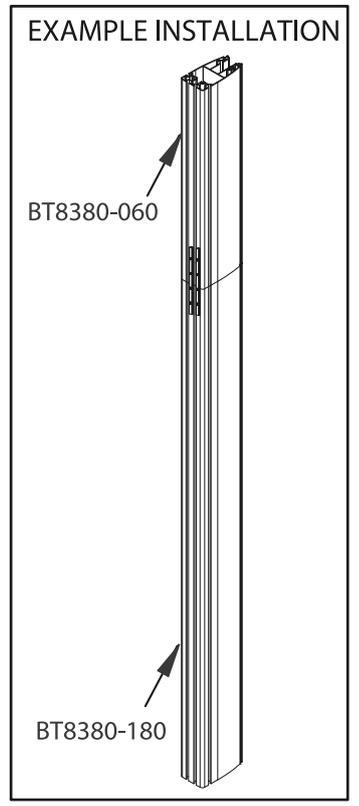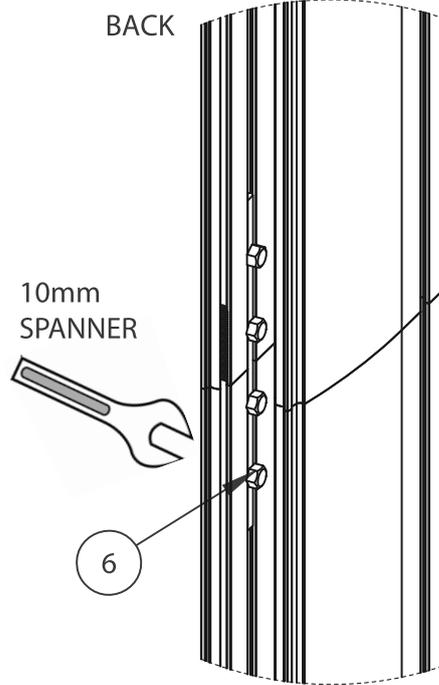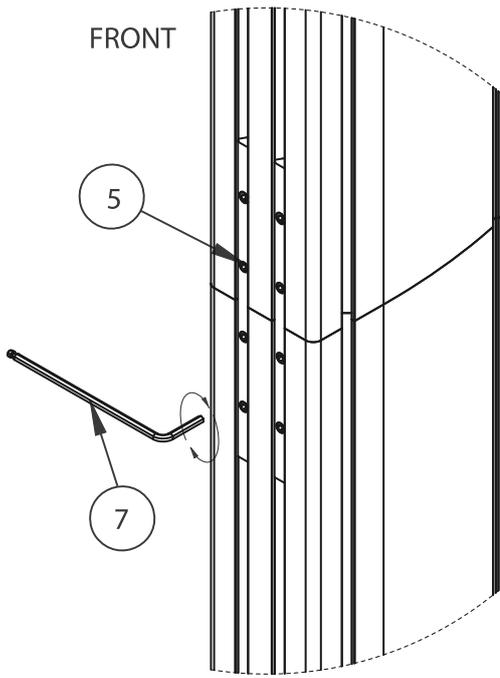
CONTINUE SYSTEM X INSTALLATION

Add a System X base to the threaded end of the column.

THREADED

BT8380-BASE

THREADED

BT8380-FFB

THREADED

BT8380-FSB

ADD COVER AND STRIPS

i. At the end of the installation add *item 2* to the front and sides of *item 1*.
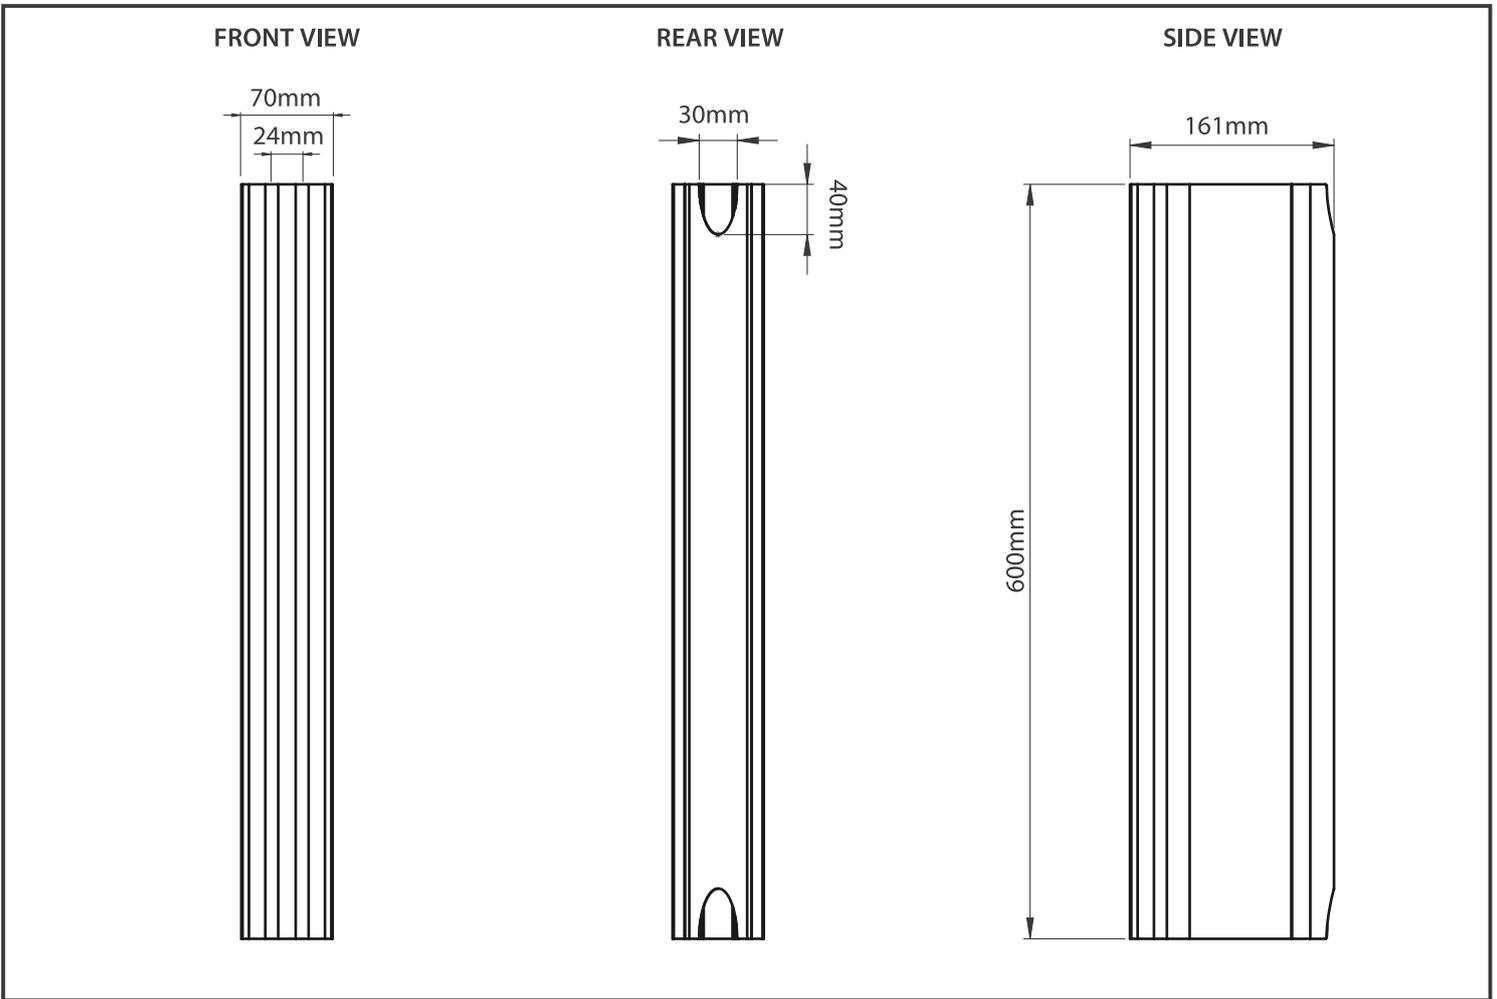ii. Fix *item 3* to the back of *item 1* once all the cables have been routed.

①

②

③

②

③

B TECH
B-TECH AV MOUNTS
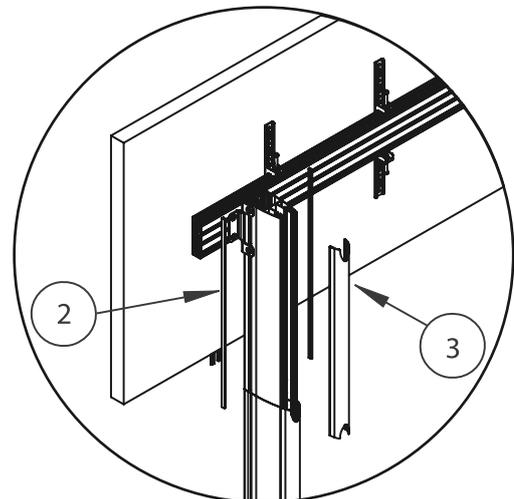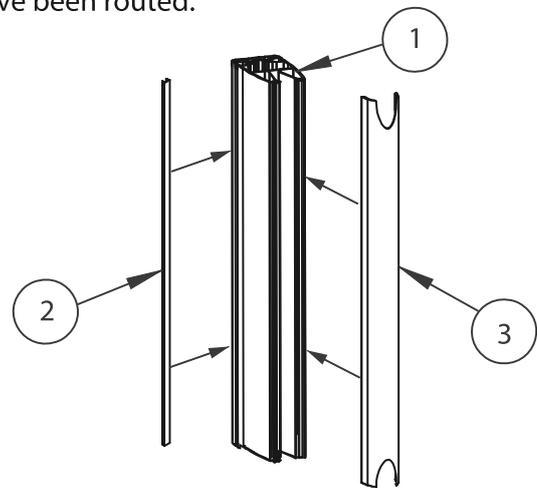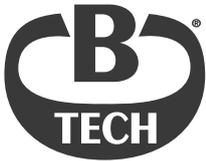
B TECH
B·TECH AV MOUNTS®

BT8380-060

VERTICAL COLUMN
HEIGHT 0.6M (23.62")

PRODUCT DIMENSIONS

FRONT VIEW

70mm
24mm

REAR VIEW

30mm
40mm

SIDE VIEW

161mm
600mm

CONTACT:
info@btechavmounts.com

AMA-BT8380-060-V3-0122-104   MADE IN VIETNAM.