



58142

©2023 Bestway Inflatables & Material Corp.

All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten/Tutti i diritti riservati

Trademarks used in some countries under license from/

Marques utilisées dans certains pays sous la licence de/

Marcas comerciales utilizadas en algunos países bajo la licencia de/

Die Warenzeichen werden in einigen Ländern verwendet unter Lizenz der/

Marchi utilizzati in alcuni paesi concessi in licenza a

Bestway Inflatables & Material Corp., Shanghai, China

Manufactured, distributed and represented in the European Union by/

Fabriqués, distribués et représentés dans l'Union Européenne par/Fabricado, distribuido y representado en la Unión Europea por/

Hergestellt, vertrieben und in der Europäischen Union vertreten von/Prodotto, distribuito e rappresentato nell'Unione Europea da

Bestway Europe S.p.a., Via Resistenza, 5, 20098 San Giuliano Milanese (Milano), Italy

Distributed in Latin America by/Distribué en Amérique latine par/Distribuido en Latinoamérica por/Distribuído na América Latina por

Bestway Central & South America Ltda, Salar Ascotan 1282, Parque Enea, Pudahuel, Santiago, Chile

Distributed in Australia & New Zealand by Bestway Australia Pty Ltd, Unit 2/98-104 Carnarvon St Silverwater, NSW 2128, Australia

Tel: Australia: +61 2 9037 1388; New Zealand: 0800 142 101

Distributed in United Kingdom by **Bestway Corp UK Ltd.** 8 Wentworth Road, Heathfield Industrial Estate, Newton Abbot, Devon, TQ12 6TL

Exported by/Exporté par/Exportado por/Exportiert von/Esportato da

Bestway (Hong Kong) International Ltd./Bestway Enterprise Company Limited

Suite 713, 7/Floor, East Wing, Tsim Sha Tsui Centre, 66 Mody Road, Kowloon, Hong Kong

www.bestwaycorp.com


**OWNER'S MANUAL
POOL & SPA TEST STRIPS
Model No.58142**

TEST FACTORS:

Free chlorine: The ideal free chlorine range is 2.0-4.0ppm.

pH: The ideal pH level is 7.4 to 7.6.

Total Alkalinity: The ideal alkalinity range for pool and spas is 80-120ppm.

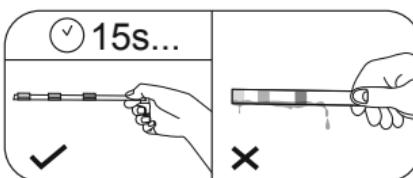

NOTES:

1. When removing strips from the bottle be sure to quickly reseal the lid.

NOTE: Keep bottle seal between uses.

2. Keep test strips dry. Do not use wet fingers to remove strips from the bottle.

NOTE: Strips will automatically react if they are exposed to water or moisture.

3. Read results in natural daylight. Sodium vapor light bulbs can make color matching difficult. Also, remove sunglasses since they can make color matching difficult.

4. A color that appears on the strip pad maybe between two chart values. If this happens, record the result as a number in-between the values shown.

5. Store in a cool, dry place, preferably indoors.

NOTE: Extreme heat and moisture could reduce the shelf-life of the strips.

6. Never remove the package of drying agent from the bottle.